

A decorative graphic consisting of several blue lines and dots. One line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. Another line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A third line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A fourth line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A fifth line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A sixth line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A seventh line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A eighth line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A ninth line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot. A tenth line starts from the left, curves down and right, then loops back up and left, ending in a small blue dot.

User Guide

C781R3

CHAPTER 1. BEFORE USING

BEFORE USING	7
INSIDE THE PACKAGE.....	8
HANDSET DESCRIPTIONS	9
DISPLAY INDICATORS	12
FEATURE OVERVIEW	20
INSTALLING THE SIM CARD AND BATTERY	21
REMOVING THE BATTERY	24
CHARGING THE BATTERY.....	25
BATTERY HANDLING INFORMATION.....	26
USING A MEMORY CARD.....	28
CONNECTING TO THE HEADSET JACK	29

CHAPTER 2. BASIC OPERATION

BASIC OPERATION	31
TURNING THE PHONE ON AND OFF.....	32
MENU ACCESS	32
MENU SUMMARY.....	33
MAKING A CALL.....	40
ABOUT PUSH TO TALK	40
TURNING PTT ON/OFF.....	41
USING A PUSH TO TALK (PTT) ALERT	41
USING A PUSH TO TALK (PTT) BARGE	42
ANSWERING CALLS.....	43
ANSWERING PTT CALLS.....	43

ENDING A CALL	44
MISSED CALL NOTIFICATION	44
WAIT/PAUSE.....	44
MAKING AN INTERNATIONAL CALL	45
3 WAY CALLING	45
CALL WAITING	46
VOLUME QUICK ADJUSTMENT	46
CALLER ID	46
VIBRATE MODE.....	47
MUTE FUNCTION	47
SPEAKERPHONE	47
FLASHLIGHT	47
VOICE DICTATION	48
TEXT TO SPEECH	48
AVAILABLE OPTIONS DURING A CALL.....	49
MAKING AN EMERGENCY CALL	50
MOTION DETECTION.....	50

CHAPTER 3. MEMORY FUNCTION

MEMORY FUNCTION.....	53
STORING A PHONE NUMBER.....	54
TEXT INPUT.....	60
USING THE TEXT INPUT MODE	61
ONE, TWO, THREE DIGIT SPEED DIALING	63

CHAPTER 4. MENU FUNCTION

MENU FUNCTION.....	67
CONTACTS.....	68
MESSAGING.....	76
RECENT CALLS.....	88
MEDIA CENTER.....	92
VZ NAVIGATOR.....	98
SETTINGS & TOOLS.....	99

CHAPTER 5. SAFETY AND WARRANTY

SAFETY AND WARRANTY.....	145
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES.....	146
GENERAL SAFETY.....	151
SAFETY INFORMATION FOR FCC RF EXPOSURE.....	155
SAR INFORMATION.....	156
HEARING AID COMPATIBILITY (HAC) FOR WIRELESS TELECOMMUNICATIONS DEVICES.....	158
TELETYPEWRITER (TTY) DEVICES.....	160
FDA CONSUMER UPDATE.....	160
EMERGENCY CALLS.....	169
COMPLIANCE WITH OTHER FCC REGULATIONS.....	171
AVOID POTENTIAL HEARING LOSS.....	171
FCC COMPLIANCE INFORMATION.....	174
RECYCLE YOUR CELL PHONE!.....	175
12 MONTH LIMITED WARRANTY.....	176



BEFORE USING **1**

This chapter provides important information about using the Ravine® C781R3 including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTIONS
- DISPLAY INDICATORS
- FEATURE OVERVIEW
- INSTALLING THE SIM CARD AND BATTERY
- REMOVING THE BATTERY
- CHARGING THE BATTERY
- BATTERY HANDLING INFORMATION
- USING A MEMORY CARD
- CONNECTING TO THE HEADSET

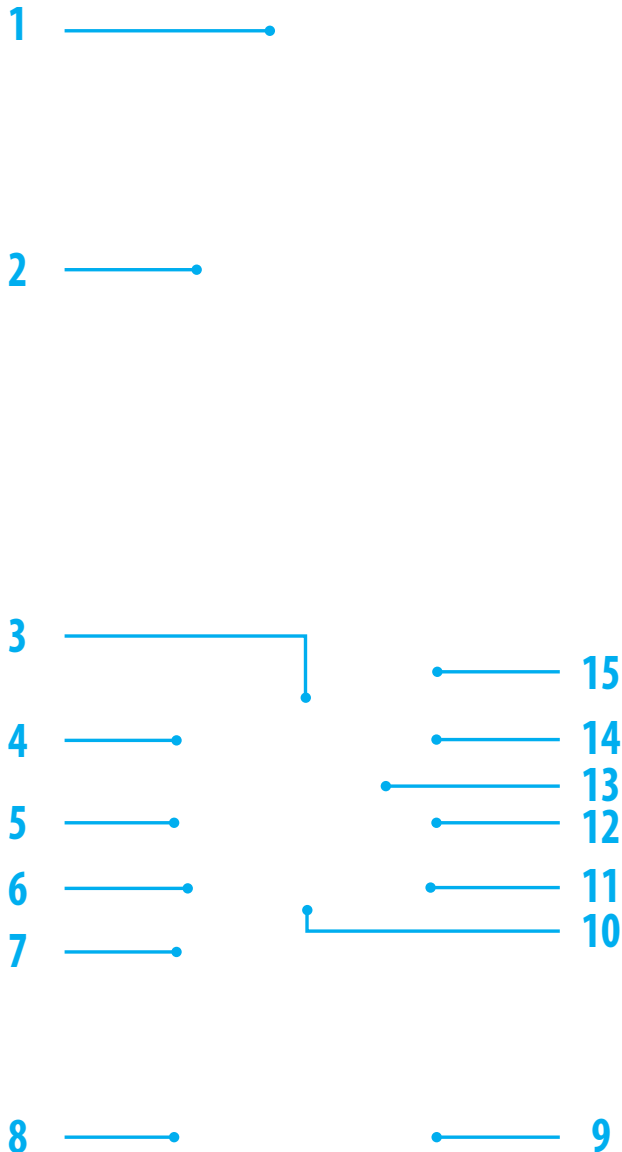





INSIDE THE PACKAGE

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.

	Standard Battery	SIM Card (Pre-installed)		
Handset	QRG (Quick Reference Guide)	Product Safety & Warranty Guide		
Battery Cover	Wall/USB Charger	USB Cable	Global Support Kit	

HANDSET DESCRIPTIONS



1. **Earpiece:** Allows you to hear the other caller.
2. **Main Display Screen:** Displays all the information needed to operate your phone.
3. [] **Directional Keys:** Allows you to scroll through phone menu options and provides a shortcut to phone functions from idle mode.
4. [] **Left Soft Key:** Press to access the Messaging menu or access the function listed above the key.
5. [] **Camera/Video Key:** In idle mode, press once to start taking a picture. If pressed one more time, it toggles to the video recording mode.
6. [] **SEND Key:** Press to make or receive a call. In idle mode, press to access the All Calls list.

01

02

03

04

05






15

16

17

18
19

20

7. [] **Voicemail Key:** In idle mode, press and hold to automatically connect to your voicemail box.
8. [] **Shift Key:** Press to enter an asterisk (*) character for calling features. In text entry mode, press to change the character input type. Press and hold to display the plus sign (+) for international dialing.
9. [] **Vibrate Mode Key:** Press and hold to activate/deactivate vibrate mode in idle mode. Press to enter the (#) character for calling features. In text entry mode, press to add a space.
10. [] **CLR Key:** Press to clear a character from the display. Press and hold to clear all characters. Within a menu, press to return to the previous menu. Press and hold to activate the G'zGEAR function in idle mode.
11. [] **END/PWR Key:** Press and hold to turn the phone on/off or press to end

21 ———•

22 ———•

23 ———•

24 ———•

•——— 25

•——— 26

•——— 27

01

02

03

04

05

a call or browser session. Within a menu, press to return to idle mode.

12. [] Speakerphone / Flashlight Key: With the flip open, press to turn speakerphone on or off. Press and hold to turn the flashlight on or off.



13. [] Center Select Key: Press to access the MENU from idle mode. It also allows you to accept choices when navigating through the menu.

14. [] Right Soft Key: Press to access the Contacts menu in idle mode or access the function listed above the key.

15. Microphone: Allows the other caller to hear you.

16. External Speaker: Allows you to listen to music, sounds or ringtones.

17. Front Display Screen: Displays incoming calls, messages, signal, battery strength, time and date.

- 18. **Camera Lens:** Built-in camera lens.
- 19. **Flashlight:** Built-in flashlight
- 20. **Sim Card Slot:** Allows you to insert a SIM card. The SIM Card comes pre-installed in the device (located under the battery).
- 21. **Headset Jack:** Allows you to plug in an optional headset for convenient, hands-free conversations.
- 22. [] **PTT Key / Red Side Key:** In PTT Mode, press to access the PTT Contact List or press and hold to make a PTT Call. When not in PTT Mode, press to access the selected shortcut application.
- 23. [] **Volume Keys:** Press to adjust the master volume in idle mode or adjust the voice volume during a call.
- 24. **Voice Commands Key:** Press to activate the voice command function in idle mode.
- 25. **Charging / Data Port:** Connects to the USB cable for data transferring or charging when attached to the Wall/USB Charger.
- 26. **microSD Card Slot:** Allows you to insert a microSD card.
- 27. **Charging Terminals**

DISPLAY INDICATORS














Main Indicator Icons

 **1X Signal Strength:** 1X service is available.

 **D Signal Strength:** Digital service is available.

 **GSM Signal Strength:** GSM service is available.

Main Indicator Icons

	GPRS Signal Strength: GPRS service is available.
	3G Signal Strength: 3G service is available.
	Airplane Mode: Transmitting and receiving information is restricted.
	Roaming: The phone is outside of the home service area.
	Femto Cell: The phone is connected to the network extender.(Femto Cell).
	SSL (Secured Socket Layer): Indicates that secure communication between client and server has been established during data communication using encryption.
	Voice Privacy: Indicates Voice Privacy mode is active.
	Data Call: Data Session is in progress.
	Dormant: Phone is in a dormant state during a data call. Phone reverts to Dormant mode when there hasn't been activity on a page for some time. The connection is still active and you can make and receive calls.
	No Service: Phone cannot receive a signal from the system.
	TTY: TTY mode is active.
	Voice Call: A call is in progress. * No icon indicates the phone is in idle mode.
	E911: Location Service of your phone is E911.

01

02

03

04

05

Main Indicator Icons



Location On: Location Service of your phone is Location On.



Bluetooth: Indicates Bluetooth mode.



Bluetooth Active: Indicates Bluetooth Active mode.



Bluetooth Connected: Indicates a Bluetooth Device is connected.



Battery Level: Battery charging level - the more blocks, the stronger the charge.



AVR Active: AVR mode is active.



AVR Listening: Indicates AVR listening.



PTT In Use: Indicates you have a PTT call.



1x and PTT services are available.



3G and PTT services are available.



SIM Card: Indicates SIM Card memory in use.



All Sounds Off: All sounds are set to off.



Alarm Only: Phone will alert you only with an alarm alert.



Vibrate Only: Phone will vibrate when call is received.

Main Indicator Icons



Speaker: Speakerphone mode is active.



Urgent Message: Indicates you have an urgent message.



Urgent Voicemail: Indicates you have an urgent voicemail.



Missed Calls: Indicates you have missed calls.



Message: Indicates you have a new message.



CMAS Alert: Indicates you have a CMAS message.



Calendar Appointment: Event Alarm is active.



Mobile Email: Indicates you have an email.



Voicemail: Indicates you have voicemail messages.



Alarm On: Appears when an alarm is set.

PTT Icons



PTT Alert



PTT Connected To Enterprise Group



PTT Connected To Group

01

02

03

04

05

PTT Icons



PTT Connected To Individual



PTT Connecting To Enterprise Group



PTT Connecting To Group



PTT Connecting To Individual



PTT Enterprise Group



PTT Enterprise Group Dialed



PTT Enterprise Group Do Not Disturb



PTT Enterprise Group Received



PTT Group Available



PTT Group Dialed



PTT Group Do Not Disturb



PTT Group Received




PTT Individual Available






PTT Individual Dialed

PTT Icons



	PTT Individual Do Not Disturb
	PTT Individual Received
	PTT Listening To Enterprise Group
	PTT Listening To Group
	PTT Listening To Individual
	PTT Missed Call
	PTT Talking To Enterprise Group
	PTT Talking To Group
	PTT Talking To Individual
	PTT Unavailable

- 01
- 02
- 03
- 04
- 05

Recent Call Icons

	Dialed Call		Missed Call
	Received Call		



























New Contact Icons

	Mobile1		Speed Dial
	Mobile2		Home/Work Address
	Home		Company
	Business		Title
	Personal Email		Birthday
	Business Email		Notes!
	Group		WL Messenger
	Picture		AIM
	Ringtone		Yahoo!
	Message Tone		IM Screen Name
	FAX		

Message Icons

	New/Unread Message		Read MMS
---	---------------------------	---	-----------------

Message Icons

	Opened/Read Message		Unread CMAS
	Message Delivered		Read CMAS
	Incomplete Delivery		Unread EMS
	Sent Message Delivery Failed		Read EMS
	Message Locked		Sent Message
	Text Message Draft		Received Message
	Picture Message Draft		Unread WAP Push
	Priority		Read WAP Push
	Unopened MMS Notification		Multiple Message Delivered
	Opened MMS Notification		Multiple Message Failed
	Corrupt Message		Multiple Message Pending
	Pending Message Sent		Multiple Message Incomplete
	Unread MMS		Multiple Message Sent

FEATURE OVERVIEW

WATER RESISTANCE

The C781R3 is water resistant. It provides reliable performance for outdoor activities and in wet conditions such as driving rain or high humidity.

The tested device meets the requirements of the MIL-STD-810G (Rain & immersion 1m, 30min) standard.



CAUTION: The Water Resistance feature does not guarantee protection against the usage of this device underwater. Do not use the handset underwater. We do not take responsibility for waterlogging due to the negligence of the user.



To maintain water resistance:

- Securely close the Charging/Data Port cover, microSD™ card cover and the Headset Jack cover.
- Completely close the battery cover and slide the battery cover lock to the LOCK position.
- Make sure that the handset is completely dried up before you open any cover. When wet, clean the handset with a dry cloth, swish water from the handset, and dry it thoroughly before use.

SHOCK RESISTANCE

The rugged construction of the C781R3 provides outstanding shock and vibration resistance. The tested device meets the requirements of the MIL-STD-810G (Drop 1.5m) standard.



CAUTION: The shock and vibration resistance features do not guarantee protection against every type of shock and vibration. Your handset may be damaged or malfunction depending on the severity of the shock or vibration.

DUST RESISTANCE

For additional peace of mind, the C781R3 is also dust resistant. The device was tested using silica flour at a temperature of 95°F and meets the MIL-STD-810G (DUST) standard.



- Your handset can be rinsed with clean water when dirty. To ensure water resistance, make sure that all covers are securely closed before rinsing.
- Periodically, clean the Charging Terminals and Battery Terminals with a dry cloth or cotton swab. Dust may cause electrical connection problems. Avoid wiping with excessive force, which can damage the terminals.

OPERATION TEMPERATURE

0 - 50 °C (without adaptor), 0 - 45 °C (with adaptor)

01

02

03

04

05

Battery Terminals



CAUTION

- Do not clean terminals inside the handset, or they may be damaged.
- If mud or sand is adhered to the handset, do not use it until wiping completely.
- Do not place the handset directly on sand. If sand gets into the Earpiece or Speaker, sounds may be difficult to hear. Sand getting into the handset's hinge can cause problems such as overheating.

INSTALLING THE SIM CARD AND BATTERY

Your wireless device comes with a SIM card installed which along with a Global Feature on your account, enables you to make calls and access email in GSM Networks while traveling overseas.

Should your SIM card be lost or damaged, please follow these instructions for the installation of your new SIM.



CAUTION

- Wipe your handset before opening the battery cover to prevent moisture or dust from entering.
- Failure to follow the below directions for installing/removing the battery could result in product failure.
- Fully charge the battery before using the handset for the first time.

1. Remove the battery cover and battery, as instructed on page 24. Slide the SIM card into the slot in the direction of the arrow shown in the figure.
 - To remove the SIM card, pull out the SIM card in the opposite direction of the arrow.
2. Slide the battery into the slot by aligning the contacts (1) and press down until you hear "click (2)."



Make sure that the sticker on the battery is put inside when you replace the back cover. Otherwise it may affect the water resistance function.

3. Insert the battery cover into the slots (1) and press the battery cover in the direction of the arrow (2).
4. Press down firmly on the side of the battery cover at each arrow point, as shown in the figure.
5. Slide the battery cover latch to the LOCK position in the direction of the arrow shown in the figure.

01

02

03

04

05

**CAUTION**

- Do not twist the battery cover as shown in the figure below. Doing so can damage the handset and the battery cover.
- Do not press hard on the battery cover with the battery cover tabs running over the handset because you may damage the battery cover tabs.
- Be careful not to get the tab of the battery caught between the edges of battery cover and the handset. Failure to do so will result in the loss of water resistance.
- If you are using a wrist strap (sold separately), be careful not to get it caught between the battery cover and the handset. Failure to do so will result in the loss of water resistance.

REMOVING THE BATTERY

1. Slide the battery cover latch to the FREE position in the direction of the arrow as shown in the figure.
2. Insert your thumb in the right side groove and pull up the battery cover in the direction of the arrow.
3. Remove the battery by pulling the tab up.



Do not leave the removed battery in direct sunlight, or near heat sources such as an open flame or stove. Otherwise, it may malfunction or cause a fire by bursting or igniting. Do not hit, or exert excessive shock on the battery, as it can ignite or break.

CHARGING THE BATTERY

1. Connect the USB cable into the Wall/USB Charger.
2. Plug the USB cable into the phone's Charging/Data Port. Plug the Wall/USB Charger into an electrical outlet. The battery starts charging.
3. Disconnect the charger when the battery is fully charged.



- Hold the small connector with the USB mark facing up. When inserting the connector into the Charging/Data Port on the handset, hold the connector straight against the port without tilting it vertically or horizontally and gently insert it. If the battery connector is not properly aligned, damage could occur to the charging connector and the phone may not be charged.
- Failure to completely reseal the Charging/Data Port cover after charging may allow water or other liquids to enter the casing, damaging the handset.
- The Phone used be sure to L.P.S(Limited Power Sources) power supplies.
- The connection to USB interfaces has to be limited to USB 2.0 version or higher.

01

02

03

04

05

Correct


Incorrect

Correct

Incorrect

4. To remove the wall charger, unplug the USB cable from the phone's Charging/Data Port.



• When you charge the battery with the handset powered off, you will see a charging status screen. After charging is completed, the Charge Complete message appears and you cannot operate the phone until it is powered on. To turn your phone on, press and hold the **END/PWR Key**  until your display turns on.

- The battery may not be fully charged at the time of purchase. Fully charge the battery before using.
- It is more efficient to charge the battery with the handset powered off.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

BATTERY HANDLING INFORMATION



Do not install the battery in humid places, like a bathroom, or places where water or liquid can come into contact with the handset or battery. Otherwise, the electrical circuits may short or erode and cause the handset to malfunction.

DO'S

- Only use the battery and charger approved for use with the C781R3. Using any charger other than the one included with the phone may damage your phone or battery.
- Only use the battery for the system for which it is specified.
- Only use or replace the battery with a charging system or another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Only use the battery for its original purpose. As an improper battery use may result in a fire, explosion or other hazard.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C). If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.

- Properly and promptly dispose of the battery according to local laws.
- Battery usage by children should be supervised.
- Dispose of used battery according to the instructions.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- When the device is not used for long period, remove the battery from the device.

DON'TS

- Don't attempt to disassemble or open the battery – it is a sealed unit with no serviceable parts.
- Don't crush, bend or deform, puncture or shred the battery.
- Don't drop the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Don't leave the battery in extremely hot or cold temperatures. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Don't accidentally short-circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery, and may cause fire or injury.
- Don't short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Don't dispose of the battery by placing into a fire.
- Don't use the battery with damage or a leak.



CAUTION

There is a risk of explosion if battery is replaced by an incorrect type. Lithium ion batteries are recyclable. When you replace your battery, please request the repair center to recycle the battery in accordance with RBRC standards. When disposing of the battery by yourself, please call RBRC at (800) 822-8837 for proper disposal tips. Never touch any fluid that might leak from the battery. Such liquid when in contact with the eyes or skin, could cause injury to the skin or eyes. Should the liquid come into contact with the eyes, irrigate the eyes thoroughly with clean water and immediately seek medical attention. In the event the liquid comes into contact with the skin or clothing, wash it away immediately with clean water.

USING A MEMORY CARD

The C781R3 supports the use of a microSD™ memory card as a source of external memory.

USING A microSD™ CARD

By using a microSD™ card, you can store sounds, videos, images, photos, and other files.

INSTALLING A microSD™ CARD (OPTIONAL)

1. Open the microSD™ card cover, and insert the microSD™ card into the slot with the gold contacts facing up.
2. Press the microSD™ card into the slot until you hear the “click”, then close the microSD™ card cover.
3. **“CARD INSERTED. PICTURE, VIDEO & SOUND WILL BE SAVED TO CARD MEMORY. ACCEPT CHANGES?”** will appear on the display.
4. Press the **Center Select Key [Yes]** to confirm.



CAUTION

- Whenever installing or removing a memory card, make sure the handset is turned off and that the Wall/USB Charger is not connected.
- When installing or removing a memory card, avoid touching the memory card contacts and avoid damaging the memory card. Either can cause malfunction or loss of data.
- The front and back of the memory card look different. When inserting the memory card, make sure the correct side is facing up. If not, the memory card may not fit in the memory card slot, or the memory card and/or memory card slot may be damaged.
- Do not forcibly insert the memory card into the memory card slot. Hold it with the contacts facing down and carefully insert it.
- Failure to completely reseal the memory card slot after installing may result in damage if the handset is exposed to water.

REMOVING A microSD™ CARD

1. Open the microSD™ card cover, and use your thumb to press and release the microSD™ card.
2. Press the memory card inward, gently, until it pops out.
3. Remove the microSD™ card and close the microSD™ card cover.



CAUTION

- Never remove a memory card from the handset while it is being accessed. Doing so can damage the memory card or the data stored on it.
- The memory card is very small. Make sure you do not drop it.
- To ensure the proper function of removable memory, please use a microSD™ card.
- Failure to completely reseal the memory card slot after removing may result in damage if the handset is exposed to water.

CONNECTING TO THE HEADSET JACK

You can connect a compatible device equipped with a standard 2.5mm plug to your handset for safe, convenient, hands-free conversations.

1. To open the Headset Jack cover, insert your fingertip into the notch and open the cover.
2. Plug the connector into the Headset Jack.



CAUTION

- Do not forcibly insert/remove the connector into/from the Headset Jack. Carefully insert/remove it.
- Failure to completely reseal the Headset Jack cover after use may result in damage if the handset is exposed to water.



BASIC OPERATION 2


This chapter addresses and explains the basic features for C781R3 including:

- TURNING THE PHONE ON AND OFF
- MENU ACCESS
- MENU SUMMARY
- MAKING A CALL
- ABOUT PUSH TO TALK
- USING A PUSH TO TALK (PTT) ALERT
- USING A PUSH TO TALK (PTT) BARGE
- ANSWERING CALLS
- ANSWERING PTT CALLS
- ENDING A CALL
- MISSED CALL NOTIFICATION
- WAIT/PAUSE
- MAKING AN INTERNATIONAL CALL
- 3 WAY CALLING
- CALL WAITING
- VOLUME QUICK ADJUSTMENT
- CALLER ID
- VIBRATE MODE
- MUTE FUNCTION
- SPEAKERPHONE
- FLASHLIGHT
- VOICE DICTATION
- TEXT TO SPEECH
- AVAILABLE OPTIONS DURING A CALL
- MAKING AN EMERGENCY CALL
- MOTION DETECTION



TURNING THE PHONE ON AND OFF

TURNING ON

1. Press and hold the **END/PWR Key**  until the phone display turns on.
2. Enter your 4-digit lock code if the phone is locked. The default lock code is the last 4 digits of your phone number.



Avoid any unnecessary contact with the internal antenna area while your handset is on.

TURNING OFF






1. Press and hold the **END/PWR Key**  until the phone display turns off.



- Immediately change or recharge the battery when **BATTERY LOW** appears on the display.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

MENU ACCESS

Your phone can be customized via the menu. Each function can be accessed by scrolling with the **Directional Key** or by pressing the number that corresponds with the menu item.

1. To access the menu, press the **Center Select Key** [**MENU**].
2. To scroll through the menu, press the **Directional Key**  up, down, left or right.
3. To return to the previous page, press the **CLR Key** .
4. To exit the current menu, press the **END/PWR Key** .
5. To access the Messaging menu, press the **Left Soft Key**  [**Message**].
6. To access the Contact List, press the **Right Soft Key**  [**Contacts**].



All directions in this manual are based on the Grid menu layout and the HUD display theme. If you have changed the settings, the directions may vary.

MENU SUMMARY

Main Menu	2nd DEPTH	3rd DEPTH	4th DEPTH
Contacts	1. New Contact		
	2. Contact List		
	3. Groups	Business Personal	
	4. Backup Assistant		
	5. Speed Dials		
	6. In Case of Emergency		
	7. My Name Card		
Messaging	1. New Message	1. TXT Message 2. Picture Message 3. Video Message 4. Voice Message	
	2. Messages		
	3. Drafts		
	4. Voicemail		
	5. Mobile IM		
	6. Mobile Email		

01

02

03

04

05

* These options appear when PTT Mode is turned on.

Main Menu	2nd DEPTH	3rd DEPTH	4th DEPTH	
Recent Calls	1. Missed			
	2. Received			
	3. Dialed			
	4. All			
	5. View Timers			
Mobile Web				
Media Center	1. Apps			
	2. Mobile Web			
	3. Tunes & Tones	1. My Ringtones		
		2. My Sounds		1. Record New
	4. Picture & Video	1. Verizon Videos		
		2. My Pictures		
3. My Videos				
4. Take Picture				
	5. Record Video			
	6. Online Album			
Mobile Email				
Apps				
VZ Navigator				

Main Menu	2nd DEPTH	3rd DEPTH	4th DEPTH	
Settings & Tools	1. My Verizon			
	2. Master Volume			
	3. Tools		1. Voice Commands	
			2. Calculator	
			3. Calendar	
			4. Alarm Clock	
			5. Stop Watch	
			6. Countdown Timer	
			7. World Clock	
			8. Notepad	
			9. USB Mass Storage	
				1. Earth compass
			2. Walking Counter	
			3. Thermometer	
			4. Tides	
		10. G'z GEAR	5. Sunrise Sunset	
			6. Astro Calender	
			7. Star Gazer	
		8. Setup		
		9. How To Use		
4. Bluetooth		1. Add New Device		
5. Keyguard Settings		1. Keyguard Timer		
		2. Unlock Options		
6. PTT Settings		1. PTT Mode		
		2. PTT Alert	1. Tone	
		3. PTT Missed Call	2. Vibrate	
		4. Tutorial		

- 01
- 02**
- 03
- 04
- 05

Main Menu	2nd DEPTH	3rd DEPTH	4th DEPTH	
	7. Sounds Settings	1. Easy Set-up		
		2. Call Sounds	1. Call Ringtone 2. Call Vibrate 3. Caller ID Readout	
		3. Alert Sounds	1. TXT Message 2. Multimedia Message 3. Voicemail 4. Emergency Tone 5. Missed Call 6. PTT Alert	
		4. Keypad Volume		
		5. Digit Dial Readout		
		6. Service Alerts	1. ERI 2. Minute Beep 3. Call Connect 4. Software update	
		7. Power On/Off	1. Power On 2. Power Off	
		8. Display Settings	1. Easy Set-up	
			2. Banner	1. Personal Banner 2. ERI Banner
			3. Backlight	1. Display 2. Keypad
	4. Wallpaper		1. My Pictures 2. My Videos 3. Animation	
	5. Display Themes			

Main Menu	2nd DEPTH	3rd DEPTH	4th DEPTH
			1. Menu Layout
			2. Replace Menu Items
		6. Main Menu Settings	3. Position Menu Items
			4. Reset Menu Settings
		7. Dial Fonts	
		8. Menu Font Size	
		9. Clock Format	1. Main Clock
			2. Front Clock
		1. Airplane Mode	
		2. Set Shortcuts	1. Set My Shortcuts
			2. Set Directional Keys
			3.* Set Red Side Key
		3. Voice Commands Settings	1. Confirm Choices
			2. Sensitivity
			3. Adapt Voice
			4. Prompts
			5. VoiceMode Training
			6. About
		4. Language	
		5. Time & Date	
		6. Location	
		7. Current Country	
		8. Security	1. Edit Codes
			2. Restrictions
	9. Phone Settings		

* This option will not appear if PTT Mode is turned on.

01

02

03

04

05

Main Menu	2nd DEPTH	3rd DEPTH	4th DEPTH
			3. Phone Lock Setting
			4. Lock Phone Now
			5. Restore Phone
		9. SIM Security	1. PIN Code
			2. SIM Lock
		10. Global Data Roaming	
		11. System Select	1.* Network Mode
			2.* CDMA Settings
			3.* GSM Settings
		12. Motion Detection	1. G'zGEAR
			2. My Pics/Videos
	10. Call Settings	1. Answer options	
		2. Auto Retry	
		3. TTY Mode	
		4. One Touch Dial	
		5. Voice Privacy	
		6. DTMF Tones	
		7. PTT Mode	
		8. Assisted Dialing	
		9. Noise Reduction	

* These options will not appear if PTT Mode is turned on.

Main Menu	2nd DEPTH	3rd DEPTH	4th DEPTH
			1. Pictures
		1. Save Options	2. Videos
			3. Sounds
	11. Memory		1. Phone Memory Usage
			2. My Pictures
			3. My Videos
		2. Phone Memory	4. My Ringtones
			5. My Sounds
			6. My Contacts
			7. Move All To Card
		3. Card Memory	
	12. USB Mode		
		1. My Number	1. CDMA Number
			2. GSM Number
		2. SW/HW Version	
	13. Phone Info	3. Icon Glossary	
		4. Software Update	1. Status
			2. Check New
		5. Operating System	
	14. SIM Info		
		1. Push To Talk	
	15. Tutorial	2. G'zGEAR	
		3. Voice Dictation	
		4. Message Readout	
	16. Set Up Wizard		

01

02

 

03


04

05


MAKING A CALL


BY DIALING THE PHONE NUMBER

1. First, gently open the folding cover of the phone.
2. Enter the phone number including the area code if needed and press the **SEND Key** .
3. To end the call, press the **END/PWR Key** .

 When you place or receive a call from phone numbers stored in your Contact List, the name will be displayed.

USING THE SPEED DIALING FUNCTION

1. If the speed dial is set, press the speed dial number you wish to connect to, and hold the last digit number you have assigned for the speed dial.
“**Speed Dial**” message appears, and your call is connecting to the contact.
2. To end the call, press the **END/PWR Key** .


 For more information on how to set one-touch dial, please refer to ONE TOUCH DIAL on page 137.

USING THE CONTACT LIST

1. Press the **Right Soft Key**  [**Contacts**].
2. Select the contact and press the **SEND Key** .
3. To end the call, press the **END/PWR Key** .


 If more than 1 number is saved, pressing the SEND Key will dial the default number.

ABOUT PUSH TO TALK

Push to Talk calls may only be made with other Verizon Wireless Push to Talk subscribers, and only from the National Enhanced Services Rate and Coverage Area. A Push to Talk call is terminated by pressing the **END/PWR Key**  or will automatically time out after 20 seconds of inactivity. While you are on a Push to Talk call, voice calls received will go directly to Voice Mail. When you are on

a voice call, you cannot receive a Push to Talk call. You cannot prevent others who have your wireless phone number from entering you into their Push to Talk Contact List. Only one person can speak at a time during Push to Talk calls. When using your phone keypad to make a Push to Talk call, you must enter the 10-digit phone number of the called party. Your Push to Talk service cannot be used for any applications that tether your phone to computers or other devices for any purpose. Push to Talk-capable phone and Calling Plan required. If you wish to switch from a Push to Talk Calling Plan to another Calling Plan, you must first stop using your Push to Talk-capable phone and purchase or provide another compatible phone.

TURNING PTT ON/OFF

1. From idle mode, press the **Center Select Key** [MENU].
2. Select **Settings & Tools** and press the **Center Select Key** [OK].
3. Select **Call Settings**, press the **Center Select Key** [OK], select **PTT Mode** then press the **Center Select Key** [OK].
4. Press the **Directional Key**  up or down to select **On/Off**, then press the **Center Select Key** [OK].

USING A PUSH TO TALK (PTT) ALERT

The Push To Talk (PTT) feature allows you to use your phone like a Walkie-Talkie to communicate with Verizon Wireless PTT subscribers.

An alert call is a call to notify a called party that the calling party wants to talk using a tone. The called party has option to answer or ignore the call.

BY DIALING THE PHONE NUMBER






1. Enter the phone number and press the **Left Soft Key**  [Alert].
“Press PTT Key To Alert” message appears on your main display screen.

 **Left Soft Key**  [Alert] is not available when **PTT Mode** is set to **Off**.

2. Press the **PTT Key/Red Side Key**  on the left hand side of the phone to alert.

3. Press and hold the **PTT Key/Red Side Key**  while talking and then release the **PTT Key/Red Side Key**  to let the other party talk.





USING THE PTT CONTACT LIST

1. From the idle mode, press the **PTT Key/Red Side Key**  to access your PTT Contact List.
 2. Select the contact and press the **Left Soft Key**  [**Alert**].
“**Press PTT Key To Alert**” message appears on your main display screen.
 3. Press and hold the **PTT Key/Red Side Key**  while talking and then release the **PTT Key/Red Side Key** .
- You can hear the response while the **PTT Key/Red Side Key**  is released.



USING A PUSH TO TALK (PTT) BARGE




A barge call automatically connects to the other party. The called party does not have the option to ignore the call.

BY DIALING THE PHONE NUMBER

1. Enter the phone number.
2. Press and hold the **PTT Key/Red Side Key**  on the left hand side of the phone.
3. Wait until the “**OK to Talk**” tone sounds and the message “**Talking to**” appears on the display. Speak while pressing down the **PTT Key/Red Side Key** .
4. Release the **PTT Key/Red Side Key**  to let the other party talk.
5. Press the **END/PWR Key**  to end the call.


USING THE PTT CONTACT LIST

1. From the idle mode, press the **PTT Key/Red Side Key**  to access your PTT Contact List.
2. Press and hold the **PTT Key/Red Side Key**  on your left hand side of the phone.

3. Wait until the “**OK to Talk**” tone sounds and the message “**Talking to**” appears on the display. Speak while pressing down **PTT Key/Red Side Key** .
4. Release the **PTT Key/Red Side Key**  to let the other party talk.
5. Press the **END/PWR Key**  to end the call.

ANSWERING CALLS

1. Press the **SEND Key**  to answer the incoming call.



 Depending on your phone’s settings, you may also answer incoming calls by opening the phone or by pressing any key.

2. To ignore incoming calls, press the **Right Soft Key**  [**Ignore**].

ANSWERING PTT CALLS





INCOMING BARGE CALL

When you receive a barge call, you will hear the calling party speaking through the speakerphone. The calling party’s phone number will appear on your display. If the calling party’s number has already been registered in your PTT Contact List, the contact name will replace the phone number on the display.

1. Press and hold the **PTT Key/Red Side Key**  to talk.
2. Release the **PTT Key/Red Side Key**  to let the other party talk.
3. Press the **END/PWR Key**  to end the call.

INCOMING ALERT CALL

When you receive an alert, you will hear the “**PTT Alert**” tone. The message “**Incoming Alert**” will be displayed with the phone number or contact name of the calling party. The PTT Alert tone repeats every 5 seconds until you answer or ignore the call. If you do not answer an incoming alert within 20 seconds, the PTT call will be automatically disconnected.

1. Answer or ignore the alert.
To answer the alert, press and hold the **PTT Key/Red Side Key**  and begin talking.
To ignore the alert, press the **Right Soft Key**  [**Ignore**].
2. Release the **PTT Key/Red Side Key**  to let the other party talk.
3. Press the **END/PWR Key**  to end the call.

ENDING A CALL

1. Press the **END/PWR Key** .


MISSED CALL NOTIFICATION

When an incoming call is not answered, the missed call notification appears on the display.

DISPLAY THE MISSED CALL FROM THE NOTIFICATION

1. Select **View Now** and press the **Center Select Key** [**OK**].
2. To dial the phone number, press the **SEND Key** .

DISPLAY A MISSED CALL FROM IDLE MODE


 
1. Press the **Center Select Key** [**MENU**], select **Recent Calls** and press the **Center Select Key** [**OK**].
2. Select **Missed** and press the **Center Select Key** [**OK**].
3. Select the missed call and press the **Center Select Key** [**OPEN**].
4. To dial the phone number, press the **SEND Key** .

WAIT/PAUSE

Pauses are used for automated systems (i.e., voice mail or calling cards). The numbers entered after the pause will automatically be dialed after the pause. It is useful for dialing into systems that require a code.


 
WAIT

The phone stops dialing until you press the **SEND Key**  to dial the next number.


 
1. Enter the phone number.
2. Press the **Right Soft Key**  [**Options**].
3. Select **Add Wait** and press the **Center Select Key** [**OK**].
4. Enter additional number(s).
5. Press the **SEND Key**  to dial.

2-SEC PAUSE

The phone waits 2 seconds before sending the next digits automatically.

1. Enter the phone number.
2. Press the **Right Soft Key**  [**Options**].
3. Select **Add 2-Sec Pause** and press the **Center Select Key** [**OK**].
4. Enter additional number(s) (pin number or credit card number).
5. Press the **SEND Key**  to dial.

MAKING AN INTERNATIONAL CALL

 
 
1. Press and hold the **Shift Key** .
 - The “+” symbol, required for international calls appears.
2. Enter the country code, area code, and phone number.
3. Press **SEND Key**  to make a call.



If you set Assisted Dialing to On, regardless of the user's intention, the entered phone numbers maybe changed to the wrong number by the auto-correct function.

3 WAY CALLING

You can talk to two participants at the same time. During the call, the normal airtime rates will be applied for each of the two calls.

1. Enter the phone number and press the **SEND Key** .
2. When you have connected, enter the second phone number to call and press the **SEND Key** .

 
 
3. When you're connected to the second party, press the **SEND Key**  again to begin your 3-Way call.



If one of the participants hangs up during the call, you and the remaining participant stay connected. If you initiated the call and are the first one to hang up, all three calls are disconnected.




CALL WAITING

If you are on a call and you receive another incoming call, you will hear one beep and the caller's phone number will appear on the display. With Call Waiting, you may put the active call on hold while you answer the other incoming call.

1. Press the **SEND Key**  to answer the other call. The first call will automatically be placed on hold. To switch back, press the **SEND Key**  again.

VOLUME QUICK ADJUSTMENT

ADJUSTING THE MASTER VOLUME

1. Press the **Volume Keys**   to adjust the master volume level.
 - To check the ringtone's volume, press the **Left Soft Key**  [**Play**].
2. Press the **Center Select Key** [**SET**] to save.

ADJUSTING THE VOLUME DURING A CALL

1. To increase the volume, press the **Volume Keys**   up.
2. To decrease the volume, press the **Volume Keys**   down.

CALLER ID

Caller ID displays the name and the phone number of the person calling. If the caller's information is not stored in your contact list, only the phone number is displayed.

VIBRATE MODE

Vibrate mode mutes the tones and activates an alert for an incoming call or message.

1. To activate, press and hold the **Vibrate Mode Key** .
2. To deactivate, press and hold the **Vibrate Mode Key**  again.



MUTE FUNCTION

If you activate the mute function while you are talking on the phone, the person you are speaking with cannot hear any sounds from you but, you are still able to hear them. To activate mute function:

1. During a call, press the **Left Soft Key**  [**Mute**].
2. Press the **Left Soft Key**  [**Unmute**] to deactivate the mute function.



SPEAKERPHONE

The Speakerphone feature lets you hear audio through the speaker and talk without holding the phone.

1. To activate, with the flip open, press the **Speakerphone / Flashlight Key** .
2. To deactivate, press the **Speakerphone / Flashlight Key**  again.

 


FLASHLIGHT

Your phone provides you of the flashlight function. To activate the flashlight:

1. In the idle mode, press and hold the **Speakerphone / Flashlight Key** .
 - The flashlight turns on.
2. Press and hold the **Speakerphone / Flashlight Key**  to deactivate the flashlight.
 - The flashlight turns off after the “**Flash Off**” message appears on the display.

VOICE DICTATION

By using the voice dictation function, you can input the text by speaking your words instead of using the keypad.

1. Press the **Left Soft Key**  [**Message**], select **New Message** and press the **Center Select Key** [**OK**].
2. Select the desired message type to send and press the **Center Select Key** [**OK**].
3. Enter the email address or phone number in the “**To**” field and press the **Center Select Key** [**OK**].
4. In the **Text** field, press and hold the **Voice Commands Key** , and speak into the handset. Release the **Voice Commands Key**  after one word.
5. When entered text is correct, press the **Center Select Key** [**OK**] to confirm. If incorrect, amend the text by using the keypad. For details on how to use the keypad, see page 60, “TEXT INPUT.”








- Voice dictation mode cannot be used when the Bluetooth® connection is in use.
- The voice dictation function supports US English only.
- Before using voice dictation, the phone should be trained by your voice.

TEXT TO SPEECH

READING OUT UNREAD MESSAGES WITH THE FLIP OPEN


With the flip open, the handset reads out the text information with a synthetic voice.

1. With the flip open in idle mode, press and hold the **Voice Commands Key** .
 - The handset reads out unread received messages one after another for you with a synthetic voice.
2. Press the **Left Soft Key**  [**Again**] to go back to the top of the message currently being read.
3. Press the **Center Select Key** [**REPLY**] to create a reply message for the currently reading message.

4. Press the **Right Soft Key**  [**Options**] to select the desired options.
5. Press the **CLR Key**  to stop reading out.
6. The handset returns to idle mode when reading out is done for all the unread messages or when the **END/PWR Key**  is pressed to abort reading.

READING OUT UNREAD MESSAGES WITH THE FLIP CLOSED


With the flip closed, the handset reads out the text information with a synthetic voice.

1. With the flip closed, press and hold the **Voice Commands Key** .
 - The handset reads out unread received messages one after another for you with a synthetic voice.
2. The handset returns to idle mode when reading out is done for all the unread messages.



Reading out will continue even when the flip is opened while reading out is in progress.

AVAILABLE OPTIONS DURING A CALL

During a phone call, you can access the following features by pressing the **Right Soft Key**  [**Options**]. Press the **Center Select Key** [**OK**] to select any of the following options:

- **Messaging**
- **Contact List**
- **Recent Calls**
- **Bluetooth Menu**
- **Main Menu**
- **Notepad**
- **Voice Record**
- **Voice Privacy**

MAKING AN EMERGENCY CALL

The 911 feature automatically places the phone in Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in Lock Mode and out of the service area.


MAKING AN EMERGENCY CALL IN LOCK MODE


1. Enter any of the numbers **911**, ***911**, **#911** or **112** and press the **SEND Key** .

 The phone maintains Emergency Mode for 5 minutes. When the call ends, the phone returns to Lock Mode.

MAKING AN EMERGENCY CALL IN ANY NETWORK MODE

1. Enter any of the numbers **911**, ***911**, **#911** or **112** and press the **SEND Key**  in **ALL NETWORK MODE** - **CDMA Mode**, **GSM Mode** and **Global Mode**.

 The phone will stay in Emergency Mode for 5 minutes in CDMA Mode. While the phone is in Emergency Mode, the phone can receive an incoming call or you can make outgoing calls even in the Emergency Callback Mode. In this case, making a call can automatically end the Emergency Callback Mode.

 The 911 call does not appear in the recent calls list.

MOTION DETECTION

Using the Motion Detection function, you can control your handset just by shaking it.

By default, the Motion Detection function is set to **OFF**. To use the Motion Detection function:

1. From idle mode, press the **Center Select Key [MENU]** and select **Settings&Tools**, then press the **Center Select Key [OK]**.
2. Select **Phone Settings** and press the **Center Select Key [OK]**, and select **Motion Detection** then press the **Center Select Key [OK]**.
3. Select **G'zGEAR** or **My Pics/Videos**.
4. Select **On** and press the **Center Select Key [SET]**.

When shaking the handset, be sure to hold the handset firmly as shown in the figure and shake it from the right to left or vice versa.



When shaking the handset, make sure you do not hit the handset against nearby objects.



MEMORY FUNCTION 3

This chapter addresses memory functions including:

STORING A PHONE NUMBER

TEXT INPUT

USING THE TEXT INPUT MODE

ONE, TWO, THREE DIGIT SPEED DIALING




STORING A PHONE NUMBER

ADDING A NEW CONTACT

1. Enter the phone number you want to save.
2. Press the **Left Soft Key**  [**Save**].

 If PTT Mode is set to on, you must access by pressing the **Right Soft Key**  select **Save To Contacts** and press the **Center Select Key** [OK] as the Left Soft Key will show as Alert.



3. Select **Add New Contact** and press the **Center Select Key** [OK].
4. Select the type of number and press the **Center Select Key** [OK], then enter the name of contact.
 - You can also store additional information such as the fax number, email address, and birthday information.
5. Press the **Center Select Key** [**SAVE**].

-  • Select **Update Existing** to add another phone number to a contact already stored in memory.
- You can also save the phone number to the SIM card.

STORING A PHONE NUMBER INTO SIM CARD



You can copy or move contact information to the SIM card.

The SIM card can store up to 5 contacts entries.

1. Press the **Right Soft Key**  [**Contacts**] and select the contact you would like to copy or move.
2. Press the **Right Soft Key**  [**Options**].
3. Select [**Copy & Move**] and press the **Center Select Key** [OK].
4. Select either [**Move to SIM**] or [**Copy to SIM**] and then press the **Center Select Key** [OK].






OPTIONS TO CUSTOMIZE YOUR CONTACTS

Once the basic phone number and name information is stored in your **Contacts**, you can edit and/or customize the entries.

1. Press the **Right Soft Key**  [**Contacts**] and select the contact you would like to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Edit the information and press the **Center Select Key** [**SAVE**] to save.


 



ADDING OR CHANGING GROUPS

To organize your Contacts into groups:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to add to a group.
2. Press the **Left Soft Key**  [**Edit**].
3. Select **Group**, press the **Left Soft Key**  [**Set**].
4. Select either **Personal** or **Business** and then press the **Center Select Key** [**MARK**].
5. Press the **Left Soft Key**  [**Done**].
 - To create a new group, press the **Right Soft Key**  [**New**], and then press the **Center Select Key** [**SAVE**] after entering the group name.
6. Press the **Center Select Key** [**SAVE**] to update the contact entry.





CHANGING THE CALL RINGTONE & MESSAGE TONE

You can identify who is calling by setting different ringtones for different phone numbers in your Contacts.

1. Press the **Right Soft Key**  [**Contacts**], then select the contact whose ringtone you want to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select **Ringtone** or **Message Tone** and press the **Left Soft Key**  [**Set**].
4. To listen to the selected tone, press the **Left Soft Key**  [**Play**].
To stop press the **Left Soft Key**  [**Stop**]. To select, press the **Center Select Key** [**OK**].
5. Press the **Center Select Key** [**SAVE**] to update the contact entry.



ADDING OR CHANGING THE PICTURE ID

To select a picture or graphic to assign to a Caller ID:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select the **Picture** and press the **Left Soft Key**  [**Set**].
4. Select the picture to set and press the **Left Soft Key**  [**View**] to view the selected picture.
5. Press the **Center Select Key** [**OK**] to select the image.
6. Press the **Center Select Key** [**SAVE**] to update the contact entry .




ADDING OR CHANGING AN EMAIL ADDRESS

To add or change an email address:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select **Personal Email** or **Business Email** to edit.
4. Enter the new email address and press the **Center Select Key** [**SAVE**] to update the contact entry.



ADDING OR CHANGING HOME ADDRESS /WORK ADDRESS

To add or change address information:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select **Home Address** or **Work Address** and press the **Left Soft Key**  [**Set**] to edit.
4. Enter the new address and press the **Center Select Key** [**SAVE**] to save.
5. Press the **Center Select Key** [**SAVE**] to update the contact entry.




ADDING OR CHANGING COMPANY/TITLE/NOTES

To add or change information:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select **Company**, **Title**, or **Notes** to edit.
4. Enter the new text information and press the **Center Select Key** [**SAVE**] to update the contact entry.




ADDING OR CHANGING BIRTHDAY

To add or change information:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select **Birthday** to edit.
4. Press the **Left Soft Key**  [**Set**], then select the desired month and date information and press the **Center Select Key** [**OK**].
5. Press the **Center Select Key** [**SAVE**] to update the contact entry.




ADDING A SPEED DIAL ENTRY

To add a Speed Dial entry:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to add to Speed Dial.
2. Press the **Left Soft Key**  [**Edit**].
3. Select the phone number you want to add to Speed Dial and press the **Right Soft Key**  [**Options**].
4. Select **Set Speed Dial** and press the **Center Select Key** [**OK**], choose a Speed Dial location then press the **Center Select Key** [**SET**].
5. To assign the entry select **Yes** then press the **Center Select Key** [**OK**].
6. Press the **Center Select Key** [**SAVE**] to update the contact entry.

ADDING OR CHANGING AN IM SCREEN NAME

To add or change a IM screen name:

1. Press the **Right Soft Key**  [**Contacts**], then select the contact you want to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select **IM Screen Name**, then press the **Left Soft Key**  [**Set**].
4. Select either **AIM, Yahoo!** or **WL Messenger** and press the **Center Select Key** [**OK**].
5. Enter the user's Screen Name and press the **Center Select Key** [**OK**] to save.
6. Press the **Center Select Key** [**SAVE**] to update the contact entry.

EDITING CONTACT ENTRIES


 
ADDING A PHONE NUMBER FROM IDLE MODE

1. Enter the phone number you want to save (up to 32 digits).
2. Press the **Left Soft Key**  [**Save**].

 If PTT Mode is set to on, you must access by pressing the **Right Soft Key**  select **Save To Contacts** and press the **Center Select Key** [**OK**] as the **Left Soft Key** will show as **Alert**.

3. Select **Update Existing** and press the **Center Select Key** [**OK**].
4. Select the contact to update and press the **Center Select Key** [**OK**].
5. Select **Mobile 1, Mobile 2, Home, Business** or **Fax** and press the **Center Select Key** [**OK**].
6. If a phone number is already assigned to the category you selected, select **Yes** to update and then press the **Center Select Key** [**OK**].
7. Press the **Center Select Key** [**SAVE**] to update the contact entry.

ADDING A PHONE NUMBER FROM THE CONTACT LIST SCREEN

1. Press the **Right Soft Key**  [**Contacts**]. Your **Contacts** display alphabetically.
2. Select the contact to update and press the **Left Soft Key**  [**Edit**].
3. Enter the phone number in the appropriate field.
4. Press the **Center Select Key** [**SAVE**] to update the contact entry.




DEFAULT NUMBERS

The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be set as the Default Number.





The Default Number can not be deleted. The entire Contact entry can be deleted or another number can be assigned as the Default Number allowing you to delete the original number and keep the Contact entry.

CHANGING THE DEFAULT NUMBER




1. Press the **Right Soft Key**  [**Contacts**]. Your **Contacts** display alphabetically.
2. Select the contact to update and press the **Left Soft Key**  [**Edit**].
3. Select the number to assign as the default number and press the **Right Soft Key**  [**Options**].
4. Select **Set As Default** and press the **Center Select Key** [**OK**].
5. Select **Yes** then press the **Center Select Key** [**OK**] to set as the default number.
6. Press the **Center Select Key** [**SAVE**] to update the contact entry.

EDITING STORED PHONE NUMBERS



1. Press the **Right Soft Key**  [**Contacts**]. Your **Contacts** display alphabetically.
2. Select the contact entry you want to edit and press the **Left Soft Key**  [**Edit**].
3. Select and edit the phone number as necessary and press the **Center Select Key** [**SAVE**] to update the contact entry.

DELETING




DELETING A PHONE NUMBER FROM A CONTACT

1. Press the **Right Soft Key**  [**Contacts**]. Your **Contacts** display alphabetically.
2. Select the contact to update and press the **Left Soft Key**  [**Edit**].
3. Select the number to delete.
4. Press and hold the **CLR Key**  to delete.
5. Press the **Center Select Key** [**SAVE**] to update the contact entry.

DELETING A CONTACT ENTRY






1. Press the **Right Soft Key**  [**Contacts**] and select the contact to delete.
2. Press the **Right Soft Key**  [**Options**], select **Erase** and press the **Center Select Key** [**OK**].
3. Select **Yes** and press the **Center Select Key** [**OK**] to erase.

DELETING A SPEED DIAL

1. Press the **Right Soft Key**  [**Contacts**] and select the contact to edit.
2. Press the **Left Soft Key**  [**Edit**].
3. Select the phone number which has speed dial and press the **Right Soft Key**  [**Options**].
4. Select **Remove Speed Dial** and press the **Center Select Key** [**OK**].
5. Select **Yes** and press the **Center Select Key** [**OK**] to erase.
6. Press the **Center Select Key** [**SAVE**] to update the contact entry.

TEXT INPUT

The text entering mode (Alpha editor) allows you to input text, numbers and symbols. The default mode is [**Abc**] mode.

Key	Key Functions
	Abc : Press to change mode. [T9 Word][Abc][ABC][123][T9 Palabra][Symbols]
	Next : Press to view the next matching word in the predictive mode.
	Space : Press to select the word in predictive mode and/or add a space.
	Caps Lock : Press to select upper or lowercase letters. Press and hold to change mode.
	Clear : Press to delete a character to the left of the cursor. Press and hold to delete an entire word.

USING THE TEXT INPUT MODE

There are six modes for entering text, numbers, symbols, and punctuation.

ABC (MULTI-TAP) TEXT INPUT MODE

Use the alphanumeric keypad to enter letters, numbers and characters.

Each of the following keys will scroll through these sequential options listed by language. The limitation is 160 characters. Press the key labeled with the target letter once for the first letter press twice for the second letter and so on. Press and hold the key labeled with the target number for that number.

Key	English	Spanish
	. @ ? ! - , & : ' / and 1	
	abc2	a á bc2
	def3	de é f3
	ghi4	ghi í4
	jkl5	
	mno6	m n ñ o ó6
	pqrs7	
	tuv8	
	wxyz9	

 By selecting **ABC** mode, the text input only appears in capital letters.

PREDICTIVE MODE

T9 Word mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing each key once per character. To type the word "Hello" follow these steps:

1. Press the **Left Soft Key**  [**Message**], select **New Message** and press the **Center Select Key** [**OK**].

2. Select **TXT Message** and press the **Center Select Key [OK]**.
3. Enter the email address or phone number in the “**To**” field and press the **Center Select Key [OK]**. In the **Text** field, press the **Left Soft Key [ABC]**, select **T9 Word** and press the **Center Select Key [OK]**.
4. Press **[4] GHI**, **[3] DEF**, **[5] JKL**, **[5] JKL**, **[6] MNO** to write “**Hello**”. Press the **[NEXT]** Key to view the next word.
5. To select the word and add a space, press the **[SPACE]** Key.

NUMERIC MODE

Allows you to enter numbers.

1. From the text entry screen, press the **Left Soft Key [ABC]**, select **123** and press the **Center Select Key [OK]**.
2. Press the corresponding keys to input the number.

USING PALABRA MODE TEXT INPUT

Palabra mode is a T9 mode for Spanish input.


To type the message “Llame la oficina,” follow these steps from the text entry screen:

1. From the text entry screen, press the **Left Soft Key [ABC]**, select **T9 Palabra**, then press the **Center Select Key [OK]**.
2. Press **[5] JKL** **[5] JKL** **[2] ABC** **[6] MNO** **[3] DEF**.
3. Press **[SPACE]** to complete the word and add a space.
4. Press **[5] JKL** **[2] ABC** **[SPACE]** **[6] MNO** **[3] DEF** **[4] GHI** **[2] ABC** **[4] GHI** **[6] MNO** **[2] ABC** **[1] 2@** **[SPACE]**.

“**Llame la oficina**” is displayed




SYMBOL MODE

Allows you to enter symbols.

1. From the text entry screen, press the **Left Soft Key [ABC]**, select **Symbols** and press the **Center Select Key [OK]**.
2. Select the symbol you wish to enter by using the **Directional Key** . Press the **Center Select Key [OK]** to select.

USING VOICE DICTATION MODE TEXT INPUT

By using the voice dictation function, you can input the text by speaking your words instead of using the keypad.

1. Press the **Left Soft Key**  [**Message**], select **New Message** and press the **Center Select Key** [**OK**].
2. Select the desired message type to send and press the **Center Select Key** [**OK**].
3. Enter the email address or phone number in the “**To**” field and press the **Center Select Key** [**OK**].
4. In the **Text** field, press and hold the **Voice Commands Key** , and speak into the handset. Release the **Voice Commands Key**  after one word.
5. When entered text is correct, press the **Center Select Key** [**OK**] to confirm. If incorrect, amend the text by using the keypad. For details on how to use keypad, see page 60, “TEXT INPUT.”



- Voice dictation mode cannot be used when the Bluetooth® connection is in use.
- The voice dictation function supports US English only.

ONE, TWO, THREE DIGIT SPEED DIALING

Ideal for frequently dialed numbers, this feature allows contact entries to be dialed via the keypad with only one, two or three key presses.

ONE TOUCH SPEED DIALING:

If the speed dial is set to one digit number, press and hold the number you wish to connect to for more than 1 second.

TWO DIGIT SPEED DIALING:

If the speed dial is set to two digit numbers, press the first digit then press and hold the second digit of the number to dial.

THREE DIGIT SPEED DIALING:

If the speed dial is set to three digit numbers, press the first and second digits then press and hold the third digit of the number to dial.



The following speed dial entries are already assigned to your Verizon Wireless Account Information:

Speed Dial No.	Services
1	Voicemail
95	#Warranty Center
96	#DATA
97	#BAL
98	#MIN
99	#PMT
411	Directory Assistance

01

02

03

04

05



MENU FUNCTION

4

This chapter addresses accessing the menu and using its functions and features to customize your C781R3.

CONTACTS

MESSAGING

RECENT CALLS

MEDIA CENTER

VZ NAVIGATOR

SETTINGS & TOOLS




CONTACTS

NEW CONTACT

For details on adding a new contact, see page 54.

CONTACT LIST


You can review all the entries stored in your Contact List or quickly find an entry by entering a name or its character.

1. Press the **Center Select Key** [**MENU**], select **Contacts** and press the **Center Select Key** [**OK**].
2. Select **Contact List** then press the **Center Select Key** [**OK**].
3. Enter a name in the **Go To** field or select the contact.
4. To edit the contact, press the **Left Soft Key**  [**Edit**]. To view the details, press the **Center Select Key** [**VIEW**].

GROUPS

Allow you to classify phone entries into groups with up to 20 contacts in each group. The default groups - Personal and Business - cannot be erased or renamed.

TO ADD NEW GROUP

1. Press the **Center Select Key** [**MENU**], select **Contacts** and press the **Center Select Key** [**OK**]. Select **Groups** then press the **Center Select Key** [**OK**].
2. Press the **Left Soft Key**  [**New**].
3. Enter a new group name and press the **Center Select Key** [**SAVE**].

TO ASSIGN PHONE NUMBER TO GROUP

1. Press the **Center Select Key** [**MENU**], select **Contacts** and press the **Center Select Key** [**OK**]. Select **Groups** then press the **Center Select Key** [**OK**].
2. Select the group to add the contact to and press the **Center Select Key** [**VIEW**].

3. To add a contact, press the **Center Select Key** [ADD]. Select the contact to add and press the **Center Select Key** [MARK] then press the **Left Soft Key** [Done] to add.

TO CHANGE GROUP NAME


1. Press the **Center Select Key** [MENU], select **Contacts** and press the **Center Select Key** [OK]. Select **Groups** then press the **Center Select Key** [OK].
2. Select the group to rename, press the **Right Soft Key** [Options], select **Rename**, then press the **Center Select Key** [OK].
3. Edit the group name and press the **Center Select Key** [SAVE].

ERASE GROUP

1. Press the **Center Select Key** [MENU], select **Contacts** and press the **Center Select Key** [OK]. Select **Groups** then press the **Center Select Key** [OK].
2. Select the group to erase and press the **Right Soft Key** [Options]. Select **Erase Group** and press the **Center Select Key** [OK].
3. Select **Yes** and press the **Center Select Key** [OK] to erase the group.

NEW PTT CONTACT

1. Enter the phone number you want to save.
2. Press the **Right Soft Key** [Options].
3. Select **Save To PTT Contacts** and press the **Center Select Key** [OK].
4. Enter the **Name**, **PTT Number**, and **PTT Group**.
5. Press the **Center Select Key** [SAVE].

 If PTT Mode is disabled, the PTT menu options will not appear such as “New PTT Contact”, “PTT Contact List” and “PTT Groups”

PTT CONTACT LIST

You can review all the entries stored in your PTT Contact List or quickly find an entry by entering a name or its character.

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**.
2. Select **PTT Contact List** then press the **Center Select Key [OK]**.
3. Enter a name in the **Go To** field or select the PTT contact.
PTT Contact information appears.

 You can also press the **Right Soft Key [Contacts]** from idle mode, and press **Right Soft Key [Options]** to access **PTT Contact List**. The **PTT Contact List** option appears when PTT Mode is active.

PTT GROUP

You can review all the entries stored in your PTT Group or quickly find an entry by entering a name or its character.

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**.
2. Select **PTT GROUP** then press the **Center Select Key [OK]**.
3. Enter a name in the **Go To** field or select the PTT group.
PTT Group information appears.




TEMP PTT GROUP

A Temp PTT Group allows you to quickly communicate with multiple contacts on a single PTT call. Temp PTT Groups can be created directly on your phone and are not permanently saved to your PTT Group list (unless you choose to save it). The following operation assigns a PTT Contacts to the Temp PTT Group.

ADDING PTT CONTACTS

1. In the idle mode, press the **Center Select Key [MENU]**, select **Contacts**, then press the **Center Select Key [OK]**. Select **PTT Contact List** and press the **Center Select Key [OK]**.
2. Press the **Right Soft Key [Options]**, then select **Temp PTT Group** and press the **Center Select Key [OK]**.
3. Press the **Center Select Key [ADD]**, select a PTT Contact entry, press the **Center Select Key [MARK]**, then **Left Soft Key [Done]**.

VIEWING TEMP PTT GROUP MEMBERS

1. In the idle mode, press the **Center Select Key [MENU]**, select **Contacts**, then press the **Center Select Key [OK]**. Select **PTT Contact List** and press the **Center Select Key [OK]**.
2. Press the **Right Soft Key**  [**Options**], then select **Temp PTT Group** and press the **Center Select Key [OK]**.
3. Select the Temp PTT Group entry. You can select one of the following options:
 - Press the **Left Soft Key**  [**Remove**] to remove the entry.
 - Press the **Right Soft Key**  [**Options**] to select the desired options.

BACKUP ASSISTANT

Backup Assistant is a wireless service that saves a copy of your phone's address book to a secure web site. If your phone is lost, stolen or damaged, Backup Assistant restores your saved address book to a new phone - wirelessly! Schedule daily automatic backups or manually backup your phone book at your convenience. Login to your web account and get full access to your address book. You can view, print, add, delete and edit contacts. Changes are sent to your phone with one click!

Visit Web site: <https://www.verizonwireless.com/backupassistant/>.

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**.
2. Select **Backup Assistant** and press the **Center Select Key [OK]** to launch the application.

SPEED DIALS

Calls can be placed to numbers stored in speed dial by pressing & holding the location number on the keypad. For a 2-digit location number, press the first number then press and hold the second number. For a 3-digit location number, press the first number and second numbers then press and hold the third number.


1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **Speed Dials** then press the **Center Select Key [OK]**.

2. Select the Speed Dials position or enter the Speed Dial digit and press the **Center Select Key [SET]**.
3. Select the **Contact** and press the **Center Select Key [OK]**.
4. Select the number to assign the speed dial to and press the **Center Select Key [OK]**.
5. Select **Yes** and press the **Center Select Key [OK]**.



Unassigned appears if the location is available.

TO ERASE A SAVED SPEED DIAL

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **Speed Dials** then press the **Center Select Key [OK]**.
2. Select the **Speed Dial** entry to erase.
3. Press the **Right Soft Key**  **[Remove]**.
4. Select **Yes** and press the **Center Select Key [OK]**.

IN CASE OF EMERGENCY

Your phone has a special menu to organize your emergency contacts and personal information.


TO ASSIGN EMERGENCY CONTACTS

Follow the procedures below to register a Contact to be contacted in case of emergency or to register a medical record number or other personal information.


1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **In Case of Emergency** then press the **Center Select Key [OK]**.
2. Select **Contact 1**, **Contact 2** or **Contact 3** and press the **Center Select Key [ADD]**.
3. Select **From Contacts/New Contact** and press the **Center Select Key [OK]**.
4. Select the desired contact entry and press the **Center Select Key [OK]**.
5. When adding a new contact, select **New Contact** and press the **Center Select Key [OK]**.

6. Enter the contact information and press the **Center Select Key** [**SAVE**].
7. The contact name will be displayed in place of **Contact 1**, **Contact 2** or **Contact 3**.


 
TO RE-ASSIGN EMERGENCY CONTACTS

1. Press the **Center Select Key** [**MENU**], select **Contacts** and press the **Center Select Key** [**OK**]. Select **In Case of Emergency** then press the **Center Select Key** [**OK**].
2. Select the contact to re-assign and press the **Right Soft Key**  [**Options**].
3. Select **Re-assign** and press the **Center Select Key** [**OK**].
4. Select **From Contacts** and press the **Center Select Key** [**OK**]. Select a contact from your **Contact List**. When adding a new contact, select **New Contact** and press the **Center Select Key** [**OK**], enter the contact information, and press the **Center Select Key** [**SAVE**].
5. Press the **Center Select Key** [**OK**].

TO ERASE ASSIGNED EMERGENCY CONTACTS

1. Press the **Center Select Key** [**MENU**], select **Contacts** and press the **Center Select Key** [**OK**]. Select **In Case of Emergency** then press the **Center Select Key** [**OK**].
2. Select the contact to erase and press the **Right Soft Key**  [**Options**].
3. Select **Unassign** and press the **Center Select Key** [**OK**].

TO CALL AN ASSIGNED EMERGENCY CONTACT

1. Press the **Center Select Key** [**MENU**], select **Contacts** and press the **Center Select Key** [**OK**]. Select **In Case of Emergency** then press the **Center Select Key** [**OK**].
2. Select the contact to call and press the **Left Soft Key**  [**Call**] or press the **SEND Key** .

TO ADD PERSONAL INFO


To store a Medical Record Number or other information that may be useful in case of an emergency:

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **In Case of Emergency** then press the **Center Select Key [OK]**.
2. Select **Personal Info** and press the **Center Select Key [VIEW]**.
3. Select **Note 1**, **Note 2** or **Note 3** and press the **Center Select Key [ADD]**.
4. Enter the information and press the **Center Select Key [SAVE]**.
5. The information you entered now appears in place of **Note 1**, **Note 2** or **Note 3**.

TO EDIT SAVED PERSONAL INFO

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **In Case of Emergency** then press the **Center Select Key [OK]**.
2. Select **Personal Info** and press the **Center Select Key [VIEW]**.
3. Select the note to edit and press the **Center Select Key [VIEW]**.
4. Press the **Center Select Key [EDIT]**. Edit the note and press the **Center Select Key [SAVE]**.


TO ERASE SAVED PERSONAL INFO

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **In Case of Emergency** then press the **Center Select Key [OK]**.
2. Select **Personal Info** and press the **Center Select Key [VIEW]**.
3. Select the note to erase and press the **Right Soft Key**  **[Erase]**.
4. Select **Yes** and press the **Center Select Key [OK]**.


MY NAME CARD

A Name Card with the handset's mobile number automatically appears.


EDIT MY NAME CARD

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **My Name Card** then press the **Center Select Key [OK]**.
2. Press the **Left Soft Key**  **[Edit]**.
3. Edit the **My Name Card** options and press the **Center Select Key [OK]** to save your changes.


SEND MY NAME CARD VIA TXT, PICTURE OR VIDEO MESSAGE


1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **My Name Card** then press the **Center Select Key [OK]**.
2. Press the **Right Soft Key**  **[Send]**.
3. Select the message type and press the **Center Select Key [OK]**.
4. Enter the recipient's contact information and press the **Center Select Key [OK]**.
5. Enter any additional message information and press the **Center Select Key [SEND]**.


SEND MY NAME CARD WITH VOICE MESSAGE

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **My Name Card** then press the **Center Select Key [OK]**.
2. Press the **Right Soft Key**  **[Send]**.
3. Select **Send via Voice Message** and press the **Center Select Key [OK]**.
4. To record a new voice message, press the **Center Select Key [OK]** to start recording. Press the **Center Select Key [STOP]** to stop recording and save it.
5. Enter the recipient's contact information in the **To** field and press the **Center Select Key [OK]**.
6. Enter any additional message information and press the **Center Select Key [SEND]**.

SEND MY NAME CARD TO ANOTHER BLUETOOTH DEVICE


 Turn Bluetooth on for both devices (steps 1-4) and turn Discovery Mode to On. Please refer to Bluetooth on page 114.

1. Press the **Center Select Key [MENU]**, select **Contacts** and press the **Center Select Key [OK]**. Select **My Name Card** then press the **Center Select Key [OK]**.
2. Press the **Right Soft Key**  [**Send**].
3. Select **Send via Bluetooth** and press the **Center Select Key [OK]**.
4. With **Add New Device** selected, press the **Center Select Key [OK]**. The handset will prompt you with the following message on the LCD screen: **PLACE DEVICE YOU ARE CONNECTING TO IN DISCOVERABLE MODE**. Press the **Center Select Key [OK]**.
5. Select the desired device and press the **Center Select Key [PAIR]**.

 You can also turn Bluetooth on/off through MY SHORTCUTS by pressing the **Directional Key**  right in idle mode.

6. If applicable, the device may prompt you for the passkey.
7. The screen displays **Before Connecting To [Device Name]**, select either **Always Ask** or **Always Connect** and press the **Center Select Key [OK]**.
8. The information is then sent via Bluetooth to the receiving device.

MESSAGING

 Verizon Wireless voice coverage is available in multiple destinations worldwide, so you'll use one number wherever you travel. Plus, stay connected to email, text and picture messaging, web, and wireless networks while you're on the go in multiple data destinations around the world. Visit www.vzw.com/vzglobal for details.

WHEN A NEW MESSAGE ARRIVES

1. The received message display appears when a new message arrives.
2. To display the message, select **View Now** and press the **Center Select Key [OK]**.

NEW MESSAGE

TXT MESSAGE



- The SIM card must be installed in order to send TXT Messages in GSM mode.
- The SIM Card is pre-installed in your phone.






1. Press the **Left Soft Key** [**Message**], select **New Message** and press the **Center Select Key** [**OK**]. Select **TXT Message** and press the **Center Select Key** [**OK**].
2. Enter the email address or phone number and press the **Center Select Key** [**OK**]. Or press the **Right Soft Key** [**Add**] to access the following options.
 - **From Contacts**: Search for a phone number which is stored in the contacts list.
 - **Recent Calls**: Search for a phone number which is stored in the recent calls list.
 - **Groups**: Search the groups stored in the contacts list.
 - **To Contacts**: Save the number or email you've just entered to the contacts list.
 - **To PTT Contacts**: Save the number you've entered to the PTT contact list.
3. Move to the Text field by pressing the **Center Select Key** [**OK**] and press the **Right Soft Key** [**Options**] to access the following options:
 - **Insert Quick Text**: Inserts already written sentences in TXT message.
 - **Save As Draft**: Save the TXT message to the Drafts folder.
 - **Add**: Attach **Graphic**, **Animation**, **Sound**, **Name Card**, or **Contact**.
 - **Format Text**: Edit the **Alignment**, **Font Size**, **Font Style**, **Font Color** and **Background Color**.
 - **Priority Level**: Set the level of the priority to **High** or **Normal**.
 - **Save As Quick Text**: Save the text as quick text
 - **Cancel Message**: Cancel message.
4. Enter the message and press the **Center Select Key** [**SEND**].

PICTURE MESSAGE



- The SIM card must be installed in order to send Picture Messages in GSM mode.
- The SIM Card is pre-installed in your phone.

1. Press the **Left Soft Key** [**Message**], select **New Message** and press the **Center Select Key** [**OK**]. Select **Picture Message** and press the **Center Select Key** [**OK**].



 

2. Enter the email address or phone number and press the **Center Select Key [OK]**. Or press the **Right Soft Key**  [**Add**] to access the following options.
 - **From Contacts**: Search for a phone number which is stored in the contacts list.
 - **Recent Calls**: Search for a phone number which is stored in the recent calls list.
 - **Groups**: Search the groups stored in the contacts list.
 - **To Online Album**: Send picture message by using online address.
 - **To Contacts**: Save the number or email you've entered to the contacts list.
 - **To PTT Contacts**: Save the number you've just entered to the PTT contacts list.
3. Enter the message in the Text field.
4. Select **Picture** and press the **Left Soft Key**  [**My Pics**]. Select the desired picture and press the **Center Select Key [OK]** to select.
5. Select **Sound** and press the **Left Soft Key**  [**Sounds**]. Select the desired sound and press the **Center Select Key [OK]** to select.
6. Select **Name Card**. Press the **Left Soft Key**  [**Add**] and select **My Name Card** or **From Contacts** and press the **Center Select Key [OK]**.
7. Select **Subject** and write the subject.
8. Press the **Right Soft Key**  [**Options**] to access the following options.
 - **Preview**: Preview a written **Picture Message**.
 - **Save As Draft**: Save the **Picture Message**.
 - **Insert Quick Text**: Inserts already written sentences in **Picture Message**.
 - **Add Slide**: Add another message.
 - **Priority Level**: Set the level of the priority to **High** or **Normal**.
 - **Save As Quick Text**: Save the text as quick text.
 - **Cancel Message**: Cancel message.
9. Press the **Center Select Key [SEND]**.

VIDEO MESSAGE



- The SIM card must be installed in order to send Video Messages in GSM mode.
- The SIM Card is pre-installed in your phone.


1. Press the **Left Soft Key**  [**Message**], select New Message and press the **Center Select Key [OK]**. Select **Video Message** and press the **Center Select Key [OK]**.



 

2. Enter the email address or phone number and press the **Center Select Key [OK]**. Or press the **Right Soft Key**  **[Add]** to access the following options.
 - **From Contacts**: Search for a phone number which is stored in the contacts list.
 - **Recent Calls**: Search for a phone number which is stored in the recent calls list.
 - **Groups**: Search the groups stored in the contacts list.
 - **To Online Album**: Send video message by using online address.
 - **To Contacts**: Save the number or email you've entered to the contacts list.
 - **To PTT Contacts**: Save the number you've just entered to the PTT contacts list.
3. Enter the message in the Text field.
4. Select **Video** and press the **Left Soft Key**  **[Videos]**. Select the desired video and press the **Center Select Key [OK]** to select.
5. Select **Name Card**. Press the **Left Soft Key**  **[Add]** and select **My Name Card** or **From Contacts** and press the **Center Select Key [OK]**.
6. Select **Subject** and write the subject.
7. Press the **Right Soft Key**  **[Options]** to access the following options.
 - **Preview**: Preview a written **Video Message**.
 - **Save As Draft**: Save the **Video Message**.
 - **Insert Quick Text**: Inserts already written sentences in **Video Message**.
 - **Priority Level**: Set the level of the priority to **High** or **Normal**.
 - **Save As Quick Text**: Save the text as quick text.
 - **Cancel Message**: Cancel message.
8. Press the **Center Select Key [SEND]**.

VOICE MESSAGE



- The SIM card must be installed in order to send Voice Messages in GSM mode.
- The SIM Card is pre-installed in your phone.



1. Press the **Left Soft Key**  **[Message]**, select **New Message** and press the **Center Select Key [OK]**. Select **Voice Message** and press the **Center Select Key [OK]**.
2. To record a new **Voice Message**, press the **Center Select Key [OK]** to start recording. Press the **Center Select Key [STOP]** to stop recording and save it.

3. Enter the email address or phone number and press the **Center Select Key [OK]**. Or press the **Right Soft Key**  [**Add**] to access the following options.
 - **From Contacts**: Search for a phone number which is stored in the contacts list.
 - **Recent Calls**: Search for a phone number which is stored in the recent calls list.
 - **Groups**: Search the groups stored in the contacts list.
 - **To Online Album**: Send the recorded voice message to the Online Album.
 - **To Contacts**: Save the number or email you've entered to the contacts list.
 - **To PTT Contacts**: Save the number you've just entered to the PTT contacts list.
4. From the **Voice** field, you can re-record the message by pressing the **Left Soft Key**  [**Record**].
5. Select **Text** and enter the message.
6. Select **Name Card**. Press the **Left Soft Key**  [**Add**] and select **My Name Card** or **From Contacts** and press the **Center Select Key [OK]**.
7. Select **Subject** and write the subject.
8. Press the **Right Soft Key**  [**Options**] to access the following options.
 - **Review**: Review a written Voice Message.
 - **Save As Draft**: Save the Voice Message.
 - **Insert Quick Text**: Inserts already written sentences in **Voice Message**.
 - **Priority Level**: Set the level of the priority to **High** or **Normal**.
 - **Save As Quick Text**: Save the text as quick text.
 - **Cancel Message**: Cancel message.
9. Press the **Center Select Key [SEND]**.

INBOX

When the **Inbox View** is set to **Time**, all messages are managed separately in Inbox and Sent folders.

 **Contact** is the default setting. This option appears when the **Inbox View** is set to **Time**.

1. Press the **Left Soft Key**  [**Message**], select **Inbox** and press the **Center Select Key [OK]**.
2. Select a message and press the **Center Select Key [OPEN]**. To delete a message, press the **Left Soft Key**  [**Erase**] and press the **Center Select Key**

[**OK**] to select **Yes**. With the message opened, press the **Right Soft Key**  [**Options**] to access the following options.

- **Play Again**: Play a received picture or voice message.
- **Erase**: Erase an inbox message.
- **Reply w. Copy**: Reply with the original message included.
- **Forward**: Forward the message.
- **Save Picture (MMS Picture)**: Save a picture to the **My Pictures** folder.
- **Save Video (MMS Video)**: Save a video to the **My Videos** folder.
- **Save As Ringtone (MMS Sound)**: Save a sound to the **My Ringtones** folder.
- **Save Sound (MMS Sound)**: Save a sound to the **My Sounds** folder.
- **Save Objects (EMS Save Objects)**: Save a graphic, sound, name card.
- **Save Name Card**: Save a name card to the contacts.
- **Save As Quick Text**: Save the text in received msg to **Quick Text**.
- **Lock/Unlock**: Lock or unlock the message.
- **Add To Contacts**: Save a number to contacts.
- **Extract Addresses**: Extract all phone numbers, Email addresses and URLs from the received message.
- **Text to Speech**: Read out the text message.
- **Message Info**: Show received TXT, Picture, Video, or Voice message information.

01

02

03

04

05


 



EMERGENCY (CMAS) ALERT MESSAGES

- Emergency (CMAS) Alert text is displayed on receipt regardless on the **TXT Auto View** settings.
- If there are unread CMAS messages, appropriate CMAS message pending icon will be displayed on the system status bar.

SENT



Manages **TXT**, **Picture**, **Video**, and **Voice** messages already sent or waiting to be sent.

1. Press the **Left Soft Key**  [**Message**], select **Sent** and press the **Center Select Key** [**OK**].
2. Select a message and press the **Center Select Key** [**OPEN**]. To delete a message, press the **Left Soft Key**  [**Erase**] and press the **Center Select Key** [**OK**] to select **Yes**.
3. With the message opened, press the **Right Soft Key**  [**Options**] to access the following options.

- **Play Again:** Play a sent picture or voice message.
- **Forward:** Forward the TXT, Picture, Video, and Voice message.
- **Erase:** Erase a sent message.
- **Lock/Unlock:** Locks or unlock the TXT, Picture, Video, and Voice message.
- **Save As Quick Text:** Save text as quick text and use those pre-populated phrases quickly when composing a message.
- **Add To Contacts:** Save number to contacts.
- **Text to Speech:** Read out the text message.
- **View Name Card:** View included name card with in message.
- **Message Info:** Show sent TXT, Picture, Video, or Voice message information.

MESSAGES

When the **Inbox View** is set to **Contact**, all messages sent to or received from a contact are managed in the combined messages folder.

1. Press the **Center Select Key [Menu]**, select **Messaging** and press the **Center Select Key [OK]**.
2. Select **Messages** and press the **Center Select Key [OK]**.
3. Select the contact name to view and press the **Center Select Key [OK]**. The latest message will be shown.
4. Press the **Directional Key**  right to view the next message.
5. With the message opened, press the **Right Soft Key**  **[Options]** to access the following options.
 - **Forward:** Forward the TXT, Picture, Video or Voice message.
 - **Lock/Unlock:** Locks or unlock the TXT, Picture, Video or Voice message.
 - **Save as Quick Text:** Save the text as quick text.
 - **Add To Contacts:** Save the number to contacts.
 - **Message Info:** Show received and sent TXT, Picture, Video, or Voice message information.



EMERGENCY (CMAS) ALERT MESSAGES

- Emergency (CMAS) Alert text is displayed on receipt regardless on the **TXT Auto View** settings.
- If there are unread CMAS messages, appropriate CMAS message pending icon will be displayed on the system status bar.

DRAFTS

The Drafts folder contains any draft messages or saved messages. If a message was interrupted by a voice call or other interrupting event, the message will automatically be saved here.

1. Press the **Left Soft Key** [Message], select **Drafts** and press the **Center Select Key** [OK].
2. Select a message to edit and press the **Center Select Key** [EDIT].
Edit the message.
3. To delete a message, press the **Left Soft Key** [Erase] and press the **Center Select Key** [OK] to select **Yes**.
4. Press the **Right Soft Key** [Options] to access the following options.
 - **Send**: Send a selected message.
 - **Lock/Unlock**: Locks or unlock the TXT, Picture, Video, or Voice message.
 - **Add To Contacts**: Save number to contacts.
 - **Erase Drafts**: Erase all drafts messages.

VOICEMAIL

New voicemail alerts are sent by your network. These messages indicate how many new and urgent voicemails are in your voicemail box.

WHEN A NEW VOICEMAIL ARRIVES

When you receive a new voicemail message you'll hear a sound and a Voicemail icon appears in the display.

1. Select **Listen Now** and press the **Center Select Key** [OK] to access your voicemail box.
2. Select **Listen Later** and press the **Center Select Key** [OK] to ignore the voicemail message and return to idle mode.

TO ACCESS YOUR VOICE MAILBOX

1. To dial your voicemail box directly, press ***SHIFT**, **TUV**, **MNO** and then press the **SEND Key** [SEND].



Shortcut: In idle mode, press and hold **[1.2@]** to access **Voicemail**.
One Touch Dial must be enabled, please see page 137 for details.

2. Follow the prompts to enter your password and listen to your messages.

MOBILE IM

Mobile IM allows you to enjoy Instant Messaging on your phone.

LAUNCHING MOBILE IM

1. Press the **Center Select Key [MENU]**, select **Messaging** and press the **Center Select Key [OK]**.
2. Select **Mobile IM** and press the **Center Select Key [OK]**.
3. When you access this application for the first time, an **Accept/Decline** screen will appear. Select **Accept** by pressing the **Left Soft Key [Accept]**.
4. Select either **AIM**, **Windows Live** or **Yahoo!®** and press the **Center Select Key [OK]**.
5. Enter your **Login ID** and **Password** and press the **Center Select Key [Sign In]**.

MOBILE EMAIL

USING MOBILE EMAIL


To read and send e-mail from your e-mail accounts:

1. From idle mode, press the **Center Select Key [MENU]**, select **Messaging**, then press the **Center Select Key [OK]**.
2. Select **Mobile Email** and then press the **Center Select Key [OK]**.
3. Select the desired option, then press the **Center Select Key [OK]**.
4. Follow the on-screen prompts.

SETTINGS

The **Settings** menu allows you to configure settings for messages sent or received on your phone. To access message settings:

1. Press the **Center Select Key [MENU]**, then press **Messaging**.

2. Press the **Left Soft Key**  [**Settings**] to display available menus.
3. Select one of the following menus, then press the **Center Select Key** [**OK**].

INBOX VIEW

1. Select **Time** or **Contact**, then press the **Center Select Key** [**OK**].
 - **Time**: Sorts received and sent messages into Inbox and Sent folders by time.
 - **Contact**: Groups all received and sent messages by each contact.

 **Contact** is the default setting.

ENTRY MODE

Allows you to set the default Entry Mode for messaging.

1. Select **T9 Word**, **Abc**, **ABC**, **123**, or **T9 Palabra** then press the **Center Select Key** [**OK**].

AUTO SAVE SENT

1. Select **On**, **Off**, or **Prompt**, then press the **Center Select Key** [**OK**].
 - **On**: All sent messages are saved in Sent.
 - **Off**: All sent messages are not saved in Sent.
 - **Prompt**: The **Yes** or **No** dialogue box will be displayed after sending a message.

AUTO ERASE INBOX

Allows you to set whether Inbox messages are deleted automatically when new messages arrive and Inbox is full.

1. Select **On** or **Off**, then press the **Center Select Key** [**OK**].
 - **On**: The oldest read message will be deleted from the Inbox automatically once full.
 - **Off**: The oldest read message will not be deleted automatically from the Inbox once full.

MESSAGING FONT SIZE

Allows you to set the message font size.

1. Select **Small**, **Normal**, or **Large**, then press the **Center Select Key** [**OK**].

TXT AUTO VIEW

1. Select **On** or **Off**, then press the **Center Select Key** [**OK**].

- **On:** TXT messages are displayed automatically when received.
- **Off:** TXT messages are displayed by going into the Inbox, or by responding to the message prompt.

MULTIMEDIA AUTO RECEIVE

1. Select **On** or **Off**, then press the **Center Select Key [OK]**.
 - **On:** Picture, Video and Voice messages are downloaded automatically.
 - **Off:** Picture, Video and Voice messages must be retrieved from the Inbox or by responding to the message prompt.

TUTORIAL


Introduces the user to the basic concepts and features of the phone functions.

1. Select the desired option.
2. Press the **Center Select Key [OK]** to view the tutorial.

VOICEMODE TRAINING

Trains the phone to your voice before using Voicemode.

1. Read all instructions before starting Voicemode Training.

 Press the **Left Soft Key [Next]** to read the next page, or press the **Right Soft Key [Back]** to go back to the previous page.




2. Press the **Left Soft Key [Next]** to begin.
3. Press and hold down the **Voice Commands Key** while you speak the on-screen text aloud.
4. Release the **Voice Commands Key** when completed the sentence, then the next sentence appears.

 Press the **Left Soft Key [Save]** to stop and save what you have completed, or press the **Right Soft Key [Back]** to finish the Voicemode Training.

QUICK TEXT

Allows you to create a new Quick Text or edit the predefined Quick Text.

1. To create a new Quick Text, press the **Right Soft Key [Options]**, select **New** and press the **Center Select Key [OK]**. Enter the new text and press the **Center Select Key [SAVE]**.

2. To edit the predefined Quick Text, select the Quick Text from the list, then press the **Center Select Key** [EDIT].
3. To change the Quick Text position, press the **Right Soft Key**  [Options], then press **Move**. Press the **Directional Key**  up or down to scroll to desired position, then press the **Center Select Key** [SAVE].
4. To erase a saved Quick Text, press the **Left Soft Key**  [Erase]. Select **Yes** and press the **Center Select Key** [OK].

EMERGENCY (CMAS) ALERTS

 
Allows you to select the receiving of Emergency Alerts from emergency message server.

1. When there is a new emergency alert, a message appears on the phone, then press **Receive Alerts**.
2. To receive additional alerts in addition to Presidential Alerts, mark/unmark additional alerts you want, then press the **Left Soft Key**  [Done].
 - **Extreme Alert/Severe Alert:** Imminent Threat to Life and Property.
 - **AMBER Alert:** Child Abduction Emergency Alerts.

 Presidential Alerts are mandatory.

3. To set the alert reminder, press **Alert Reminder**, select **Once**, **Every 2 Minutes**, **Every 15 Minutes**, or **Off**, and then press the **Center Select Key** [OK].
4. To activate **Alert Vibrate**, press **Alert Vibrate**, select **On** or **Off**, and then press the **Center Select Key** [OK].

VOICEMAIL

1. Enter a new voicemail number or edit the voicemail number then press the **Center Select Key** [OK].
2. Press the **Left Soft Key**  [Add], then press **2-Sec Pause** or **Wait**.

CALLBACK

Allows you to use or edit the default callback number so that the recipient can callback or reply.

1. Select **On** or **Off**, then press the **Center Select Key [OK]**.
2. If **On** is selected, enter a new callback number then press the **Center Select Key [OK]**.

SIGNATURE

Allows you to create a signature that can be automatically inserted at the end of each message.

1. To deactivate Signature function, select **None** and press the **Center Select Key [OK]**.
2. To insert a Signature, select **Custom**, enter your signature in the text entry field then press the **Center Select Key [OK]**.


DELIVERY RECEIPT

Allows you to set delivery receipts for sent messages.

1. Select **On** or **Off**, then press the **Center Select Key [OK]**.
 - **On**: Request to receive the delivery acknowledgement.
 - **Off**: Do not request to receive the delivery acknowledgement.

OPTIONS

To erase all messages stored in your Message or Drafts folders:


1. From idle mode, press the **Center Select Key [MENU]**, select **Messaging**, then press the **Center Select Key [OK]**.
2. Press the **Right Soft Key**  **[Options]** to access the following options:
 - **Erase Sent/Received**: Allows you to delete unlocked messages stored in Sent/Received.
 - **Erase Drafts**: Allows you to delete unlocked messages stored in Drafts.
 - **Erase All Messages**: Allows you to delete unlocked messages stored in your phone.

RECENT CALLS

 


The Recent Calls menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, missed or blocked. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

MISSED

Displays information about the 90 most recently missed calls.


1. Press the **Center Select Key [MENU]**, select **Recent Calls** and press the **Center Select Key [OK]**. Select **Missed** and press the **Center Select Key [OK]**.
2. Select an entry and press the **Center Select Key [OPEN]** to view the entry.
3. Press the **Right Soft Key**  [**Options**] to access the following options:
 - **Save to Contacts**: Store the phone number in your Contacts.
 - **Save to PTT Contacts**: Store the phone number in your PTT Contacts.

 If save doesn't appear, that entry is already in your Contacts list.

- **Details**: Displays details about the caller if entered in Contacts.
 - **Erase**: Erase a call listing.
 - **Lock/Unlock**: To lock or unlock a call listing.
 - **Erase All**: Erase all the call listing.
 - **View Timers**: Display usage time.
4. Press the **Left Soft Key**  [**Message**] to access the following options.
 - **TXT Message**: Send a TXT message to the contact.
 - **Picture Message**: Send a Picture message to the contact.
 - **Video Message**: Send a Video message to the contact.
 - **Voice Message**: Send a Voice message to the contact.
-  • When a PTT call is initiated, accessing the **Message** function is not available by using the **Left Soft Key**  as it indicates a PTT call alert.
- After 90 missed calls, the oldest call will automatically be erased from the history.

RECEIVED

Displays information about the 90 most recently received calls.

1. Press the **Center Select Key [MENU]**, select **Recent Calls** and press the **Center Select Key [OK]**. Select **Received** and press the **Center Select Key [OK]**.
2. Select an entry and press the **Center Select Key [OPEN]** to view the entry.
3. Press the **Right Soft Key**  [**Options**] to access the following options:
 - **Save to Contacts**: Store the phone number in your Contacts.
 - **Save to PTT Contacts**: Store the phone number in your PTT Contacts.




If the saving option doesn't appear, the selected entry is already in your contact list.

- **Details:** Displays details about the caller if entered in Contacts.
- **Erase:** Erase a call listing.
- **Lock/Unlock:** To lock or unlock a call listing.
- **Erase All:** Erase all the call listing.
- **View Timers:** Display usage time.

4. Press the **Left Soft Key**  [**Message**] to access the following options.

- **TXT Message:** Send a TXT message to the contact.
- **Picture Message:** Send a Picture message to the contact.
- **Video Message:** Send a Video message to the contact.
- **Voice Message:** Send a Voice message to the contact.



- When a PTT call is initiated, accessing the **Message** function is not available by using the **Left Soft Key**  as it indicates a PTT call alert.
- After 90 received calls, the oldest call will automatically be erased from the history.

DIALED

Displays information about the 90 most recently dialed numbers.

1. Press the **Center Select Key** [**MENU**], select **Recent Calls** and press the **Center Select Key** [**OK**]. Select **Dialed** and press the **Center Select Key** [**OK**].

2. Select an entry and press the **Center Select Key** [**OPEN**] to view the entry.

3. Press the **Right Soft Key**  [**Options**] to access the following options:

- **Save to Contacts:** Store the phone number in your Contacts.
- **Save to PTT Contacts:** Store the phone number in your PTT Contacts.



If save doesn't appear, that entry is already in your Contacts list.


- **Details:** Displays details about the caller if entered in Contacts.
- **Erase:** Erase a call listing.
- **Lock/Unlock:** To lock or unlock a call listing.
- **Erase All:** Erase all the call listing.
- **View Timers:** Display usage time.

4. Press the **Left Soft Key**  [**Message**] to access the following options.

- **TXT Message:** Send a TXT message to the contact.
- **Picture Message:** Send a Picture message to the contact.

- **Video Message:** Send a Video message to the contact.
- **Voice Message:** Send a Voice message to the contact.



- When a PTT call is initiated, accessing the **Message** function is not available by using the **Left Soft Key**  as it indicates a PTT call alert.
- After 90 dialed calls, the oldest call will automatically be erased from the history.

01

02

03

04

05


ALL

Displays information about the most recently received, dialed and missed calls.

1. Press the **Center Select Key** [**MENU**], select **Recent Calls** and press the **Center Select Key** [**OK**]. Select **All** and press the **Center Select Key** [**OK**].




You can also view the entry by using the **SEND Key**  in idle mode.

2. Select an entry and press the **Center Select Key** [**OPEN**] to view the entry.
3. Press the **Right Soft Key**  [**Options**] to access the following options:
 - **Save to Contacts:** Store the phone number in your Contacts.
 - **Save to PTT Contacts:** Store the phone number in your PTT Contacts.



If save doesn't appear, that entry is already in your Contacts list.

- **Details:** Displays details about the caller if entered in Contacts.
 - **Erase:** Erase a call listing.
 - **Lock/Unlock:** To lock or unlock a call listing.
 - **Erase All:** Erase all the call listing.
 - **View Timers:** Display usage time.
4. Press the **Left Soft Key**  [**Message**] to access the following options.
 - **TXT Message:** Send a TXT message to the contact.
 - **Picture Message:** Send a Picture message to the contact.
 - **Video Message:** Send a Video message to the contact.
 - **Voice Message:** Send a Voice message to the contact.



When a PTT call is initiated, accessing the **Message** function is not available by using the **Left Soft Key**  as it indicates a PTT call alert.

VIEW TIMERS

Timers allow you to check your usage time and manage your calls.

1. Press the **Center Select Key [MENU]**, select **Recent Calls** and press the **Center Select Key [OK]**. Select **View Timers** and press the **Center Select Key [OK]**.
2. Select **Last Call, All Calls, Received Calls, Dialed Calls, Roaming Calls, Transmit Data, Received Data, Total Data, Last Reset, Lifetime Calls** and **Lifetime Data Counter** to view the information.
3. Press the **Left Soft Key [Reset]** to reset the highlighted timer.
4. Press the **Right Soft Key [Reset All]** to reset all timers.

 **Lifetime Calls** and **Lifetime Data Counter** cannot be reset to the default setting value.

MEDIA CENTER

Your phone provides a unique feature - Media Center - that enables you to download ringtones, wallpapers, games and more from your network to your phone. Please contact your service provider for the availability of these services.

APPS

To download tools that can help you navigate to entertainment, sports, restaurants, and provide you with up-to-date weather information:

1. From idle mode, press the **Center Select Key [MENU]**, select **Media Center** and press the **Center Select Key [OK]**. Select **Apps** and press the **Center Select Key [OK]**.

 Or press the **Center Select Key [MENU]**, select **Apps** and press the **Center Select Key [OK]**.

2. Select **SHOP APPS** and press the **Center Select Key [OK]**.
3. Follow the on-screen prompts.

MOBILE WEB

Find the news you want or let it come to you. Now, a few seconds is all it takes to get up-to-the-minute information.

STARTING THE MOBILE WEB


1. From idle mode, press the **Center Select Key [MENU]**, select **Mobile Web**, and press the **Center Select Key [OK]**.
2. The browser launches. Or you can access **Mobile Web** through **Media Center**.

EXIT

Press the **END/PWR Key**  to exit out of the browser and return to idle mode.

TUNES & TONES

USING MY RINGTONES

1. Press the **Center Select Key [MENU]**, select **Media Center** and press the **Center Select Key [OK]**. Select **Tunes & Tones** and press the **Center Select Key [OK]**.
2. Select **My Ringtones** and press the **Center Select Key [OK]**.
3. Select the desired sound and press the **Center Select Key [PLAY]** to play.
4. Press the **Center Select Key [STOP]** to stop playing. Press the **Left Soft Key**  **[Set As]** to access the following options:
 - **Ringtone**: Set as ringtone
 - **Contact ID**: Set as contact ID
 - **Alert Sounds**: Set as alert sound for All Messages, Text Messages, Multimedia Messages, or Voicemail

USING MY SOUNDS

1. Press the **Center Select Key [MENU]**, select **Media Center** and press the **Center Select Key [OK]**. Select **Tunes & Tones** and press the **Center Select Key [OK]**.
2. Select **My Sounds** and press the **Center Select Key [OK]**.
3. Select **Record New** and press the **Center Select Key [OK]** to start your own recording or select the desired sound and press the **Center Select Key [PLAY]** to play.

4. Press the **Center Select Key** [**STOP**] to stop playing.

Press the **Left Soft Key**  [**Set As**] to access the following options:

- **Ringtone**: Set as ringtone
- **Contact ID**: Set as contact ID
- **Alert Sounds**: Set as alert sound for All Messages, Text Messages, Multimedia Messages, or Voicemail

5. Press the **Right Soft Key**  [**Options**] to access the following options:

For downloaded or recorded sound:

- **Send**: Send the sound.
- **Send Via Email**: Send the sound via email
- **To Online Album**: Upload the selected sound to Online Album.
- **Rename**: Rename the sound's title.
- **Lock/Unlock**: Lock/unlock the selected sound.
- **Erase**: Erase the selected sound.
- **Erase All**: Erase all the sounds.
- **File Info**: Displays information for the selected sound.

For preloaded sound:

- **Send**: Send a sound.
- **To Online Album**: Upload the selected sound to Online Album.
- **File Info**: Displays information for the selected sound.

PICTURE & VIDEO






USING VERIZON VIDEOS

By accessing to [Verizon Videos](#), you can watch your favorite television shows while on the go. Please contact your service provider for the availability of service.


USING MY PICTURES

In My Pictures you can view all the pictures you have taken, send pictures to the Online Album, delete images and access additional picture options.

1. Press the **Center Select Key** [**MENU**], select **Media Center** and press the **Center Select Key** [**OK**].
2. Select **Picture & Video** and press the **Center Select Key** [**OK**].

3. Select **My Pictures** and press the **Center Select Key [OK]**.
4. Select the desired image then press the **Center Select Key [VIEW]** to display the enlarged image.
5. Press the **Right Soft Key**  [**Options**] to access the following options:
 - **Send**: Send a **Picture Message**, or upload **To Online Album**. You can send **Via Bluetooth** or **Via Email**.
 - **Set As**: Assigns the selected picture as **Wallpaper** or **Picture ID**.
 - **Full View**: Displays the full viewing image.
 - **Rotate**: Use the **Left Soft Key**  [**Rotate(L)**] or **Right Soft Key**  [**Rotate(R)**].
 - **Zoom**: Use the **Left Soft Key**  [**Zoom-**] or **Right Soft Key**  [**Zoom+**] to zoom in/out the picture.
 - **Resize**: Resizes the selected picture.
 - **Crop**: Crops the selected picture in a different size.
 - **Rename**: Renames the selected picture.
 - **Move**: Moves the selected picture to the card memory.
 - **Lock/Unlock**: Locks/unlocks the selected picture.
 - **File Info**: Displays information about the selected picture.


To erase the picture:

1. Press the **Center Select Key [MENU]**, select **Media Center** and press the **Center Select Key [OK]**.
2. Select **Picture & Video** and press the **Center Select Key [OK]**.
3. Select **My Pictures** and press the **Center Select Key [OK]**.
4. Select the desired image. Press the **Left Soft Key**  [**Erase**] to erase.
5. Select **Yes** and press the **Center Select Key [OK]**.


USING MY VIDEOS

In My Videos you can play the videos you have taken by using your phone, send videos to the Online Album, or set video as wallpaper in your phone.



1. Press the **Center Select Key [MENU]**, select **Media Center** and press the **Center Select Key [OK]**.
2. Select **Picture & Video** and press the **Center Select Key [OK]**.
3. Select **My Videos** and press the **Center Select Key [OK]**.

4. Select the desired video then press the **Center Select Key** [**PLAY**] to play the video.
5. Press the **Right Soft Key**  [**Options**] to access the following options.
 - **Send**: Send a **Video Message**, or upload **To Online Album**. You can send **Via Bluetooth** or **Via Email**.
 - **Record Video**: Record a new video
 - **Verizon Videos**: Connect to the Verizon Videos service.
 - **Set As Wallpaper**: Assigns the selected video as wallpaper
 - **Manage Videos**: Choose to either **Erase**, **Lock** or **Unlock** the video.
 - **Rename**: Renames the selected video.
 - **File Info**: Displays information about the selected video.

To erase the video:

1. Press the **Center Select Key** [**MENU**], select **Media Center** and press the **Center Select Key** [**OK**].
2. Select **Picture & Video** and press the **Center Select Key** [**OK**].
3. Select **My Videos** and press the **Center Select Key** [**OK**].
4. Select the desired video. Press the **Left Soft Key**  [**Erase**] to erase.
5. Select **Yes** and press the **Center Select Key** [**OK**].

TAKING PICTURES

1. To access the camera, with the flip open, press the **Camera/Video Key** .
2. Focus the object.
3. Press the **Directional Key**  left or right to zoom in or out. (Except for the 2048X1536 resolution mode).
4. Press the **Right Soft Key** [**Options**] to access the following options.

Name	Description
Auto Focus	On, Off
Resolution	2048X1536, 1600X1200, 1280X960, 640X480, 320X240, 160X120
Self Timer	Off, 3 Seconds, 5 Seconds, 10 Seconds
Flash	Off, On, Only This Shot

Name	Description
Brightness	-5, -4, -3, -2, -1, 0, +1, +2, +3, +4, +5
White Balance	Auto, Sunny, Cloudy, Tungsten, Fluorescent
Shutter Sound	Shutter, Silent
Color Effects	Normal, Black & White, Negative, Sepia, Green, Aqua
Multishot	Off, On
Night Mode	Off, On
Viewfinder	Main Display, Front Display
Memory	Phone, Card



- Press the **Center Select Key [TAKE]** to take the picture.
 - When the **Auto Focus** is **On**, press and hold the **Center Select Key [TAKE]** to focus the object, then release the **Center Select Key [OK]** to take a picture.
- To save the picture, press the **Left Soft Key [Save]**. To take another picture without saving, press the **Right Soft Key [Erase]**. To send as a Picture Message, press the **Center Select Key [SEND]**.

RECORDING VIDEO

- To access the video camera, with the flip open, press the **Camera/Video Key [Camera/Video]**.
- Press the **Camera/Video Key [Camera/Video]** once again to use the video recording mode.
- Focus the object.
- Press the **Directional Key [Left/Right]** left or right to zoom in or out.
- Press the **Right Soft Key [Options]** to access the following options.

Name	Description
Recording Light	Off, On, Only This Shot
Brightness	-5, -4, -3, -2, -1, 0, +1, +2, +3, +4, +5
White Balance	Auto, Sunny, Cloudy, Tungsten, Fluorescent
Shutter Sound	On, Off
Recording Time	60 Seconds for Video MSG, 60 Minutes for Save

Name	Description
Call Interruption	Allow, Block
Viewfinder	Main Display, Front Display
Memory	Phone, Card

6. Press the **Center Select Key** [**REC**] to record a video and press the **Center Select Key** [**STOP**] to stop recording.
7. To save the video, press the **Left Soft Key**  [**Save**]. To take another video without saving, press the **Right Soft Key**  [**Erase**]. To send as a Video Message, press the **Center Select Key** [**SEND**].

USING ONLINE ALBUM

1. Press the **Center Select Key** [**MENU**], select **Media Center** and press the **Center Select Key** [**OK**].
2. Select **Picture & Video** and press the **Center Select Key** [**OK**].
3. Select **Online Album** and press the **Center Select Key** [**OK**].
4. The browser launches, and the Online Album sign-on screen appears.
5. Follow the on-screen prompts.

VZ NAVIGATOR

VZ Navigator — Now you can find the address of a great restaurant or the nearest ATM. Check movie times. Discover the latest hot spots. And know exactly how to get where you're going.

VZ Navigator puts all the advanced features of the latest GPS devices and systems on your wireless device — at a fraction of the price.


VZ Navigator provides:

- Heads-up, voice-prompted, turn-by-turn directions with auto-rerouting if you miss a turn
- Local search of nearly 14 million points of interest in the U.S.

- Detailed color maps that can be quickly panned and zoomed With VZ Navigator, you'll know exactly where you are, what's around you and how to get there. Download, subscription, and airtime required for use; only in National Enhanced Services Coverage Area; accuracy and completeness of information is not guaranteed; information about location of device will be used to deliver service.

1. Press the **Center Select Key [MENU]**, select **VZ Navigator**.
2. Press the **Center Select Key [OK]**.
3. Follow the on-screen prompts.

 To use VZ Navigator, your phone's location capability must first be enabled. To turn Location On, see details on page 130.

 Changing VZ Navigator setting does not automatically enable retrieval of the location of the phone, you must still grant VZ Navigator access to the location capability before it can acquire the phone's location.

The first time you run VZ Navigator, you will be prompted to grant this permission to the application.

SETTINGS & TOOLS




MY VERIZON

To access your Verizon account information:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **My Verizon** and press the **Center Select Key [OK]**.
 - Launches the web browser to My Verizon Web site.

 **Shortcut:** In idle mode, press the **Directional Key**  left to access My Verizon.

MASTER VOLUME



1. Press the **Volume Keys**   to adjust the master volume level.
 - To check the ringtone's volume, press the **Left Soft Key**  **[Play]**.
2. Press the **Center Select Key [SET]** to save.

TOOLS


USING VOICE COMMANDS

Your phone is equipped with an AVC (Advanced Voice Commands) feature. This feature allows you to make calls or use the phone's functions by simply using your voice. All you have to do is talk into the phone and the phone will recognize your voice and complete tasks by itself.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools** and press the **Center Select Key [OK]**. Select **Voice Commands** then press the **Center Select Key [OK]**.

 **Shortcut:** With the flip open, press the Voice Commands Key  on the left side of your phone to access Voice Commands.

2. The phone displays the **Voice Commands** menu and prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts. You can speak the name of the command after you hear a beep.

 You can hear a beep in the **Tone Only Mode** (MENU > Settings & Tools > Phone Settings > Voice Commands Settings > Prompts > Mode > Tones Only) while you can see a prompt without a beep sound in the **Prompts, Readout + Alerts, or Readout**.

3. Select either **Call <Name or #>**, **Send <MSG Type>**, **Go To <Menu>**, **Check <Item>**, **Contact <Name>**, **Redial**, **My Verizon** or **Help** and press the **Center Select Key [OK]**.
4. When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, AVC mode will turn itself off.

CALL <NAME OR #>:

Use the **Call** command to voice dial a name from your Contact List or a phone number. When dialing a number, pronounce each digit, but do not pause noticeably between the digits.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
2. You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
3. If calling a contact from your list, say **Call <Name>**. Your phone will ask you to confirm the name you said. Say **Yes** if it was repeated correctly. That phone number will be dialed. If there is more than one number saved for that contact, you will be asked to confirm which number to dial.

Examples: - Call Tom Smith, - Call 617-555-1212, - Call Bob Carson's mobile, - Call Dee Harper at Home.

SEND <MSG TYPE>:

Use the **Send** command to send a text or other type of message to a specified name or number.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
2. You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
3. Say **Send** followed immediately by one of **Text**, **Picture**, **Video** or **Voice**.

Examples: - Send Text Tom Smith, - Send Picture to Dee Harper's Mobile.

GO TO <MENU>:

Use the **Go To** command to open an application on your phone. You can say **Go To** by itself and be prompted to say the application name or you can skip the prompt by saying **Go To** followed by the application name.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.

2. You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
3. Say **Go To** followed immediately by one of the application names.

CHECK <ITEM>:

The **Check** command lets you check status information for your phone. You can say **Check** or **Check Status** to see and hear all status information.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
2. You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
3. Say **Check** followed immediately by one of the application names.

CONTACTS <NAME>:

Use the **Contacts** command to retrieve and display information for any name stored in your Contact List.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
2. You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
3. Say **Contact <Name>**.
- Examples:** - Contact Tom Jones.
4. The View Contact page will be displayed for that contact name.

REDIAL:

Use the **Redial** command to redial with the directory number which talks over the phone recently.


1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.

- You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
- Say **Redial**.

MY VERIZON:

- Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
- You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
- Say **My Verizon**.
- Your phone will make a web connection.

HELP:


- Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
- You will hear **Please say a command** and the **Voice Commands** menu will be displayed.
- Say **Help**.
- The Help guide will be displayed on your phone.
- Press the **Right Soft Key**  [**Back**] to return to the previous screen.

VOICE COMMANDS SETTINGS

CONFIRM CHOICES:


When voice recognition is not confident it has recognized a name or number correctly, it will show you a list of up to three choices. You can control when choice lists appear.

- Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.

2. Press the Right Soft Key  [**Settings**], select **Confirm Choices** and press the Center Select Key [**OK**].
3. Select **Automatic**, **Always Confirm** or **Never Confirm** and press the Center Select Key [**OK**].


SENSITIVITY:

The Sensitivity setting controls how the voice recognition software determines when a spoken word is a match. If you frequently experience the messages **Please Repeat** or **No Match Found**, adjust the sensitivity toward Reject Less. If you frequently experience false activations (when the phone recognizes a name you didn't say), adjust the sensitivity toward Most Sensitive.

1. Press the Center Select Key [**MENU**], select **Settings & Tools** and press the Center Select Key [**OK**]. Select **Tools**, press the Center Select Key [**OK**], select **Voice Commands** then press the Center Select Key [**OK**].
2. Press the Right Soft Key  [**Settings**], select **Sensitivity** and press the Center Select Key [**OK**].
3. Select **More Sensitive**, **Automatic**, or **Less Sensitive** and press the Center Select Key [**OK**].

Adapt Voice:


Voice Commands are speaker independent, which means that no training or adaptation is required. Some users with heavy accents or unusual voice characteristics may find difficulty in achieving high accuracy with speaker independent Voice Commands, so the Adapt Voice feature allows users to dramatically improve the recognition accuracy through adaptation. Users who get acceptable recognition accuracy will find no additional benefit to performing the Adapt Voice adaptation.

1. Press the Center Select Key [**MENU**], select **Settings & Tools** and press the Center Select Key [**OK**]. Select **Tools**, press the Center Select Key [**OK**], select **Voice Commands** then press the Center Select Key [**OK**].
2. Press the Right Soft Key  [**Settings**], select **Adapt Voice** and press the Center Select Key [**OK**].

3. Select **Train Voice** and press the **Center Select Key [OK]**.
To begin press the **Center Select Key [OK]**.
 - **Train Voice:** Requires that you make recordings of your voice to customize the voice recognitions system. It will take a few minutes.
4. Wait for the beep and then repeat the sentences using your normal tone of voice.
5. Repeat steps 1 - 4 when you are finished with a full session, you will reach a screen that reads **Adaptation Complete**.


 
PROMPTS:

Allows you to select the Voice Commands system characteristics.


 
1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
2. Press the **Right Soft Key**  [**Settings**], select **Prompts** and press the **Center Select Key [OK]**.
3. Select **Mode**, **Audio Playback**, or **Timeout** and then press the **Center Select Key [OK]**.
 - **Mode:** Select the Voice Commands system mode from the following:
 - **Prompts:** Read out Voice Commands prompts.
 - **Readout+Alerts:** Read out and Alert tone prompts, dialing digits and menus at the same time.
 - **Readout:** Read out prompts, dialing digits and menus.
 - **Tones Only:** Prompts you with a tone only.
 - **Audio Playback:** Allows audio playback to play through the speakerphone or through the earpiece. Select **Speakerphone** or **Earpiece** and then press the **Center Select Key [OK]**.
 - **Timeout:** You can control how long the system listens for a command before timing out. Select **5 Seconds** or **10 Seconds** and then press the **Center Select Key [OK]**.

Voice Mode Training:

Allows you to be trained by reading 25 sentences displayed on-screen.





1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
2. Press the **Right Soft Key  [Settings]**, select **VoiceMode Training** and press the **Center Select Key [OK]**.
3. Press the **Left Soft Key  [Next]** to begin with **VoiceMode Training**.
See and follow the on-screen instruction.

ABOUT:


 

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Voice Commands** then press the **Center Select Key [OK]**.
2. Press the **Right Soft Key  [Settings]**, select **About** and press the **Center Select Key [OK]**.
3. The **Nuance** version appears.
4. Press the **Right Soft Key  [Back]** to return to the previous screen.

USING THE CALCULATOR

Allows you to perform simple mathematical calculations.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Tools**, press the **Center Select Key [OK]**, select **Calculator** then press the **Center Select Key [OK]**.
2. Follow the instructions below to calculate $8 \times 6 \div 4 - 2.5 = 9.5$
 - Input 8 and press the **Directional Key  right**.
 - Input 6 and press the **Directional Key  left**.
 - Input 4 and press the **Directional Key  down**.
 - Input 2 and press the **International Dial Key  to input (.)**.
 - Input 5.
 - Press the **Center Select Key [OK]** and you will see the answer (9.5).




- Press the **Right Soft Key**  [**Operator**] to use the following: (/) / **Power**.
- Press the **Left Soft Key**  [**Clear**] to reset.
- To change the displayed number from positive (+) to negative (-) and vice versa, press the **Vibrate Mode Key** .


USING THE CALENDAR

The Calendar tool provides easy and convenient access to your schedule. Simply store your appointments and your phone will alert you to them.

SETTING THE SCHEDULE

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Tools**, press the **Center Select Key** [**OK**], select **Calendar** then press the **Center Select Key** [**OK**].
2. Select the scheduled day and press the **Left Soft Key**  [**New**].
 - Select desired options and then press the **Center Select Key** [**SAVE**].




You can also access **Calendar** through MY SHORTCUTS by pressing the **Directional Key**  right in idle mode.


VIEWING EVENT LIST


1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Tools**, press the **Center Select Key** [**OK**], select **Calendar** then press the **Center Select Key** [**OK**].
2. Select the event and press the **Center Select Key** [**VIEW**].

ERASING SAVED EVENT

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Tools**, press the **Center Select Key** [**OK**], select **Calendar** then press the **Center Select Key** [**OK**].
2. Press the **Right Soft Key**  [**Options**], select **Erase All** and press the **Center Select Key** [**OK**]. Select **Yes** and press the **Center Select Key** [**OK**].

ERASING ALL PASSED EVENTS

1. Press the Center Select Key [**MENU**], select **Settings & Tools** and press the Center Select Key [**OK**]. Select **Tools**, press the Center Select Key [**OK**], select **Calendar** then press the Center Select Key [**OK**].
2. Press the Right Soft Key  [**Options**], select **Erase All Old** and press the Center Select Key [**OK**], select **Yes** and press the Center Select Key [**OK**].

 Select **Erase All** if you want to delete all the event.

USING THE ALARM CLOCK


The Alarm Clock tool allows you to set up to three alarms. When you set an alarm, the current time is displayed at the top of the screen. When the alarm goes off, Alarm 1 (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

SETTING THE ALARM



1. Press the Center Select Key [**MENU**], select **Settings & Tools** and press the Center Select Key [**OK**]. Select **Tools**, press the Center Select Key [**OK**], select **Alarm Clock** then press the Center Select Key [**OK**].
2. Select **Alarm 1**, **Alarm 2** or **Alarm 3** and press the Center Select Key [**OK**].
3. Select desired options and save the alarm by pressing the Center Select Key [**SAVE**].

USING THE STOP WATCH

Measures elapsed time for activities.

1. Press the Center Select Key [**MENU**], select **Settings & Tools** and press the Center Select Key [**OK**]. Select **Tools**, press the Center Select Key [**OK**], select **Stop Watch** then press the Center Select Key [**OK**].
2. Press the Center Select Key [**START**] to start.
3. Press the Center Select Key [**STOP**] to pause.
4. Press the Left Soft Key  [**Reset**] to reset.


MEASURING MORE THEN ONE EVENT

1. Press the **Center Select Key** [**START**] to start.
2. Press the **Right Soft Key**  [**Lap**] to stop a time period and continue measuring another one.
3. Press the **Right Soft Key**  [**Lap**] to stop the second and continue measuring a third one. Repeat this step as necessary.
4. Press the **Center Select Key** [**STOP**] to pause.

 You can record 5 lap times on-screen.

USING THE COUNTDOWN TIMER



Counts down to a time&minutes with alarm

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Tools**, press the **Center Select Key** [**OK**], select **Countdown Timer** then press the **Center Select Key** [**OK**].
2. Press the **Right Soft Key**  [**Edit**] to set timer.
3. Adjust the desired time to countdown, and then press the **Center Select Key** [**SET**].
4. Press the **Center Select Key** [**START**] to start countdown.

WORLD CLOCK

To display the time and date in pre-programmed cities:

SETTING THE CLOCK


1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Tools**, press the **Center Select Key** [**OK**], select **World Clock** then press the **Center Select Key** [**OK**].
2. Press the **Directional Key**  left or right to select the city.
3. Press the **Right Soft Key**  [**Cities**] to access the **CITIES LIST**.
4. Select the city and press the **Center Select Key** [**OK**].

SETTING DST (DAYLIGHT SAVING TIME)

1. Press the **Left Soft Key**  [**Set DST**] to set the DST options.
2. Press **Yes** if you want to set Daylight Saving Time.

USING THE NOTEPAD

Saves your text memo in your phone.

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Tools**, press the **Center Select Key** [**OK**], select **Notepad** then press the **Center Select Key** [**OK**].
3. Press the **Left Soft Key**  [**Add**].
4. Enter the text memo by using the keypad or the voice dictation function. For more information on how to use voice dictation, please refer to Voice Dictation on page page 48.
5. Press the **Center Select Key** [**SAVE**].

USING THE USB MASS STORAGE


Uses your phone as USB mass storage device.

1. Connect the phone with your PC using the USB cable.
2. Press the **Center Select Key** [**MENU**], select **Settings & Tools**.
3. Select **Tools** and then press the **Center Select Key** [**OK**].
4. Select **USB Mass Storage** and press the **Center Select Key** [**OK**].
5. When a pop-up window appears on your PC screen, open a folder to view files.
You can copy files from the PC to the memory card, or vice versa.

USING THE G'Z GEAR[®]

BATTERY HANDLING INFORMATION



G'zGEAR[®] does not end automatically. When you do not use G'zGEAR[®], be sure to press the **END/PWR Key**  to end G'zGEAR[®].

G'zGEAR® provides you with useful tools for outdoor activities.

For information about “Motion Detection,” see page 50.

1. Press the **Center Select Key [MENU]**, select **Settings&Tools**, then press the **Center Select Key [OK]**.
2. Select **Tools** and press the **Center Select Key [OK]**, and select **G'zGEAR** then press the **Center Select Key [OK]**.

 **CAUTION:** Do not use G'zGEAR® while engaging in any dangerous sports.

EARTH COMPASS

The Earth Compass measures the direction with the built-in electronic compass.

You can change the following operation modes by pressing the **Right Soft Key** .

- **Compass:** The direction measured with the built-in electronic compass is displayed.
- **World Nature:** The compass and natural objects in the direction the handset is facing are displayed on the screen.
- **Customizable Compass:** The new point you created and your distance from it are displayed.

WALKING COUNTER

The Walking Counter counts the number of steps you take.

You can change the following operation modes by pressing the **Right Soft Key**



- **Pedometer:** The number of steps you take in a day are measured with the pedometer, and the distance you walked and the estimated number of calories you burned are displayed.

 If you keep Pedometer on while not using it, the battery life may be reduced.

- **Virtual Trek:** The distance you hike is calculated based on the number of steps taken. Your distance hiked, and trail milestones are displayed on the screen.

THERMOMETER

The Thermometer measures the current temperature.

You can change the following operation modes by pressing the **Right Soft Key**



- **Thermometer**: The current temperature is displayed in both Fahrenheit and Celsius.
- **Temperature Comparison**: The current temperature is displayed in both Fahrenheit and Celsius, along with the highest and lowest temperatures from three selected cities in the city list, which is based on the largest city of each state.

TIDES

The Tides displays the high and low tide times.

You can change the following operation modes by pressing the **Right Soft Key**



- **One-Day View**: Displays the tidal graph for a single day.
- **Current View**: Displays the current tide and the time appropriate for fishing.

SUNRISE SUNSET

The Sunrise Sunset displays the times of sunrise and sunset.

You can change the following operation modes by pressing the **Right Soft Key**



- **Tracking**: Displays the position of the Sun.
- **Day/Night**: Displays the ratio between day and night in numeric and graphic form.

ASTRO CALENDAR

The Astro Calendar displays the moon's phase and date in the lunar cycle, and days until full moon and new moon.

You can change the following operation modes by pressing the **Right Soft Key** .

- **Lunar Phase:** Displays the phase of the Moon.
- **Cosmic View:** Displays the location of Sun, Moon, and Earth.

STAR GAZER

The Star Gazer displays the stars in the sky and the names of the constellations and major stars.

USING G'ZGEAR® WITH THE FLIP CLOSED

You can use the G'zGEAR function when the handset's flip is closed.

1. Press the **Center Select Key [MENU]**, select **Settings&Tools**, then press the **Center Select Key [OK]**.
2. Select **Tools** and press the **Center Select Key [OK]**, and select **G'zGEAR** then press the **Center Select Key [OK]**.
3. Close the flip.

SETUP

You can set the G'zGEAR® settings by selecting one of the following options:

1. Press the **Center Select Key [MENU]**, select **Settings&Tools**, then press the **Center Select Key [OK]**.
2. Select **Tools** and press the **Center Select Key [OK]**, and select **G'zGEAR** then press the **Center Select Key [OK]**.
3. Select **Setup** and press the **Center Select Key [OK]**.
 - **G_SWITCH:** Enables switching of tools by shaking the handset to the left with the flip open.
 - **Save Last Mode:** Displays the previously displayed mode when starting a tool.
 - **Backlight:** Keeps the displayed backlight on while G'zGEAR® is active.
 - **Pedometer:** Counts your steps with pedometer.
 - **Calibration:** Calibrates the electronic compass.
 - **Restore Defaults:** Returns G'zGEAR® settings to initial value.



- When you open/close the flip, you must calibrate the compass. Otherwise, it may malfunction.

- Calibrate the electronic compass with the handset open before using it with the handset open.
- To calibrate the electronic compass with the flip open, wave the phone in a horizontal figure 8 pattern for 15 seconds.

HOW TO USE

You can view the short instruction by selecting the [How to use](#).

BLUETOOTH

Bluetooth technology enables wireless connections between electronic devices. If connected with a Bluetooth Handsfree device, you can use your phone more freely. Since devices with Bluetooth connectivity communicate using radio waves, your phone and the other device do not need to be in direct line-of-sight. The two devices only need to be within 10 meters (30 feet) of each other. The connection can be subject to interference from obstructions such as walls or other electronic devices. This device is compliant with Bluetooth Specification 3.0, supporting the following profiles: Headset, Handsfree, Stereo, Phonebook Access, Basic Printing, Basic Imaging, and Object Push for vCard and vCalendar. To ensure interoperability between other devices supporting Bluetooth technology, use approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this phone. There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or Verizon Wireless. If you want more information on this function, visit the Bluetooth Technology organization Web site: <https://www.bluetooth.org/apps/content>.





Features using Bluetooth technology or allowing such features to run in the background while using other features, increase the demand on battery power and reduce the battery life.

BLUETOOTH ON/OFF

To activate Bluetooth:

1. Press the **Center Select Key** [**MENU**], then select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Bluetooth** and press the **Center Select Key** [**OK**].


3. Press the **Left Soft Key**  [**Turn On/Turn Off**].

 You can also turn Bluetooth on/off through MY SHORTCUTS by pressing the **Directional Key**  right in idle mode.

ADD NEW DEVICE

Pairing is the process that allows the handset to locate, establish and register a 1-to-1 connection with the target device.



1. Press the **Center Select Key** [**Menu**], then select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Bluetooth** and press the **Center Select Key** [**OK**].
3. Select **Add New Device** and press the **Center Select Key** [**OK**].
4. The handset will prompt you with the following message on the screen: **PLACE DEVICE YOU ARE CONNECTING TO IN DISCOVERABLE MODE**. Press the **Center Select Key** [**OK**].
5. The device will appear in the **Add New Device** menu. Select the device to pair to and press the **Center Select Key** [**PAIR**].
6. If applicable, the handset may prompt you for the password. Consult the Bluetooth® accessory (sold separately) instructions for the appropriate passkey (typically 0000. 4 zeroes). Enter the passkey and press the **Center Select Key** [**OK**].

 You do not need to input the passkey for pairing when the passkey of the Bluetooth® Headset or hands-free kit is 0000.


7. The handset will prompt you with the following message on the LCD screen: **Before Connecting To [Device Name]**. If you would like to always confirm before connecting to the Bluetooth device, select **Always Ask**, then press the **Center Select Key** [**OK**]. Then the handset will prompt you with the message **“Connect To [Device Name]?”** Select **Yes**. If you do not wish to confirm every time before connecting to the Bluetooth device, select **Always Connect**, then press the **Center Select Key** [**OK**].

8. Once connected, you will see the device listed in the Bluetooth menu and the Bluetooth device connected icon will appear at the top of the screen when connected to the Bluetooth device.












- In the Bluetooth menu, you can turn off the device by pressing the Left Soft Key  [Turn Off]. Conversely, you can turn on by pressing the Left Soft Key  [Turn On].
- If multiple devices are displayed, select the device you want to connect to.

OPTIONS

1. Press the Center Select Key [MENU], then select **Settings & Tools** and press the Center Select Key [OK].
2. Select **Bluetooth** and press the Center Select Key [OK].
3. Select the paired device.
4. Press the Right Soft Key  [Options].
5. Select one of the following options, then press the Center Select Key [OK].
 - **Remove Device**: Removes a device from the pairing list.
 - **Rename Device**: Renames a paired device.
 - **Incoming Security**: Sets permissions for connecting an incoming device.
 - **Service Discovery**: Searches for the services that the selected device supports.
 - **Device Info**: Displays device information.
6. Or, press the Center Select Key [OK] to access **Send Name Card, Send Picture, Send Video, Send Calendar Event, Get Name Card, Exchange Name Card, Browse / Get Files**.

Select the desired option and press the Center Select Key [OK] to access the following:


- **Send Name Card**: Allows you to send name cards stored in Contacts to a selected device.
 1. Press the Directional Key  up or down to highlight a desired contact or contacts, then press the Center Select Key [MARK]. If you want to change your selections, press the Center Select Key [UNMARK] to deselect your selections.
 2. Press the Left Soft Key  [Done]. If you want to send all the name cards, press the Right Soft Key  [Send All].

- **Send Picture:** Allows you to send photos to a selected device.
 1. Press the **Directional Key**  up, down, left or right to highlight a desired photo or photos, then press the **Center Select Key** [**MARK**]. If you want to change your selections, press the **Center Select Key** [**UNMARK**] to deselect your selections.
 2. Press the **Left Soft Key**  [**Done**]. If you want to send all the photos, press the **Right Soft Key**  [**Send All**].
- **Send Video:** Allows you to send videos to a selected device.
 1. Press the **Directional Key**  up, down, left or right to highlight a desired video or videos, then press the **Center Select Key** [**MARK**]. If you want to change your selections, press the **Center Select Key** [**UNMARK**] to deselect your selections.
 2. Press the **Left Soft Key**  [**Done**]. If you want to send all the videos, press the **Right Soft Key**  [**Send All**].
- **Send Calendar Event:** Send the calendar event to the selected device.
- **Get Name Card:** Gets name cards from the selected device.
- **Exchange Name Card:** Exchanges the name cards between connected devices.
- **Browse/Get Files:** Allows you to get files from the selected device.

SETTINGS


MY PHONE NAME:

To edit the Bluetooth® name of your phone:

1. Press the **Center Select Key** [**MENU**], then select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Bluetooth** and press the **Center Select Key** [**OK**].
3. Press the **Right Soft Key**  [**Options**].
4. Select **My Phone Name** and press the **Center Select Key** [**OK**].
5. Enter a new custom name.
6. Press the **Center Select Key** [**SET**] to save.

DISCOVERY MODE:

Set your device to be searched for by other Bluetooth® devices in the area.

1. Press the **Center Select Key** [**MENU**], then select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Bluetooth** and press the **Center Select Key** [**OK**].
3. Press the **Right Soft Key**  [**Options**].
4. Select **Discovery Mode** and press the **Center Select Key** [**SET**].

 


If Bluetooth power is not on, you will be prompted to turn it on in order to proceed.


5. Select **On** or **Off** and press the **Center Select Key** [**OK**].

SUPPORTED PROFILES:

To view brief descriptions of the profiles supported by the phone:

1. Press the **Center Select Key** [**MENU**], then select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Bluetooth** and press the **Center Select Key** [**OK**].
3. Press the **Right Soft Key**  [**Options**].
4. Select **Supported Profiles** and press the **Center Select Key** [**OK**].
5. Select a profile and press the **Center Select Key** [**VIEW**] for further details.

AUTO PAIR HANDSFREE:

1. Press the **Center Select Key** [**MENU**], then select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Bluetooth** and press the **Center Select Key** [**OK**].
3. Press the **Right Soft Key**  [**Options**].
4. Select **Auto Pair Handsfree** and press the **Center Select Key** [**OK**].
5. Select **On** or **Off** and press the **Center Select Key** [**SET**].

KEYGUARD SETTINGS

Locks the external phone keys.

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**].

2. Select **Keyguard Settings** and then press the **Center Select Key [OK]**.
3. Set the desired Keyguard setting options and press the **Center Select Key [OK]**.
Select the desired option and press the **Center Select Key [SET]**.
 - **Keyguard Timer:** Always Off / Lock on Flip Close/ 7 Seconds/ 15 Seconds / 30 Seconds
 - **Unlock options:** Press Once/ Press Twice

PTT SETTINGS

Allows you to set PTT settings

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **PTT Settings** and then press the **Center Select Key [OK]**.
3. Select **PTT Mode**, **PTT Alert**, **PTT Missed Call**, or **Tutorial** and then press the **Center Select Key [OK]**.
4. Choose the desired option and then press the **Center Select Key [OK]**.

SOUND SETTINGS

EASY SET-UP

To set up phone sounds using the Easy Set up Wizard:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Easy Set-up** then press the **Center Select Key [OK]**.
2. Select the sound settings including the **CALL SOUNDS**, **KEYPAD VOLUME**, **TEXT MESSAGE ALERT**, **MEDIA MSG ALERT**, **VOICEMAIL MSG ALERT** and press the **Center Select Key [SET]**.

To skip the step, press the **Right Soft Key**  **[Skip]**.

CALL SOUNDS

Set ringtones for types of incoming calls.

CALL RINGTONE

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Call Sounds** then press the **Center Select Key [OK]**.
2. Select **Call Ringtone** and press the **Center Select Key [OK]**.
3. Select a ringtone and press the **Center Select Key [SET]** to save the sound.
To listen to the ringtone, press the **Left Soft Key [Play]**.

CALL VIBRATE

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Call Sounds** then press the **Center Select Key [OK]**.
2. Select **Call Vibrate** and press the **Center Select Key [OK]**.
3. Select **On** or **Off** and press the **Center Select Key [SET]**.

CALLER ID READOUT


1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Call Sounds** then press the **Center Select Key [OK]**.
2. Select **Caller ID Readout** and press the **Center Select Key [OK]**.
3. Select **Ring Only**, **Caller ID + Ring** or **Name Repeat** and press the **Center Select Key [SET]**.

ALERT SOUNDS

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Alert Sounds** then press the **Center Select Key [OK]**.
2. Select **TXT Message**, **Multimedia Message**, **Voicemail**, **Emergency Tone**, **Missed Call** or **PTT Alert**, and then press the **Center Select Key [OK]**.
3. Select the desired alert sound you want to change press the **Center Select Key [SET]**.

KEYPAD VOLUME

To set the keypad volume:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Keypad Volume** then press the **Center Select Key [OK]**.
2. Adjust the volume by pressing the **Directional Key**  up or down and press the **Center Select Key [SET]**.

DIGIT DIAL READOUT

The Digit Dial Readout setting controls if digits are read out loud when you type in a phone number with the keypad.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Digit Dial Readout** then press the **Center Select Key [OK]**.
2. Select **On** or **Off** and press the **Center Select Key [SET]**.

SERVICE ALERTS

To set any of the four Alert options to either On or Off:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Service Alerts** then press the **Center Select Key [OK]**.
2. Select access the following options and press the **Center Select Key [OK]**.
 - **ERI**: The Enhanced Roaming Indicator (ERI) feature displays a text banner on the display screen informing the handset user of which systems the wireless device is using as compared to the service plan they purchased.
The ERI Banner text changes to tell a customer if they are using the: Verizon Wireless Network, Extended Network or Roaming.
 - **Minute Beep**: Alerts you every minute during a call.
 - **Call Connect**: Alerts you when the call is connected.
 - **Software Update**: Alert when the software update is made.
3. Select **On** or **Off** and press the **Center Select Key [SET]**.

POWER ON/OFF

To set the phone to sound a tone when the phone is powered on/off:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Sounds Settings**, press the **Center Select Key [OK]**, select **Power On/Off** then press the **Center Select Key [OK]**.
2. Select **Power On** or **Power Off** and press the **Center Select Key [OK]**.
3. Select **On** or **Off** and press the **Center Select Key [SET]**.

DISPLAY SETTINGS

EASY SET-UP

To set up display options using the Easy Set-up Wizard:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Easy Set-up** then press the **Center Select Key [OK]**.
2. Select the display settings including the **PERSONAL BANNER, DISPLAY BACKLIGHT, KEYPAD BACKLIGHT, MAIN WALLPAPER, DISPLAY THEMES, MENU LAYOUT, DIAL FONTS, MAIN CLOCK FORMAT, FRONT CLOCK FORMAT**, and press the **Center Select Key [SET]**.

To skip the step, press the **Right Soft Key**  **[Skip]**.

BANNER

PERSONAL BANNER:

The **Personal Banner** can be up to 16 characters and is displayed on your phone's screen in idle mode.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Banner** then press the **Center Select Key [OK]**.
2. Select **Personal Banner** and press the **Center Select Key [OK]**.
3. Enter the banner text (up to 16 characters).
4. Select **Text Color**, select the desired color and press the **Center Select Key [SET]**.

ERI BANNER:

If you use ERI Service, ERI Text is shown on the sub banner.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Banner** then press the **Center Select Key [OK]**.
2. Select **ERI Banner** and press the **Center Select Key [OK]**.
3. Select **On** or **Off** and press the **Center Select Key [SET]**.



ERI stands for Enhanced Roaming Indicator. The ERI banner will usually tell you if you are on Verizon service area or if you are roaming/on another network.

BACKLIGHT

To set the duration for backlight illumination for the Main Screen and Keypad:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Backlight** then press the **Center Select Key [OK]**.
2. Select **Display** or **Keypad** and press the **Center Select Key [OK]**.
3. Select **Duration** or **Brightness** and press the **Center Select Key [OK]**. Select the following menu options and press the **Center Select Key [SET]**.

Duration: 7 Seconds, 15 Seconds, 30 Seconds, Always On



Brightness: Medium, Medium High, High, Low, Medium Low



- Brightness menu is not available for Keypad backlight.
- Even if **Always On** is selected for the **Backlight** setting, the backlight will turn off when the phone is closed.
- If **Always On** and/or **High** are selected for the **Backlight** setting, the battery life may be reduced.


WALLPAPER

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Wallpaper** then press the **Center Select Key [OK]**.
2. Select **My Pictures**, **My Videos**, or **Animation**.

3. Select the desired image, video or animation and press the **Center Select Key [OK]**.
 - To view the image or animation, press the **Left Soft Key**  **[View]**.
 - To play the video, press the **Left Soft Key**  **[Play]**.
4. Press the **Center Select Key [SET]** to save as main wallpaper.

DISPLAY THEMES

To choose the background screen:

 
1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Display Themes** then press the **Center Select Key [OK]**.
2. Select **White**, **HUD**, **Chronograph** or **Outdoor**, and press the **Center Select Key [SET]**. To preview the themes, press the **Left Soft Key**  **[Preview]**.
3. To view help for the themes, press the **Right Soft Key**  **[Help]**.


 **HUD** is the default setting.

MAIN MENU SETTINGS



To change the Main Menu layout and type:

TO SET LIST MENU LAYOUT:




1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Main Menu Settings** then press the **Center Select Key [OK]**.
2. Select **Menu Layout** and press the **Center Select Key [OK]**.
3. Select **Tab**, **List**, or **Grid** for the menu layout.
4. Press the **Left Soft Key**  **[Preview]** to view the layout.
5. Press the **Center Select Key [SET]** to confirm.

 **Grid** is the default setting. If you choose another option, the directions may not be the same as provided in this manual.

REPLACE MENU ITEMS

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Main Menu Settings** then press the **Center Select Key [OK]**.
2. Select **Replace Menu Items** and press the **Center Select Key [OK]**.
3. Select the item you want to replace, then press the **Center Select Key [EDIT]**.
4. Select in the list the item you want to replace it with then press the **Center Select Key [SET]**.
5. To view help for the replace menu item, press the **Right Soft Key  [Help]**.
6. Press the **Left Soft Key  [Done]** to save your changes.

POSITION MENU ITEMS

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Main Menu Settings** then press the **Center Select Key [OK]**.
2. Select **Position Menu Items** and press the **Center Select Key [OK]**.
3. Select the item to move and press the **Center Select Key [MOVE]**.
4. Move highlight to desired position by using the **Directional Key ** and press the **Center Select Key [SWAP]**.
5. Press the **Right Soft Key  [Help]** to view help information.
6. Press the **Left Soft Key  [Done]** to save your changes.

RESET MENU SETTINGS

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Display Settings**, press the **Center Select Key [OK]**, select **Main Menu Settings** then press the **Center Select Key [OK]**.
2. Select **Reset Menu Settings** and press the **Center Select Key [OK]**.
3. Select the following options and press the **Center Select Key [OK]**.
 - **Menu Layout:** Restore menu layout to the initial menu layout.
 - **Menu Items:** Restore menu items to the initial content of the menu.

- **Item Positions:** Restore menu items to their initial positions.
- **All:** Restore all to your initial menu settings.


4. Press the **Right Soft Key**  [**Help**] to view help information.



If you change this setting, you will not be able to follow the instructions as provided in the manual.

DIAL FONTS

To set the dial font size

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Display Settings**, press the **Center Select Key** [**OK**], select **Dial Fonts** then press the **Center Select Key** [**OK**].
2. Select **Normal** or **Large Only** and press the **Center Select Key** [**SET**]. To preview the font size, press the **Left Soft Key**  [**Preview**].

MENU FONT SIZE

To set the menu font size:

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Display Settings**, press the **Center Select Key** [**OK**], select **Menu Font Size** then press the **Center Select Key** [**OK**].
2. Select **Normal** or **Large** and press the **Center Select Key** [**SET**].

CLOCK FORMAT

To choose the kind of clock to be displayed on the Main LCD or Front LCD screen:

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Display Settings**, press the **Center Select Key** [**OK**], select **Clock Format** then press the **Center Select Key** [**OK**].
2. Select **Main Clock** or **Front Clock** and press the **Center Select Key** [**OK**].
3. Select one of the following options and press the **Center Select Key** [**SET**].
 - **Main Clock:** Set the **Clock Format** and **Clock Font Color**.
 - **Front Clock:** Set the type of clock for the front screen. **Digital** is the default setting.

PHONE SETTINGS

AIRPLANE MODE

In Airplane Mode, all menu functions can be accessed except making calls, receiving calls, data connection and Bluetooth®. Activating Airplane Mode will disable all wireless communications. In Airplane Mode, services that support location on functions are temporarily disabled.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Airplane Mode** then press the **Center Select Key [OK]**.
2. Select **On** or **Off** and press the **Center Select Key [SET]**.

SET SHORTCUTS

Your phone offers you the option of assigning a shortcut key (**Directional Key left, right, up** and **down**) to a favorite or often-used function. In addition, choose menu settings for each of the shortcut options under **Set Directional Keys** (**Directional Key right**).


1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Set Shortcuts** then press the **Center Select Key [OK]**.
2. Select **Set My Shortcuts** and press the **Center Select Key [OK]**.
3. Select **Shortcut 1**, **Shortcut 2**, **Shortcut 3** or **Shortcut 4** and press the **Center Select Key [SET]**.
4. Select the desired option and press the **Center Select Key [SET]**.



The **Download Application Alphabet** option only appears when you have downloaded Brew Applications. In idle mode, pressing the **Directional Key** (⊙) right will display the My Shortcuts screen. On the My Shortcuts screen, you can select a function and press the **Center Select Key [OK]** to access the function. On the My Shortcuts screen, you can relocate a function by pressing the **Right Soft Key** (⏏) [**Move**], pressing the **Directional Key** (⊙) up or down for placement and pressing the **Center Select Key [SAVE]**. Or you can press the **Left Soft Key** (⏏) [**Settings**] to **Set My Shortcuts** or **Set Directional Keys**.

RESETTING MY SHORTCUTS:

To restore My Shortcuts to their original defaults:


1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Set Shortcuts** then press the **Center Select Key [OK]**.
2. Select **Set My Shortcuts** and press the **Center Select Key [OK]**.
3. Select **Shortcut 1**, **Shortcut 2**, **Shortcut 3** or **Shortcut 4** and press the **Right Soft Key**  **[Options]**.
4. Select **Reset Shortcut (1, 2, 3 or 4)** or **Reset My Shortcuts** and press the **Center Select Key [OK]**.
5. Select **Yes** and press the **Center Select Key [OK]**.

SET DIRECTIONAL KEYS:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Set Shortcuts** then press the **Center Select Key [OK]**.
2. Select **Set Directional Keys** and press the **Center Select Key [OK]**.
3. Select **UP Directional Key**, **LEFT Directional Key** or **DOWN Directional Key** and press the **Center Select Key [SET]**.

RESETTING THE DIRECTIONAL KEY SETTINGS:

Use the following procedure to return to the default **Directional Key** settings.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Set Shortcuts** then press the **Center Select Key [OK]**.
2. Select **Set Directional Keys** and press the **Center Select Key [OK]**.
3. Select **UP Directional Key**, **LEFT Directional Key** or **DOWN Directional Key** and press the **Right Soft Key**  **[Options]**.
4. Select **Reset (UP, LEFT or DOWN) Key** or **Reset Directional Keys** and press the **Center Select Key [OK]**.
5. Select **Yes** and press the **Center Select Key [OK]**.

SET RED SIDE KEY

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Set Shortcuts** then press the **Center Select Key [OK]**.
2. Select **Set Red Side Key** and press the **Center Select Key [OK]**.
3. Select the desired option and press the **Center Select Key [SET]**.



- If PTT Mode is set to on, this menu will not appear.
- To see **Help** menu, press the **Right Soft Key [Help]** in the **Set Shortcuts** menu.

VOICE COMMANDS SETTINGS

For information about Voice Commands Settings, See page 103.

LANGUAGE

To set the bilingual feature to either English or Español:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Language** then press the **Center Select Key [OK]**.
2. Select **English** or **Español** and press the **Center Select Key [SET]**.

TIME & DATE

To set the time and date for your phone:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Time & Date** then press the **Center Select Key [OK]**.
2. From the **Date** field, enter the date.
3. Scroll to the **Time** field and enter the time. Press the **Left Soft Key [↵]** to change the **am** and **pm** setting.
4. Scroll to the **DST** field and press the **Directional Key [⊙]** left or right to select **On** or **Off**.
5. Scroll to the **Current Time Zone** field, then press the **Left Soft Key [↵] [Set]**. Select the appropriate city and press the **Center Select Key [OK]**.

6. Press the **Center Select Key** [**SAVE**] to save.



This menu appears only in **GSM** or **Global** Mode.

LOCATION

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Phone Settings**, press the **Center Select Key** [**OK**], select **Location** then press the **Center Select Key** [**OK**].
2. Select one of the following options and press the **Center Select Key** [**SET**].
 - **On**: Your location is now available to the network.
 - **E911 Only**: Your location will be hidden from the network and applications, except for 911.



When the **Lock Setting** is selected for Location Settings under Restrictions on the Security Menu, you will need to enter a Lock Code. The default lock code is the last 4 digits of your mobile telephone number.

CURRENT COUNTRY

The Current Country menu allows you to select your current location.

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Phone Settings**, press the **Center Select Key** [**OK**], select **Current Country** then press the **Center Select Key** [**OK**].
2. Enter a country name in the **Go To** field or select the appropriate country and press the **Center Select Key** [**SET**].

SECURITY

The Security menu allows you to electronically secure the phone. The default lock code is the last 4 digits of your Mobile Telephone Number.

EDIT CODES:

To set a new Lock Code:

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Phone Settings**, press the **Center Select Key** [**OK**], select **Security** then press the **Center Select Key** [**OK**].

2. Enter the four-digit lock code and press the **Center Select Key [OK]**. The default lock code is last 4 digits of your mobile telephone number.
3. Select **Edit Codes** and press the **Center Select Key [OK]**.
4. Select one of the following options and press the **Center Select Key [OK]**.
 - **Phone Only**: Allows you to edit the lock code for **Security**. The default lock code is the last 4 digits of your mobile telephone number.
 - **Calls & Services**: Allows you to edit the lock code for **Restrictions**. The default lock code is the last 4 digits of your mobile telephone number.
5. If **Phone Only** is selected, enter the new four-digit code in the **Enter New Code** field. Enter the new four-digit code again in the **Re-enter New Code** field and press the **Center Select Key [SET]**.
6. If **Calls & Services** is selected, enter the current lock code in the **Enter Current Code** field. Enter the new four-digit code in the **Enter New Code** field. Enter the new four-digit code again in the **Re-enter New Code** field and press the **Center Select Key [SET]**.

RESTRICTIONS:

Use the following procedure to configure Location Setting, Calls and Messages restrictions.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Security** then press the **Center Select Key [OK]**.
2. Enter the four-digit lock code and press the **Center Select Key [OK]**. The default lock code is last 4 digits of your mobile telephone number.
3. Select **Restrictions** and press the **Center Select Key [OK]**.
4. Enter the four-digit lock code again and press the **Center Select Key [OK]**. The default lock code is the last 4 digits of your mobile telephone number.
5. Select one of the following settings and press the **Center Select Key [OK]**:
 - **Location Setting**: Select **Unlock Setting** or **Lock Setting** and press the **Center Select Key [SET]**.
 - **Calls**: Select **Incoming Calls** or **Outgoing Calls** and press the **Center Select Key [OK]**. Select **Allow All**, **Contacts Only**, or **Block All** and press the **Center Select Key [SET]**.


- **Messages:** Select **Incoming Messages** or **Outgoing Messages** and press the **Center Select Key [OK]**. Select **Allow All** or **Block All** and press the **Center Select Key [SET]**.

PHONE LOCK SETTING:

This setting specifies whether the phone should be locked whenever it is turned on. Lock Mode prevents the unauthorized use of your phone. Once the phone is locked, it is in restricted mode until the Lock Code is entered. You can still make emergency calls.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Security** then press the **Center Select Key [OK]**.
2. Enter the four-digit lock code and press the **Center Select Key [OK]**. The default lock code is last 4 digits of your mobile telephone number.
3. Select **Phone Lock Setting** and press the **Center Select Key [OK]**.
4. Select from the following options and press the **Center Select Key [SET]**.
 - **Unlocked:** Phone is unlocked.
 - **On Power Up:** Phone will lock when it is turned on.

LOCK PHONE NOW:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Security** then press the **Center Select Key [OK]**.
2. Enter the four-digit lock code and press the **Center Select Key [OK]**. The default lock code is the last 4 digits of your mobile telephone number.
3. Select **Lock Phone Now** and press the **Center Select Key [OK]**.
4. To unlock the phone, in idle mode, press the **Right Soft Key**  **[Unlock]** and enter the four-digit lock code and press the **Center Select Key [OK]**.

RESTORE PHONE:

To delete all User Data and restore all settings to their initial defaults:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Security** then press the **Center Select Key [OK]**.

2. Enter the four-digit lock code and press the **Center Select Key [OK]**. The default lock code is the last 4 digits of your mobile telephone number.
3. Select **Restore Phone** and press the **Center Select Key [OK]**.
4. Select **Yes** and press the **Center Select Key [OK]**.
5. Follow the on-screen prompt and press the **Center Select Key [OK]**. The phone will turn off and then back on again automatically.

SIM SECURITY

The SIM Security menu allows you to select the security settings for your SIM card.

 The SIM Card is pre-installed in your phone.

PIN CODE:

Allows you to edit/lock your PIN code:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **SIM Security** then press the **Center Select Key [OK]**.
2. Enter the four-digit lock code and press the **Center Select Key [OK]**. The default lock code is last 4 digits of your mobile telephone number.
3. Select **PIN Code** and press the **Center Select Key [OK]**.
4. Select one of the following options and press the **Center Select Key [OK]**:
 - **PIN Lock**: Allows you to lock/unlock the PIN code.
 - **Edit PIN Code**: Allows you to edit the PIN code. (PIN number must be locked before editing.)

 Verizon Wireless offers 24/7 Customer Support while you are traveling abroad. If you need Customer Service assistance or Technical Support for your global device, dial:

While in the United States

- 1-800-922-0204 from any phone or your wireless phone.
- *611 from your wireless phone while in the U.S.

While outside of the United States

- +1 (908) 559-4899

SIM LOCK:

Allows you to lock/unlock the SIM code.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **SIM Security** then press the **Center Select Key [OK]**.
2. Enter the four-digit lock code and press the **Center Select Key [OK]**. The default lock code is last 4 digits of your mobile telephone number.
3. Select **SIM Lock** and press the **Center Select Key [OK]**.
4. Select either **Unlocked** or **Locked** and press the **Center Select Key [SET]**.
5. To unlock the SIM card, enter the PIN Unlock Code and press the **Center Select Key [OK]**.

GLOBAL DATA ROAMING

To select whether to access data roaming during trips:

- 1 Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Global Data Roaming** then press the **Center Select Key [OK]**.
2. Select **Allow access for all trips**, **Allow access only for this trip** or **Deny data roaming access**, then press the **Center Select Key [SET]**.
 - Data access during trips outside the local may result in significantly higher charger.

SYSTEM SELECT

Your phone is Quad-Band Capable, which means it will work in both CDMA and GSM Destinations. While in the United States or on other CDMA roaming networks, use your phone in Verizon CDMA Mode. Use your phone in Global Mode while outside of the U.S. You must have a SIM card in order to select GSM and Global Mode. The SIM Card is pre-installed in your phone.

You can set your phone to search or roam on another network when you are not in your home area. Leave this setting as default unless you want to alter the system selection as instructed by your service provider.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Settings**, press the **Center Select Key [OK]**, select **System Select** then press the **Center Select Key [OK]**.
2. Select either **CDMA Settings** or **GSM Settings** and press the **Center Select Key [OK]**.



If PTT Mode is set to on, this menu will not appear.

- **Network Mode:** Select either **CDMA Mode**, **GSM Mode** or **Global Mode** and press the **Center Select Key [SET]**.
- **CDMA Settings:** Select either **Automatic** or **Home Only** and press the **Center Select Key [SET]**.
- **GSM Settings:** Select either **Automatic** or **Manual** and press the **Center Select Key [SET]**. This menu can be accessed in GSM Mode.



For a complete list of destinations, please visit: <http://phones.verizonwireless.com/ruletheair/global/#/landing>. Network mode allows you to select from CDMA, GSM or Global network modes.



When your phone is in Verizon (CDMA) mode, it does not necessarily mean that you are on the Verizon Wireless Network. You may roam on other carrier's networks domestically and internationally when your phone is in Verizon (CDMA) mode. For more information, visit: <http://www.verizonwireless.com/b2c/index.html>.

MOTION DETECTION

Helps you set your phone to respond to your actions.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **Phone Settings**, press the **Center Select Key [OK]**, select **Motion Detection** then press the **Center Select Key [OK]**.
3. Select either **G'zGEAR** or **My Pics/Videos** and press the **Center Select Key [OK]**.
 - **G'zGEAR:** When this feature is On, shaking the phone to the left or right will change the Tool in the G'zGEAR Application.
 - **My Pics/Videos:** When this feature is On, shaking the Phone to the left or right will perform a page scroll in the My Pictures/Videos Gallery.



To see **Help** menu, press the **Right Soft Key**  **[Help]** in the **G'zGEAR** or **My Pics/Videos** menu.

CALL SETTINGS

ANSWER OPTIONS

To determine how to handle an answered call:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Call Settings**, press the **Center Select Key [OK]**, select **Answer Options** then press the **Center Select Key [OK]**.
2. Select either **Flip Open, Any Key** or **Auto with Handsfree** and press the **Center Select Key [MARK]**.
3. Press the **Left Soft Key [Done]**.



- **Flip Open** is the default setting for this device.
- When the phone is closed, the **Auto with Handsfree** Mode will not function, except when a headset is connected.
- **Auto with Handsfree** will function after about five seconds and is available only when connected to a headset or hands-free device.
- To answer all incoming calls, press the **SEND Key [SEND]**.

AUTO RETRY

Set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Call Settings**, press the **Center Select Key [OK]**, select **Auto Retry** then press the **Center Select Key [OK]**.
2. Select either **10 Seconds, 30 Seconds, 60 Seconds** or **Off** and press the **Center Select Key [SET]**.

TTY MODE

You can attach a TTY device to your phone enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Call Settings**, press the **Center Select Key [OK]**, select **TTY Mode** then press the **Center Select Key [OK]**.
2. Select either **TTY Full**, **TTY + Talk**, **TTY + Hear** or **TTY Off** and press the **Center Select Key [SET]**.

ONE TOUCH DIAL

To initiate a speed dial call by holding down the speed dial digit:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Call Settings**, press the **Center Select Key [OK]**, select **One Touch Dial** then press the **Center Select Key [OK]**.
2. Select **On** or **Off** and press the **Center Select Key [SET]**.



If **One Touch Dial** is disabled, speed dial numbers designated in your contacts will not function.

VOICE PRIVACY

Turn the voice privacy feature On or Off.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Call Settings**, press the **Center Select Key [OK]**, select **Voice Privacy** then press the **Center Select Key [OK]**.
2. Select **On** or **Off** and press the **Center Select Key [SET]**.

DTMF TONES

To set the Key Tone length and touch tone playback speed:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Call Settings**, press the **Center Select Key [OK]**, select **DTMF Tones** then press the **Center Select Key [OK]**.
2. Select one of the following options and press the **Center Select Key [SET]**.
 - **Normal**: Sends out a tone for a fixed period of time even if you continue to press the key.
 - **Long**: Sends out a continuous tone for the duration the key is pressed and held.



The setting of **DTMF Tones** are changed to Normal in GSM mode.

PTT MODE

Allows you to set PTT mode setting.




1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Call Settings**, press the **Center Select Key** [**OK**], select **PTT Mode** then press the **Center Select Key** [**OK**].
3. Select either **On** or **Off** and press the **Center Select Key** [**SET**].


ASSISTED DIALING

This menu allows you to select Assisted Dialing for a destination where you are making a call.

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**]. Select **Call Settings**, press the **Center Select Key** [**OK**], select **Assisted Dialing** then press the **Center Select Key** [**OK**].

 Press the **Right Soft Key**  [**Help**], to view the help menu.

2. Under **Assisted Dialing**, press the **Directional Key**  left or right to select **On** or **Off**.
3. When selecting **On**, scroll down to the **Reference Country** field, and then press the **Left Soft Key**  [**Set**]. Enter a country name in the **Go To** field or select the appropriate country and press the **Center Select Key** [**SET**].
4. While on the screen with the list of Countries, press the **Left Soft Key**  [**Details**] to edit the following options:
 - **Country Code**: Populated based on Reference Country and MCC lookup table.
 - **IDD Prefix**: Populated based on Reference Country and MCC lookup table.
 - **NDD Prefix**: Populated based on Reference Country and MCC lookup table.
 - **Area/City Code**: Default is determined by first three digits of MDN.
 - **National Num Length**: Default is determined by MDN length.
5. Press the **Center Select Key** [**Save**] to save.

 When Assisted Dialing is On, the number edit screen will display “**Assisted Dialing On**” when dialing a number.

NOISE REDUCTION

To reduce the noise while talking on the headset:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **Call Settings**, press the **Center Select Key [OK]**, select **Noise Reduction** then press the **Center Select Key [OK]**.
3. Select **On** or **Off** and then press the **Center Select Key [SET]**.
 - If you select **On**, “**NOISE REDUCTION SET**” message appears on the display.

MEMORY

 
USING THE SAVE OPTIONS

Allows you to set save options.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **Memory**, press the **Center Select Key [OK]**, select **Save Options** then press the **Center Select Key [OK]**.
3. Select either **Pictures**, **Videos**, or **Sounds** and press the **Center Select Key [OK]**.
4. Choose the desired save option and press the **Center Select Key [SET]**.


USING THE PHONE MEMORY OPTIONS

Allows you to view the phone memory information and erase/move the file location.


1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **Memory**, press the **Center Select Key [OK]**, select **Phone Memory** then press the **Center Select Key [OK]**.
3. Select the desired option and press the **Center Select Key [OK]** to view memory information.
4. Press **Right Soft Key**  **[Options]** to erase or move to different location.

USING THE CARD MEMORY OPTIONS

Allows you to view the card memory information and erase/move the file location.

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Memory**, press the **Center Select Key** [**OK**], select **Card Memory** then press the **Center Select Key** [**OK**].
3. Select the desired option and press the **Center Select Key** [**OK**] to view memory information.
4. Press **Right Soft Key**  [**Options**] to erase or move to different location.

FORMATTING THE MEMORY CARD

1. Press the **Center Select Key** [**Menu**], select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **Memory**, press the **Center Select Key** [**OK**], select **Card Memory** then press the **Center Select Key** [**OK**].
3. Select **Card Memory Usage** and press the **Right Soft Key**  [**Options**].
4. Select **Format Card** and press the **Center Select Key** [**OK**].
Enter the security code, select **Yes** and press the **Center Select Key** [**OK**].

 The default security code is the last 4 digits of your phone number.

USB MODE

Allows you to choose the USB mode.

1. Press the **Center Select Key** [**MENU**], select **Settings & Tools** and press the **Center Select Key** [**OK**].
2. Select **USB Mode**, press the **Center Select Key** [**OK**]. Select **Charge Only**, **Mass Storage**, or **Ask On Plug** and press the **Center Select Key** [**SET**]. If you choose **Ask On Plug**, you will be prompted to select the USB mode when connecting your phone with PC.

PHONE INFO

MY NUMBER

To view your phone number:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Info**, press the **Center Select Key [OK]**, select **My Number** then press the **Center Select Key [OK]**.
2. Select one of the following options and press the **Center Select Key [OK]**:
 - **CDMA Number**: Displays the **MDN**, **MIN** and service provider.
 - **GSM Number**: Displays the Subscriber Number.
3. Press the **Center Select Key [OK]** to return to the previous screen.

SW/HW VERSION

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Info**, press the **Center Select Key [OK]**, select **SW/HW Version** then press the **Center Select Key [OK]**.
 - Displays the followings: **Software Version**, **PRL Version**, **ERI Version**, **Browser Version**, **Media Center Version**, **MSUI Version**, **HW Version**, **MEID**, **Software Update Client**, **BT Mac Address**, **Warranty Date Code**.
2. Press the **Center Select Key [OK]** to return to the previous screen.

ICON GLOSSARY

To view all the icons and their meanings:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Info**, press the **Center Select Key [OK]**, select **Icon Glossary** then press the **Center Select Key [OK]**.
2. Press the **Center Select Key [OK]** to return to the previous screen.
For details on icons, see page 12.

SOFTWARE UPDATE

The update phone firmware (software) option allows you to download and update the software in your phone automatically. Only the internal software is updated; no contacts entries or other information saved to your phone will be deleted.

STATUS:

To check the latest software download or update status:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Info**, press the **Center Select Key [OK]**, select **Software Update** then press the **Center Select Key [OK]**.
2. Select **Status** and press the **Center Select Key [OK]**.

CHECK NEW:

To check Download Server for new Software updates:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Phone Info**, press the **Center Select Key [OK]**, select **Software Update** then press the **Center Select Key [OK]**.
2. Select **Check New** and press the **Center Select Key [OK]**.

OPERATING SYSTEM

To view the operating system information:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **Phone Info**, press the **Center Select Key [OK]**, select **Operating System** then press the **Center Select Key [OK]** to view the operating system information.

SIM INFO



To view the SIM ID number for your phone.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **SIM Info** and press the **Center Select Key [OK]**.

2. The SIM ID number is displayed.
3. Press the **Center Select Key [OK]** to return to the previous screen.


TUTORIAL

Introduces the basic concepts and features of the **Push To Talk (PTT)**, **G'zGEAR**, **Voice Dictation**, and **Message Readout** function.

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**.
2. Select **Tutorial**, press the **Center Select Key [OK]**, select the desired option and press the **Center Select Key [OK]**.
3. Press the **Right Soft Key**  [**Next**] to continue, or the **Left Soft Key**  [**Back**] to view the previous page.

SET UP WIZARD

To set up options using the Set up Wizard:

1. Press the **Center Select Key [MENU]**, select **Settings & Tools** and press the **Center Select Key [OK]**. Select **Set-up Wizard** and press the **Center Select Key [OK]**.
2. Select the setting options including **Call Sounds**, **Display Themes**, **Menu Layout**, **Main Clock Format**, or **Front Clock Format** and press the **Center Select Key [SET]**.
3. To skip the step, press the **Right Soft Key**  [**Skip**].

01

02

03

04

05



SAFETY AND WARRANTY 5

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Before operating your phone, please be aware of all the safety details. This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

SAFETY INFORMATION FOR WIRELESS
HANDHELD PHONES
GENERAL SAFETY
SAFETY INFORMATION FOR FCC RF
EXPOSURE
SAR INFORMATION
HEARING AID COMPATIBILITY (HAC) FOR
WIRELESS TELECOMMUNICATIONS DEVICES
TELETYPEWRITER (TTY) DEVICES

FDA CONSUMER UPDATE
EMERGENCY CALLS
COMPLIANCE WITH OTHER FCC
REGULATIONS
AVOID POTENTIAL HEARING LOSS
FCC COMPLIANCE INFORMATION
RECYCLE YOUR CELL PHONE!
12 MONTH LIMITED WARRANTY



SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

READ THIS INFORMATION BEFORE USING YOUR HANDHELD PORTABLE CELLULAR TELEPHONE

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986) *

ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

- 1: American National Standards Institute.
- 2: National Council on Radiation Protection and Measurements.
- 3: International Commission on Nonionizing Radiation Protection.

ANTENNA SAFETY

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Please contact your local dealer for replacement antenna.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BATTERY SAFETY

Your device uses a removable and rechargeable lithium ion battery. Please contact customer service for assistance should you need a replacement battery.

CHARGER

The Wall/USB Charger for this unit requires the use of a standard 120V AC power source for its operation.

Never attempt to disassemble or repair the Wall/USB Charger. Never use the Wall/USB Charger if it has a damaged or worn power cord or plug. Always contact a Hitachi HTA authorized service center, if repair or replacement is required.

Never alter the AC cord or plug on your Wall/USB Charger. If the plug will not fit into the available outlet, have a proper outlet installed by a qualified electrician. Never allow any liquids or water to spill on the Wall/USB Charger when it is connected to an AC power source.

Always use the authorized Wall/USB Charger to avoid any risk of bodily injury or damage to your cellular phone or battery.

Never attempt to connect or disconnect the Wall/USB Charger with wet hands. Always unplug the Wall/USB Charger from the power source before attempting any cleaning. Always use a dry, soft cloth dampened with water to clean the equipment, after it has been unplugged.

Handling the cord on this product or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash your hands after handling.

Always disconnect the Wall/USB Charger from the power source when it is not in use.

If the plug is not inserted completely, it may cause electric shock, heat generation

or fire. Do not use a damaged AC-Adapter or loosened plug. Do not touch the charging terminal with your hand or finger while it is conducting electricity. It may cause electric shock, injury or product failure.

Unplug the AC charger during lightning storms to avoid electric shock or fire. Do not overload a power outlet with too many devices.

Power supply(AC/DC Adapter) information

- Manufacture: Sunlin Electronics Co., Ltd.
- Model: CNRUSB

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation and/or one-touch, speed dialing, and auto answer modes, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

ELECTRONIC DEVICES

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Therefore, use of your phone must be restricted in certain situations.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Never come closer than six (6") inches to a person with a heart pacemaker implant when using your phone. Doing so could result in interference with the function of the pacemaker. Persons with pacemakers:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information. Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

VEHICLES

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

POSTED FACILITIES

Turn your phone OFF where posted notices so require.

OTHER SAFETY GUIDELINES

AIRCRAFT

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft. Always request and obtain prior consent and approval of an authorized airline representative before using your phone aboard an aircraft.

Always follow the instructions of the airline representative whenever using your phone aboard an aircraft, to prevent any possible interference with airborne electronic equipment.

BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.

01

02

03

04

05

GENERAL SAFETY

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) USB AC Adapter (2) Battery and (3) Product Using Battery.

Failure to follow the directions below could result in serious bodily injury and/or property damage due to battery liquid leakage, fire or rupture.

- DO NOT use or store this equipment in an extreme environment where high temperature or high humidity exists.
- DO NOT drop or abuse the equipment. Avoid striking, shaking or shocking. When

not using, lay down the unit to avoid possible damage due to instability.

- DO NOT expose this equipment to rain or spilled beverages.
- DO NOT use unauthorized accessories.
- DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Hitachi HTA cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
- DO NOT place this equipment inside the microwave or pressurized container. It may cause explosion, product failure or fire.
- DO NOT throw this device into the fire or heat. It may cause explosion or fire.
- DO NOT short the terminal. Also, protect the terminal so that conductive objects, such as metal and pencil lead, do not touch or get caught in the terminal. It may cause fire or product failure. When plugging in the Wall/USB Charger, do not expose the metal strap or accessory to the electric plug. It may cause fire, electric shock, injury or product failure.

To avoid the risk of electric shock, do not use this device while there is lightning outside. The device is not water-proof. By placing it under a faucet or shower and adding water-pressure, or submerging it under water for a long time, the warranty will be invalid because the device will become non-repairable. If, by accident, you spill fluid, such as water, on the device, turn off the power, remove the battery and wipe off the fluid with a dry, clean cloth. By using this device with fluid on it, it may cause heat generation, fire, product failure or electric shock.

This device is not heat-resistant. Do not place it into a hot bath or liquid soap. Never touch the device's charging terminal with your hand or finger. It may cause electric shock, injury or product failure. If the device does not finish recharging within the specified timeframe, stop charging. It may cause leakage, heat generation, explosion or fire.

If the device is damaged by dropping it and the internal parts are exposed, do not touch the exposed parts. You might get an electric shock or injured from damaged parts. Call customer service for assistance.

- DO NOT place the device on an unstable area, such as wobbly stools or slanted places. The device may drop and cause injury. Also watch for shocks, particularly during vibration mode.
- DO NOT place the device near a child. They may accidentally swallow the device and suffocate.
- STOP using this device, if it starts to smoke, smell, make abnormal sounds or generate heat. If abnormality starts to happen while recharging, remove the Wall/USB Charger from the plug or cigarette lighter adapter, check that the device has cooled down, turn off the power, remove the battery and call customer service for assistance. Also, if the device has been damaged by dropping or getting it wet, discontinue using the device and call customer service. Never try to repair the device yourself. It is highly dangerous.
- DO NOT touch the device, battery or charging device while the phone is being recharged. It may cause a low-temperature burn.
If you are using the metal strap, be sure that it does not touch the charging terminal, especially the plug, while recharging. It may cause an electric shock, fire, injury or product failure.
To avoid injury or getting into an accident, check around you to ensure your safety while placing a call, messaging, taking a picture or playing a game with this device.
To avoid injury, do not use this device if the earpiece magnet picks up metal objects such as pins.
- NEVER bring the device near a floppy disk, magnetic card, magnetic tape, MOs, MDs, prepaid cards, or other similar objects. It may destroy or corrupt the data.

01

02

03

04

05

- NEVER press or poke the phone's display with your finger or another object. It may cause damage to the display.
- NEVER twist the device. It may cause product failure.
- DO NOT put stickers on the LCD screen or keypad. These stickers may touch and press keys when the Flip is closed. This may cause improper operating of the phone.

GAMES

SEIZURES/BLACKOUTS WARNING

A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a computer screen, or while playing video games, may induce an epileptic seizure in these individuals. Certain conditions may induce previously undetected epileptic symptoms even in persons who have no history of prior seizures or epilepsy. If you, or anyone in your family, have an epileptic condition, consult your physician prior to playing. If you experience any of the following symptoms while playing a video or computer game—dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement, or convulsions— **IMMEDIATELY** discontinue use and consult your physician before resuming play.

REPETITIVE MOTION INJURIES

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

CAMERA

Do not aim your camera at the Sun. The sunlight passing through the Camera/Camcorder Lens may cause damage to the camera.

Do not use your camera's flash close to a person's eyes. This may cause the person to lose eyesight temporarily and result in an accident.

Do not expose the Camera/Camcorder Lens to direct sunlight for a long period of time. It may cause explosion or fire from light-focus action.

Do not use the flash on an automobile driver. It may startle the driver and they may not be able to drive, which may cause an accident.

SAFETY INFORMATION FOR FCC RF EXPOSURE

WARNING! READ THIS INFORMATION BEFORE USING

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

01

02

03

04

05

BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm from the body. To maintain compliance requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm separation distance between the user's Body and the back of the phone, including the antenna.

The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



For more information about RF exposure, please visit the FCC website at <http://www.fcc.gov>

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by

the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.23 W/Kg and when worn on the body, as described in this user guide, is 0.59 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The SAR testing for Body-worn operation was performed with a belt clip that provided a 2.0 cm separation. The User's Manual indicates that any holsters/clips used with this device should contain no metallic components.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea> after searching on JYC78.

Additional information on Specific Absorption Rates (SAR) can be found on the CTIA - The Wireless Association web-site at <http://www.ctia.org>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.



We didn't conduct tests as GPS only works under CDMA, not under GSM.

HEARING AID COMPATIBILITY (HAC) FOR WIRELESS TELECOMMUNICATIONS DEVICES

Hitachi HTA believes that all of our customers should be able to enjoy the benefits of digital wireless technologies.

We are committed to providing a selection of compatible devices for our customers who wear hearing aids.

THIS PHONE HAS A HAC RATING OF M4/T4.

WHAT IS HEARING AID COMPATIBILITY?

The Federal Communications Commission has implemented rules and a rating system designed to enable people who wear hearing aids to more effectively use these wireless telecommunications devices. The standard for compatibility of digital wireless phones with hearing aids is set forth in American National Standard Institute (ANSI) standard C63.19. There are two sets of ANSI standards with ratings from one to four (four being the best rating): an "M" rating for reduced interference making it easier to hear conversations on the phone when using the hearing aid microphone, and a "T" rating that enables the phone to be used with hearing aids operating in the telecoil mode thus reducing unwanted background noise.

HOW WILL I KNOW WHICH WIRELESS PHONES ARE HEARING AID COMPATIBLE?

The Hearing Aid Compatibility rating is displayed on the wireless phone box.

A phone is considered Hearing Aid Compatible for acoustic coupling (microphone mode) if it has an “M3” or “M4” rating.

A digital wireless phone is considered Hearing Aid Compatible for inductive coupling (telecoil mode) if it has a “T3” or “T4” rating.



This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

HOW WILL I KNOW IF MY HEARING AID WILL WORK WITH A PARTICULAR DIGITAL WIRELESS PHONE?

You'll want to try a number of wireless phones so that you can decide which works the best with your hearing aids. You may also want to talk with your hearing aid professional about the extent to which your hearing aids are immune to interference, if they have wireless phone shielding, and whether your hearing aid has a HAC rating.

FOR MORE INFORMATION ABOUT HEARING AIDS AND DIGITAL WIRELESS PHONE

- FCC Hearing Aid Compatibility and Volume Control – <http://www.fcc.gov/cgb/dro/hearing.html>

- Hearing Loss Association of America – <http://www.hearingloss.org/learn/cellphonetech.asp>
- CTIA – <http://www.accesswireless.org/Disability-Categories/Hearing.aspx>
- Gallaudet University, RERC – <http://tap.gallaudet.edu/voice>

TELETYPEWRITER (TTY) DEVICES

You can use an optional teletypewriter (TTY) device with your phone to send and receive calls. You must plug the TTY device into the phone's headset connector and set the phone to operate in one of three TTY modes.

A TTY is a communication device used by people who are hard of hearing or have a speech impairment. TTY does not work from mobile phone to mobile phone. Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone. Your phone has a 2.5mm jack. Set the phone to Medium volume level for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize the error rate. For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

FDA CONSUMER UPDATE



U.S. FOOD AND DRUG ADMINISTRATION - CENTER FOR DEVICES AND RADIOLOGICAL HEALTH CONSUMER UPDATE ON WIRELESS PHONES

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency

energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the idle mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function;
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the

01

02

03

04

05

federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head.

These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,”

which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures.

However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people

01

02

03

04

05

actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world.

The Project has also helped develop a series of public information documents on EMF issues. FDA and CTIA - The Wireless Association have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research

will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fda.gov> (under "c" in the subject index, select **Cell Phones > Research**)) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first

consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance.

For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure

to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

01

02

03

04

05

11. Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head.

On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

12. Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head

from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

13. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones.

This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing

to assess the interference and work to resolve the problem.

14. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
(<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>)
- Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project
(<http://www.who.int/peh-emf/en/>)
- National Radiological Protection Board (UK)
(<http://www.hpa.org.uk/radiation/>)

01

02

03

04

05

EMERGENCY CALLS

Never rely solely upon your wireless phone for essential communications (e.g., medical emergencies), if it can be avoided, since a wireless phone requires a complex combination of radio signals, relay stations and landline networks for its operation.

Consequently, emergency calls may not always be possible under all conditions on all wireless phone systems. Your wireless phone, however, may sometimes be the only available means of communication at the scene of an accident. When making an emergency call, always give the recipient all necessary information as accurately as possible. Never terminate an emergency call until you have received clearance to do so.

FCC ENHANCED 911 (E911) RULES BACKGROUND

The Federal Communications Commission (FCC) requires wireless carriers to transmit specific latitude and longitude location (Automatic Location Identification = ALI) information as well as “911” calls to Public Safety Answering Points (PSAPs) to identify the location of the caller in case of emergency. Generally, the rules require that carriers identify an E911 caller’s location within 50 meters of the actual location for 67 percent of calls and within 150 meters of the actual location for 95 percent of calls.

CASIO G’ZONE C781R3 — ALI CAPABILITY

 

The C781R3 is an ALI-capable phone equipped with a GPS (Global Positioning System) receiver supporting a satellite-based GPS ALI-capable network to comply with the FCC’s ALI requirements.

The network compliance with the above FCC requirements is dependent on: (a) the use of digital technology by the wireless network; (b) GPS satellite signals being able to reach the handset (such transmissions do not always work indoors, for example); and (c) handset signals reaching wireless “base stations” (atmospheric and environmental conditions may cause variations in handset receiving signal strength).

 

Also the transmission of the ALI information is subject, in part, to system constraints within the wireless network to which the E911 signal is transmitted and over which Hitachi HTA has no control. Finally, customers are advised that the C781R3’s ALI capability is to be used for E911 purposes only.

911 IN LOCK MODE

The “911” call service is available even in the lock mode.

1. Enter “911” then press the **SEND Key** .
2. The call connects.
3. The phone exits the Lock Mode for 5 minutes.
4. To exit emergency mode, press the **END/PWR Key** .

911 USING ANY AVAILABLE SYSTEM

1. Enter "911" then press the **SEND Key** .
2. The call connects.
3. The phone remains in Emergency Mode for 5 minutes.
4. To exit emergency mode, press the **END/PWR Key** .

01

02

03

04

05

COMPLIANCE WITH OTHER FCC REGULATIONS

OPERATING PROCEDURES

Never violate any of the following Rules and Regulations of the FCC when using your Cellular Phone. Such violations are punishable by fine, imprisonment or both.

- Never use obscene, indecent, or profane language.
- Never use your Cellular Phone to send false distress calls.
- Never wiretap or otherwise intercept a phone call, unless you have first obtained the consent of the parties participating in the call.
- Never make any anonymous calls to annoy, harass, or molest other people.
- Never charge another account without authorization, to avoid payment for service.
- Never willfully or maliciously interfere with any other radio communications.
- Never refuse to yield the line when informed that it is needed for an Emergency Call. Also, never take over a line by stating falsely that it is needed for an emergency.

AVOID POTENTIAL HEARING LOSS

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing

loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Excessive sound pressure from earphones can cause hearing loss.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

YOU CAN OBTAIN ADDITIONAL INFORMATION ON THIS SUBJECT FROM THE FOLLOWING SOURCES:

AMERICAN ACADEMY OF AUDIOLOGY

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: 800-AAA-2336

Email: infoaud@audiology.org

Internet: <http://www.audiology.org/Pages/default.aspx>

NATIONAL INSTITUTE ON DEAFNESS AND OTHER COMMUNICATION DISORDERS

NATIONAL INSTITUTES OF HEALTH

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nidcd.nih.gov

Internet: <http://www.nidcd.nih.gov/health/hearing>

CENTERS FOR DISEASE CONTROL AND PREVENTION

1600 Clifton Rd.

Atlanta, GA 30333. USA

Voice: 1-800-CDC-INFO (1-800-232-4636)

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

01

02

03

04

05

FCC COMPLIANCE INFORMATION

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received. Including interference that may cause undesired operation.

INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful Interference to radio communications. However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.



CAUTION: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables.

RECYCLE YOUR CELL PHONE!

Carriers marketing this cell phone have an in-store phone take-back program. Consumers can drop off their used wireless devices to specified carrier retail outlets for recycling purposes. For a list of carrier members and collection sites, visit the cellular industry's recycling website www.recyclewirelessphones.com.

Wireless phones also can be donated to the Wireless Foundation's DONATE A PHONE® CALL TO PROTECT® campaign. This charitable cause collects wireless phones to benefit victims of domestic violence. All donated phones are tax deductible. You may mail the phone to:

CALL TO PROTECT

2555 Bishop Circle

West Dexter, MI 48130

OR

Drop the phone off at a local collection center. For a list of collection centers, visit www.wirelessfoundation.org/CalltoProtect/dropoff.cfm Before returning any wireless device for recycling purposes, please remember to terminate your service on the device, clear the device of any stored information and remove the device's SIM card, if it has one (please contact your wireless provider to find out if your device contains a SIM card and for assistance on how to remove it).

01

02

03

04

05

12 MONTH LIMITED WARRANTY

WHO THIS WARRANTY COVERS

This 12 month limited warranty extends only to the original purchaser of this product within the United States or Canada. This warranty is not transferable.

WHAT THIS WARRANTY COVERS

Hitachi High Technologies America, Inc. (Hitachi HTA) offers you a limited warranty that extends for the first twelve (12) month period from the date of original purchase with proof of purchase. Without valid proof of purchase, Hitachi HTA offers a limited warranty extending fifteen (15) months from date of manufacture, which is coded on the product label ("Warranty Period").

Should this product, in-box accessories or any part during normal consumer usage and conditions be proven defective in material or workmanship that results in product failure, such defect(s) will be repaired or replaced (with new or rebuilt parts) at Hitachi HTA's discretion, without charge for parts or labor directly related to the defect.

WHAT THIS WARRANTY DOES NOT COVER

1. Warranty claims outside of the product Warranty Period.
2. Damage or defects caused by using the product other than in the normal course.
3. Defects or damages resulting from abnormal use, abnormal conditions, improper storage, unauthorized modifications, unauthorized repair, improper installation, or other acts which are not the fault of Hitachi HTA.
4. Product with altered or removed serial number.
5. Damage resulting from use of accessories not approved by Hitachi HTA.

6. Damage from exposure to moisture, humidity, excessive temperature or extreme environment.
7. Liquid damage due to not properly sealed/locked accessories, ports and or battery latches of water resistance devices.
8. All surfaces and externally exposed parts that are scratched or damaged due to normal customer use.
9. All software, including operating system software, third-party software, applications, and all other software of any kind.
10. Wear and tear by normal daily use of the product.
11. Customer abuse or other physical abuse or mistreatment of a product as evidenced by:
 - a. Missing required faceplate;
 - b. Damaged LCD or Touch Lens (e.g., the product is either broken, cracked, smashed, bleeding, etc.
 - c. IMEI is unreadable electronically or due to missing or altered serial number, IMEI and/or Hitachi HTA date label so as to affect readability;
 - d. Missing keys on keypad beyond normal wear and tear;
 - e. Unapproved product modification;
 - f. Visible product surface physical damage resulting in product being smashed, chewed, gouged, burned or melted;
 - g. Liquid damage as evidenced by submission in liquid or any other evidence of liquid ingress, including corrosion of any of the connections and noticeable excessive residue.

OTHER LIMITATIONS

Hitachi HTA will not backup any data or re-install applications or software that has been added to the device. It is recommended that you backup any such information or data before sending in the product for warranty repair to avoid permanent loss of data stored.

Use only Hitachi HTA approved accessories with Hitachi HTA products. Use of any unauthorized accessories may be dangerous and will invalidate the warranty if said accessories cause damage or a defect to the product.

No other warranty is applicable to this product. THE EXTENT OF HITACHI HTA'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL HITACHI HTA'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

TO THE EXTENT PERMITTED BY APPLICABLE LAW AND AS OTHERWISE SET FORTH HEREIN, HITACHI HTA MAKES NO OTHER IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL HITACHI HTA BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. HITACHI HTA SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

HOW TO GET WARRANTY SERVICE

NECAM Call center number and Company address

Call center number : (800)637-5917

Company address : NEC Corporation of America
6535 HWY 161
Irving, TX 75039

01

02

03

04

05



