

ADDITIONAL

PIONEER®

# Service Manual

ORDER NO.  
HRT-186-0

PORTABLE STEREO FM/AM RADIO CASSETTE RECORDER

# SK-350 SK-300

DU, KC

DU, KC

NOTE: This additional service manual is designed to be used together with Model SK-350, 300/D, DP Service Manual (HRT-185). Refer to it for finding parts numbers and adjustment, etc. which are not shown in this manual.

## SPECIFICATIONS

Max. output power . . . . . 2W + 2W  
 Max. music power. . . . . .15W (total music power)  
 Speakers . . . . . .16cm 2-way  
 Frequency response . . . . . Normal tape: 50Hz ~ 14kHz  
 (SK-350) CrO<sub>2</sub> tape: 50Hz ~ 15kHz  
 Metal Tape: 50Hz ~ 16kHz  
 Frequency response. . . . . .50Hz ~ 14kHz  
 (SK-300)  
 Frequency range . . . . . .FM: 88 ~ 108MHz  
 AM: 525 ~ 1,605kHz  
 Input jack . . . . . .AUX  
 Output jacks. . . . . .LINE OUT, PHONES  
 (SK-350)  
 Output jack . . . . . .PHONES  
 (SK-300)  
 Power source . . . . . .120/220/240V AC 50/60Hz  
 120V AC 60Hz (Canada)  
 12V DC (eight 1.5V "D" batteries)<sup>†</sup>  
 Dimensions (W x H x D) . . . .532 x 220 x 123mm  
 (SK-350) (21 x 8<sup>5</sup>/<sub>8</sub> x 4<sup>7</sup>/<sub>8</sub> in.)  
 Dimensions (W x H x D) . . . .532 x 220 x 120mm  
 (SK-300) (21 x 8<sup>5</sup>/<sub>8</sub> x 4<sup>3</sup>/<sub>4</sub> in.)  
 Weight . . . . . .4.6kg (10.1 lbs., without batteries)


### SK-350

(Subfunctions) . . . . . .Dolby NR, tape selector (METAL/  
 CrO<sub>2</sub>/NORM), one touch recording,  
 music search, record muting, auto  
 stop mechanism  
 (Indicators) . . . . . .POWER (red LED), DOLBY NR (green  
 LED), REC (red LED), TUNING (green  
 LED), STEREO (red LED)


### SK-300

(Subfunctions) . . . . . .One touch recording, music search,  
 record muting, auto stop mechanism  
 (Indicators) . . . . . .POWER (red LED), REC (red LED),  
 TUNING (green LED), STEREO (red  
 LED)

### SK-350

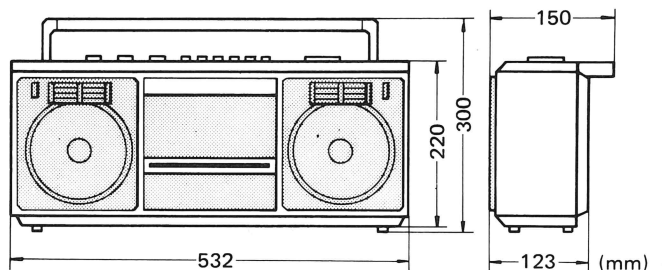

### SK-300

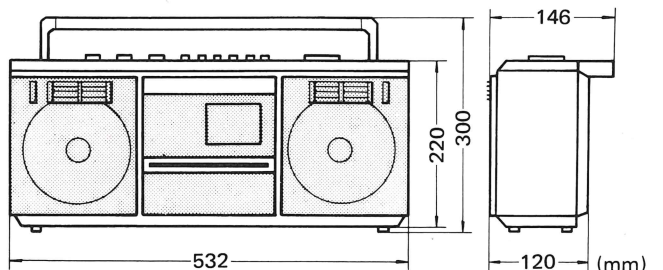

Note: Specifications and design are subject to change without notice.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
 PIONEER ELECTRONICS OF AMERICA 1925E, Dominguez St. Long Beach, Calif. 90810  
 PIONEER ELECTRONIC (EUROPE) N.V. Luithagen-Haven 9, 2030 Antwerp, Belgium  
 PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia

FK © FEB. 1982 Printed in Japan

## PARTS LIST

### Main P.C. Board (SK-350)

SK-350/D, DP			SK-350/DU, KC	
Mark	Part No.	Description	Part No.	Description
★ ★	2SD468	Q308	2SC1383	Q308
	HTX-142	L2 Antenna Unit	HTX-143	L2 Antenna Unit (SK-350/DU)
	CEA102M16L	C306	CEA102M25L	C306
	CEA471M16L	C318	CEA471M25L	C318
	CEA221M16L	C336	CEA221M25L	C336
	CQMA183K50	C803, C804	CQMA273K50	C803, C804


### Main P.C. Board (SK-300)





SK-300/D, DP			SK-300/DU, KC	
Mark	Part No.	Description	Part No.	Description
★ ★	2SD468	Q304	2SC1383	Q304
	HTX-142	L2 Antenna Unit	HTX-143	L2 Antenna Unit (SK-300/DU)
	CEA102M16L	C307	CEA102M25L	C307
	CEA471M16L	C324	CEA471M25L	C324
	CEA101M16L	C325	CEA101M25L	C325
	CQMA183K50	C803, C804	CQMA273K50	C803, C804

### Miscellaneous Parts List


SK-350, 300/D, DP			SK-350, 300/DU, KC	
Mark	Part No.	Description	Part No.	Description
△ ★	HTT-171	Power Transformer	HTT-174	Power Transformer (SK-350/KC, SK-300/KC)
★ ★	HSD-128	S2 Switch (Voltege Selector)	—	Deleted (SK-350/KC, SK-300/KC)


# SCHEMATIC CIRCUIT DIAGRAM (SK-350)

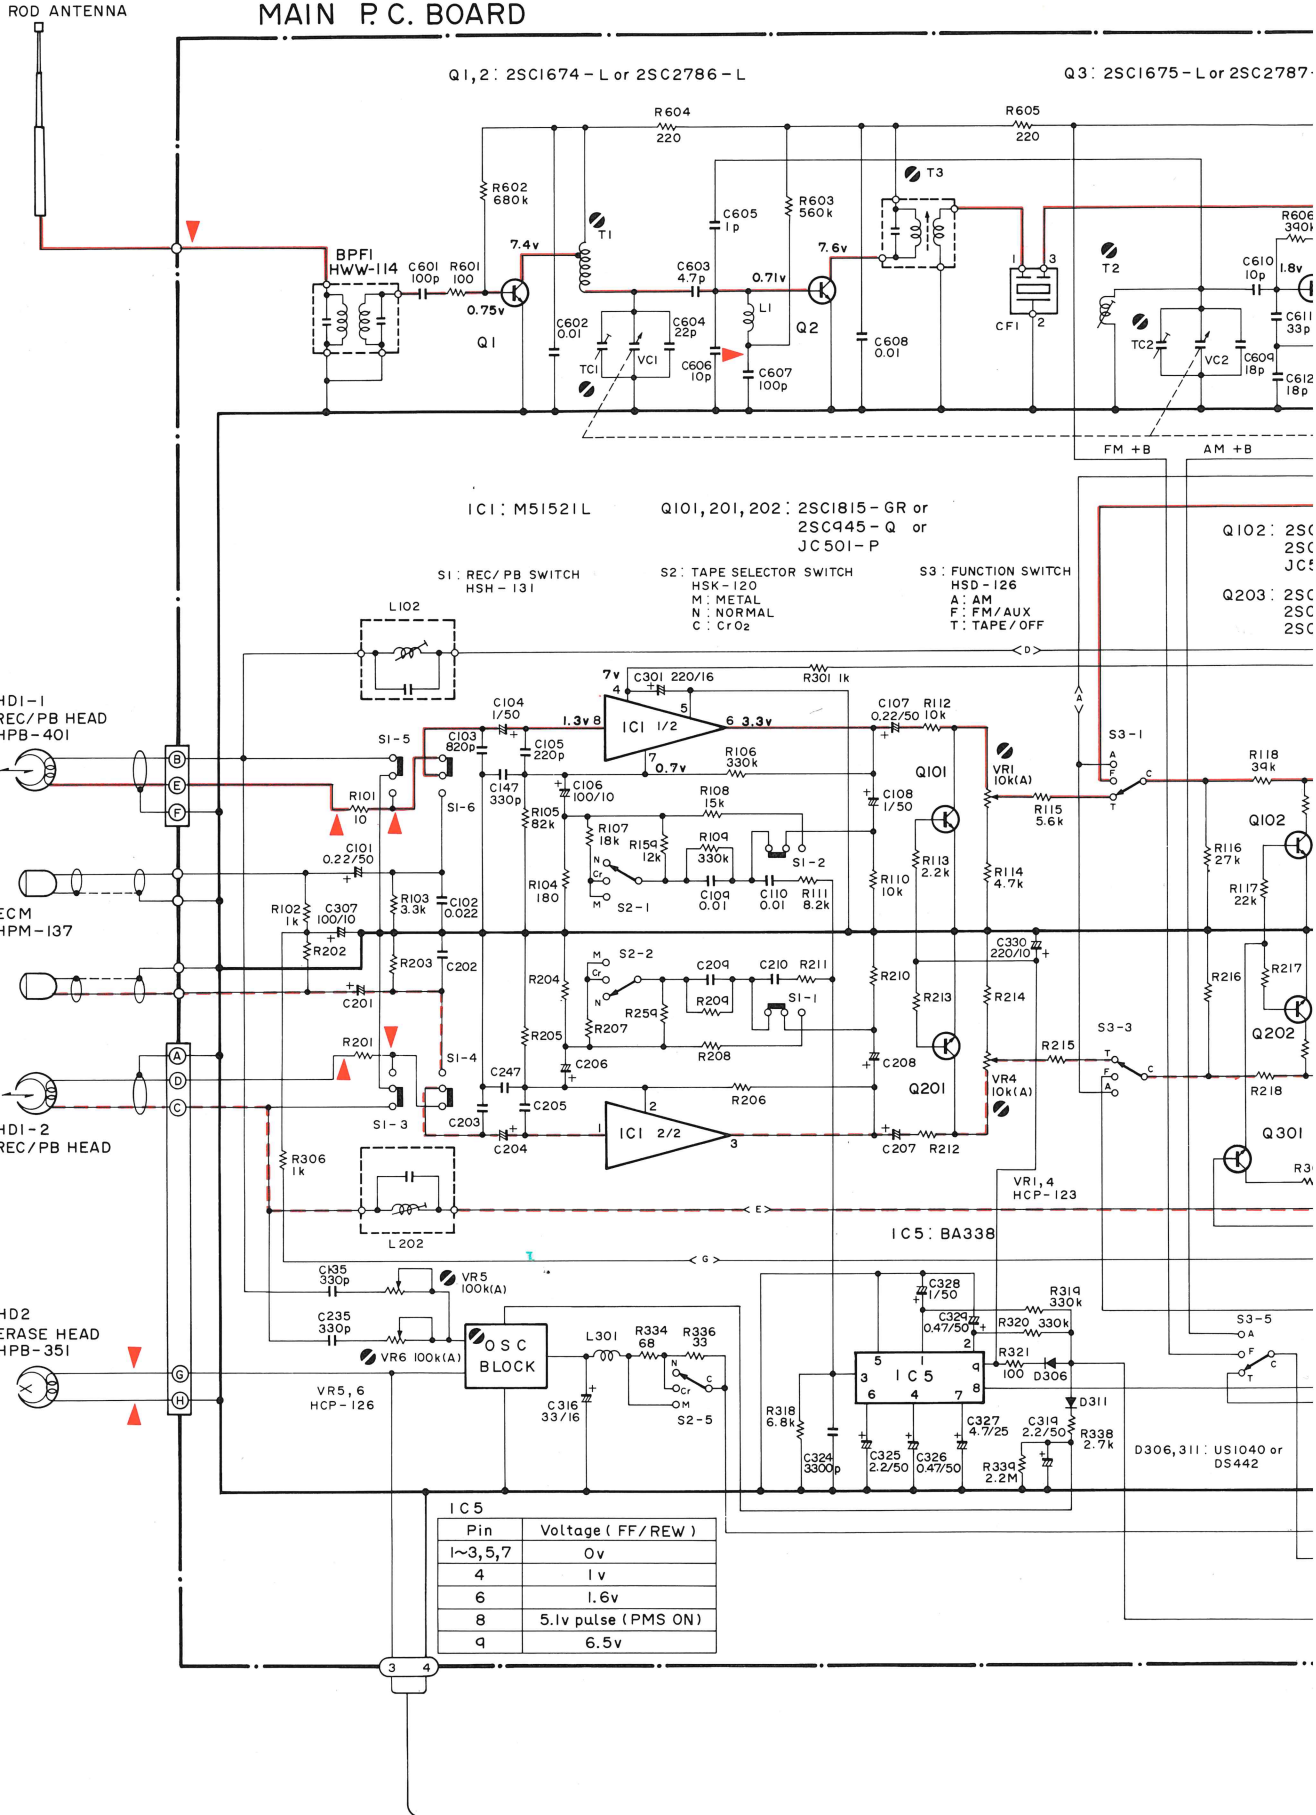

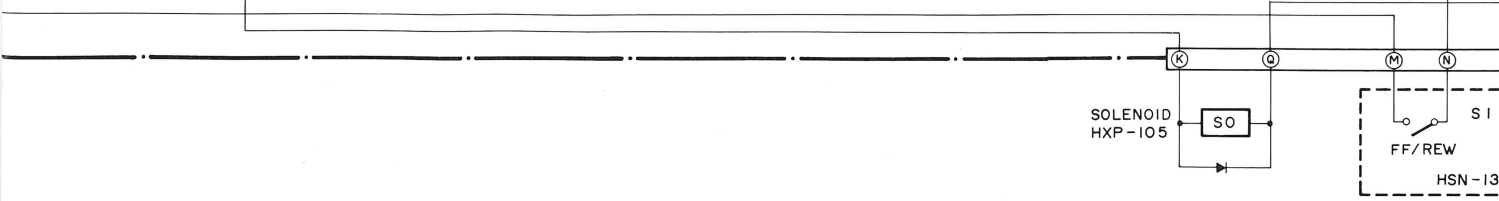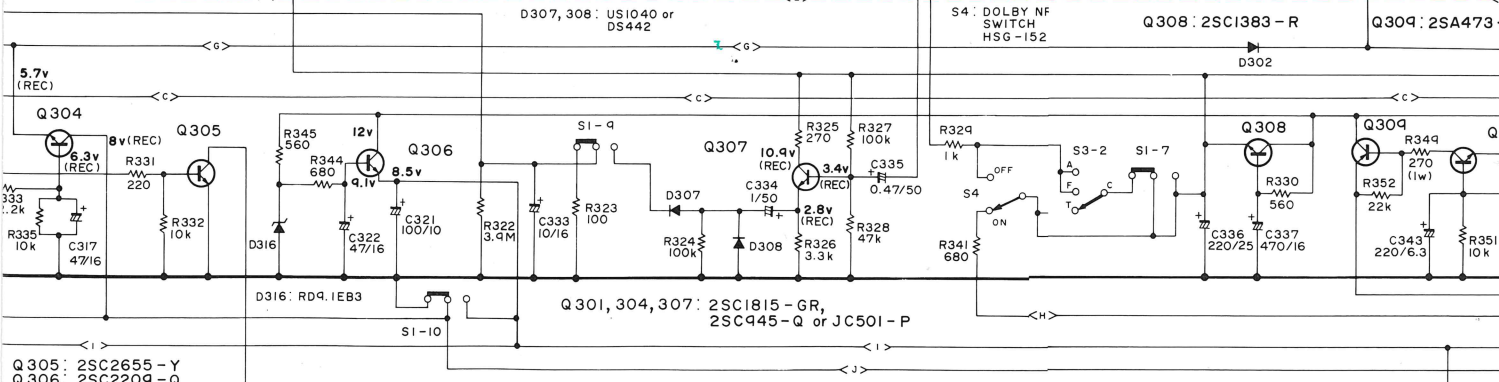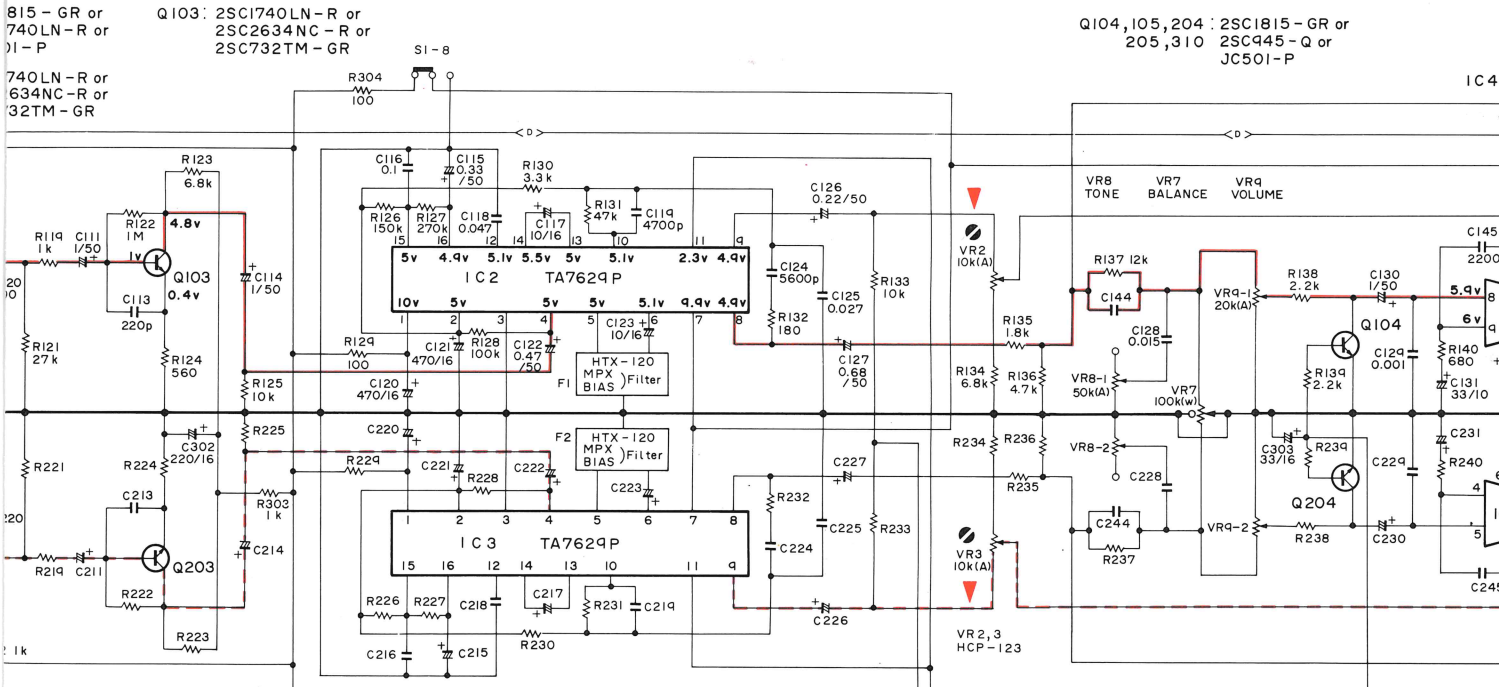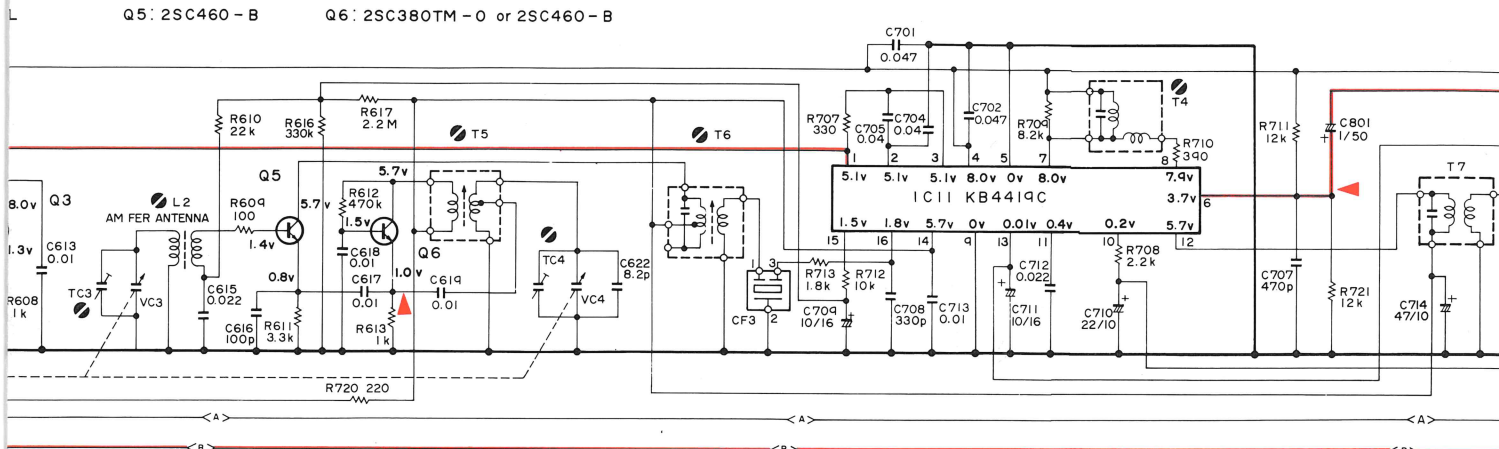

LED P.C. BOARD

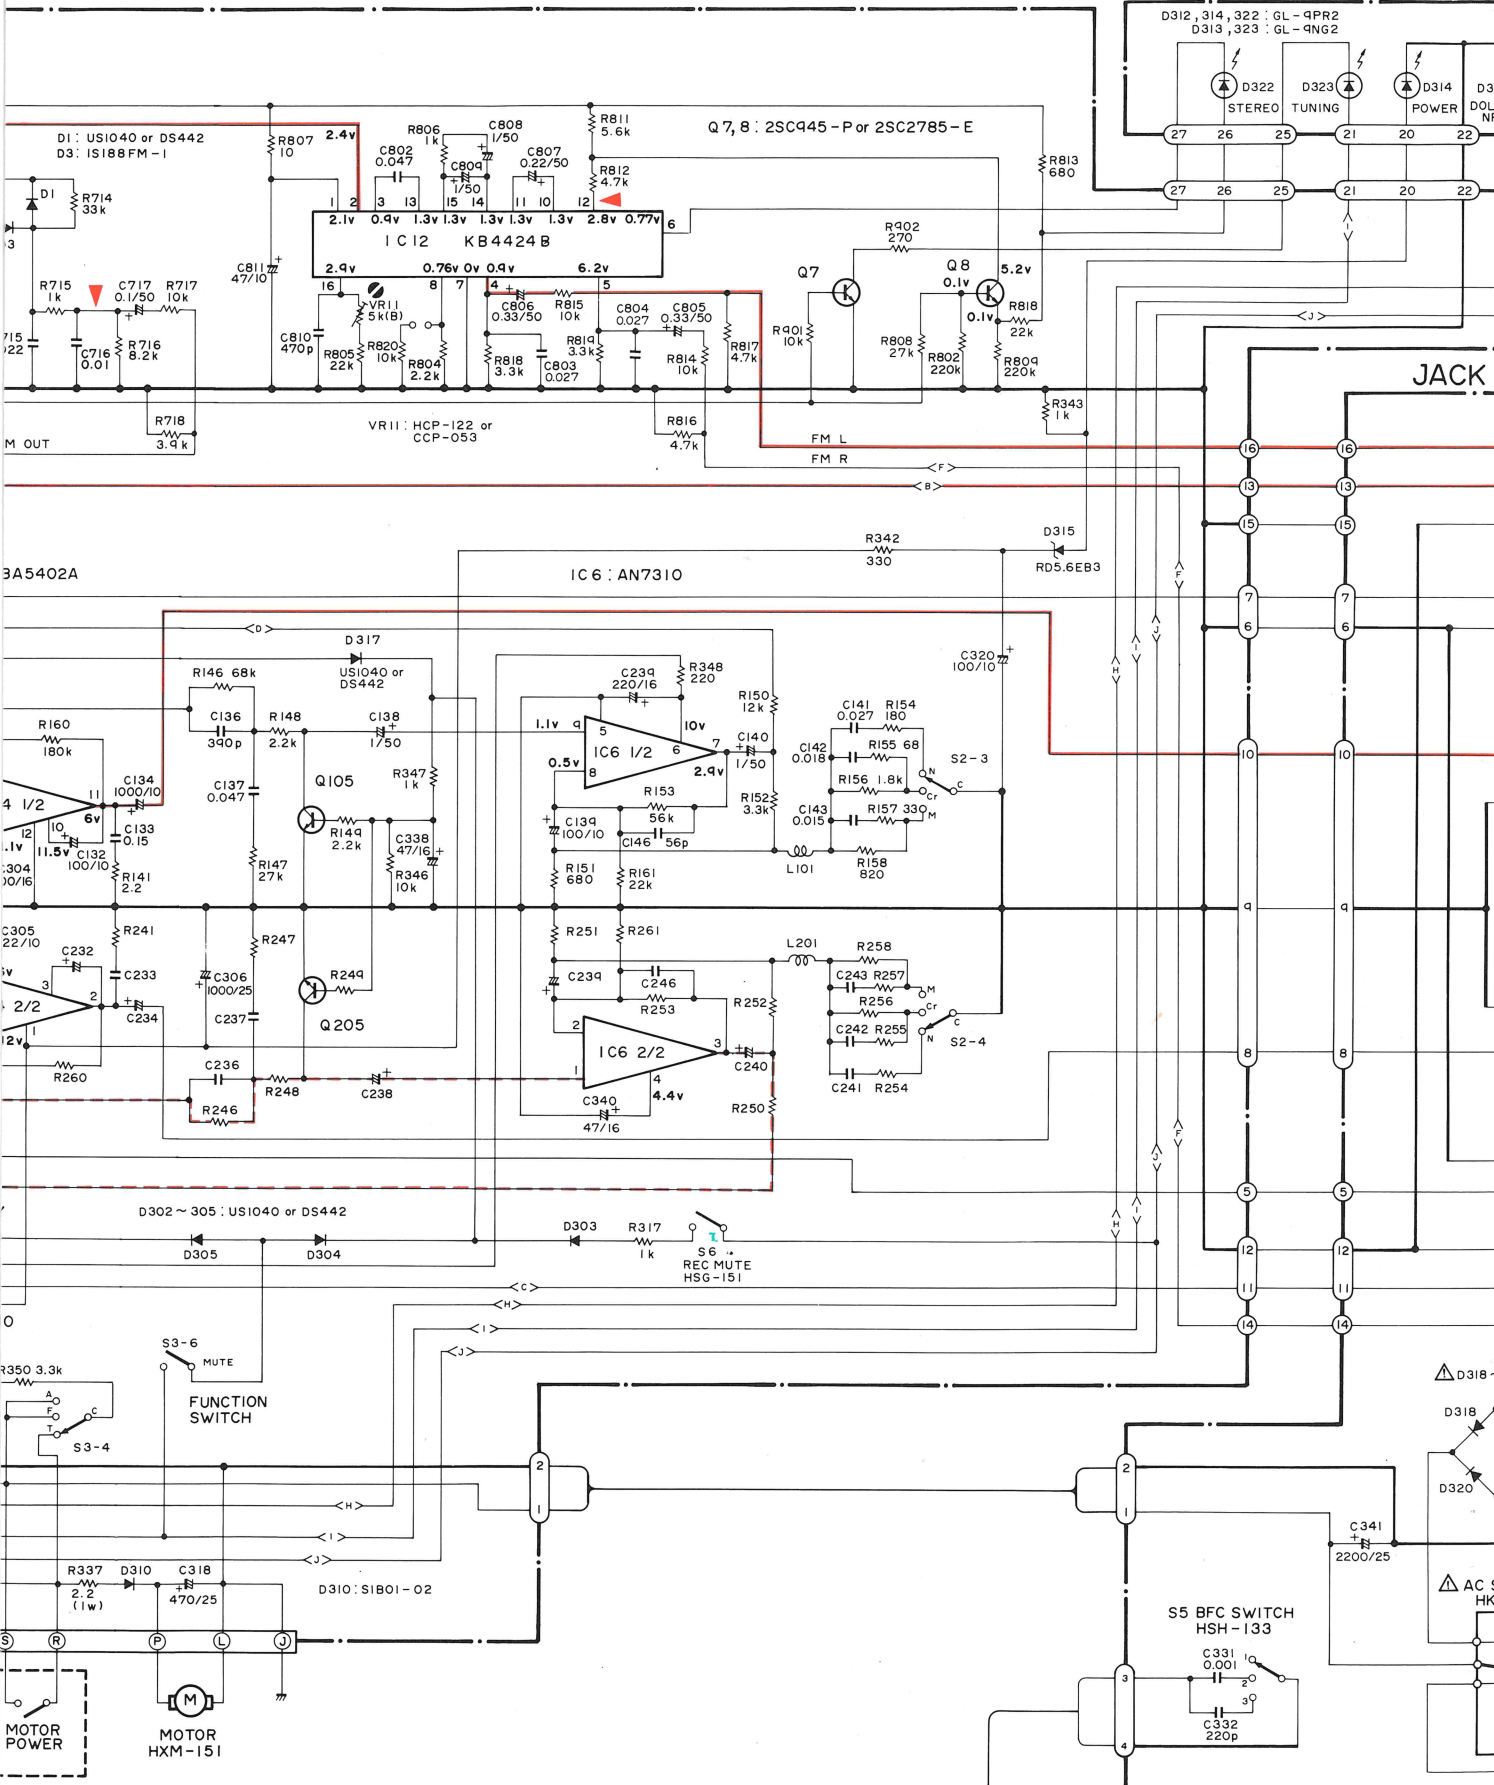

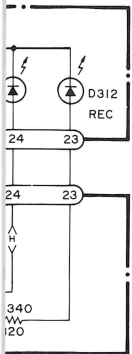

- SWITCHES :
- ⊙ MAIN P.C. BOARD
    - S1 : REC / PB SWITCH ..... REC-PB
    - S2 : TAPE SELECTOR ..... METAL-CrO<sub>2</sub>-NORM SWITCH
    - S3 : FUNCTION SWITCH ..... AM-FM/AUX-TAPE/OFF
    - S4 : DOLBY NR SWITCH ..... ON-OFF
    - S6 : REC MUTE SWITCH ..... ON-OFF
  - ⊙ JACK P.C. BOARD
    - S5 : BFC SWITCH ..... 1-2-3
  - ⊙ MISCELLANEOUS
    - S1 : FF/REW SWITCH ..... ON-OFF
    - MOTOR POWER ..... ON-OFF SWITCH
    - S2 : VOLTAGE SELECTOR ..... 240v-220v-120v SWITCH (DU MODEL)

The underlined indicates the switch position.

P.C. BOARD

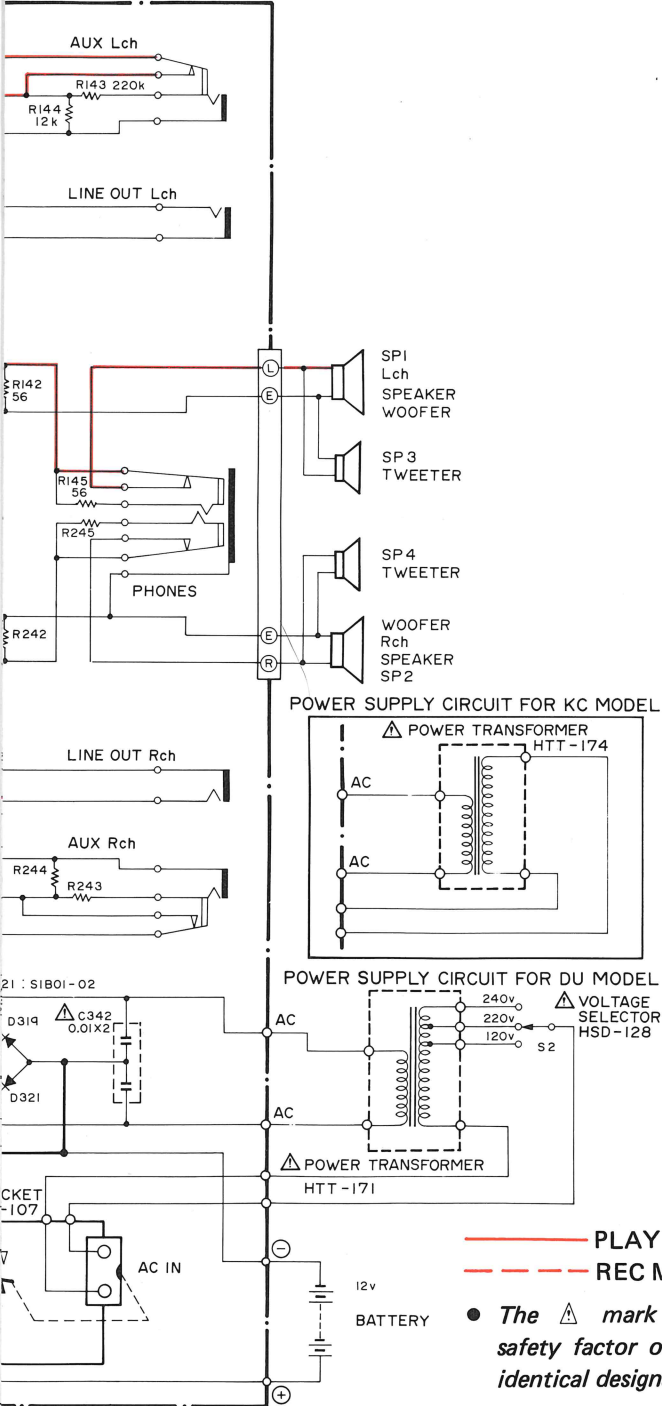


Fig. 1

— PLAY MODE  
 - - - REC MODE

● The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

A

B

C



D







2787-L

Q5: 2SC460-B

Q6: 2SC380TM-0 or 2SC460-B

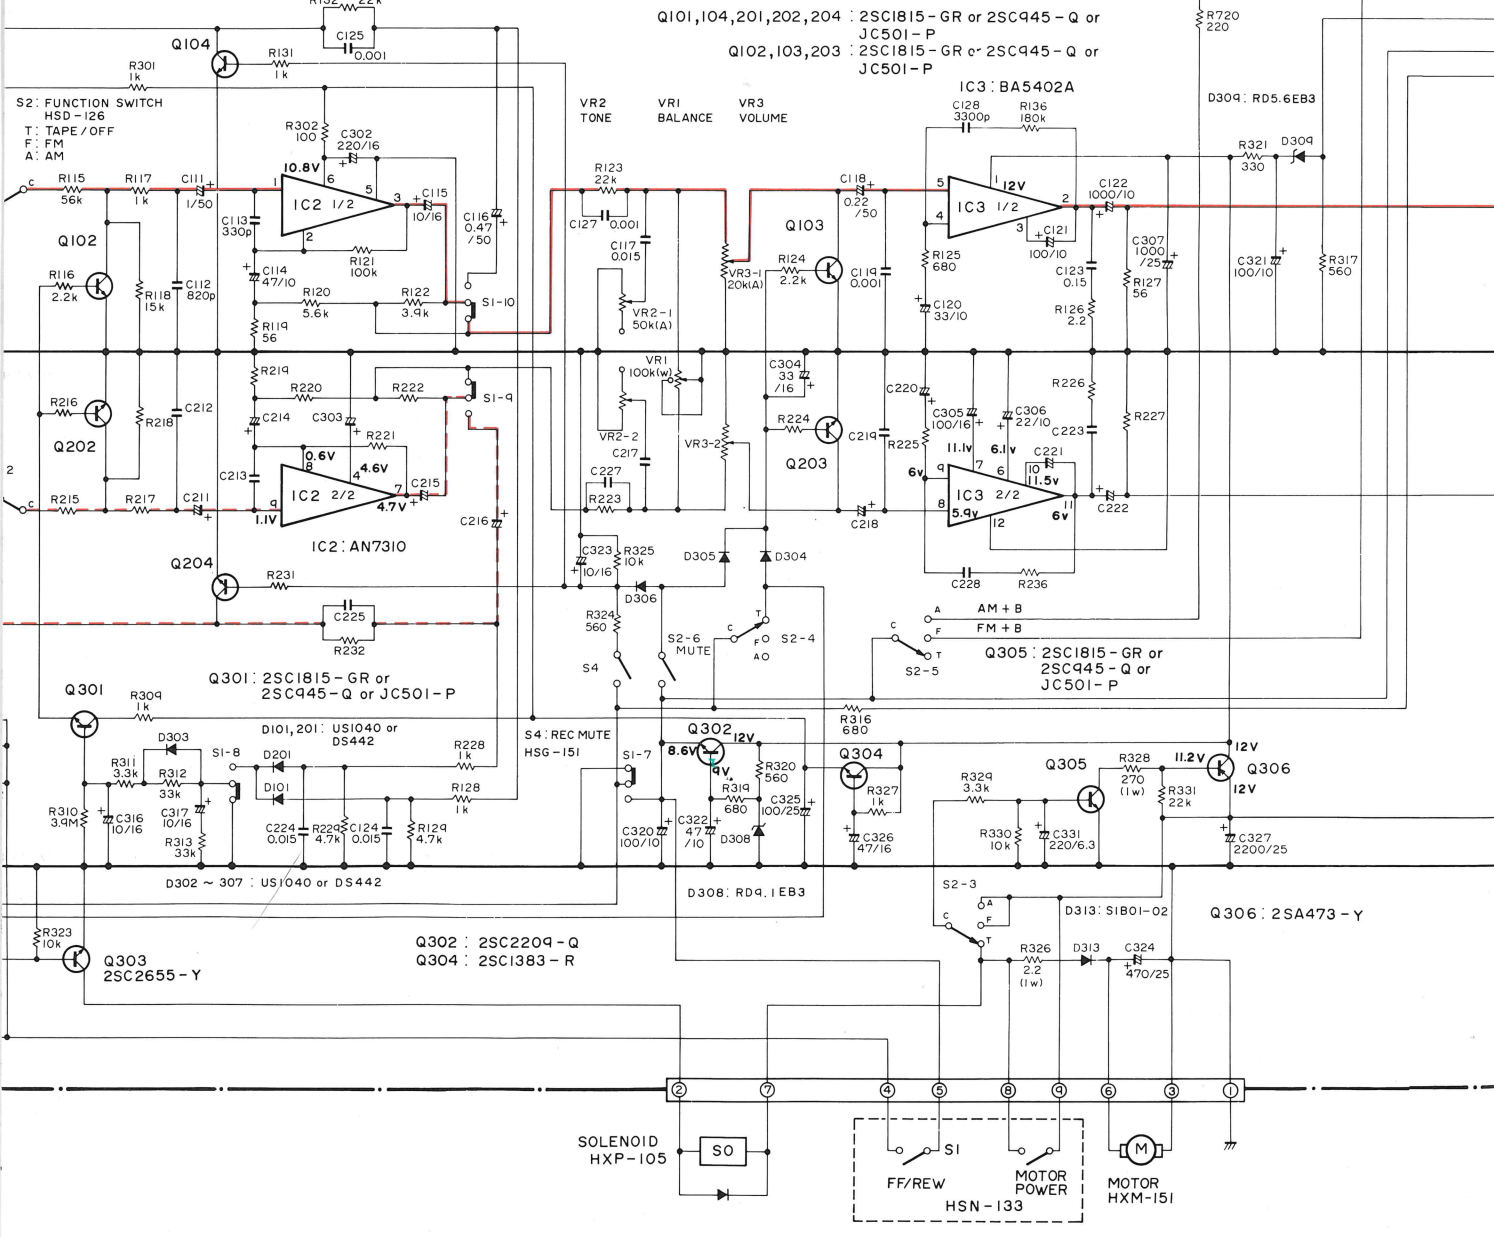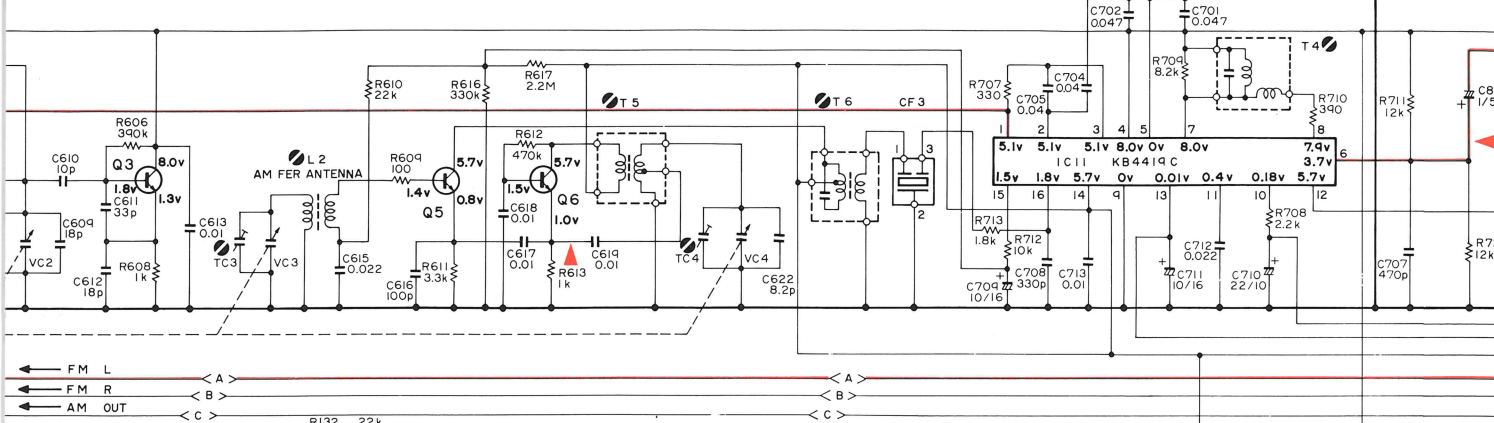

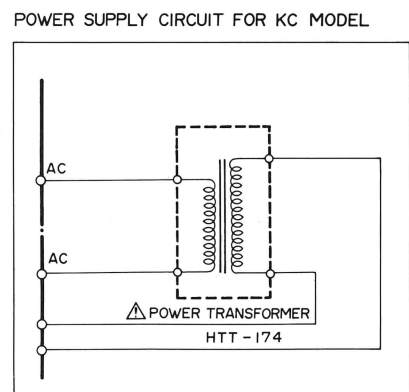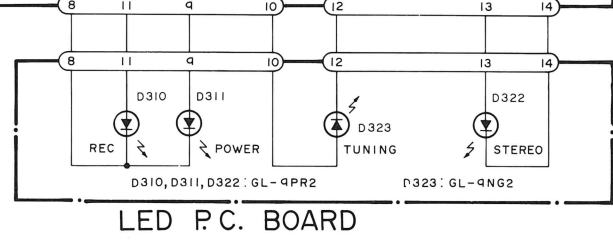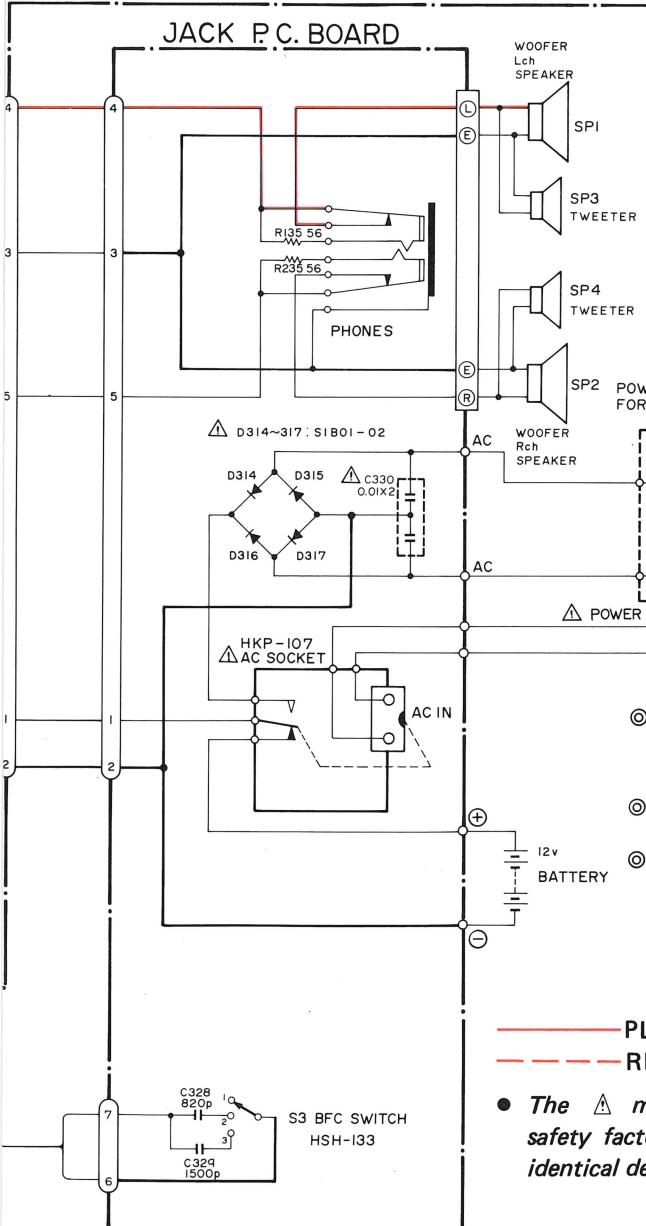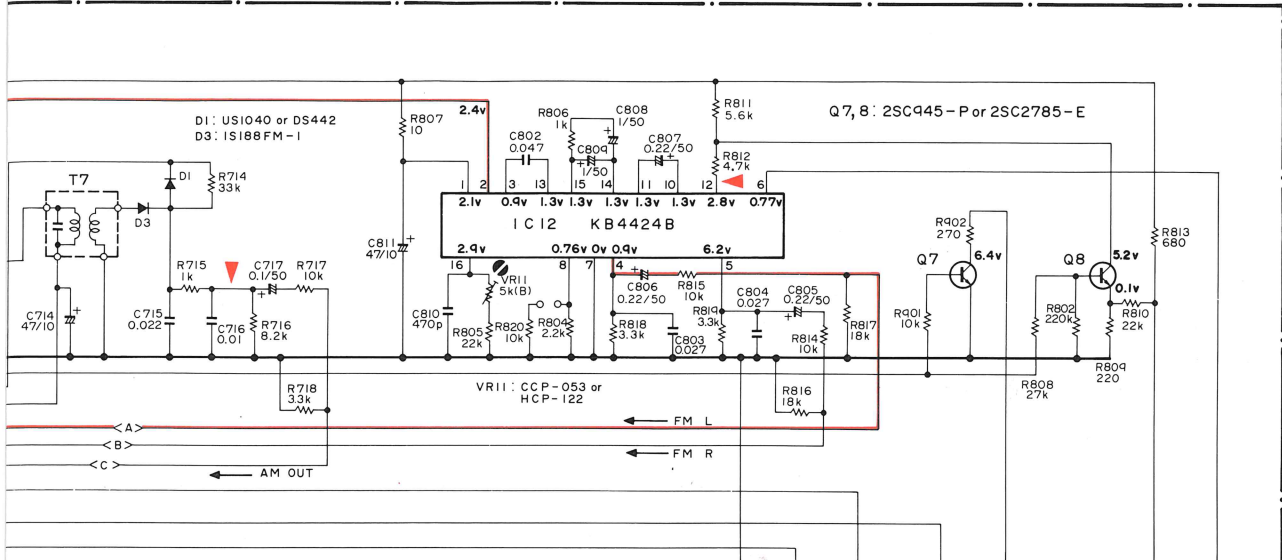

- SWITCHES:
- ⊙ MAIN P.C. BOARD
    - S1 : REC/PB SWITCH ..... REC - PB
    - S2 : FUNCTION SWITCH ..... AM - FM - TAPE / OFF
    - S4 : REC MUTE SWITCH ..... ON - OFF
  - ⊙ JACK P.C. BOARD
    - S3 : BFC SWITCH ..... 1 - 2 - 3
  - ⊙ MISCELLANEOUS
    - S1 : FF/REW SWITCH ..... ON - OFF
    - MOTOR POWER SWITCH ..... ON - OFF
    - S2 : VOLTAGE SELECTOR SWITCH ..... 240v - 220v - 120v (DU MODEL)

The underlined indicates the switch position.

— PLAY MODE  
 - - - REC MODE

● The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Fig.2

# EXPLODED VIEW

## EXPLODED VIEW

### Cabinet (SK-350)

SK-350/D, DP				SK-350/DU, KC	
Mark	No.	Part No.	Description	Part No.	Description
★	14.	HXA-875	Front Case Assy	HXA-886	Front Case Assy (SK-350/DU)
★	39.	HNS-572	Rear Case	HNS-582	Rear Case (SK-350/DU)
				HNS-580	Rear Case (SK-350/KC)

### Chassis (SK-350)

SK-350/D, DP				SK-350/DU, KC	
Mark	No.	Part No.	Description	Part No.	Description
	42.	HWX-406	P.C. Board Unit	HWX-405	P.C. Board Unit
△ ★ ★	43.	HSD-128	Switch (Voltage Selector)	—	Deleted (SK-350/KC)
	44.	BNC30P120FMC	Screw	—	Deleted (SK-350/KC)
△ ★	46.	HTT-171	Power Transformer	HTT-174	Power Transformer (SK-350/KC)
	51.	HTX-142	Antenna Unit	HTX-143	Antenna Unit (SK-350/DU)
	52.	HNS-572	Rear Case	HNS-582	Rear Case (SK-350/DU)
				HNS-580	Rear Case (SK-350/KC)
△				CNV-863	AC Cap [AC Socket]
△				HNV-536	Cover (SK-350/DU)
					[Voltage Selector]

### Cabinet (SK-300)

SK-300/D, DP				SK-300/DU, KC	
Mark	No.	Part No.	Description	Part No.	Description
★	14.	HXA-874	Front Case Assy	HXA-885	Front Case Assy (SK-300/DU)
★	35.	HNS-563	Rear Case	HNS-581	Rear Case (SK-300/DU)
				HNS-579	Rear Case (SK-300/KC)

### Chassis (SK-300)

SK-300/D, DP				SK-300/DU, KC	
Mark	No.	Part No.	Description	Part No.	Description
	35.	HWX-408	P.C. Board Unit	HWX-407	P.C. Board Unit
△ ★ ★	36.	HSD-128	Switch (Voltage Selector)	—	Deleted (SK-300/KC)
	37.	BNC30P120FMC	Screw	—	Deleted (SK-300/KC)
△ ★	38.	HTT-171	Power Transformer	HTT-174	Power Transformer (SK-300/KC)
	44.	HTX-142	Antenna Unit	HTX-143	Antenna Unit (SK-300/DU)
★	45.	HNS-563	Rear Case	HNS-581	Rear Case (SK-300/DU)
				HNS-579	Rear Case (SK-300/KC)
△				CNV-863	AC Cap [AC Socket]
△				HNV-536	Cover (SK-300/DU)
					[Voltage Selector]

# PACKING METHOD

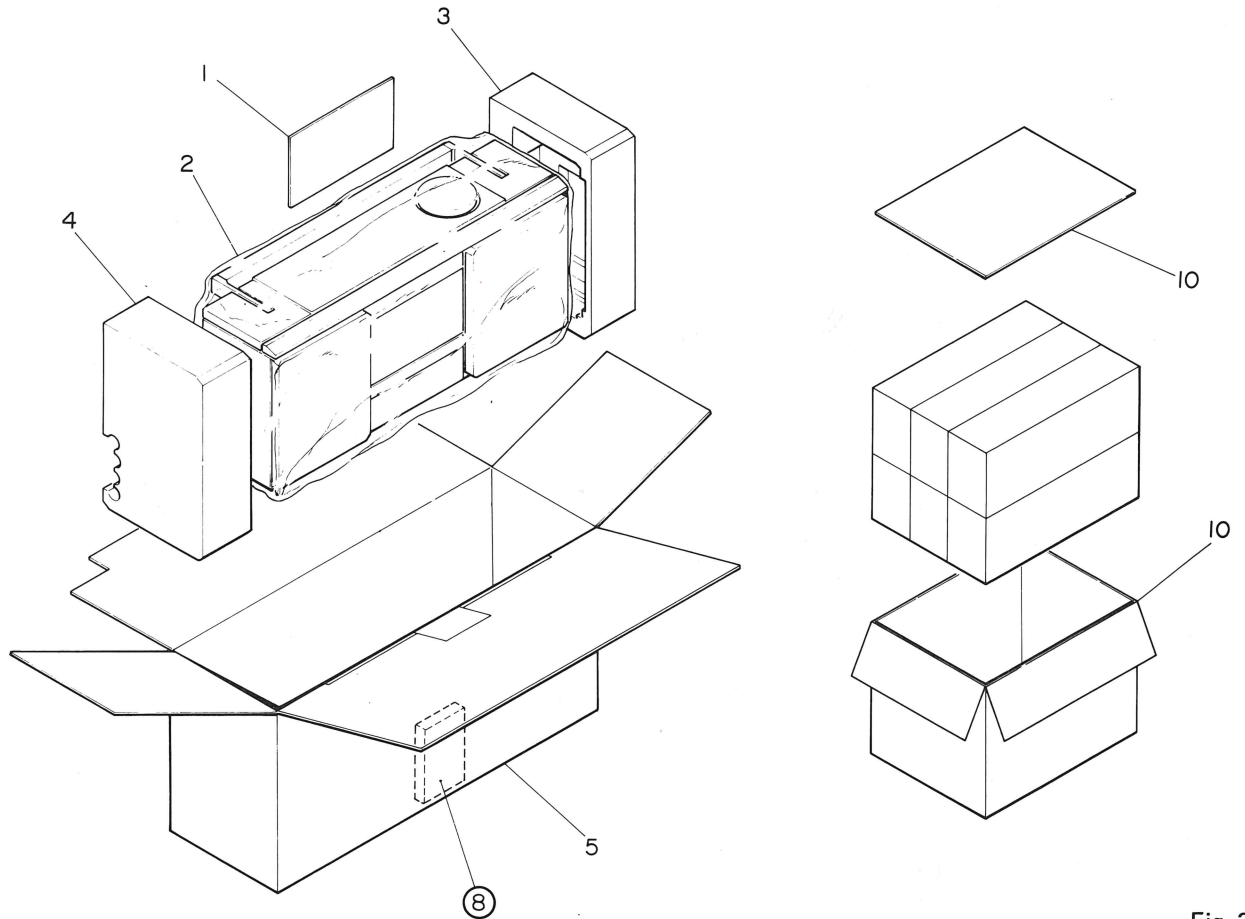


Fig. 3

## ● Parts List

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	HRB-190	Owner's Manual (SK-350/DU, KC) (English)		3.	HHA-634	Styrofoam
		HRB-191	Owner's Manual (SK-350/KC) (French)		4.	HHA-633	Styrofoam
		HRB-188	Owner's Manual (SK-300/DU, KC) (English)		5.	HHA-639	Carton (SK-350/DU)
		HRB-189	Owner's Manual (SK-300/KC) (French)			HHA-643	Carton (SK-350/KC)
		CDG-029	AC Cord			HHA-637	Carton (SK-300/DU)
			Card (SK-350/DU, SK-300/DU)			HHA-641	Carton (SK-300/KC)
			Card (SK-350/KC, SK-300/KC)		6.	VACANT	
	2.	HEG-151	Cover		7.	VACANT	
					8.		Styrofoam
					9.	VACANT	
					10.	HHA-638	Contain Box (SK-350/DU)
						HHA-636	Contain Box (SK-300/DU)

