


SAMSUNG

Television Video Cassette Recorder

Chassis : C17A (TS-10)
Model : TB20A54X/XSA
TB20A54X/RAD
TF20P1D4S/XEF
TX20P1F4X/XEC
TX14P14X/XEC

SERVICE *Manual*

Television Video Cassette Recorder

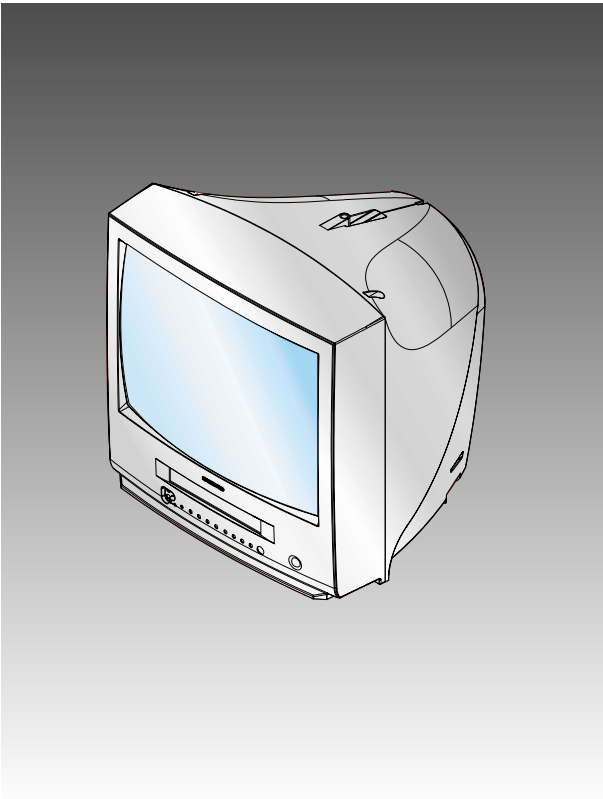

CONTENTS

1. Precautions
2. Specifications
3. Disassembly and Reassembly
4. Alignment and Adjustment
5. Troubleshooting
6. Exploded View and Parts List
7. Electrical Parts List
8. Block Diagram
9. Wiring Diagram
10. Schematic Diagrams



ELECTRONICS