


SAMSUNG

Television Video Cassette Recorder

Chassis : C17A (TS-10)
Model : TX20P1DF4X/XET
TW14P1F4X/XEH
TX14P7F4X/XEC
TX14P7F4X/XET

SERVICE *Manual*

Television Video Cassette Recorder

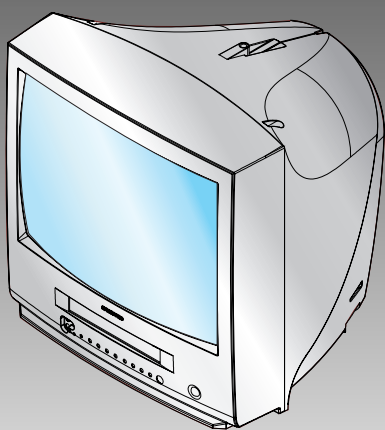

CONTENTS

1. Precautions
2. Specifications
3. Disassembly and Reassembly
4. Alignment and Adjustment
5. Troubleshooting
6. Exploded View and Parts List
7. Electrical Parts List
8. Block Diagram
9. Wiring Diagram
10. Schematic Diagrams



ELECTRONICS