



SERVICE MANUAL

SV-425G/425B/425I/425X/C30G/SVR-425/121/SV-A80G(HCII)



## VIDEO CASSETTE RECORDER

SV-425G/224G/223G

SV-425B/225B/220B

SV-425I/223I

SV-425X/220X

SV-C30G/SV-6C/5C

SV-A80G(HCII)/A70G(HCII)/A11G(HCII)


SV-122G/121G/120G/100G/C12K

SVR-425/423/420/223/220/121/120


# SERVICE Manual

For mechanical disassembly and adjustment, refer to the "Mechanical Manual" (DX-9R → AC68-00001A).

### VIDEO CASSETTE RECORDER

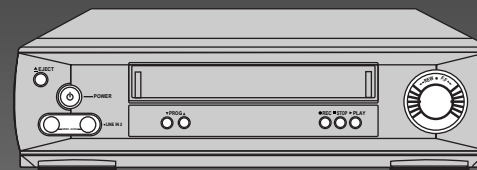

SV-425G/425B/225B/425X/SVR-425/423/SV-A80G(HCII)

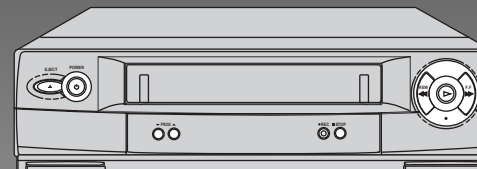

SV-224G/223G/425I/C30G/SVR-420/223/220/SV-A70G(HCII)



SV-220B/220X/122G/100G/C12K/SVR-120/SV-5C



SV-223I/121G/SVR-121/SV-A11G(HCII)/SV-6C

### CONTENTS

1. Precautions
2. Alignment and Adjustment
3. Exploded View and Parts List
4. Electrical Parts List
5. Schematic Diagrams