

FOLKLIG ELDIG



Design and Quality
IKEA of Sweden

CONTENT



Safe operation and special notes	1	Operation steps and adjustment	5
Structure diagram	1	Clean and maintenance	5-6
Main technical data	2	Troubleshooting	6
Installation instruction	2-4	Ikea guarantee	7-8

SAFE OPERATION AND SPECIAL NOTES



1. Check that gas type and gas pressure used is according to the product specifications marked on rating label positioned on the side of the gas stove. Do not use the gas stove if the gas type and pressure is conflicting.
2. Do not use high pressure gas.
3. Keep the kitchen well ventilated when using the gas stove. There should be air entrance holes and openings and exhaust appliance. (Ventilated fan or range hood).
4. Do not touch the burner cap, trivet, surface plate or other hot areas when using to avoid burn injuries.
5. Shut off gas supply, open windows and doors to keep the house ventilated if gas leakage or strange smell is found. Do not use or operate any electrical appliances or electrical switch to avoid accident.
6. If accidental flame out happens during use, turn off knob on stove to avoid leakage.
7. Adults shall be present during usage of gas stove.
8. The gas hose shall be changed yearly to avoid aging and risk causing a gas leakage.
9. Shut off knobs on stove and the valve to gas supply after usage.

STRUCTURE DIAGRAM

FOLKLIG

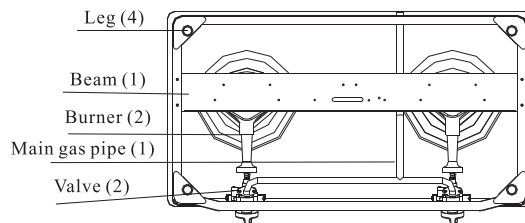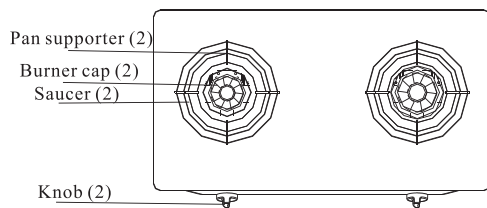

ELDIG

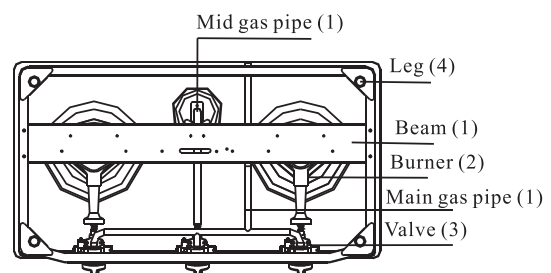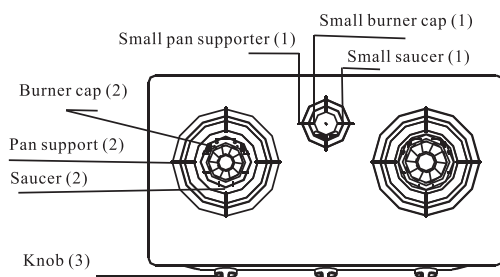

MAIN TECHNICAL DATA


Name	Model No.	Nominal heat input (kcal/h)			Injector size (mm)		
		Left	Mid	Right	Left	Mid	Right
Gas stove	FOLKLIG	1547	----	2407	0.7		0.8/0.36
	ELDIG	2407	644	2407	0.8/0.36	0.48	0.8/0.36
Gas type	LPG						
Gas pressure	2942kN/m ²						

INSTALLATION INSTRUCTION

1. Open the box, take out the polyfoam, and put it on the even ground, remove and abandon the poly bag.



BE CAREFUL WHEN YOU ABANDON THE POLY BAG IF IT IS ACCESSIBLE FOR CHILDREN. IT IS NOT A TOY FOR CHILDREN

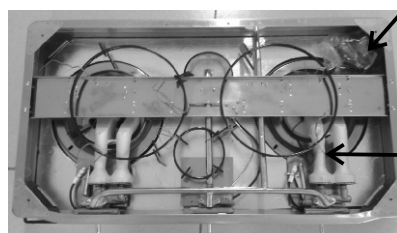

Legs, knob sets and burner caps (for FOLKLIG & ELDIG) bag

release the trivets by unfasten the ties.


2. Take out the gas stove, and put it upside down on the polyfoam, take out the legs, knob sets and burner caps (for FOLKLIG & ELDIG) bag, release the trivets by unfasten the ties.
3. Install four legs on the four square yard by nuts as followings show .



4. Take the stove back to normal position, and install the knob as following steps.



Put the knob base in position, pay attention to the right direction

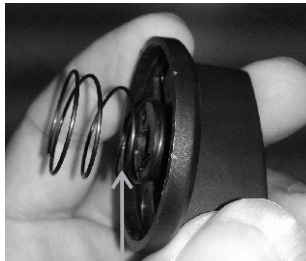

Connect the spring to knob, the small end shall fixed on the knob



Push the knob as arrow shows, and make sure the red direction mark on the knob is match the "OFF" mark on the base

5. Remove the fasten ties on the burner cap, and put the center burner cap on right side burner of item FOLKLIG , put the center burner cap on the mid, both left & right side of ELDIG

6. Put the trivet on right position. After installation, the product will be same as following pictures show:




FOLKLIG




ELDIG

7. Take off the dust proof cap of the gas inlet which located at the back side of the stove , connect the gas pipe to the inlet, then fasten the connection by turning the clamp clockwise.

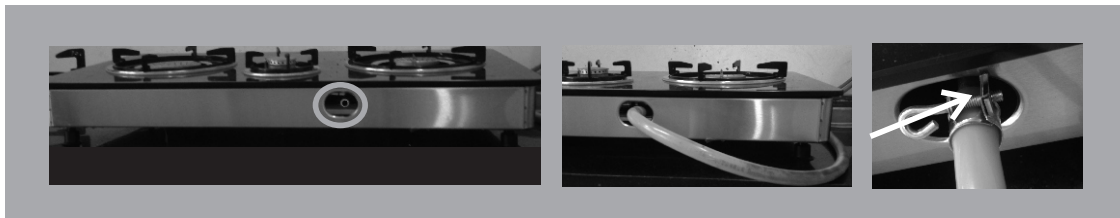


WARNING: MAKE SURE THE SUPPLIED GAS AND PRESSURE IS THE SAME AS LABEL MARKED, DIFFERENT GAS TYPE AND PRESSURE WILL CAUSE SERIOUS RESULT OF BODY INJURY AND FORTUNE DAMAGE, EVEN DEAD.

8. Check leakage, turn the knob to “ off ” position, put soap water on connectors of gas hose, then open the gas valve, bubbles indicate leakage if found. You need to check the gas connection again then re-check the leakage.

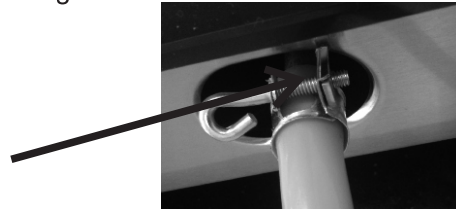


WARNING: LEAKAGE MUST BE CHECKED AT THE FIRST USE, NEVER USE THE STOVE WITHOUT LEAKAGE CHECK.

9. The distance between the products to be put around the stove should be more than 15cm. There should be more than 100cm space above the stove in order to secure room for cooking vapor and installation of range hood.
10. The distance between stove and cylinder should be around 1m, the proper length of inlet gas hose is 1m-2m. One side of the hose connect the cylinder, the other side connect the gas inlet hole of stove, the hose can not contact the stove and thrill through the bottom of the stove, can not bend it forcedly.

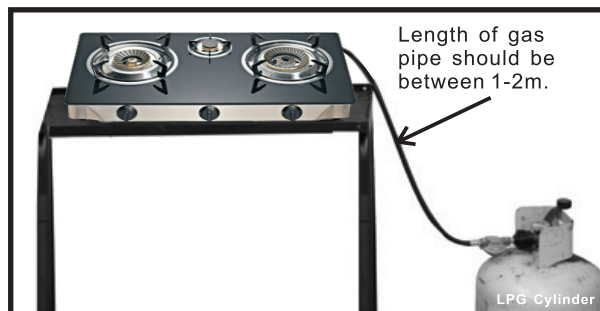


11. Both left and right burner of the stove can be used to heat convex bottom utensils or pans (cookers), proper diameter of convex bottom utensil is 32cm, proper diameter of pan is between 26-30cm, the weight of food should less than 10kg; For 3 burner stove, proper diameter of pan is between 9-12cm for the mid burner, and the weight of food should be less than 1kg, the cooker should be put even not deflected.

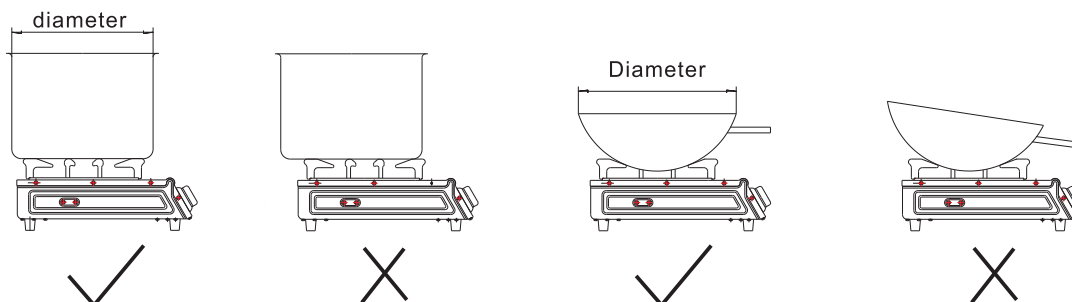

12. It is recommended installing range hood above the stove, and the distance between top of the stove to bottom of range hood is about 700mm.

OPERATION STEPS AND ADJUSTMENT

1. Make sure all knobs on the “off” position, then open the main gas valve.
2. Press the knob down by 3mm as the follow drawing shows, then turn it counter-clockwise until you hear ignition click, ignite the burner, then release the knob. (It may fail to ignite at the first time because of there is air in the hose, you have to repeat this procedure)
3. Adjustment: the flame can be adjusted by turn the knobs slowly. (As drawing 3 shows)

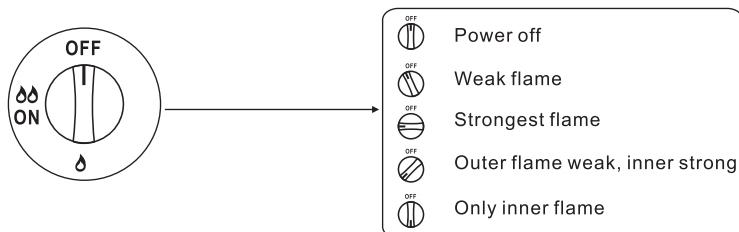


(Drawing 3)

5. Flame out: turn the knobs clockwise to “off” position as drawing 3 shows, the flame will be extinguished, then close the main gas valve.

CLEAN AND MAINTENANCE

1. Surface, trivet and mid/center burner cap maintenance: wipe the glass surface & trivet by wipe the glass surface and trivet with a medium wet dishcloth, then try thoroughly with a dry cloth.

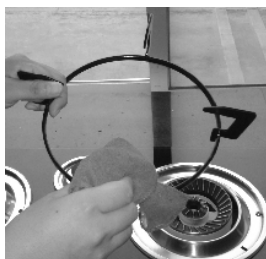

2. Burner cap maintenance: in order to keep good burning condition, it is better to clean the burner cap weekly.

For left and right burner cap, take off the burner cap by hands or nipple plies, clean it by clean it with a medium wet dishcloth, then wash with clean water then wash by clean water, and dry naturally, then put it back to burner.



TROUBLESHOOTING

Trouble phenomenals		Reasons	solutions
Can not ignite		The main gas valve not opened	Open the main gas valve
		Jet blocked	Dredge the jet
		The hose stave or bend	Change the hose or remove bend
		There is air in the hose when change cylinder	Repeat ignition for several times
		Put the saucer in wrong position	Correct the saucer position
Abnormal flame	Red flame	Air humidity and smoke is too big	ordinary phenomenal
	Yellow flame	Some feculence in the hole of burner cap	Clean the burner cap
		The gas in the cylinder is going out	Change the cylinder
	Backfire	Pressure is too low	Check whether there is gas in the cylinder and the valve has been opened or damaged
		Something overflow the hole of burner cap or there is feculence	Clean the burner cap
		Time of burning is too long	Paused and use again after cooling
	flame short	Gas pressure is too low	Check whether there is gas in the cylinder and the valve has been opened or damaged

IKEA WARRANTY

How long is the IKEA warranty valid

This warranty is valid for two (2) years from the original date of purchase of your appliance at IKEA. Proof of purchase is required. If service work is carried out under warranty, this will not extend the warranty period for the appliance

Who will execute the service

Contact nearest IKEA store

What does this warranty cover?

This warranty covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This warranty applies to domestic use only. The exceptions are specified under the headline "what is not covered under this warranty?" Within the warranty period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA

What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this warranty. If considered covered, IKEA will then, at its sole discretion, either repair the defective product, replace it with the same or a comparable product or refund it

What is not covered under this warranty?

Normal wear and tear.

- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental condition.

- Consumable parts including batteries and lamps. Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences.

- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage system or soap drawers.

Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipe, seals, lamps and lamp covers, screen, knobs, casings and parts of casting. Unless such damages can be provided to have been caused by production faults.

- Repairs not carried out by our appointed service provider and/or an authorized service contractual partner or where non-original parts have been used.
- Repair caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this warranty, the appliance Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

How country law applies

The IKEA warranty gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

The IKEA warranty applies only to products purchased and installed in India

An obligation to carry out service in the framework of the warranty exists only if the appliance complies and is installed in accordance with:

- The technical specifications of the country in which the warranty claim is made.
- The assembly Instruction and User Manual Safety information

AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this guarantee
- ask for clarification on the functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us

How to reach us if you need our service



1800-419-4532

Opening time

10.00 – 22.00

The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request

In order to provide you a quick service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.

SAVE THIS PROOF OF PURCHASE!

It requires for the warranty to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

