 


TOSHIBA

Color Television

OWNER'S MANUAL

CE32G15 / CE36G18

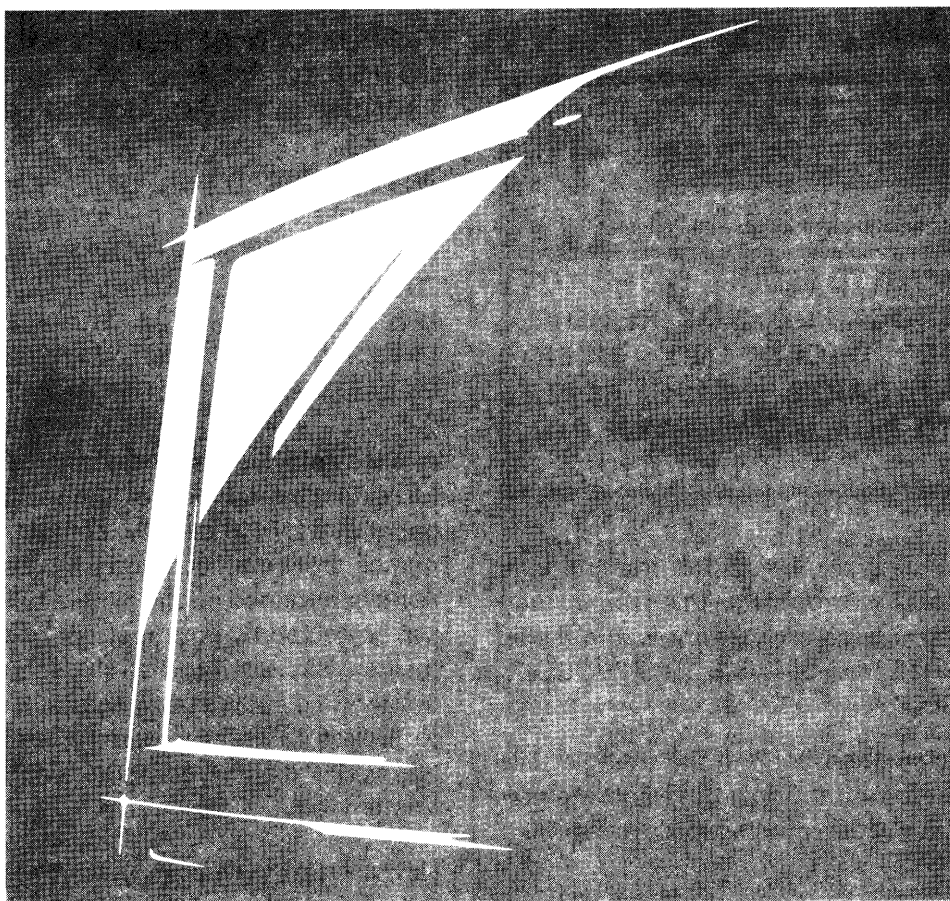

SET UP

PREPARATION

BASIC OPERATION

ADVANCED
OPERATION

EQUIPMENT
CONNECTIONS

REFERENCE
SECTION

Dear Customer

Congratulations! You have purchased one of the finest Color TV's on the market!

This manual will help you use the many exciting and useful features to make your TV viewing more enjoyable than ever before.

Before operating your TV set, please read all these safety and operating instructions completely and then retain for future reference.

Customer's Record

You will find the model number and serial number on the back of your TV set.

Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

 
Model Number _____

Serial Number _____

Safety Precautions

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

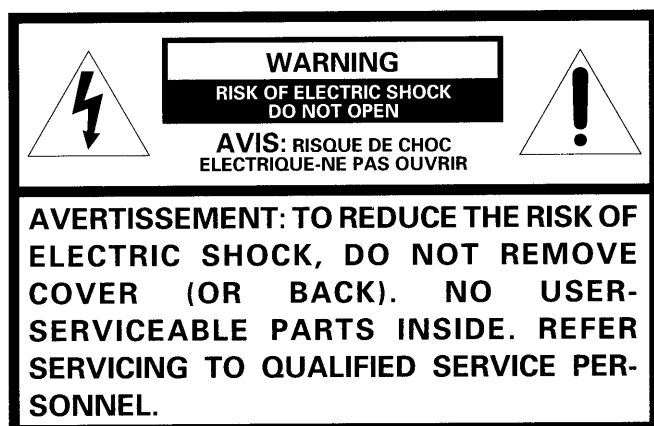

The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock. **DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.**



The exclamation point in the triangle tells you that important operating and maintenance instructions follow this symbol.

This TV set may be used only with TOSHIBA stand shown on page 32. Use with other stands may result in instability causing possible injury.

CAUTIONS:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE PRONGS CAN BE FULLY INSERTED INTO THE OUTLET TO PREVENT ANY EXPOSURE OF THE PRONGS ON THE POLARIZED PLUG.

ATTENTION:

POUR PRÉVENIR LES CHOCS ÉLECTRIQUES, NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉS À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

Avoid displaying stationary images on your TV screen for extended periods of time. Stationary patterns generated by PIP display, computer displays, video games, stock market reports, etc. can become permanently engrained on the picture tube. This damage is not protected by your warranty as it is the result of misuse. Should you wish to use your TOSHIBA Television to display still images, it is always advisable to reduce brightness and contrast settings. Never leave a PIP display, computer or video game display unattended.

NOTE TO CATV SYSTEM INSTALLER IN THE USA:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of Contents

Set Up

Installing Your TV Set	3
Antenna/Cable TV Connection	4

Preparation

Location of Controls (TV Set)	5
Location of Controls (Remote Control)	6
Before Using the Remote Control	7
Using the Remote with VCR or Cable TV Converter	8
Programming the Remote Control	9
Menu Function (General Instructions)	12
Programming Channel Memory	13

Basic Operation

Watching TV Programs	15
Convenient Remote Functions	16
Selecting Stereo/SAP Broadcasts	18

Advanced Operation

Adjusting the Picture	20
Adjusting the Sound	21
Watching Picture-in-Picture	22
Using Closed-Captioned Function	24
Locking Channels	26
Programming Your Favorite Channels	28
Changing On-Screen Display Language	29

Equipment Connections

Connecting a VCR	30
Connecting an Audio Amplifier	31

Reference Section

Cleaning and Care	32
Specifications	32
Before Calling Service Personnel	33
Limited United States Warranty	34

Installing Your TV Set

Where to install

Place the TV on the floor or on a sturdy platform. The mounting surface should be flat and steady.

Lighting

Do not place the TV in a room where direct lighting strikes the screen. Use soft and indirect lighting.

Air circulation

Place the TV far enough from the walls to allow proper ventilation. This will prevent the TV from overheating and avoid possible damage to the TV. Avoid dusty places too.

Power supply

Plug into an electrical outlet with standard household power (120 volt AC, 60Hz). Do not change the plug's safety prong. See the right column.

 
WARNING : TO AVOID PERSONAL INJURY

- Do not stand or climb on the TV.
- Do not put a VCR or any heavy object on top of the TV.

CAUTION :

As a safety feature, the plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. If the plug will not fit either way, the outlet is probably old and non-standard.


You will need to have a new outlet installed by an electrician. **DO NOT CHANGE THE SAFETY FEATURE OF THE PLUG.**

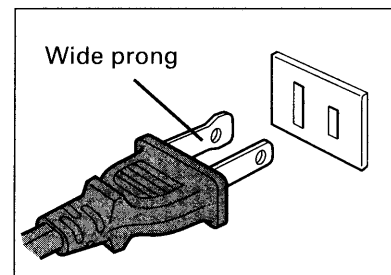


Antenna/Cable TV Connection

You can use either an indoor or outdoor antenna to receive VHF and/or UHF channels. Channels 2 - 13 are VHF channels, and channels 14 - 69 are UHF channels. We recommend using an outdoor antenna for better picture quality. You can receive Cable TV by connecting a cable supplied by your local cable company.

 To connect an antenna or Cable without a decoder box

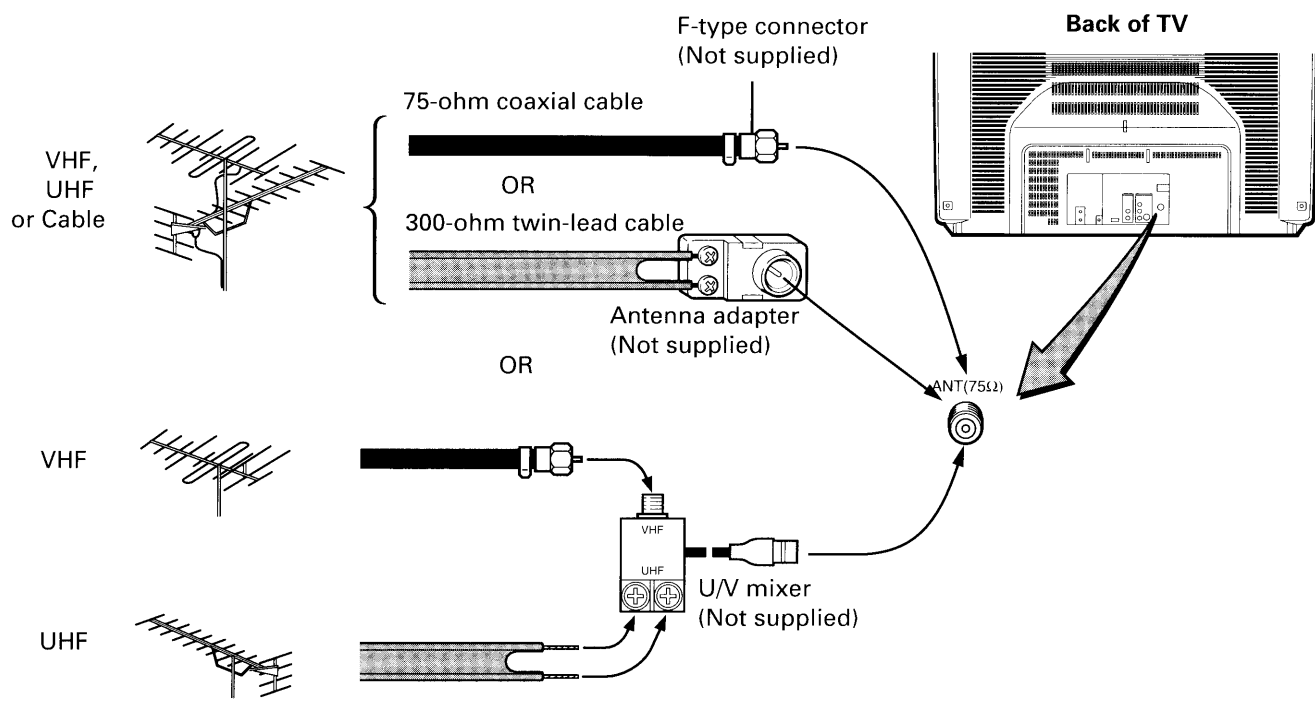


To connect Cable with a decoder box

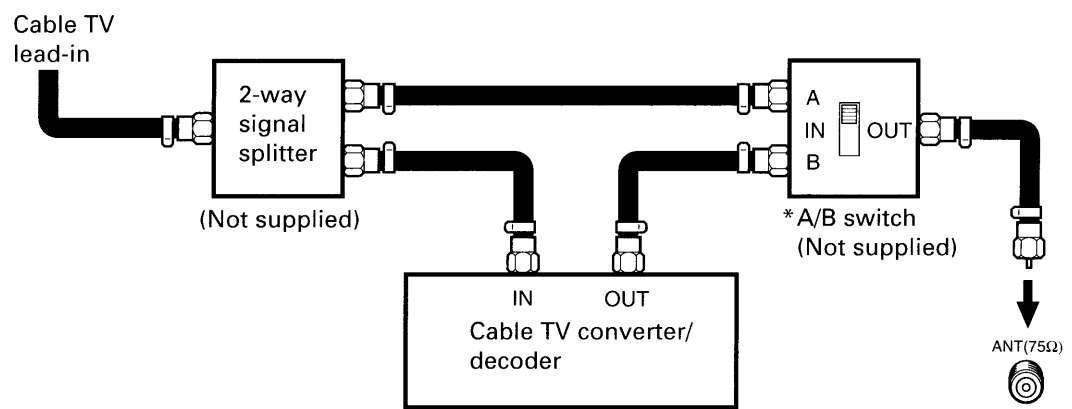 

- Notes:**
- * "A" position on the A/B switch allows you to select unscrambled channels using the TV's channel keys.
 - "B" position allows you to select scrambled channels via the converter/decoder box using the converter's channel keys. Place your TV on channel 3 or 4 to match the converter's output channel.
 - If you use a VCR, connect its antenna in/out between the decoder box and A/B switch.

Location of Controls (TV Set)

 For specific use of each control, consult the corresponding page numbers in brackets.

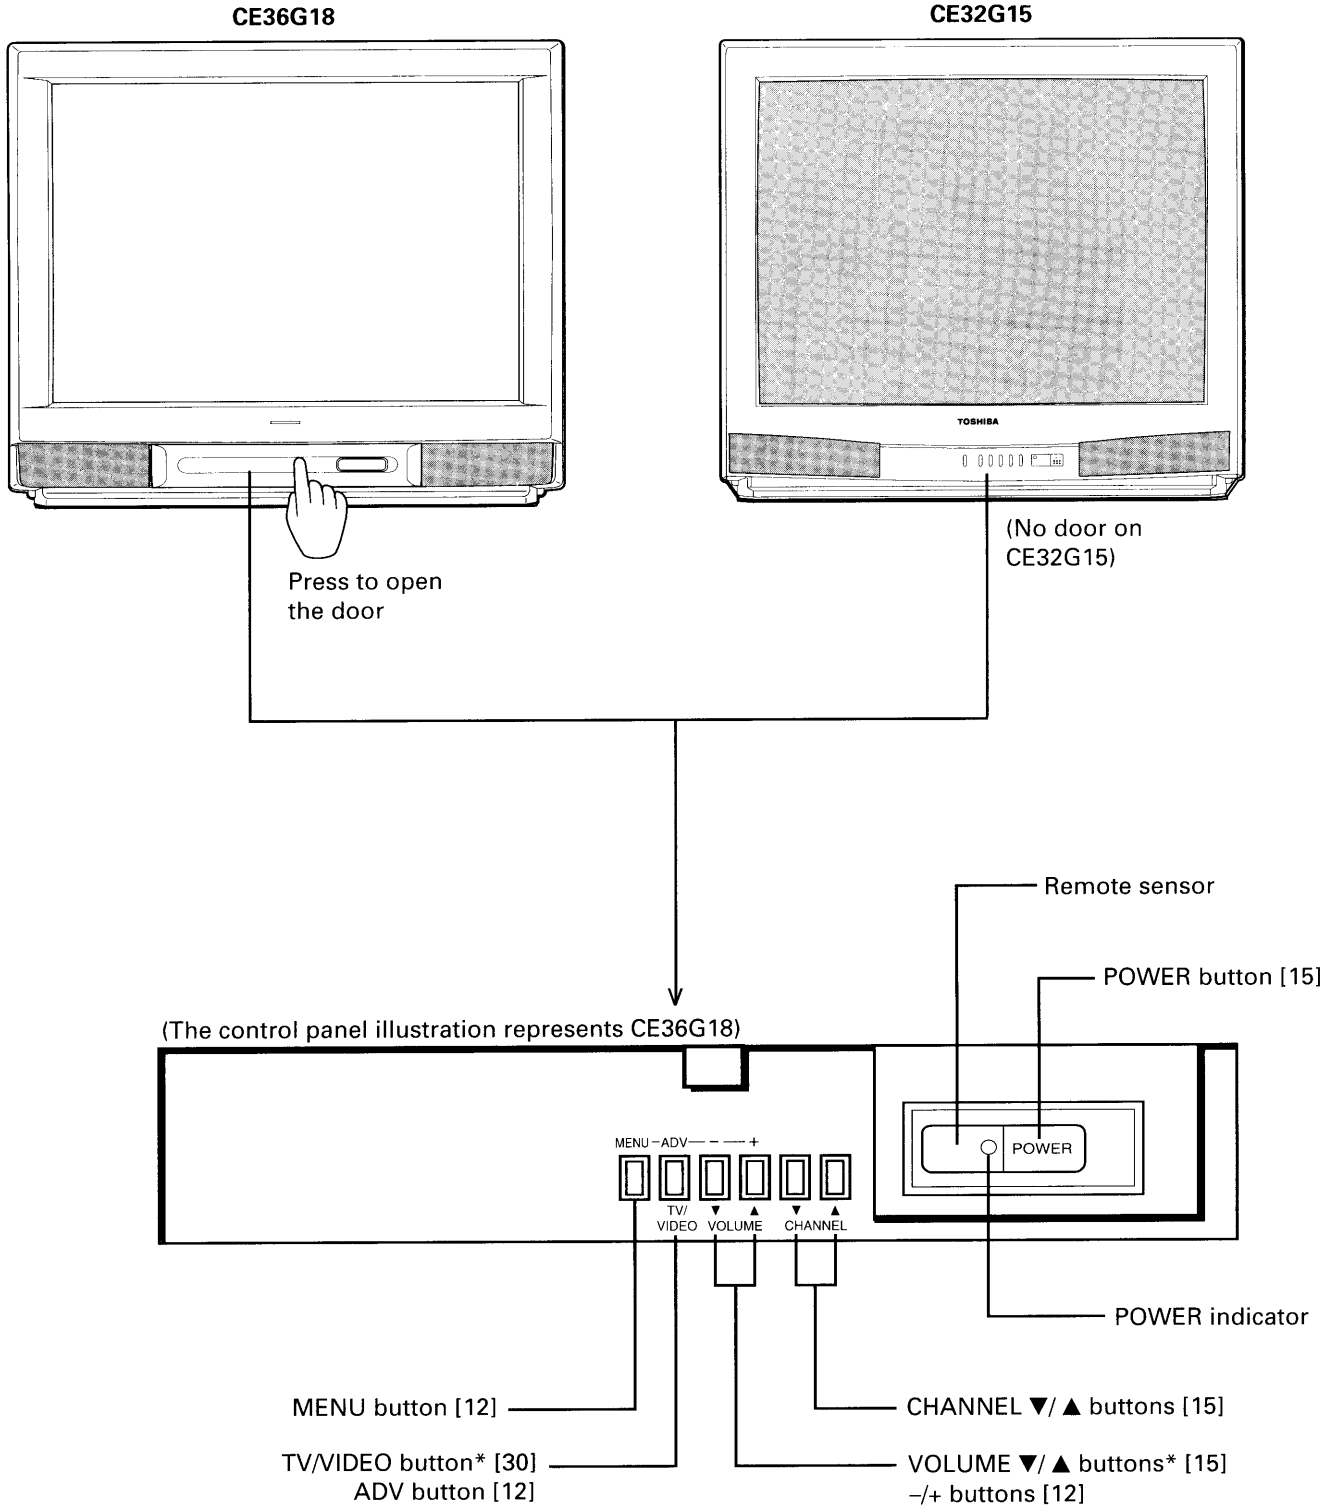

SET UP

PREPARATION

 
Antenna/Cable TV Connection
Location of Controls (TV Set)

*Dual function buttons

Location of Controls (Remote Control)

Only the buttons that are used to operate the TV set are described here.
For details on the use of each control, refer to pages in brackets.

Aim at the remote sensor on the TV

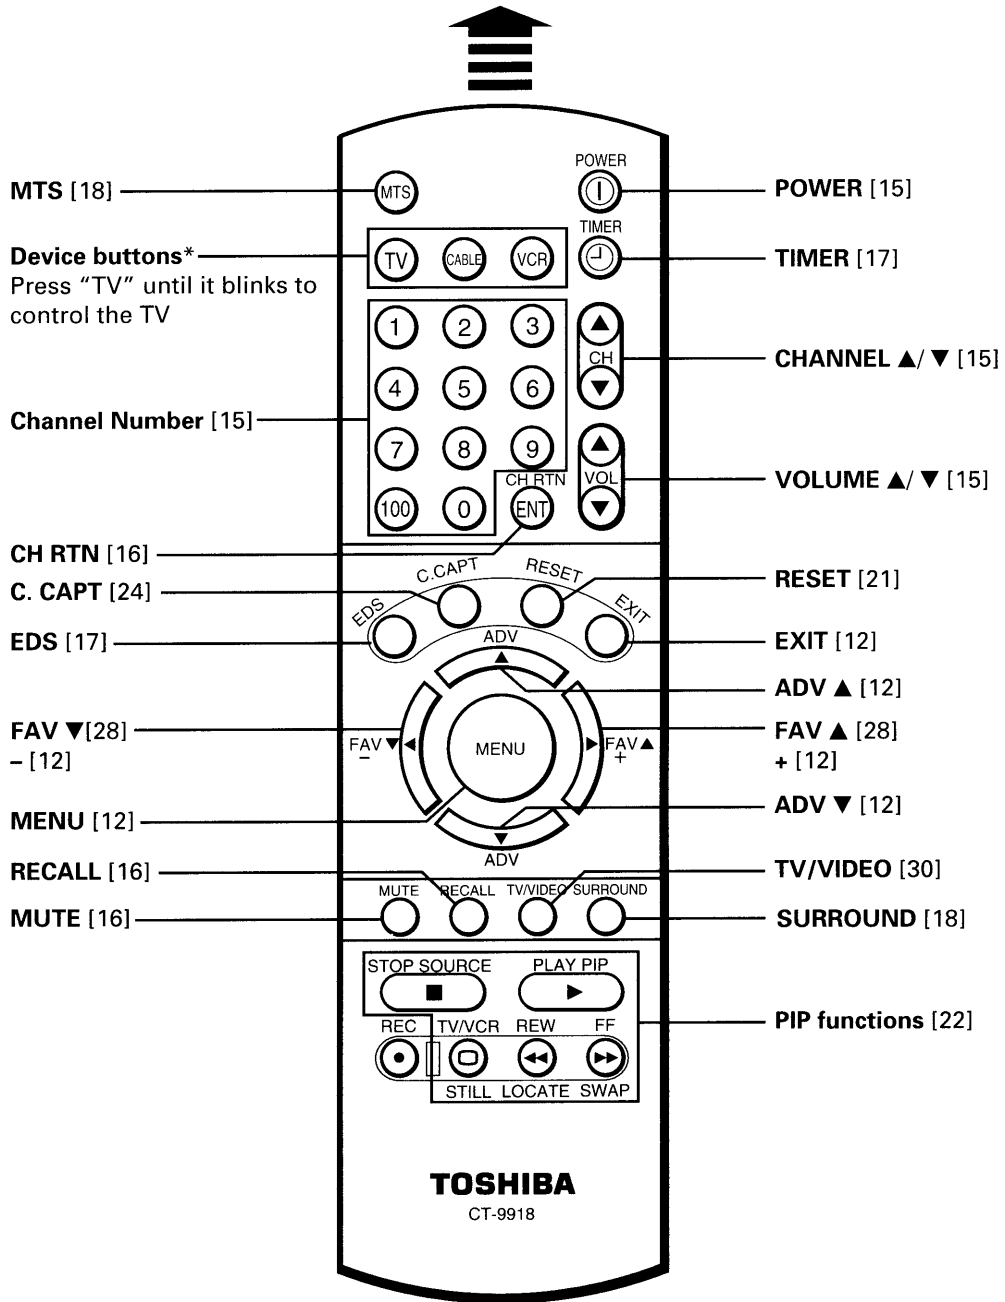

*One of the DEVICE buttons will light up when any other button is pushed to indicate which mode you have selected.

Before Using the Remote Control

Introductions

With this Remote Control, you can operate your TV and most models of remote-controlled VCR's and Cable TV converters even if they are different brands. However, this Remote Control must first be programmed to control other brands of VCR's and/or Converters. If you will be using your TV set with a TOSHIBA VCR, your Remote has already been preprogrammed for you.

- Before attempting to operate your Remote Control, install the batteries according to the section "To install batteries" shown below.
- For more detailed instructions, see the section "Programming the Remote Control" on page 9.

 
Notes:

- After installing new batteries, the Remote Control will set itself to the codes for TOSHIBA's TV and VCR. If you are using the Remote Control to operate equipment that uses different codes, it will have to be reprogrammed for those codes.
- This Remote Control may have functions not available on the original remote controller.
- These functions may or may not operate your VCR or Cable TV Converter. Refer to the owner's manuals supplied with the equipment to see which functions are available.
- The remote controller supplied with your VCR or cable TV converter may have keys not duplicated on this Remote Control. If these functions are desired, the original remote controller will have to be used.

PREPARATION

To install batteries

- 1 Place the Remote Control with the face down. Press down on the ridged area of the battery cover and slide it off.

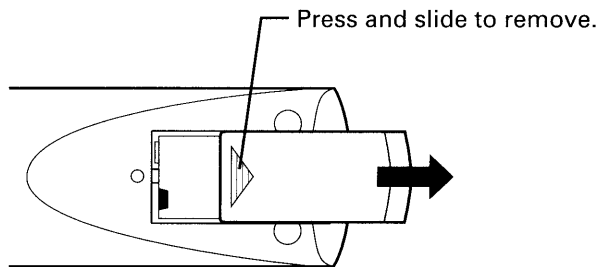


CAUTION:

- Do not throw your batteries into a fire. Dispose of your batteries in a designated disposal area.
- Do not combine used old batteries with new ones.
- Do not mix battery types.

Tips for Best Operation

- For optimum performance, aim the Remote Control directly at the TV from a distance of no more than 16 ft (5m) and be sure there is no obstruction between the Remote Control and the TV.
- If your Remote Control does not always adjust the TV as you wish, you probably need to replace the batteries.
- Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not intend to use the Remote Control for a long period, remove the batteries.

 - 2 Place two "AA" size batteries, matching the + and - signs on each battery to the + and - signs of the battery compartment.

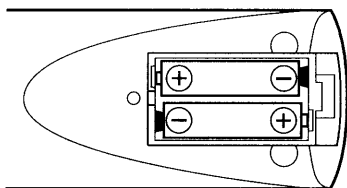


- 3 Replace the battery cover until the lock snaps.

Location of Controls (Remote Control)/ Before Using the Remote Control

Using the Remote with VCR or Cable TV Converter


- To control a TOSHIBA VCR, first press the **VCR** button. The buttons shown below will then control the VCR. The rest of the buttons operate the TV as usual.
If you have another brand of VCR, you can probably program your Remote to control it.
Details are on page 9.
- To control a cable TV converter, this Remote Control must be programmed to recognize the brand of your converter.
See page 9. The shaded buttons can be used to control the cable TV converter.
Press the **CABLE** button whenever you control the cable TV converter.

 Aim at the VCR or cable TV converter

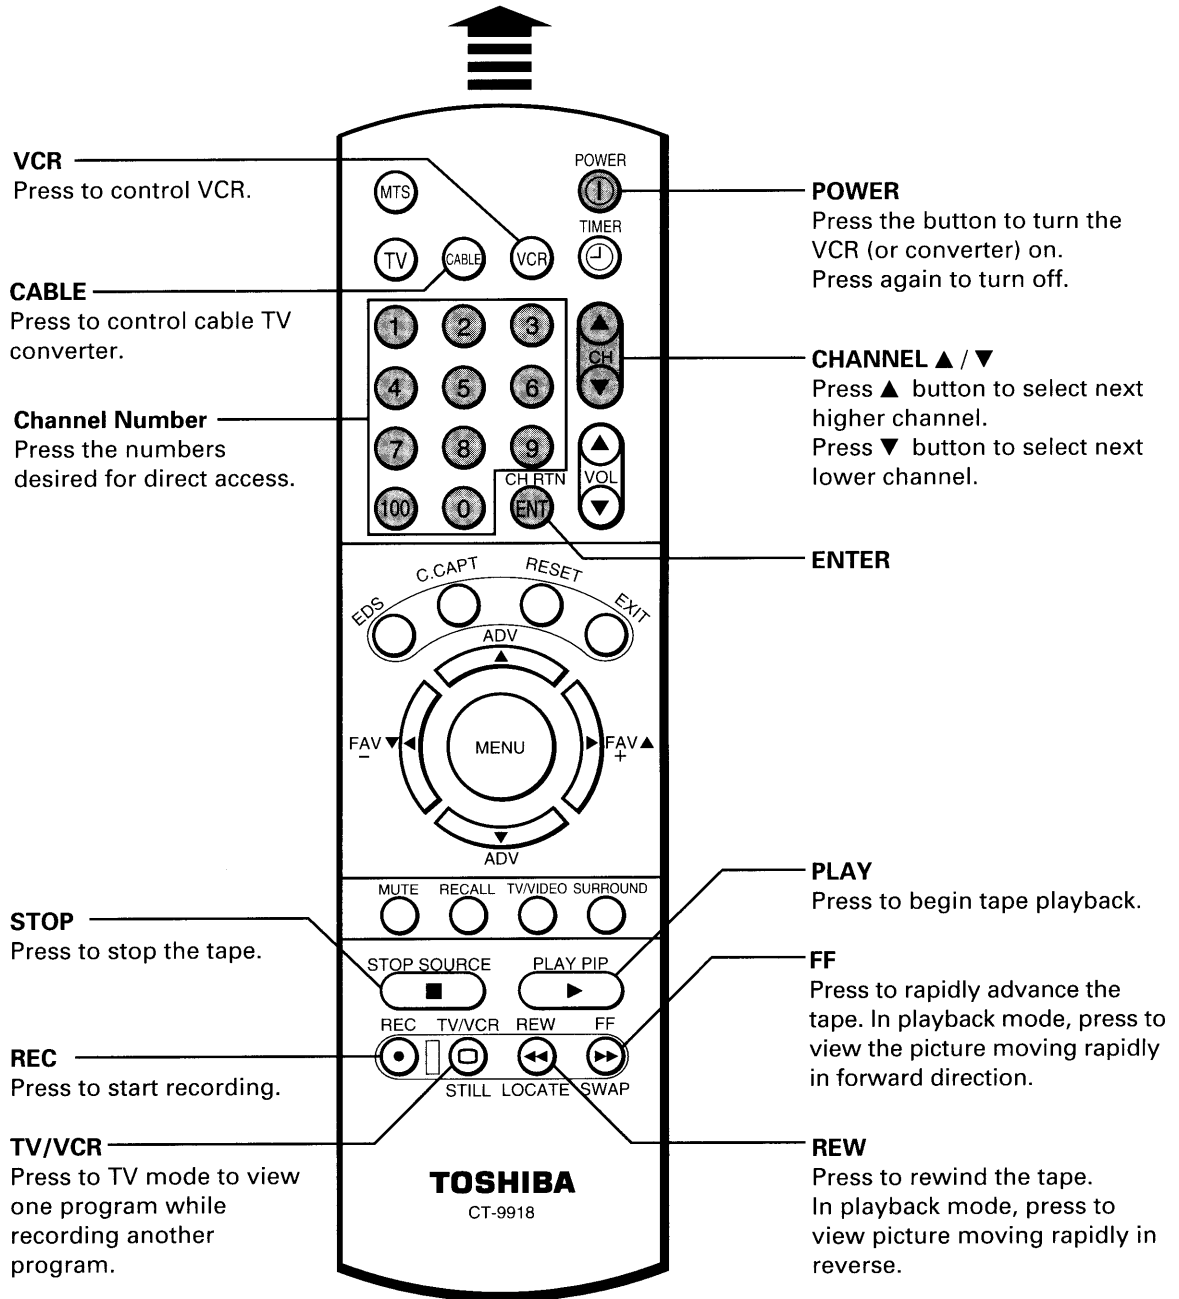

Programming the Remote Control

 - This Remote Control is preprogrammed to operate TOSHIBA VCR's.
- To use VCR's other than Toshiba models (or cable converter), perform the following procedures before operating.

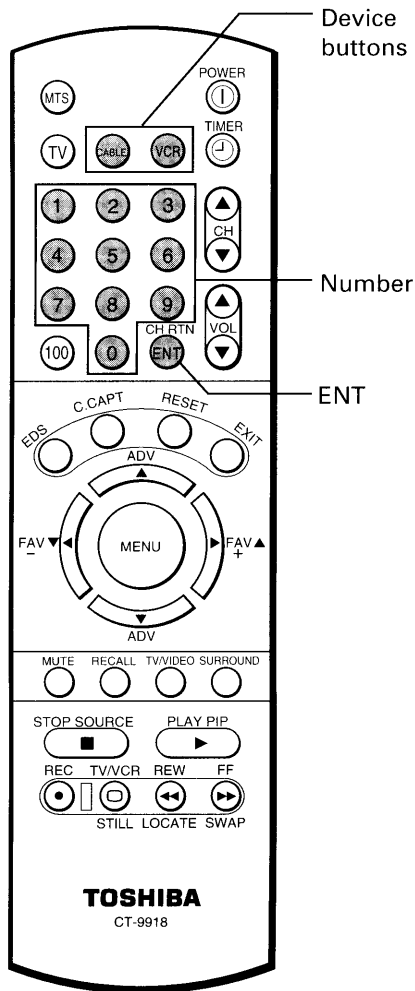

To control other brands of VCR's and cable TV converters

1 Refer to the "VCR code table" (or "Cable TV converter code table") on pages 10 and 11 to find the code number that corresponds to the brand name of your VCR (or converter).

If more than one number is listed, try each one separately until you find the one that works.

2 Turn on the device (VCR or converter) that you wish to control.

3 Press the matching Device button "VCR" (or "CABLE") and ENT at the same time. The device button will light up by the back-light to indicate that it is in the program mode. Perform the following steps while the back-light is on (about 20 seconds).

4 Point the Remote Control toward the VCR (or converter) and press the **Number** buttons to enter the three digit code number for your brand of VCR (or converter).
 -If the right number was entered, the VCR (or the converter) should turn off.
 -If the VCR (or the converter) does not respond to the Remote Control, enter another code number until the device turns off. The back-light will blink to confirm that the code has been accepted.

5 Press the Device button to release the program mode.

Notes:

- You have to reprogram the Remote Control when you change its batteries.
- Some newer VCR's are capable of working on either of two remote codes. These VCR's have a switch labeled "VCR1/VCR2". If your VCR has this kind of switch, and does not respond to all the code numbers for your VCR brand name, set the switch to another position ("VCR1" or "VCR2") and reprogram the Remote Control.

PREPARATION

Using the Remote with VCR or Cable TV Converter/ Programming the Remote Control

For future reference, write the code you used.

VCR CODE: _____

CABLE CODE: _____

Programming the Remote Control (Continued)

- In some rare cases, you may not be able to operate your non-Toshiba equipment with the supplied Remote Control. This is because your equipment may use a code that is not provided with this Remote Control. In this case, please use the equipment's own remote control.

VCR code table


BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
AIWA	034	MITSUBISHI	059,061,046,051, 142,013,020,045	TOSHIBA	001,112,131,008, 047,059,082,013, 017
AKAI	146,043,046,124, 142,016	MTC	034,040	TOTEVISION	040,101
ALBA	202	MULTITECH	024,034	UNITECH	040
AMPRO	072	NEC	012,023,043,048	VECTOR RESEARCH ...	012
ANAM	031	NORDMENDE	043	VIDEO CONCEPTS	012,046,034,141
AUDIO DYNAMICS ...	012,023,043	OPTONICA	053,054	VIDEOSONIC	040
BRANDT	204	ORION	202	WARDS	013,024,031,034, 040,053,054,003, 017,131
BROKSONIC	035,037,129,203	PANASONIC	070,140,201,031	YAMAHA	012,043,034
CANON	031	PENTAX	013,020,031,063	ZENITH	072,080,056,048, 034,101,058
CRAIG	003,040	PHILCO	031,034,067		
CURTIS MATHES ..	031,041	PHILIPS	031,067,034,101, 054		
DAEWOO	010,110,111,112, 017	PILOT	101		
DBX	012,023,043	PIONEER	021,048,013		
DYNATECH	034,053	PULSAR	072		
ELECTROHOME	059	QUARTZ	014		
EMERSON	006,029,035,025, 034,036,037,046, 101,129,131,138, 017,031,202,203	QUASAR	031		
FISHER	003,008,009,010	RCA	013,020,034,041, 040,107,109,140, 144,147,031,205, 206,207,208		
FUNAI	034	REALISTIC	003,008,010,014, 031,034,040,053, 054,101		
GE	031,072,144,147, 063,107,109,205, 206,207,208	RICOH	058		
GO VIDEO	132,136	RUNCO	072		
GOLDSTAR	012,013,020,101, 123	SALORA	014		
HARMAN KARDON ..	012,045	SAMSUNG	040,107,109,112, 017,205,206		
HITACHI	004,026,034,043, 063,047,013	SANSUI	043,048		
INSTANTREPLAY ..	031	SANYO	003,010,014		
JCL	031	SCOTT	017,037,129,112, 131		
JCPENNY	012,013,040,101, 031	SEARS	003,008,010,013, 014,017,101,009, 031		
JENSEN	043	SHARP	031,054,053		
JVC	048,043,130,152, 055,060,012,031, 047	SHINTOM	024		
KENWOOD	014,048,043	SONY	056,057,058,003, 052,031		
LLOYD	034	SOUNDESIGN	034		
LXI	003,009,017,034, 101,013,014	STS	013		
MAGIN	040	SYLVANIA	031,034,067		
MAGNAVOX	067,031,034,041	SYMPHONIC	034		
MARANTZ	031,067,012	TANDY	010,034		
MARTA	101	TATUNG	043		
MATSUI	202	TEAC	034,043		
MEI	031	TECHNICS	031,070		
MEMOREX	101,003,010,014, 031,034,053,072	TEKNIKA	031,019,034,101		
MGA	045,046,059	TELEFUNKEN	204		
MINOLTA	013,020	THOMAS	034		
		TMK	006		

Cable TV converter code table

BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
ABC	001,004,039,046, 053,003,042	SCIENTIFIC	
ANTRONIK	014	ATLANTA	003,011,041,042, 043,045,046
ARCHER	005,007,014,024	SHERITECH	022
CABLE STAR	026	SIGNAL	030
CENTURY	007	SIGNATURE	001
CITIZEN	007	SL MARX	030
COLOUR VOICE	065,090	SPRUCER	047,078
COMBANO	080,081	STANDARD	
COMTRONICS	019,030,202	COMPONENTS ..	203
DIAMOND	023	STARCOM	002,004,008,009
EAGLE	020,030,040	STARGATE	008,030
EASTERN	057,062,066	SYLVANIA	067
ELECTRICORD	032	TADIRAN	030
GE	072	TANDY	017
GEMINI	008,022,025,054	TELECAPATION	021
GI	001,074	TEXSCAN	029,067
GOLDEN CHANNEL ..	030	TOCOM	039,040,056
HAML IN	049,050,055,204, 207	TOSHIBA	052
HITACHI	001,055	UNIKA	007,014,024
HOSPITALITY	070,077	UNITED CABLE	004,053
JERROLD	002,003,004,010, 001,008,009,069, 074,201	UNIVERSAL	007,024,027,035, 005,014,026,032
M-NET	037	VIEWSTAR	086,087,088,089, 012,015,018,202, 205
MACOM	033	ZENITH	052,060,093
MAGNAVOX	012,079,010,064		
MEMOREX	052		
MOVIE TIME	028,032		
NSC	071,073,015,028, 038		
OAK	016,031,037,053		
PANASONIC	044,047		
PARAGON	052		
PHILIPS	020,065,006,012, 013,085,090,202		
PIONEER	034,051,001,063, 076		
POPULAR			
MECHANICS	206		
POST NEWS			
WEEK	016		
PRUCER	059		
PTS	011,048,071,072, 073,074		
PULSAR	052		
RCA	047		
REGAL	049,050		
REGENCY	057		
REMBRANT	025		
RK	091		
SAMSUNG	030,068		

Menu Function (General Instructions)

 
We suggest you familiarize yourself with the procedure before using the Menu function. To adjust any TV feature, the use of the Menu function is required. The adjustments that can be made to the TV appear on the screen.

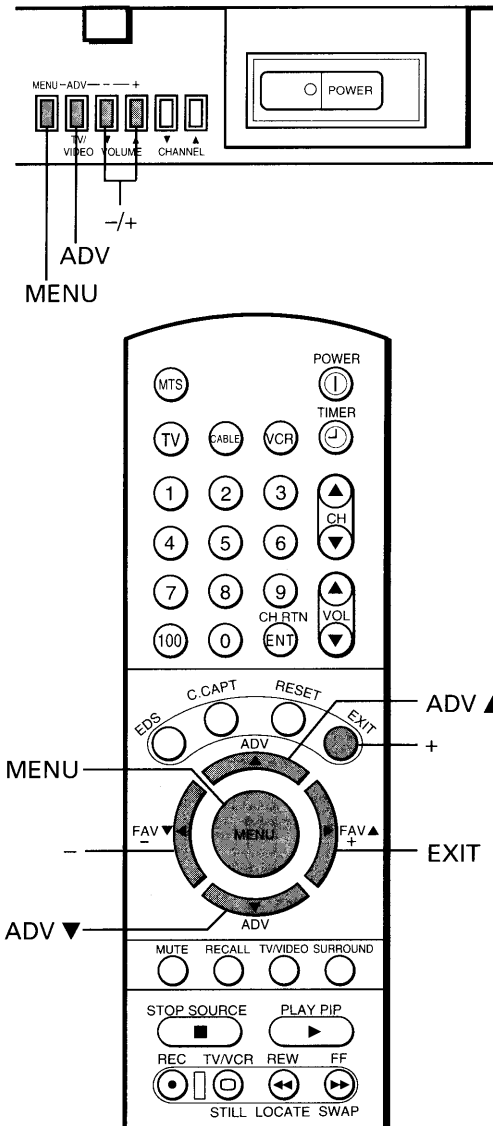


MENU button (on TV and on Remote)

Each time you press **MENU**, the Picture, Audio, Setup or Option menu on-screen display is selected in order, then press **ADV**.

 
Picture menu

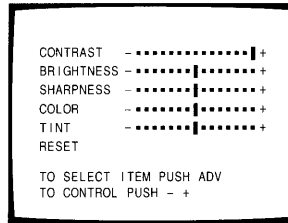


Audio menu

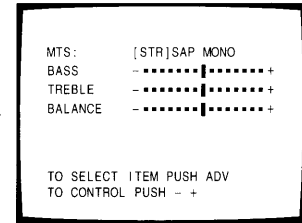 

Option menu

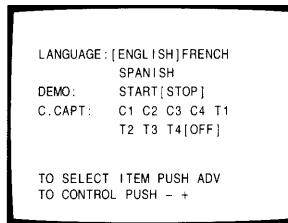 

Setup menu

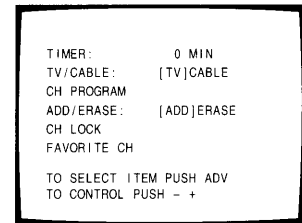 

ADV button (on TV and on Remote)

Use **ADV** after you have selected the on-screen menu you want to adjust with the **MENU** button.

Each time you press **ADV**, the function to be adjusted will be selected in order.

ADV ▲ button from bottom to top

ADV, ADV ▼ button from top to bottom

The selected function will be displayed in purple.

-/+ buttons (on TV and on Remote)

Use -/+ to adjust the function you have selected with the **ADV** button.

EXIT button (on Remote)

The above four menu displays will automatically disappear from the screen if no control has been operated for about 15 seconds.

 
If you want to clear the screen of all on-screen displays instantly, press **EXIT**.

Notes:

- The ADV button on the TV will function as the TV/VIDEO button when no menu display is on the screen.
- The -/+ buttons on the TV will function as the VOLUME ▼/▲ buttons when no menu display is on the screen.
- The -/+ buttons on the Remote Control will function as the FAV ▼/▲ buttons when no menu display is on the screen.



Programming Channel Memory

The channel memory is a list of TV channel numbers your TV will stop on when you press the CHANNEL ▲ or ▼ button. **First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area.** If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

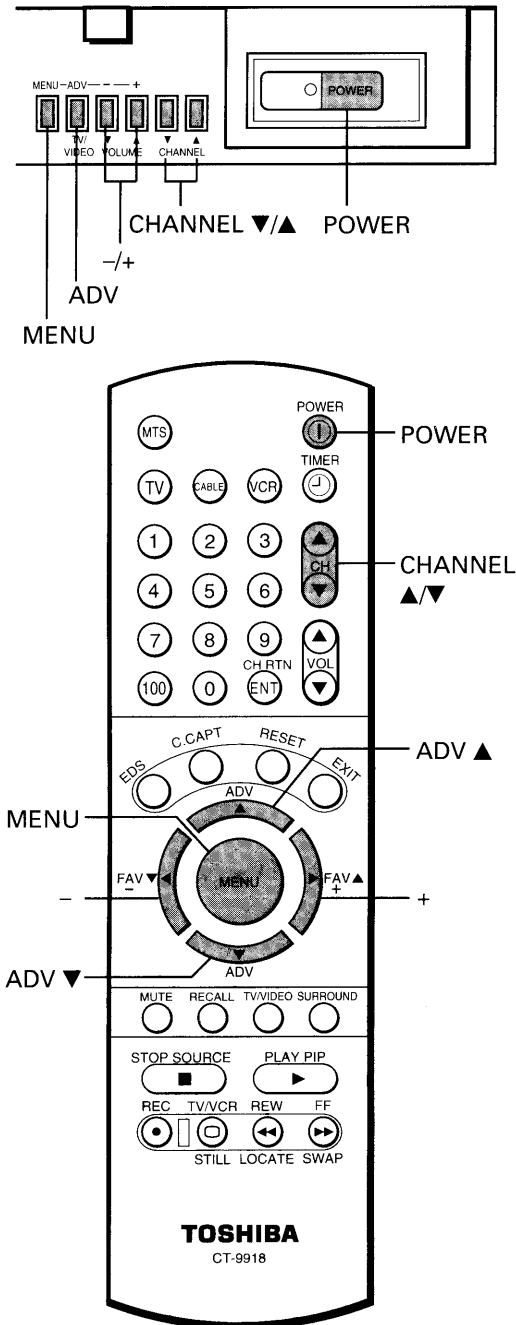




TV/CABLE function

  - 1 Press **POWER** to turn on the TV.
- 2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.
- 3 Press **ADV** repeatedly until "TV/CABLE" is displayed in purple.
- 4 Press - or + until the mode that corresponds to your TV signal system is displayed in purple.
TV: TV broadcasts signals.
 (VHF channels 2 through 13 and UHF channels 14 through 69)
CABLE: Cable TV signals.
 (Cable channels 1 through 125)

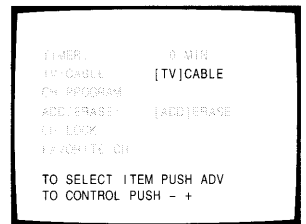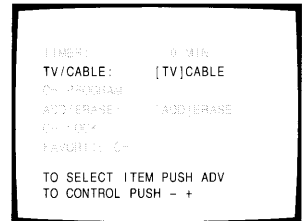

CH PROGRAM function

   - 1 Press **MENU** repeatedly until the Setup menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "CH PROGRAM" is displayed in purple.
- 3 Press - or + to start channel programming.
 The TV will automatically cycle through all the TV or CABLE channels depending on the mode selected, and store active channels in the channel memory.
- 4 When channel programming is complete, you will see the message at the right.

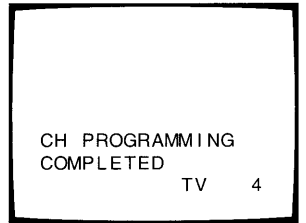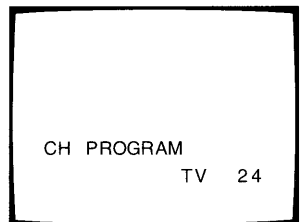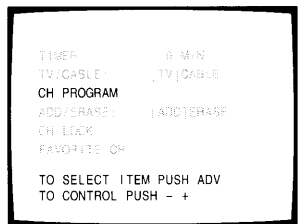


- 5 Press **CHANNEL ▲** or **▼** to make sure the channel programming has been done properly.

PREPARATION
Menu Function (General Instructions)/ Programming Channel Memory

Programming Channel Memory (Continued)

ADD/ERASE function

 
After performing the CH PROGRAM function, you can add or erase specific channels.

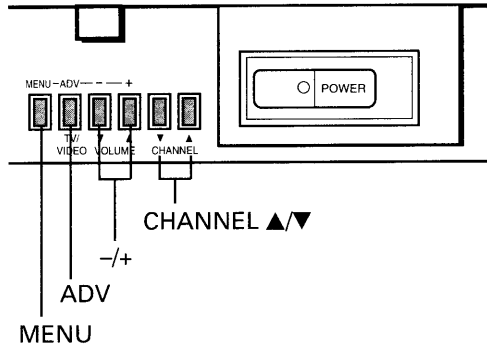


1 Select the channel you want to erase using the **CHANNEL ▲** or **▼** button, or select the channel you want to add using the **Channel Number** buttons.

2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

 
3 Press **ADV** repeatedly until "ADD/ERASE" is displayed in purple.

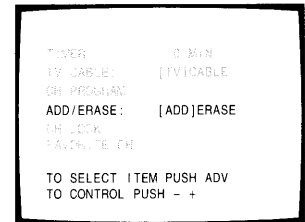

 4 Press **-** or **+**:
To erase the channel
 Press the button until "ERASE" is displayed in purple indicating that the channel has been erased from the memory.

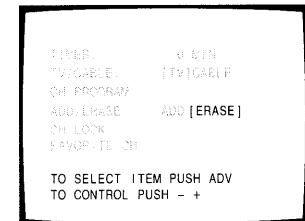


 To add the channel
 Press the button until "ADD" is displayed in purple indicating that the channel has been memorized.

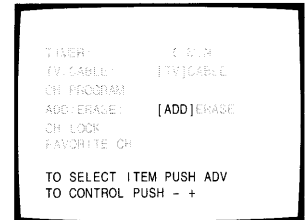

5 Repeat steps 1 to 4 for other channels.

 You have now completed the channel programming.

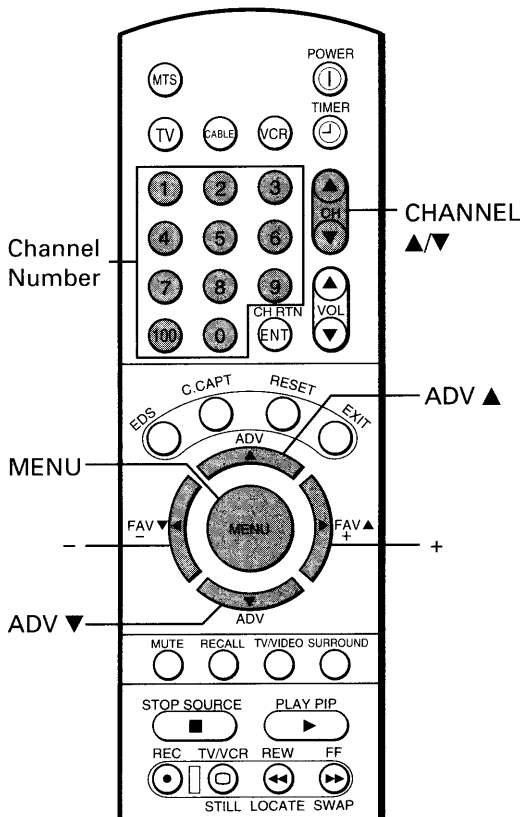


CABLE channel reference chart

Number on this TV	1	5	6	14	15	16	34	35	36	37	38	60	61	62	63	64	65	66
Corresponding CABLE channel	A-8	5(A-7)	6(A-6)	A	B	C	U	V	W	AA	BB	XX	YY	ZZ	AAA	BBB	65	66
Number on this TV	67	68	69	92	93	94	95	96	97	98	99	100	101	102	123	124	125	
Corresponding CABLE channel	67	68	69	92	93	94	A-5	A-4	A-3	A-2	A-1	100	101	102	123	124	125	

The above chart is typical of many cable system channel allocations. If in doubt, consult your cable company.


Watching TV Programs

 - First press the TV button on the Remote Control to control the TV.

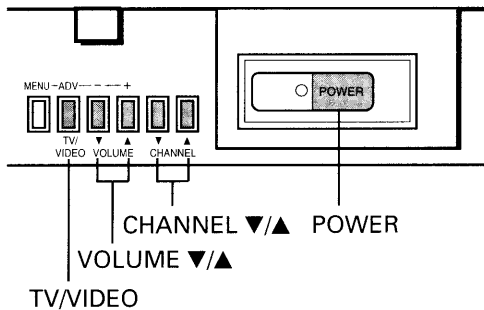

- 1 Press **POWER** to turn on the TV.

 To turn off the TV, press **POWER** again.

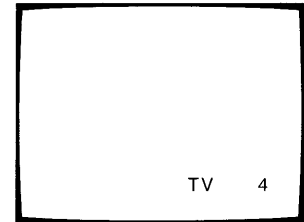

- 2 Select a channel in one of the following two ways.

- **To scan the memorized channels in numerical sequence**

Press **CHANNEL ▲** to select the next higher channel.

Press **CHANNEL ▼** to select the next lower channel.

Press the button again to select the next memorized channels.

- **To select a channel directly**

Press the **Channel Number** buttons (0-9 and 100).

To select channel 4, press "4" (or press "0", "4").

To select channel 38, press "3", "8".

To select channel 125, press "100", "2", "5" in sequence.

 
 
If you cannot select certain channels, either TV (off the air) or CABLE channels

Check if the TV/CABLE function is properly set. See page 13.

- 3 Press **VOLUME ▲/▼** to adjust the volume.

To increase the volume, press **▲**.

To decrease the volume, press **▼**.

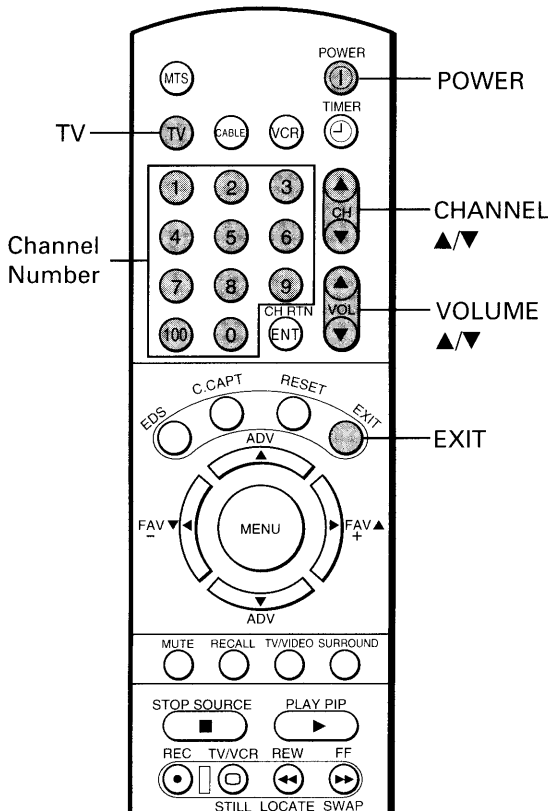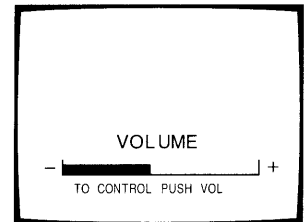

Watching Video Input

The TV/VIDEO button is used to view the signals coming from other devices like VCR's or Laserdisc players connected to this TV.

Details are on page 30.

Note:

The VOLUME ▼/▲ buttons on the TV function as the -/+ buttons while any of the menu displays (Picture, Audio, Setup or Option) are on the screen.

Auto-Power-Off

If a vacant channel is tuned or TV broadcast for a day is finished, the TV will automatically turn off after about 15 minutes.

This feature does not operate in the VIDEO mode.

 
Last Mode Memory

If the power is cut off while you are viewing the TV and the power is resupplied, the TV is turned on automatically by the *Last Mode Memory* feature. If the power is going to be off or when you leave home for a long time, remove the power plug from the wall outlet to prevent the TV from turning on in your absence.


Demonstration Mode

When this function is activated, your TV will automatically display a variety of its on-screen menus and special features, this function is provided for demonstration purpose only.

To start demonstration, select "DEMO [START]" in the Option menu. (See page 12.) To stop, press **DEMO [STOP]**, **RECALL**, **EXIT** or **POWER**.

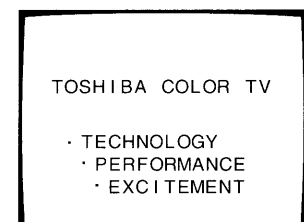


Convenient Remote Functions

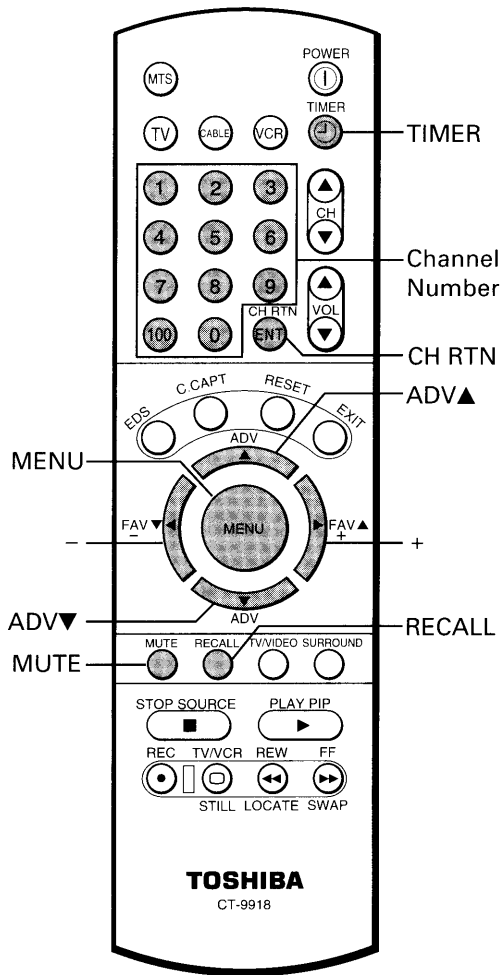 

To display on-screen information

Press **RECALL** to display the following on-screen information.

 - Channel number
- VIDEO mode selected
- Stereo or SAP audio status

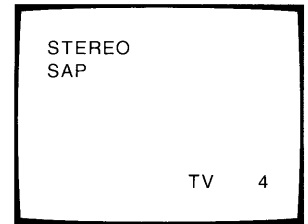


To mute the sound

Press **MUTE** to mute the sound. The word "MUTE" will be displayed on the screen as shown. This is useful during telephone calls or other interruptions.

To restore the sound, press **MUTE** again.

 Note: When the MUTE button is pressed, the Closed-Captioned feature "C1" is activated. ("MUTE" on-screen display will disappear.) To deactivate, press the MUTE button again. (This feature only functions when the Closed Caption mode is set to "OFF".)

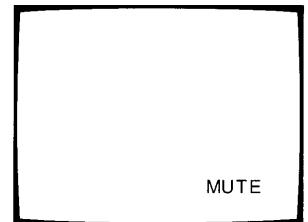

To change quickly between two channels

 
Press **CH RTN** to return to the last channel viewed.

This is useful should you want to view two channels. This allows you to view two programs without entering an actual channel number each time.

To operate this function

- 1 Select the first channel you want to view.
- 2 Select the other channel with the **Channel Number** buttons.
- 3 Press **CH RTN**.
The previous channel will return.


Each time you press **CH RTN**, the TV will switch back and forth between the two channels.

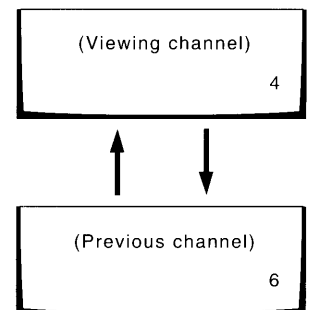


To set the off-timer (sleep timer)

With the off-timer, you can set the TV to turn off automatically after a pre-determined period of time (up to 3 hours, 10 minute units).

 1 Press **TIMER** to select the OFF TIMER mode.

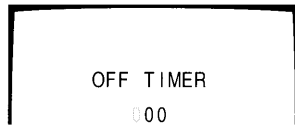

 
2 Press two **Number** (0-9) buttons to enter the length of time you want the TV to stay on after each number position starts to blink.

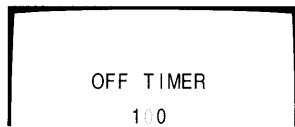

Example: 120 minutes
Press 1 and 2.

3 Press **TIMER** to start the timer.

 The display color will change from purple to blue, and then the display will disappear.

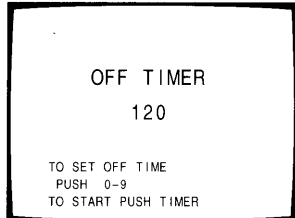


To cancel the setting

Press **POWER** twice, once to turn the TV off and once to turn it on again.



You can also set the off-timer using the on-screen menu function.

 1 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

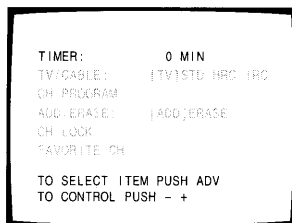

2 Press **ADV** repeatedly until "TIMER" is displayed in purple.

  3 Press **+** or **-** to enter the length of time you want the TV to stay on. Each time you press the button, the time display will increase (+) or decrease (-) by 10 minutes.

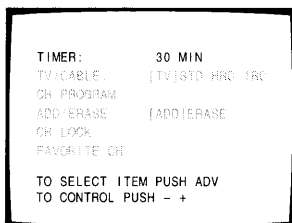


Note: To display the time remaining, press **TIMER**. The remaining time will be displayed on the screen. To erase the display, press **TIMER** again.

To display the EDS information

Press **EDS** to display the following EDS (Extended Data Service) information for about 10 seconds.

 
- Network name ①
- Program name ②
- Program type ③
- Time in show ④
- Program length ⑤

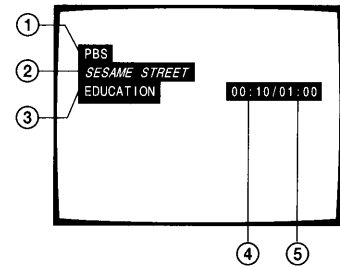

Some of the above information may not be displayed.


If the TV program you are watching does not include the EDS information

 "NO EDS INFORMATION" will be displayed instead for about 10 seconds when you press **EDS**.

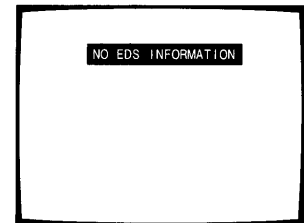

Selecting Stereo/SAP Broadcasts



 
The MTS (Multi-channel TV Sound) feature allows you to improve your TV viewing with high fidelity stereo sound. This TV also allows you to activate or deactivate the stereo surround sound effect. MTS also provides for an extra channel, SAP (Second Audio Program), used to transmit a second language or other audio information.

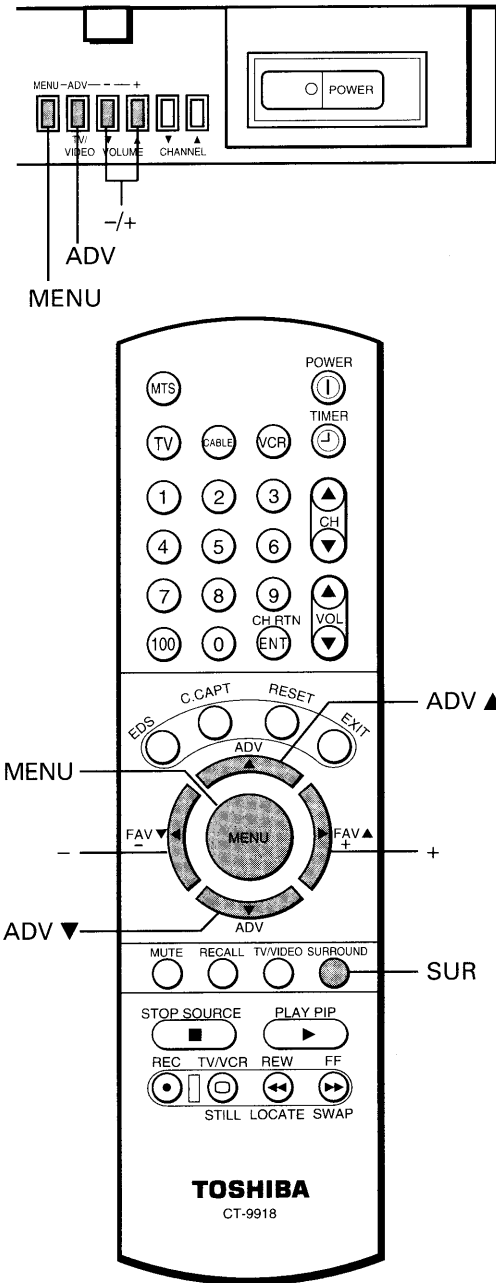

To listen to stereo sound

- 1 When the TV receives a stereo broadcast, the word "STEREO" is displayed on the screen whenever the TV is turned on, a channel is selected, or the RECALL button is pressed.
- 2 Press **MENU** repeatedly until the Audio menu is displayed on the screen.
- 3 Press **ADV** repeatedly until "MTS" is displayed in purple. If a stereo broadcast is received, "STR" will be displayed in yellow.
- 4 Press **-** or **+** until "STR" (stereo) is displayed in purple.

   Normally this function can be left in "STR" mode. Your TV will then automatically reproduce either stereo or monaural sound, whichever is broadcast.

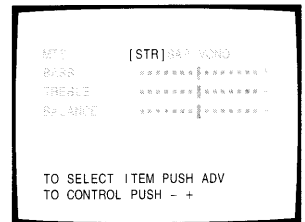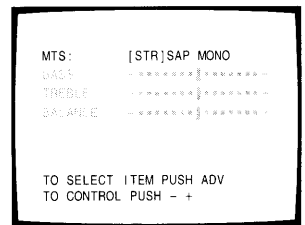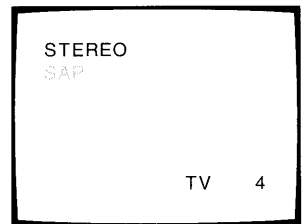


If the stereo sound is noisy

Be sure you have selected "STR" mode if the broadcast is in stereo. However, if a broadcast signal is not strong enough, and noise-free stereo sound is not available, select "MONO" (monaural) mode. The noise should be reduced.

To adjust surround sound effect

- 1 Select the STEREO mode as described above.
- 2 Press **SUR** repeatedly until "SURROUND ON" is displayed in purple.

 The surround function has now been activated.

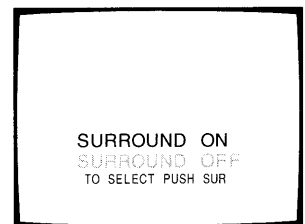

Note: "MTS" function is not available while in the VIDEO mode.

To deactivate the surround effect

Select "SURROUND OFF" in step 2 above.

 
Note: Normally you can leave the "STR" mode turned on and the surround function activated. The TV will automatically produce either surround stereo or monaural, whatever is broadcast.

To listen to second language


- 1 When the TV receives a SAP broadcast, the word "SAP" is displayed on the screen.



- 2 Press **MENU** repeatedly until the Audio menu is displayed on the screen.

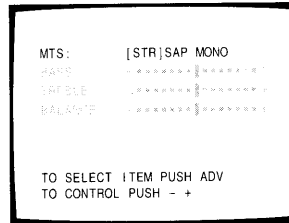

 
- 3 Press **ADV** repeatedly until "MTS" is displayed in purple. If a SAP broadcast is received, "SAP" will be displayed in yellow.

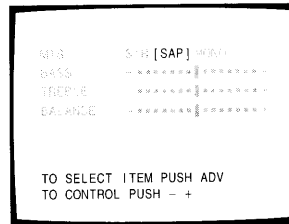


- 4 Press **-** or **+** until "SAP" is displayed in purple. You will hear only the second language from the left and right speakers.

Adjusting the Picture

 You can adjust the picture quality (CONTRAST, BRIGHTNESS, SHARPNESS, COLOR and TINT) to suit your taste.

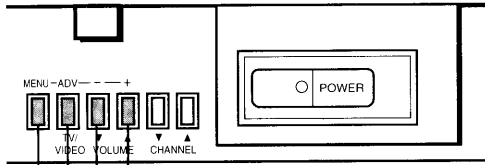



ADV
MENU

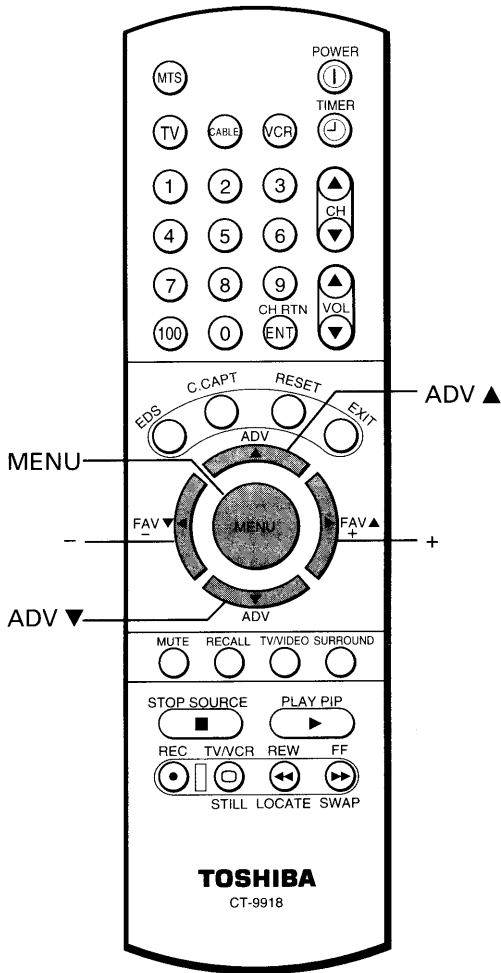 

To adjust the picture quality

- 1 Press **MENU** repeatedly until the Picture menu is displayed on the screen.
- 2 Press **ADV** repeatedly until the item you want to adjust is displayed in purple.
- 3 Press **-** or **+** to adjust the level.

 
 
Example: CONTRAST adjustment mode display

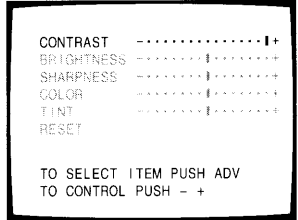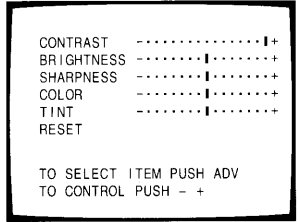

Selection	Pressing	
	-	+
CONTRAST	lower	higher
BRIGHTNESS	darker	lighter
SHARPNESS	softer	sharper
COLOR	paler	deeper
TINT	reddish	greenish

To reset the Picture and Sound adjustments to the factory-preset level (maximum CONTRAST and all other adjustments centered)


 
 
- 1 Press **MENU** repeatedly until the Picture menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "RESET" is displayed in purple.
- 3 Press **-** or **+**.

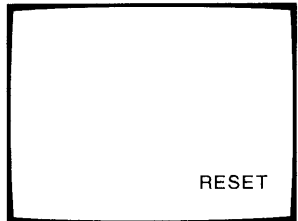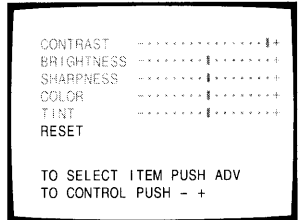

Note: You can also use the RESET button on the Remote Control. (See page 21.)

Adjusting the Sound

  
 
You can adjust the sound quality (BASS, TREBLE and BALANCE) to suit your taste.

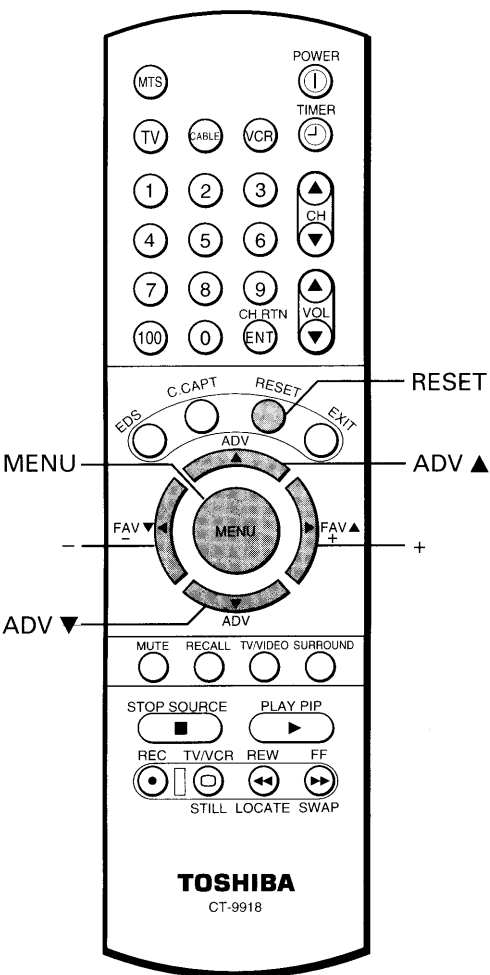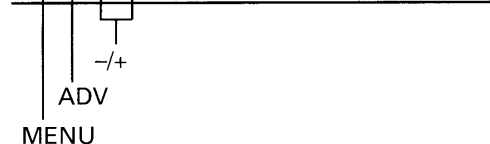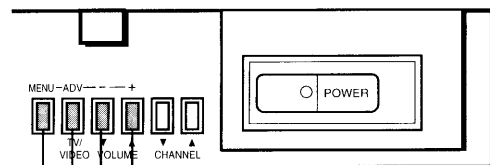

To adjust the sound quality

- 1 Press **MENU** repeatedly until the Audio menu is displayed on the screen.
- 2 Press **ADV** repeatedly until the item you want to adjust is displayed in purple.
- 3 Press **-** or **+** to adjust the level.

  Example: BASS adjustment mode display

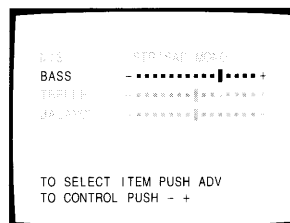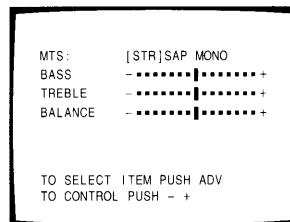


Selection	Pressing	
	-	+
BASS	weaker	stronger
TREBLE	weaker	stronger
BALANCE	decreases the right channel	decreases the left channel

RESET button (on the Remote Control)

To reset the Picture and Audio adjustments to the factory-preset level (maximum CONTRAST and all other adjustments centered)

 
Press **RESET**.

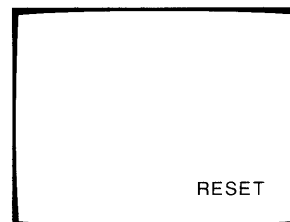


Watching Picture-in-Picture

In addition to the main picture, another TV program or video source being received through the VIDEO input jacks can be displayed simultaneously as a small picture. This is called PIP (Picture-in-Picture).

 Be sure to connect a VCR with the VIDEO/AUDIO cables.


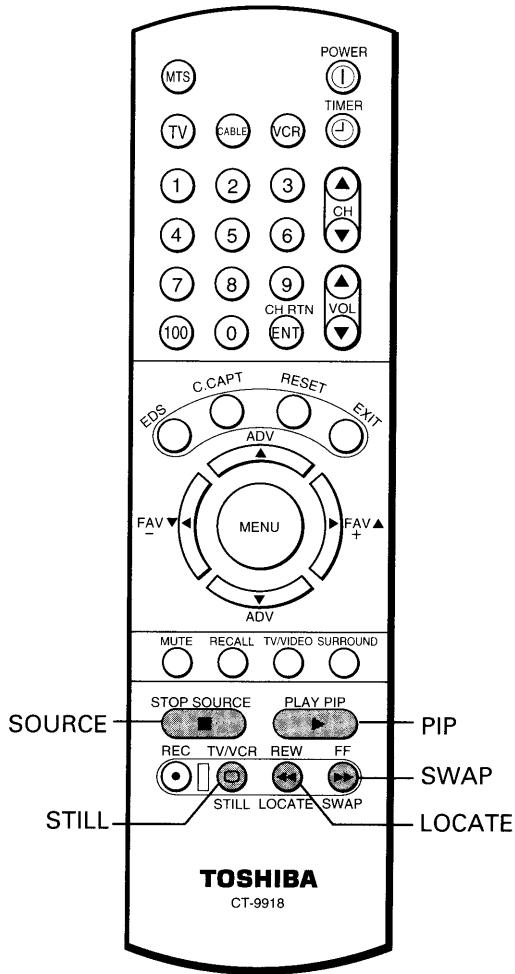


Connecting TV and VCR for PIP

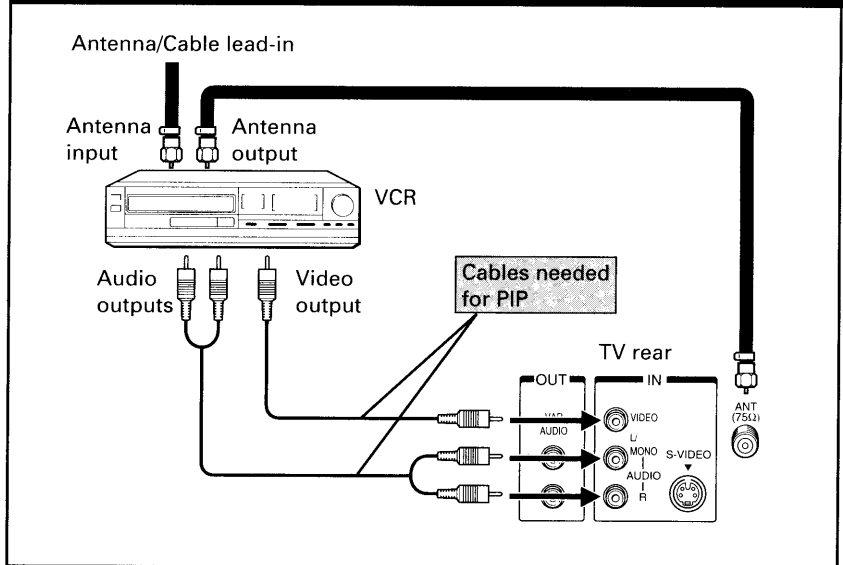 

To display a small picture

  - 1 Press **PIP** once to display a small picture.
The 1/9 size window picture will appear.
If you press **twice**: The 1/16 size window picture will appear.
- 2 Press **SOURCE** to select "VIDEO" input source for the small picture.
The selected source will be displayed in purple.
- 3 Select channels for the PIP using the VCR's channel keys.

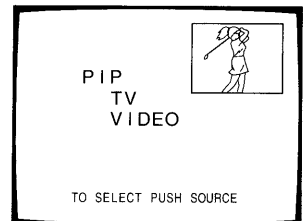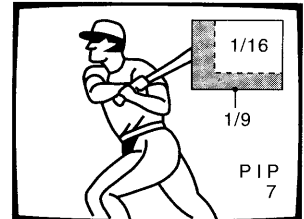


To turn off the small picture, press PIP

- **Twice**, if you watch the 1/9 size window picture.
- **Once**, if you watch the 1/16 size window picture.

To use advanced functions


To change the position of the small picture

 Press **LOCATE** repeatedly when a small picture is displayed. The display position of the small picture will change in order.

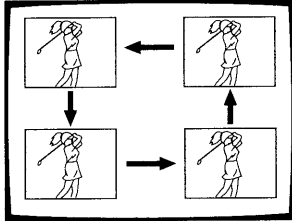


To switch the main and small picture

 Press **SWAP** when a small picture is displayed. The main and small pictures will switch. To switch them again, press **SWAP** again.



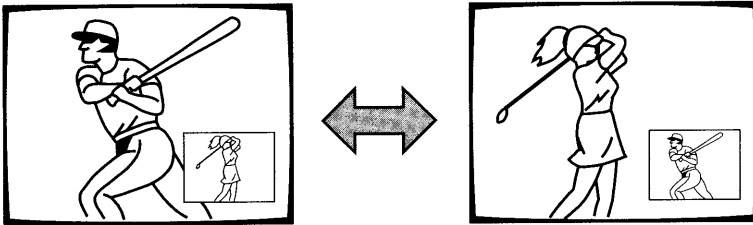


To freeze the small picture

 Press **STILL** when a small picture is displayed. The small picture will become a still picture. To return to a moving picture, press **STILL** again.

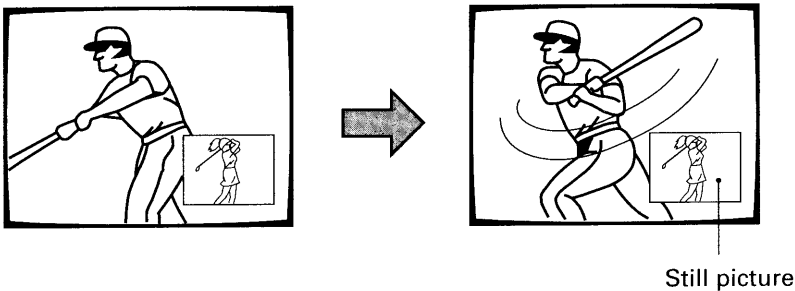

Using Closed-Captioned Function

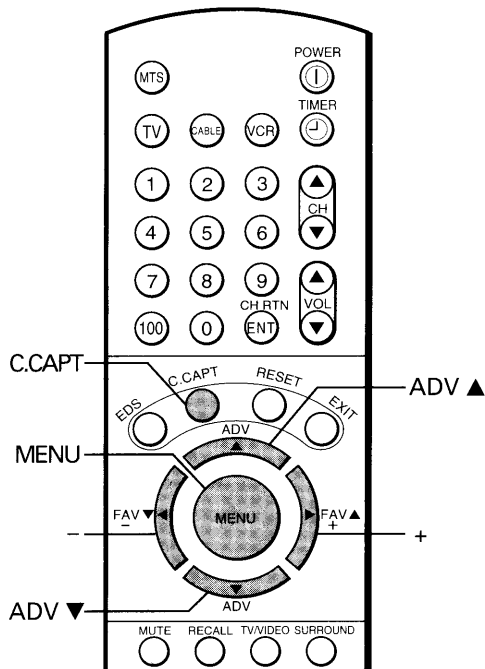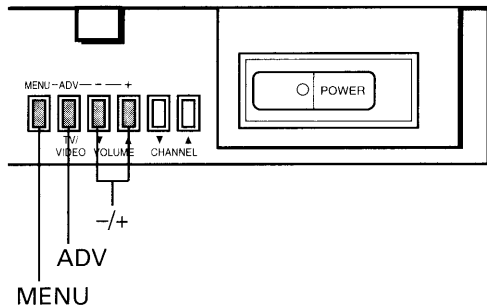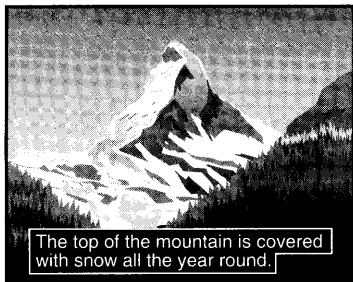   

Note:

 
- A closed-captioned signal may not be decoded in the following situations.
- When a video tape has been dubbed.
 - When the signal reception is weak.
 - When the signal reception is non-standard.

To view captions

Closed-captioning is a printed version of the dialogue, narration, and/or sound effects of a TV program. Captions will appear at either the top or bottom of the screen during captioned broadcasts as shown. Captioning is especially helpful for hearing impaired individuals.



- 1** Select the desired program.
The captioned programs are usually notated in your local TV listings by service marks such as "CC".
- 2** Press **C.CAPT** on the Remote Control to call up the CLOSED CAPTION menu.

Press **C.CAPT** repeatedly until "C1", "C2", "C3" or "C4" is displayed in purple. ("C1" stands for Caption 1, for example.)
Select "C1" for translation of the primary language in your area.

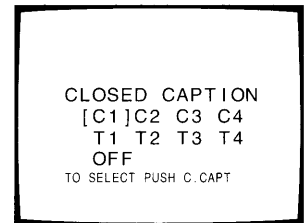

You can also select this feature using the on-screen menu function.

  - 1** Press **MENU** repeatedly until the Option menu is displayed on the screen.
- 2** Press **ADV** repeatedly until "C.CAPT" is displayed in purple.
- 3** Press - or + to select "C1", "C2", "C3" or "C4".

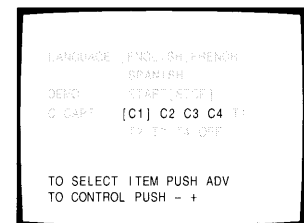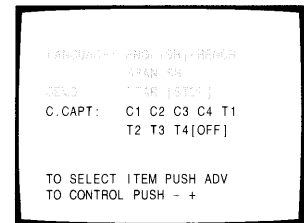

To deactivate this feature

Select "OFF" in the closed caption mode display.

To view text

 
 
Text is information that is presented using from one half to full television screen. It is usually not related to the program.

For example, it could be a listing of the closed-captioned programs, news, weather information or stock market reports.

1 Select the desired program.

2 Press **C.CAPT** on the Remote Control to call up the CLOSED CAPTION menu.


Press **C.CAPT** repeatedly until "T1", "T2", "T3" or "T4" is displayed in purple. ("T1" stands for Text 1, for example.)

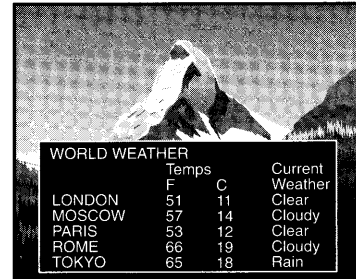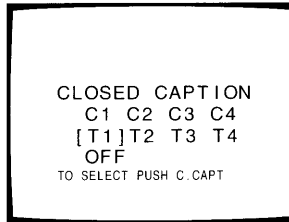


You can also select this feature using the on-screen menu function.

1 Press **MENU** repeatedly until the Option menu is displayed on the screen.

 2 Press **ADV** repeatedly until "C.CAPT" is displayed in purple.

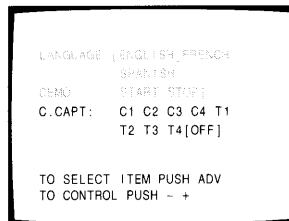

 3 Press **-** or **+** to select "T1", "T2", "T3" or "T4".

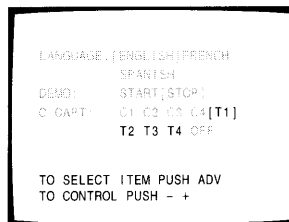

To deactivate this feature

Select "OFF" in the closed caption mode display.

 
 
Note: If you select a closed-captioned channel and the Text mode, the text screen always appears.

However, text characters are not displayed when no signal is aired.



Locking Channels


With this function you can lock out specific channels (for example a channel that you do not want your children to watch) by entering your own 4-digit code. The TV will not be able to tune them for the next 24 hours, unless you cancel the locked out channels. There are 4 memory spaces for the TV mode and 4 memory spaces for the CABLE mode.

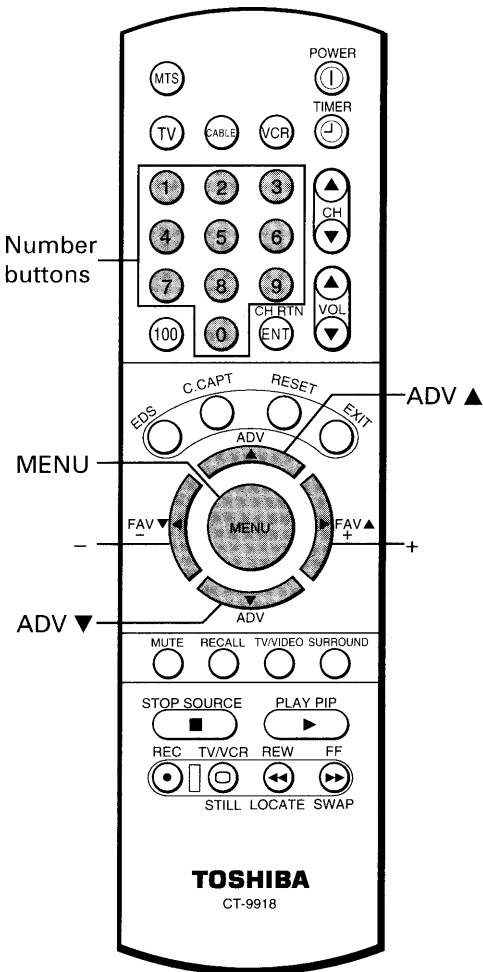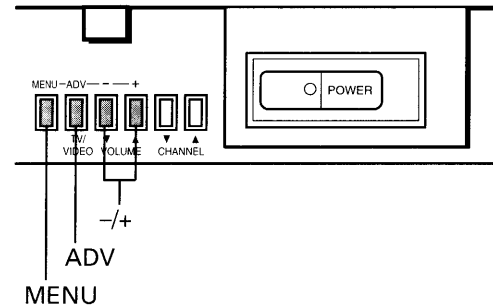


To lock out channels

- 1 Select a channel you want to lock out.

 Example: channel 4

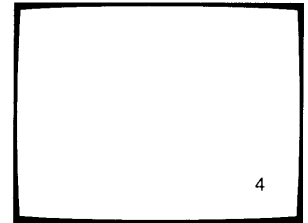

 
- 2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

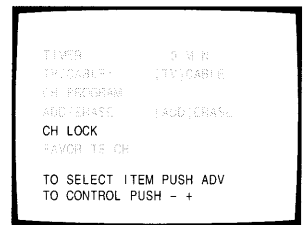

- 3 Press **ADV** repeatedly until "CH LOCK" is displayed in purple.

- 4 Press **-** or **+** to call up the channel lock adjustment display shown below. Each time you press the button, you are guided between "SET" and "CLEAR". Select "SET".

 SET
↑
CLEAR

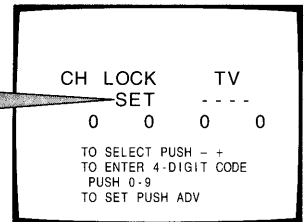


- 5 Press Number buttons (0 - 9) to enter a 4-digit code. The numbers you enter will replace the dashes in the display. **Pick a number that is easy to remember.**


Example: To enter "1234"

Press 1, 2, 3 and 4 in order.

 1 --- → 1 2 --- → 1 2 3 --- → 1 2 3 4

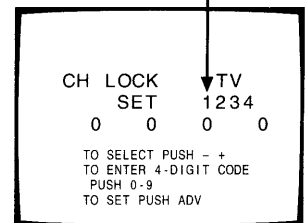

 - 6** Press **ADV** to lock out the channel.
The display at the right will appear on the screen for about 4 seconds.

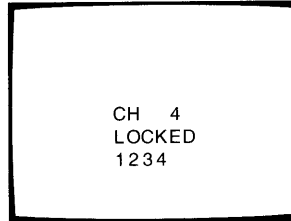


- 7** Repeat steps 1 to 6 for other channels.

Note: If a different code number is used whenever you lock out a channel, the last one has priority over the preceding ones.

- 8** Select another channel before turning off the TV.


To restore channels

 - 1** Select "CLEAR" following the steps 2 to 4 on the previous page.

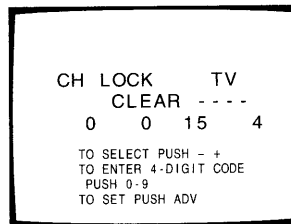


- 2** Press the 4-digit code used to lock out the channels with the Number buttons.

 - 3** Press **ADV**.
If you have entered the correct code
The display shown at the right appears.

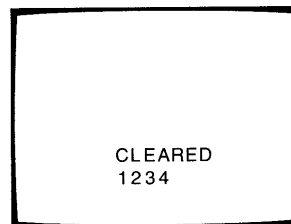


 
If a wrong code has been entered
These messages appear. Try to enter the correct code again.

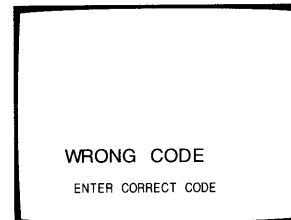

If you want to know the channels you have locked out
Call up the channel lock feature using the Setup menu.

Programming Your Favorite Channels

  
The Favorite Channel Programming feature allows you to program up to 12 of your favorite channels. Once programmed, you can use the FAV ▼/▲ buttons on the Remote Control to scan through only your favorite channels, skipping other channels you do not normally view. You can use the CHANNEL ▲/▼ buttons to scan through all the channels you programmed in the TV's memory.

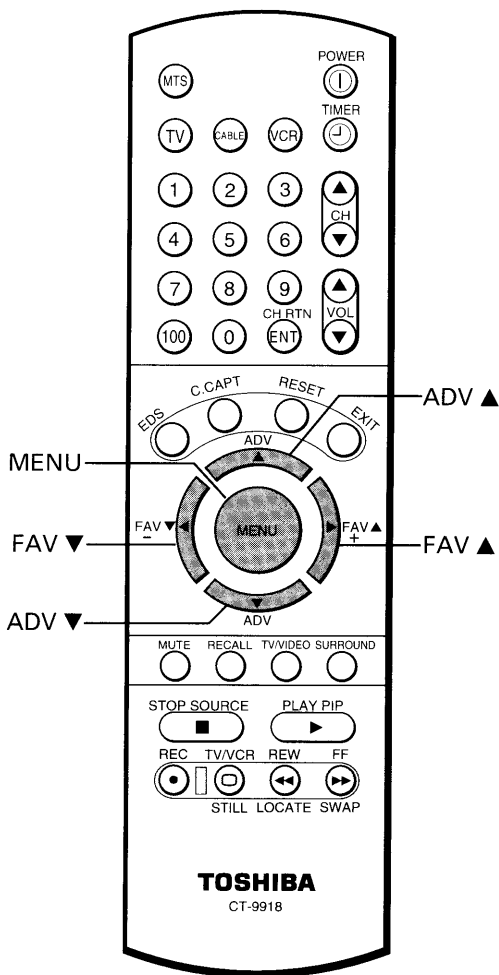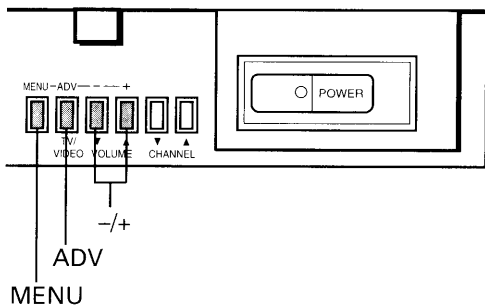


To program your favorite channels

- 1 Select a channel you want to program.

 
Example: channel 2

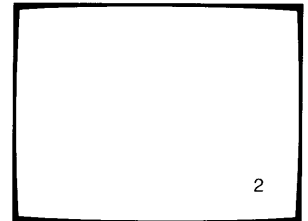

 
- 2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

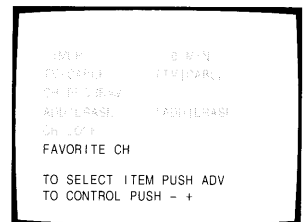

 - 3 Press **ADV** repeatedly until "FAVORITE CH" is displayed in purple.

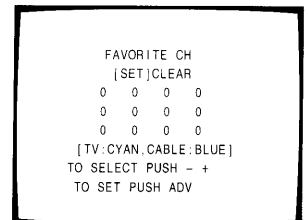

 - 4 Press - or + to display the FAVORITE CH program menu. Each time you press - or +, you are guided between "SET" and "CLEAR".

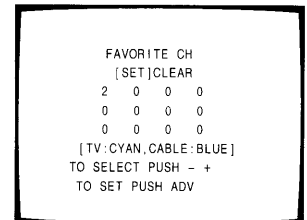

- 5 **To program channels:** Select "SET". Then press **ADV** until the channel number to be programmed ("2" in this example) replaces "0" on the display.

To erase channels:

Select "CLEAR". Then press **ADV** until "0" replaces the channel number to be erased, "2" for example.

- 6 Repeat steps 1 to 5 for other channels.

 
To select your favorite channels

To select your favorite channels you have programmed, use the **FAV ▼/▲** buttons on the Remote Control instead of using the CHANNEL ▲/▼ buttons.


Note: The FAV ▼/▲ buttons cannot function if you have not programmed your favorite channels.

Changing On-Screen Display Language

You can choose from three different languages (ENGLISH, FRENCH and SPANISH) for the on-screen displays (adjustment menus, and messages).


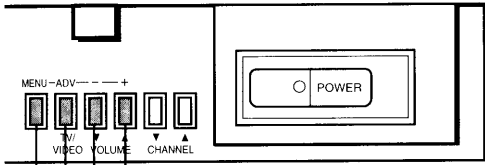


MENU-ADV
MENU

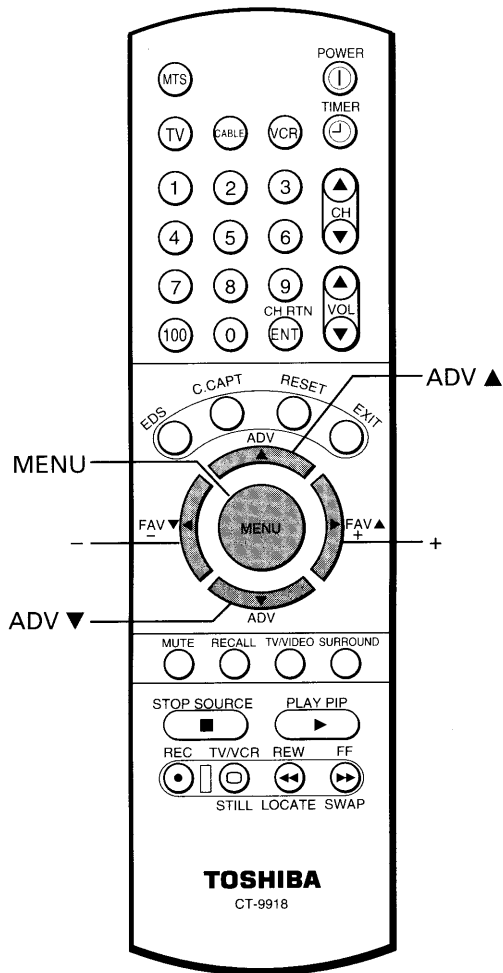 


To select a language

  
- 1 Press **MENU** repeatedly until the Option menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "LANGUAGE" is displayed in purple.
- 3 Press **-** or **+** until your desired language is displayed in purple.
If you select "FRENCH" for example, the display language changes to French.

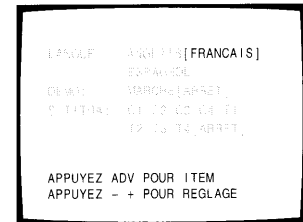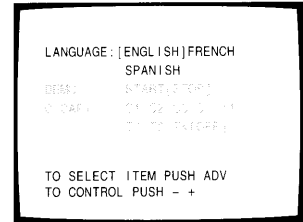


Example: Picture menu display "ENGLISH"

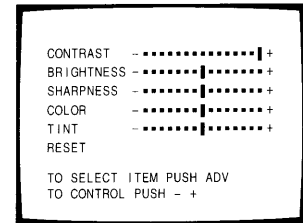 

"FRENCH"

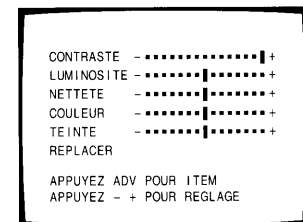 


"SPANISH"

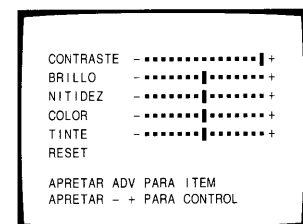 

Connecting a VCR

 Connect VIDEO/AUDIO IN jacks on the rear of the TV to the video/audio output jacks of a VCR, (Laserdisc Player, Video Camera, etc.) for playback of video material. The S-VIDEO jack is provided for direct S-video connection from an **S-VHS** VCR.



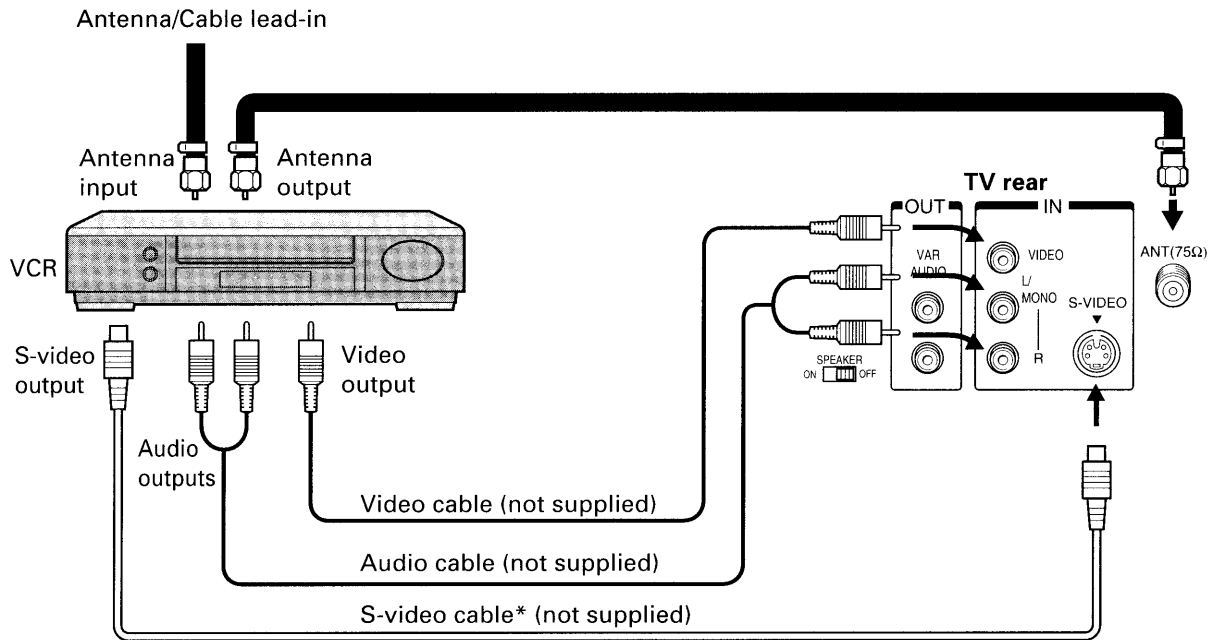


* When the S-video cable is connected to the S-VIDEO IN jack, the VIDEO plug should not be connected.

To select the video input source

To operate your TV and video equipment properly, refer to the instructions furnished with the video equipment.

   - 1 Turn the TV and VCR ON.
- 2 Press **TV/VIDEO** on the Remote Control or on the TV to select "VIDEO" source. The selected source will be displayed in purple.

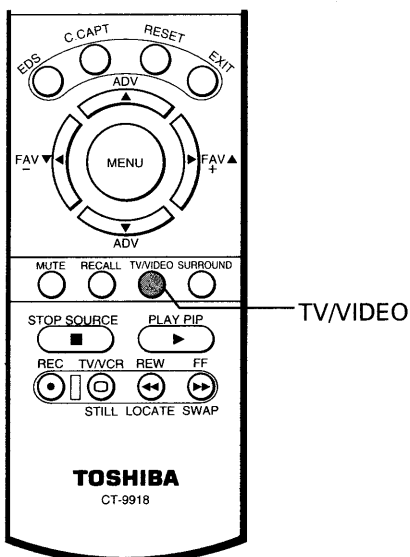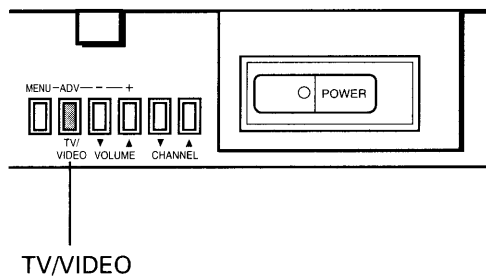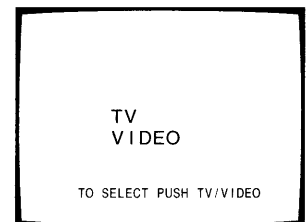


- 3 Operate your VCR normally.

Notes:

- If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack on the TV.
- The S-VIDEO jack accepts separated luminance/chrominance (Y-C) signals conforming to the NTSC standard.

Connecting an Audio Amplifier

 Connect the VARIABLE AUDIO OUT jacks to the auxiliary input jacks on the stereo amplifier. You can control the audio level using the Remote Control for this TV.

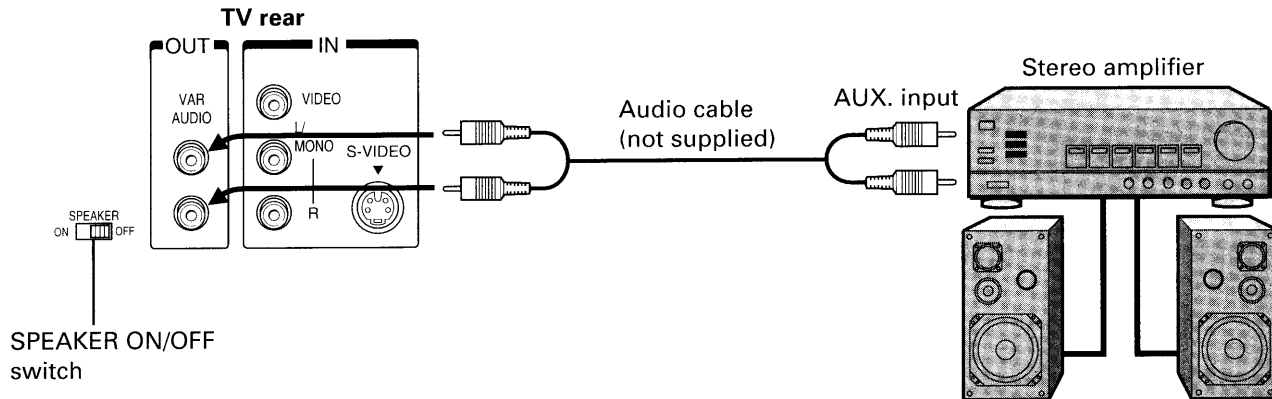

Preparing for use

- 1 Turn the TV and the stereo amplifier ON.
- 2 Adjust the VOLUME buttons on the TV for a moderate listening level.
- 3 Set the SPEAKER ON/OFF switch to "OFF" to switch off the built-in speakers.
- 4 Adjust the volume control on the stereo amplifier for a moderate listening level.
- 5 Control of the audio can now be done using the VOLUME and MUTE buttons on the Remote Control of the TV, and using the Audio menu items (BASS, TREBLE and BALANCE).



To use the built-in speakers again
Set the SPEAKER ON/OFF switch to "ON".

Cleaning and Care

WARNING: TV sets use High Voltage. Do not try to remove the cabinet back. Refer servicing to qualified service personnel.

- To clean the TV screen:
 1. First remove the plug from the power outlet to avoid possible shock hazard.
 2. Use a clean cellulose sponge or chamois cloth dampened with a solution of mild detergent and warm water to clean TV screen and trim. Do not use too much water on the TV screen. Water spills into the cabinet and may cause damage to the TV. Avoid excess water.
 3. Remove any extra moisture with the same cloth or a dry one.
 - To maintain the finish and appearance of the cabinet, polish it from time to time with a quality furniture polish.
- Caution:** Never use strong solvents such as thinner, benzene or other chemicals on or near cabinet, as they might damage the finish of the cabinet.

Specifications

TELEVISION SYSTEM	NTSC standard		
CHANNEL COVERAGE	VHF: 2 through 13 UHF: 14 through 69 Cable TV: mid band (A-8 through A-1, A through I) super band (J through W) hyper band (AA through ZZ, AAA, BBB) ultra band (65 through 94, 100 through 125)		
POWER SOURCE	120V AC, 60Hz		
POWER CONSUMPTION	CE32G15: 101W (average) CE36G18: 108W (average)		
AUDIO POWER	5W + 5W		
SPEAKER TYPE	CE32G15: Two 2-3/8 x 4-3/4 inches (60 x 120 mm) CE36G18: Two 2-3/4 x 5-1/8 inches (70 x 130 mm)		
VIDEO/AUDIO TERMINALS	S-VIDEO INPUT Y-INPUT: 1V(p-p), 75 ohm, negative sync. C-INPUT: 0.286V(p-p) (burst signal), 75 ohm VIDEO/AUDIO INPUT VIDEO: 1V(p-p), 75ohm, negative sync. AUDIO: 150mV(rms) (30% modulation equivalent, 47k ohm) VARIABLE AUDIO OUTPUT 0-350 mV(rms) (30% modulation equivalent. 4.7 k ohm)		
DIMENSIONS	CE32G15	CE36G18	
	Width	33-15/64 inches (844mm)	34-31/64 inches (876mm)
	Height	27-41/64 inches (702mm)	31-19/64 inches (795mm)
	Depth	22-41/64 inches (575mm)	25-35/64 inches (649mm)
MASS	CE32G15: 117.9 lbs. (53.5 kg) CE36G18: 166.7 lbs. (75.6 kg)		
SUPPLIED ACCESSORIES	Remote Control with 2 "AA" size batteries		
OPTIONAL TV STAND	CE32G15: ST3212 CE36G18: ST3502		

Design and specifications are subject to change without notice.

Before Calling Service Personnel

Before calling service personnel, please check the following chart for a possible cause of the problem you are experiencing. A minor adjustment on your part may eliminate the problem and restore your TV reception.

Problem	Checks and Adjustments	Page
TV will not turn on	<ul style="list-style-type: none"> ● Make sure the power cord is plugged in, then press POWER button. ● Check battery in the Remote. (Maybe batteries are "dead".) 	15
No picture, no sound	<ul style="list-style-type: none"> ● Check antenna/cable connections. 	15
No sound, picture OK	<ul style="list-style-type: none"> ● Maybe sound is muted. Try pressing VOLUME ▲ button. ● Try another channel. (Maybe station trouble.) ● Check that the SPEAKER ON/OFF switch is properly set. 	
Poor sound, picture OK	<ul style="list-style-type: none"> ● Try another channel. (Maybe station trouble or local interference from appliance.) 	31
Poor picture, sound OK	<ul style="list-style-type: none"> ● Check antenna/cable connections. ● Try another channel. (Maybe station trouble or local interference.) ● Adjust Picture menu. 	20
Poor reception of broadcast channels	<ul style="list-style-type: none"> ● Try another channel. ● Check antenna connections. ● If using VCR, check TV/VCR button. 	8
No UHF, VHF OK	<ul style="list-style-type: none"> ● Make sure TV/CABLE function is in "TV" mode. 	
Unable to select a certain channel	<ul style="list-style-type: none"> ● That channel may be locked out with CH LOCK function, or erased with the ADD/ERASE function. 	26 14
Multiple images (ghosts)	<ul style="list-style-type: none"> ● Try another channel. (Maybe station trouble.) ● Use a highly directional outdoor antenna. 	
Poor color or no color	<ul style="list-style-type: none"> ● Try another channel. (Maybe station trouble or local interference.) ● Adjust TINT and/or COLOR in the Picture menu. ● If you change the direction of the TV while the TV is activated, the picture may suffer from color shading. If so, turn off the TV and allow it to cool for several hours, then turn on the TV again. The picture should improve. 	20
No stereo or SAP sound from a known MTS broadcast	<ul style="list-style-type: none"> ● Check if MTS function is properly set. 	18
The Remote Control does not operate	<ul style="list-style-type: none"> ● Check if Device button is properly set. ● Maybe something is between the Remote and the remote sensor. ● Maybe batteries are dead. Try replacing batteries with new ones. Insert them with the correct polarity. 	6, 8 7

Limited United States Warranty

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty

TACP and THI warrant this product and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP and THI will repair a defective product or part, without charge to you. "Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."

Limited Two (2) Year Warranty of Picture Tube

TACP and THI further warrant the picture tube in this product against defects in materials or workmanship for a period of two (2) years after the date of original retail purchase. During this period, TACP and THI will replace a defective picture tube without charge to you, except that if a defective picture tube is replaced after one (1) year from the date of the original retail purchase, you pay labor charges involved in the replacement.

Rental Units

The warranty for rental units begins with the first rental of thirty (30) days from the date of shipment to the rental firm, whichever comes first.

Commercial Units

Products sold and used for commercial use have a limited ninety (90) day warranty for all parts, labor and picture tube.

Owner's Manual and Demographic Card

You should read this owner's manual thoroughly before operating this product. You should complete and mail the enclosed Demographic card within ten days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP/THI to provide you with better customer service and improved products. Failure to return the Demographic card will not affect your rights under this warranty.

Your Responsibility

The above warranties are subject to the following conditions:

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
- (3) **These warranties are effective only if the product is purchased and operated in the U.S.A. or Puerto Rico.**
- (4) Labor service charges for set installation, set up, adjustment of customer controls and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (5) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have had the serial number removed, altered, defaced or rendered illegible.

How to Obtain Warranty Service

If after following all of the operating instructions in this manual and checking the section "BEFORE CALLING SERVICE PERSONNEL", you find that service is needed;

- (1) Call the TACP toll free number **1-800-631-3811** after you find a defective product or part to find the nearest TOSHIBA Authorized Service Station.
- (2) Please present your bill of sale or other proof to the Authorized Service Station.
"Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the TACP/THI Authorized service station for repair and returned to your home at no cost to you."

IN THE CONTINENTAL UNITED STATES
Should your unit require service, Call:



HAWAII, 327 Kamakee Street, Honolulu, HI 96814
(808) 521-5377

(A)

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall TACP or THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which action must be commenced to enforce any obligation of TACP or THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to 90 days from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

ATTENTION CANADIAN CONSUMERS:

Canadian consumers are requested to complete the special Canadian "Warranty Registration Form" enclosed, and forward this completed form with a copy of bill of sale to TOSHIBA OF CANADA to "Register and Validate" their warranty.

Products purchased in the U.S.A. and used in Canada are not covered by these warranties.

Products purchased in Canada and used in the U.S.A. are not covered by these warranties.

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

HEAD OFFICE/82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

FACTORY SERVICE CENTERS/NORTHEAST: 82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

MIDWEST: 1010 JOHNSON DRIVE, BUFFALO GROVE, ILLINOIS 60089-6900

WEST: 5490 E. FRANCIS ST., ONTARIO, CA 91761

SOUTHWEST: 1421 CHAMPION DRIVE, SUITE 304 CARROLLTON, TEXAS 75006

SOUTHEAST: 6115 JIMMY CARTER BLVD., SUITE C2, NORCROSS, GA 30071-4607

TOSHIBA HAWAII, INC.

HEAD OFFICE/327 KAMAKEE STREET, HONOLULU, HAWAII 96814, U.S.A.

TOSHIBA OF CANADA LTD.

HEAD OFFICE/191 McNABB STREET, MARKHAM, ONTARIO, L3R 8H2, CANADA TEL: (905) 470-5400

SERVICE CENTERS/TORONTO: 191 McNABB STREET, MARKHAM, ONTARIO, L3R 8H2, CANADA TEL: (905) 470-5400

MONTREAL: 1643, NORTH SERVICE RD., TRANS-CANADA HIGHWAY, DORVAL QUEBEC, H9P 1J1, CANADA

TEL: (514) 856-4100

VANCOUVER: 22171 FRASERWOOD WAY, RICHMOND, B.C., V6W 1J5 TEL: (604) 303-2500

MANUFACTURED BY

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

PRINTED IN USA

(97-08)B

TOSHIBA

23563141