

# JVC AV-32X4 TV INSTRUCTIONS MANUAL



## Quick Links

[Specifications](#)

# Table of Contents

Table of Contents

Connecting the aerial and VCR

Connecting the power cord to the AC outlet

Putting the batteries into the Remote control

Initial settings

T-V LINK FUNCTIONS

Turn the Main power on

Turn the TV on from standby mode

Choose a TV channel

Adjust the volume

Turn the TV on or off from standby mode

Choose a TV channel

Adjust the volume

Watch images from external devices

ZOOM function

3D CINEMA SOUND function

Displaying the current time

Return to TV channel instantly

Operating a JVC brand VCR or DVD player

Basic operation

Using the List Mode

Hold

Sub-page

Reveal

Size  
Index  
Cancel  
Basic operation  
PICTURE MODE  
Picture Adjustment  
COLOUR TEMP  
DIGITAL VNR  
DigiPure Pro  
COLOUR SYSTEM  
MOVIE THEATRE  
4:3 AUTO ASPECT  
PICTURE TILT  
STEREO / I • II  
Sound Adjustment  
HYPER SOUND  
SURROUND  
BASS BOOST  
S-IN (S-VIDEO input)  
ID LIST  
DUBBING  
SLEEP TIMER  
BLUE BACK  
CHILD LOCK  
DECODER (EXT-2)  
LANGUAGE

AUTO PROGRAM

EDIT/MANUAL

Using the ACI function

Downloading the data to VCR

Changing the COUNTRY setting

Using the DECODER (EXT-2) function

Connecting the external devices

connecting headphones

poor sound

Other ManualsLib Projects



# JVC

InteríArt ***T-V LINK***

**AV-32X4BA**

**COLOUR TELEVISION**

**INSTRUCTIONS**



Thank you for buying this JVC colour television.

To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**


**CAUTION:**

- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.
- Avoid damaging the AC plug and power cord.
- When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from the main outlet.
- The main power button on the TV does not fully isolate the TV from the AC supply. If you are not going to use this TV for a long period of time, be sure to disconnect the AC plug from the AC socket.

Avoid improper installation and never position the unit where good ventilation is unattainable.

When installing this television, distance recommendations must be maintained between the floor and wall, as well as installation in a tightly enclosed area or piece of furniture.

Adhere to the minimum distance guidelines shown for safe operation.

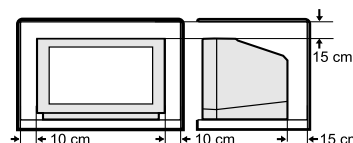

**Failure to heed the following precautions may result in damage to the TV or remote control.**

**DO NOT block the TV's ventilation openings or holes.**

(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)

**DO NOT place anything on top of the TV.**

(such as cosmetics or medicines, flower vases, potted plants, cups, etc.)

**DO NOT allow objects or liquid into the cabinet openings.**

(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

**DO NOT place any naked flame sources, such as lighted candles, on the TV.**

The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it forcefully. Never use any cleaner or detergent on it.

In the event of a fault, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

**NOTE:**

Due to static electricity, the TV may be covered with dust.

If this happens, wipe the TV with a soft cloth being careful not to scratch the TV.

# CONTENTS

<b>Setting up your TV</b> .....	<b>3</b>	<b>SOUND SETTING</b> .....	<b>23</b>
Connecting the aerial and VCR .....	3	STEREO / I • II .....	23
Connecting the power cord to the AC outlet.....	4	Sound Adjustment.....	23
Putting the batteries into the Remote control.....	4	HYPER SOUND.....	23
Initial settings .....	4	<b>3D CINEMA SOUND</b> .....	<b>24</b>
T-V LINK FUNCTIONS .....	6	SURROUND .....	24
<b>TV buttons and functions</b> .....	<b>8</b>	BASS BOOST .....	24
Turn the Main power on.....	9	<b>EXT SETTING</b> .....	<b>25</b>
Turn the TV on from standby mode .....	9	S-IN (S-VIDEO input).....	25
Choose a TV channel .....	9	ID LIST .....	25
Adjust the volume .....	9	DUBBING.....	26
<b>Remote control buttons and functions</b> .....	<b>10</b>	<b>FEATURES</b> .....	<b>27</b>
Turn the TV on or off from standby mode .....	10	SLEEP TIMER .....	27
Choose a TV channel .....	10	BLUE BACK.....	27
Adjust the volume .....	11	CHILD LOCK.....	27
Watch images from external devices .....	11	DECODER (EXT-2).....	29
ZOOM function.....	12	<b>INSTALL</b> .....	<b>30</b>
3D CINEMA SOUND function.....	14	LANGUAGE .....	30
Displaying the current time .....	14	AUTO PROGRAM.....	30
Return to TV channel instantly.....	14	EDIT/MANUAL .....	31
Operating a JVC brand VCR or DVD player.....	14	<b>Additional menu operations</b> .....	<b>36</b>
<b>Teletext function</b> .....	<b>15</b>	Using the ACI function .....	36
Basic operation .....	15	Downloading the data to VCR.....	37
Using the List Mode .....	15	Changing the COUNTRY setting .....	37
Hold.....	16	Using the DECODER (EXT-2) function....	38
Sub-page .....	16	<b>Additional preparation</b> .....	<b>39</b>
Reveal.....	16	Connecting the external devices .....	39
Size .....	16	<b>CH/CC numbers</b> .....	<b>41</b>
Index .....	16	<b>Troubleshooting</b> .....	<b>42</b>
Cancel.....	17	<b>Specifications</b> .....	<b>45</b>
<b>Using the TV's menu</b> .....	<b>18</b>		
Basic operation .....	18		
<b>PICTURE SETTING</b> .....	<b>19</b>		
PICTURE MODE .....	19		
Picture Adjustment.....	19		
COLOUR TEMP.....	19		
<b>PICTURE FEATURES</b> .....	<b>20</b>		
DIGITAL VNR .....	20		
DigiPure Pro.....	20		
COLOUR SYSTEM.....	21		
MOVIE THEATRE.....	21		
4:3 AUTO ASPECT.....	22		
PICTURE TILT .....	22		

# Setting up your TV

## Caution

- Turn off all the equipment including the TV before connecting anything.

## Connecting the aerial and VCR


- The connecting cables are not provided.
- For further details, refer to the manuals provided with the devices to be connected.

■ If connecting a VCR, follow ① → ② → ③.


■ If not connecting a VCR, follow ①.

To operate T-V LINK functions, a T-V LINK compatible VCR must be connected to the EXT-2 terminal on the TV. For details about T-V LINK functions, see “T-V LINK FUNCTIONS” on page 6.

- A video can be viewed from the VCR without performing ③. For details, refer to your VCR instruction manual.
- To connect additional external devices, please see “Additional preparation” on page 39.
- To connect speakers and amplifier, please see “Connecting Speakers/Amplifier” on page 40.
- When a decoder is connected to a T-V LINK compatible VCR, set the DECODER (EXT-2) function to ON. For details, see “Using the DECODER (EXT-2) function” on page 38. Otherwise, you will not be able to view scrambled channels.

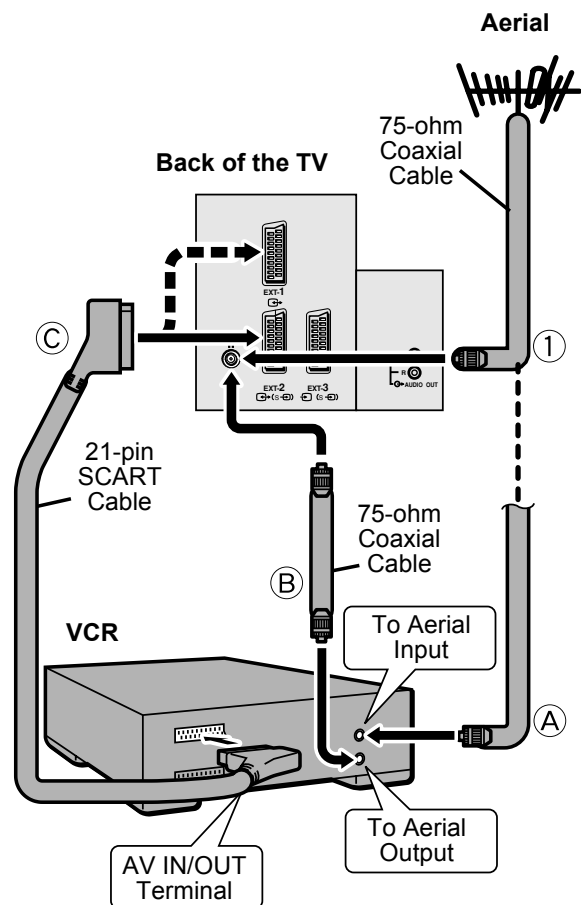

## ■ Rear Panel

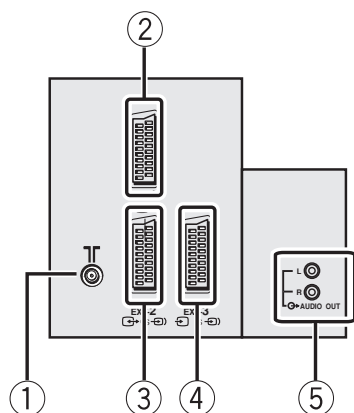

- ① Aerial socket (3)
- ② EXT-1 terminal (3, 25, 39)
- ③ EXT-2 terminal (3, 6, 25, 39)
- ④ EXT-3 terminal (25, 39)
- ⑤ AUDIO OUT terminal (40)


## Connecting the power cord to the AC outlet

### Caution

- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.

## Putting the batteries into the Remote control


Use two AAA/R03 dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

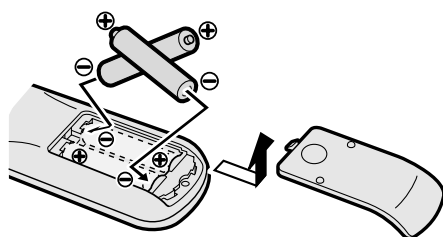

- Follow the warnings printed on the batteries.
- Battery life is about six months to one year, depending on your frequency of use.
- The batteries we supply are only for setting up and testing your TV, please replace them as soon as necessary.
- If the remote control does not work properly, replace the batteries.


## Initial settings

When the TV is first turned on, it enters the initial setting mode, and the JVC logo is displayed. Follow the instructions on the on-screen display to make the initial settings.

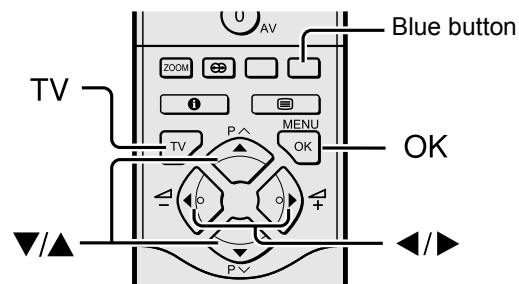

### 1 Press the Main power button on the TV

The Power lamp lights, and the JVC logo is displayed.

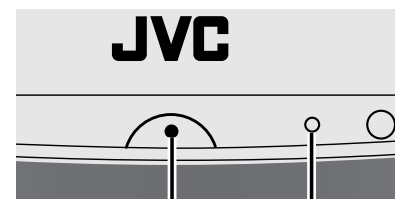


Main power button      Power lamp

- The JVC logo does not appear when your TV has been turned on once. In this case, use the “LANGUAGE” and “AUTO PROGRAM” functions to make the initial settings. For details, see “INSTALL” on page 30.

## 2 Press the **OK** button

The LANGUAGE menu appears.

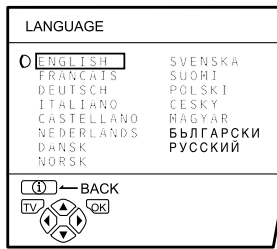


D0002(E)-EN

## 3 Press the **◀/▶** and **▼/▲** buttons to choose **ENGLISH**. Then press the **OK** button

English is set for the on-screen display description. The COUNTRY menu appears as a sub-menu of the AUTO PROGRAM function.

There are two COUNTRY menus. Pressing the yellow button changes the COUNTRY menu as follows:

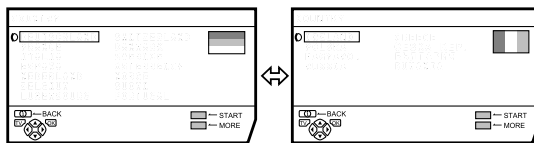

D0003-EN


## 4 Press the **◀/▶** and **▼/▲** buttons to choose the country where you are now located

- If you are located in Australia, we recommend you to choose DEUTSCHLAND.

## 5 Press the blue button to start the **AUTO PROGRAM** function

The AUTO PROGRAM menu appears and received TV channels are automatically registered in the Programme numbers (PR).

- To cancel the AUTO PROGRAM function:  
Press the **TV** button.

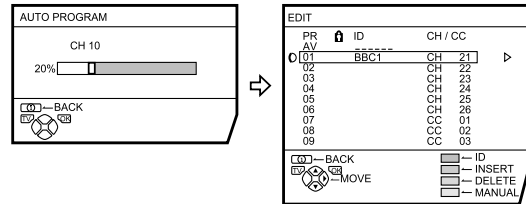

D0004-EN

**After the TV channels have been registered in the Programme numbers (PR), the EDIT menu appears**


- You can proceed to edit the Programme numbers (PR) using the EDIT/MANUAL function. For details, see “EDIT/MANUAL” on page 31.
- If you do not need to use the EDIT/MANUAL function, go to the next step.

**If “ACI START/ACI SKIP” appears in the AUTO PROGRAM menu:**

You can use the ACI (Automatic Channel Installation) function to decode the ACI data and complete the registration of all the TV channels in a short period of time. For details of the ACI function and how to use it, refer to “Using the ACI function” on page 36.

If you don't want to use the ACI function, press the **▼/▲** buttons to choose ACI SKIP and then press **OK**.

**6 Press the OK button to display the T-V LINK menu**

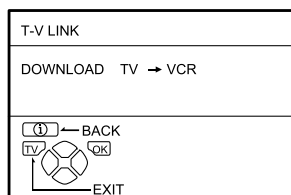

**7 If you do not have a T-V LINK compatible VCR connected:**

Press the **TV** button to exit the T-V LINK menu.

The T-V LINK menu disappears.

**If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:**

Follow the operating procedure “Downloading the data to VCR” on page 37 to transmit the Programme number (PR) data.

**Now, the initial settings are complete, and you can watch the TV**

- When your TV can detect the TV channel name from the TV channel broadcast signal, it automatically registers the TV channel name (ID) to the Programme number (PR) in which the TV channel has been registered.
- If a TV channel you want to view is not set to a Programme number (PR), manually set it using the MANUAL function. For details, see “EDIT/MANUAL” on page 31.
- The TV channel is not registered in Programme number PR 0 (AV). When you want to register a TV channel to PR 0 (AV), manually set it using the MANUAL function. For details, see “EDIT/MANUAL” on page 31.

**T-V LINK FUNCTIONS**

When a T-V LINK compatible VCR is connected to the EXT-2 Terminal on the TV, it is easier to set up the VCR and to view videos. T-V LINK uses the following features:

**To use T-V LINK functions:**

A T-V LINK compatible VCR is necessary. The VCR must be connected to the EXT-2 terminal on the TV by a fully wired SCART cable.

A “T-V LINK compatible VCR” means a JVC VCR with the T-V LINK logo or a VCR with one of the following logos. However, these VCRs may support some or all of the features described below. For details, refer to your VCR instruction manual.

- “Q-LINK” (a trademark of Panasonic Corporation)
- “Data Logic” (a trademark of Metz Corporation)
- “Easy Link” (a trademark of Phillips Corporation)
- “Megalogic” (a trademark of Grundig Corporation)
- “SMARTLINK” (a trademark of Sony Corporation)

## ■ Pre-set Download

Download the registered data on the TV channels from the TV to the VCR.

The Preset Download function automatically begins when the initial setting is complete or whenever the AUTO PROGRAM or EDIT/MANUAL operations are performed.

- This function can be operated via VCR operation.

### When “FEATURE NOT AVAILABLE” is displayed:

If “FEATURE NOT AVAILABLE” is displayed, the download was not performed correctly. Before trying to download again, ensure the following:

- The VCR power is turned on.
- The VCR is T-V LINK compatible.
- The VCR is connected to the EXT-2 terminal.
- The SCART cable is fully wired.

## ■ Direct Rec

“What You See Is What You Record”

You can record to VCR the images that you are currently viewing on TV by a simple operation. For details, read the manual for your VCR. Operate via the VCR. “VCR IS RECORDING” is displayed.

**In the following conditions, the VCR will stop recording if the TV is turned off, if the TV channel or input is switched, or if the menu is displayed on the TV:**

- When recording images from an external device connected to the TV.
- When recording a TV channel after it has been unscrambled on a decoder.
- When recording a TV channel by using the TV’s output because that TV channel cannot be properly received on the VCR’s tuner.
- When the VCR is not ready (for example, when there is no tape inserted), “NO RECORDING” is displayed.



- 
- Operation via the TV is not possible.
  - Generally, the VCR cannot record a TV channel that cannot be received properly by the VCR’s tuner, even though you can view that TV channel on the TV. However, some VCRs can record a TV channel by using the TV’s output if that channel can be viewed on the TV, even though the TV channel cannot be received properly by the VCR’s tuner. For details, refer to your VCR instruction manual.
- 

## ■ TV Auto Power On/VCR Image View


When the VCR starts playing, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen. When the VCR menu is operated, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen.

- This function does not operate if your TV’s main power is turned off. Set your TV’s main power to on (standby mode).

# TV buttons and functions

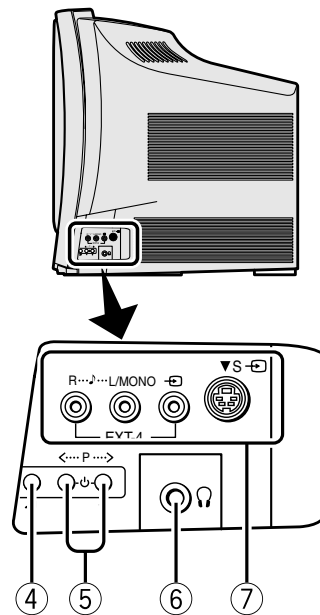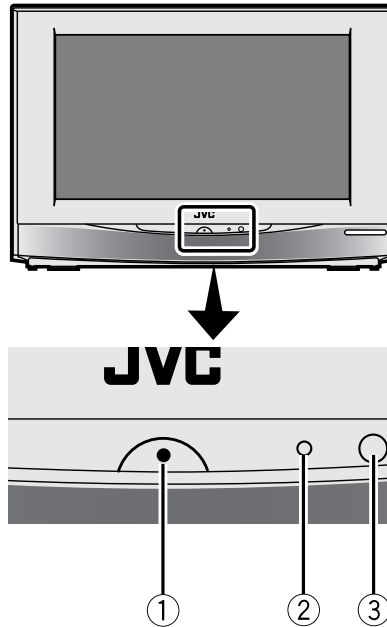

Refer to the pages in parentheses for details.

- ① Main power button (4, 9)
- ② Power lamp (4, 9)
- ③ Remote control sensor
- ④  (Volume) button (9)
- ⑤ P  $\nabla/\wedge$  buttons/  $-/+$  buttons (9)
- ⑥ Headphone jack (mini jack) (39)
- ⑦ EXT-4 terminal (25, 39)

---

## Turn the Main power on

---

**Press the Main power button on the TV.**

The Power lamp lights red and your TV is in the standby mode.

**To turn the Main power off:**

Press the Main power button again.

The Power lamp goes off.

### Caution

- The main power button on the TV does not fully isolate the TV from the AC supply. If you are not going to use this TV for a long period of time, be sure to disconnect the AC plug from the AC socket.

---

## Turn the TV on from standby mode

---

**Press the P  $\nabla/\wedge$  buttons to turn the TV on from standby mode**

When the TV is turned on, the power lamp dims slightly.

---

## Choose a TV channel

---

**Press the P  $\nabla/\wedge$  buttons to choose a programme number (PR) or an EXT terminal**

---

## Adjust the volume



---

**1 Press the  $\triangleleft$  (Volume) button**

The volume level indicator appears.

**2 Press the  $-/+$  buttons while the volume level indicator is displayed**

# Remote control buttons and functions

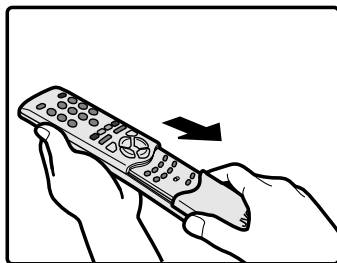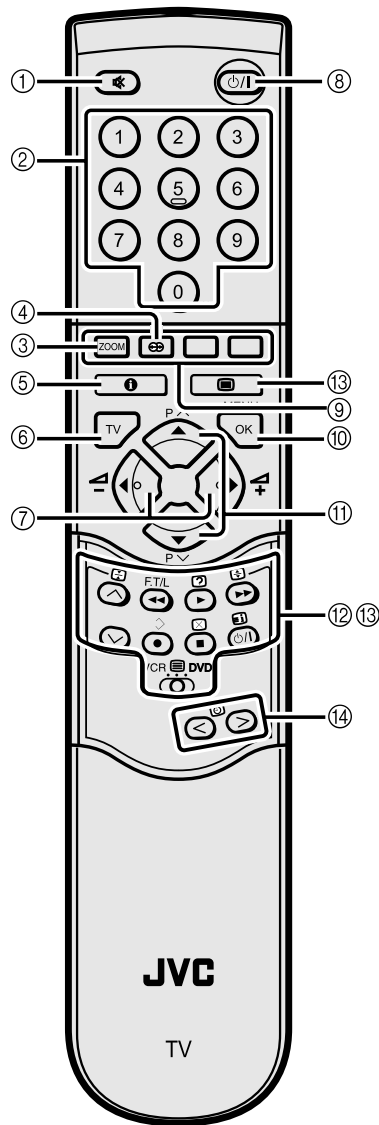

- ① Muting button
- ② Number buttons
- ③ **ZOOM** button
- ④ 3D CINEMA SOUND button
- ⑤ Information button
- ⑥ **TV** button
- ⑦ ◀/▶ buttons
- ⑧ Standby button
- ⑨ Colour buttons
- ⑩ **OK** button
- ⑪ ▼/▲ buttons
- ⑫ VCR/DVD/Teletext control button
- ⑬ VCR ≡ DVD switch ≡ (Text) button
- ⑭ ⏪ ⏩ buttons

---

## Turn the TV on or off from standby mode

---

Press the **⏻/⏼** (standby) button to turn the TV on or off.

When the TV is turned on, the power lamp dims slightly.

- The power can be turned on by pressing the **TV** button, ▼/▲ buttons or Number buttons.

---

## Choose a TV channel

---

- **Use the number buttons:**  
Enter the programme number (PR) of the channel using the number buttons.

Example:


- PR 6 → press **6**
- PR 12 → press **1** and **2**

- **Use the ▼/▲ buttons:**  
Press the ▼/▲ buttons to choose the programme number (PR) you want.

- **Use the PR LIST:**

- 1 Press the ⓘ (Information) button to display the PR LIST**

Pressing the ⓘ (Information) button changes the display as follows:

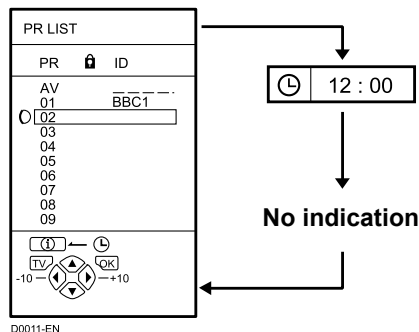

- 2 Press the ◀/▶ and ▼/▲ buttons to choose a Programme number (PR). Then press the OK button**

- For Programme numbers (PR) with the CHILD LOCK function set, the ⓘ (CHILD LOCK) mark is displayed next to the Programme number (PR) in the PR LIST.
- You cannot use the ▼/▲ buttons to choose a Programme number (PR) with the CHILD LOCK function set.
- Even if you try to choose a Programme number (PR) with the CHILD LOCK function set, the ⓘ (CHILD LOCK) mark will appear, and you cannot watch the TV channel. To watch the TV channel, see “CHILD LOCK” on page 27.
- If the picture is tilted, correct it. See “PICTURE TILT” on page 22.

## Adjust the volume

Press the ◀/▶ buttons to adjust the volume.


The Volume indicator appears and the volume changes as you press the -/+ buttons.

- **Muting the sound**  
**Press the 🔇 (muting) button to turn off the sound.**

Pressing the 🔇 (muting) button again restores the previous volume level.

## Watch images from external devices

- **Use the 0 (AV) button:**  
**Press the 0 (AV) button to choose an EXT terminal.**

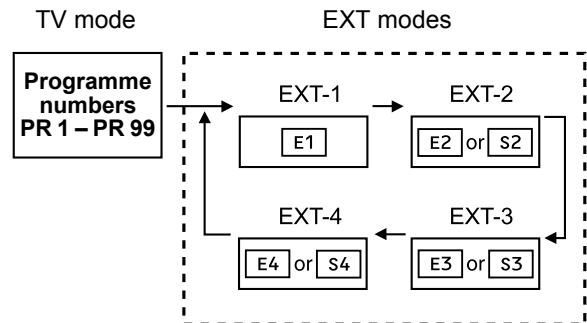

- **Use the ▼/▲ buttons:**  
**Press the ▼/▲ buttons to choose an EXT terminal.**

- **Use the PR LIST:**

- 1 Press the ⓘ (Information) button to display the PR LIST**

- 2 Press the ◀/▶ and ▼/▲ buttons to choose an EXT terminal. Then press the OK button**

- The EXT terminals are registered after the Programme number PR 99.

- You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details, see “S-IN (S-VIDEO input)” on page 25.
- If you do not have a clear picture or no colour appears, change the colour system manually. See “COLOUR SYSTEM” on page 21.
- If you choose an EXT terminal with no input signal, the EXT terminal number becomes fixed on the screen.
- This TV set has a function which can automatically change over the input according to a special signal output from an external device. (The EXT-4 terminal does not support it.)


**To return to a TV channel:**

Press the **TV** button, the **▼/▲** buttons or the Number buttons.

**To use the Programme number PR 0 (AV):**

When the TV and VCR are connected only by the Aerial cable, choosing the Programme number PR 0 (AV) allows you to view images from the VCR. Set the VCR RF channel to the Programme number PR 0 (AV) manually. For details, see “EDIT/MANUAL” on page 31.

Pressing the **0 (AV)** button changes the choice as follows:

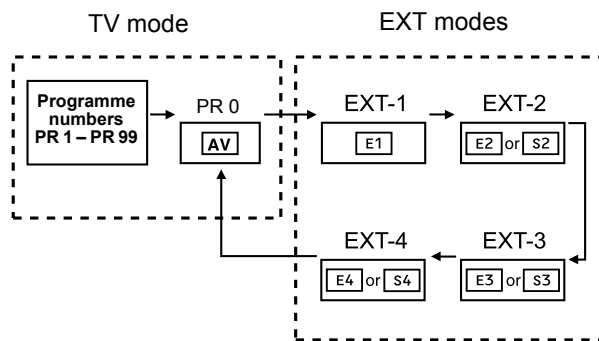

- The VCR RF channel is sent as the RF signal from the VCR.
- Also refer to your VCR instruction manual.

**ZOOM function**

You can change the screen size according to the picture aspect ratio. Choose the optimum one from the following ZOOM modes.

**AUTO:**

For any picture format except Normal Picture (4:3 Aspect Ratio), the picture will be automatically displayed in the optimum screen size.

For Normal Picture (4:3 Aspect Ratio), the picture displayed in accordance with the ZOOM mode set on the 4:3 AUTO ASPECT menu. For details, see “4:3 AUTO ASPECT” on page 22.

- AUTO may not function properly with poor signal quality. In this case, choose an optimum ZOOM mode manually.
- This TV supports WSS (wide-screen signals). When broadcasts with WSS are received with the ZOOM mode set at AUTO, the most suitable ZOOM mode is automatically chosen according to the WSS received.

 
**REGULAR:**

Use to view a normal picture (4:3 aspect ratio) as its original size is.



**PANORAMIC:**


This mode stretches the left and right sides of a normal picture (4:3 Aspect Ratio) to fill the screen, without making the picture appear unnatural.



- The top and bottom of the picture are slightly cut off.


**14:9 ZOOM:**

 This mode zooms up the Wide Picture (14:9 Aspect Ratio) to the upper and lower limits of the screen.




**16:9 ZOOM:**

 This mode zooms up the Wide Picture (16:9 Aspect Ratio) to the full screen.




**16:9 ZOOM SUBTITLE:**

 This mode zooms up the Wide Picture (16:9 Aspect Ratio) with subtitles to the full screen.



**FULL:**

 
This mode uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



Use for pictures with a 16:9 aspect ratio that have been squeezed into a normal picture (4:3 aspect ratio), you can restore their original dimensions.

■ **Choose the ZOOM mode**

**1 Press the ZOOM button to display the ZOOM menu**

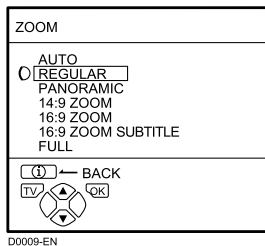

**2 Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button**

The picture expands and the chosen ZOOM mode is displayed in about 5 seconds.

- The ZOOM mode may be automatically changed due to the control signal from an external device. When you want to return to the previous ZOOM mode, choose the ZOOM mode again.

■ **Adjusting the visible area of the picture**

 
If subtitles or the top (or bottom) of the picture are cut off, adjust the visible area of the picture manually.

**1 Press the ZOOM button**

The ZOOM menu appears.

**2 Press the OK button to display the ZOOM mode indication**

Indicator is displayed.



**3 While it is displayed, press the ▼/▲ buttons to adjust the visible area vertically**

- You cannot adjust the visible area in REGULAR or FULL mode.

## 3D CINEMA SOUND function

You can enjoy sounds with a wider ambience.


**Press the  (3D CINEMA SOUND) button to turn the 3D CINEMA SOUND function on or off**


- The 3D CINEMA SOUND effect can be adjusted with the “3D CINEMA SOUND” menu (see page 24).
- The 3D CINEMA SOUND function does not work properly with mono sound.
- If the audio is mono sound, use “HYPER SOUND” (see page 23) to enjoy a simulated stereo experience.
- When 3D CINEMA SOUND is turned on, HYPER SOUND turns off, and when HYPER SOUND is turned on, 3D CINEMA SOUND turns off.

## Displaying the current time

You can display the Current Time on the screen.

**Press the  (Information) button to display the current time**

Pressing the  (Information) button changes the display as follows:

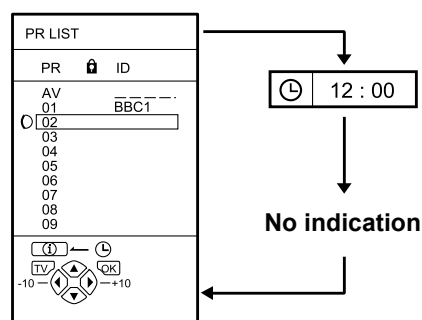

- This TV uses teletext data to set the current time. If the TV has not received a TV channel that has teletext programmes since it was turned on, the time display is blank. To view the current time, choose a TV channel that has teletext programmes.
- When watching videos, an incorrect current time is sometimes displayed.

## Return to TV channel instantly

You can return to a TV channel instantly.

**Press the **TV** button**

The TV returns to the TV mode and a TV channel appears.

## Operating a JVC brand VCR or DVD player

You can operate a JVC brand VCR or DVD player. Pressing the button having the same appearance as the original remote control button of a device makes the function work in the same way as the original remote control.

### 1 Set the VCR DVD Switch to the VCR or DVD position

**VCR:**

When you are operating the VCR, set the switch to the VCR position.


**DVD:**

When you are operating the DVD player, set the switch to the DVD position.

### 2 Press the VCR/DVD Control Button to control your VCR or DVD player

- If your device is not made by JVC, these buttons cannot be used.
- Even if your device is made by JVC, some of these buttons or any one of the buttons may not work, depending on the device.
- You can use the  $\vee/\wedge$  buttons to choose a TV channel. The VCR will receive or choose the chapter the DVD player plays back.
- Some DVD player models use the  $\vee/\wedge$  buttons for both operating of Fast forward/backward functions and choosing the chapter. In this case, the  $\lll/\ggg$  buttons do not work.

# Teletext function

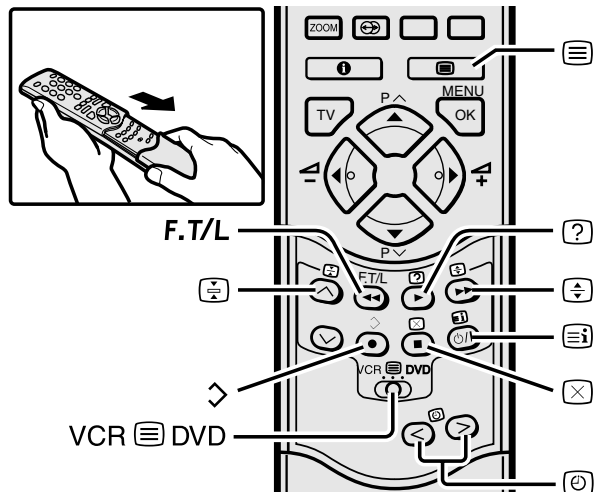

## 4 Choose a teletext page by pressing the ▼/▲ buttons, Number buttons or Colour buttons

### To return to the TV mode:

Press the **TV** button or (Text) button.

- If you have trouble receiving teletext broadcasts, consult your local dealer or the teletext station.
- The ZOOM function will not operate in the TV and text mode or Text mode.
- No menu operations are possible when viewing a teletext programme.
- Language display depends on the country which was set on the COUNTRY menu. If characters on a Teletext programme do not appear properly, change the COUNTRY Setting to other country's. For detail, "Changing the COUNTRY setting" on page 37.

## Basic operation

You can view three types of teletext broadcasts on the TV:  
FLOF (Fasttext), TOP and WST.


### 1 Choose a TV channel with a teletext broadcast

### 2 Set the VCR DVD switch to the (Text) position



### 3 Press (Text) button to display the teletext

Pressing (Text) button changes the mode as follows:

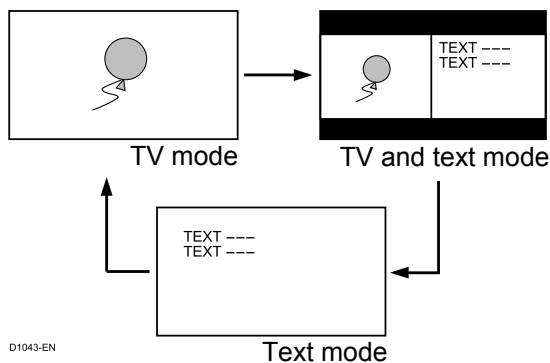

## Using the List Mode


You can store the numbers of your favourite teletext pages in memory and call them up quickly using the colour buttons.

### ■ To store the page numbers:

#### 1 Press **F.T/L** button to engage the List mode

The stored page numbers are displayed at the bottom of the screen.

#### 2 Press a Colour button to choose a position. Then press the Number buttons to enter the page number

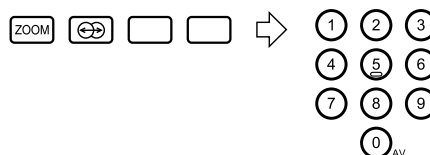

**3 Press and hold down ↵ (Store) button**

The four page numbers blink white to indicate that they are stored in memory.

■ **To call up a stored page:**

**1 Press the F.T/L button to engage the List mode**

**2 Press a colour button to which a page has been assigned**




**To exit the List mode:**  
Press the F.T/L button again.

**Hold**

You can hold a teletext page on the screen for as long as you want, even while several other teletext pages are being received.

**Press the ⏸ (Hold) button**

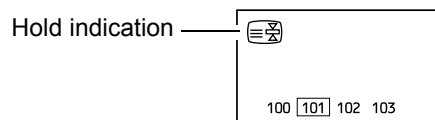

**To cancel the Hold function:**  
Press the ⏸ (Hold) button again.

**Sub-page**

Some teletext pages include sub-pages that are automatically displayed.

**1 Choose a teletext page that includes sub-pages**


Sub-page numbers that can be viewed are automatically displayed at the top of the screen.

**2 Press the Ⓜ </> buttons to choose a sub-page number**

**Reveal**

Some teletext pages include hidden text (such as answers to a quiz). You can display the hidden text.


**Each time you press the ? (Reveal) button, text is hidden or revealed**

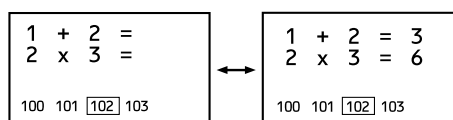

**Size**

You can double the height of the teletext display.

**Press the ⏏ (Size) button.**

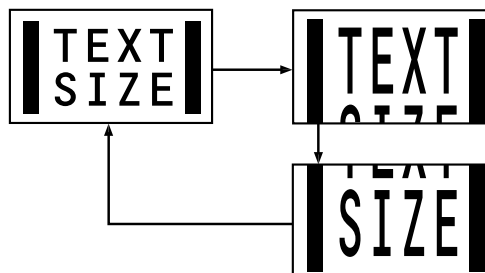

**Index**

You can return to the index page instantly.

**Press the Ⓜ (Index) button**

Returns to page 100 or a previously specified page.

---

## Cancel

---

You can search for a teletext page while watching TV.

---

**1 Press the Number button to enter a page number, or press a Colour button**

The TV searches for a teletext page.

---

**2 Press  (Cancel) button**

The TV programme appears. When the TV finds the teletext page, its page number appears in the upper left of the screen.


---

**3 Press  (Cancel) button to return to a teletext page when the page number is on the screen**

- The TV mode cannot be resumed even by pressing the  (Cancel) button. A TV programme is temporarily displayed instead of the teletext programme.


# Using the TV's menu

This TV has a number of functions you can operate using menus. To fully utilize all your TV's functions, you need to understand the basic menu operating techniques fully.

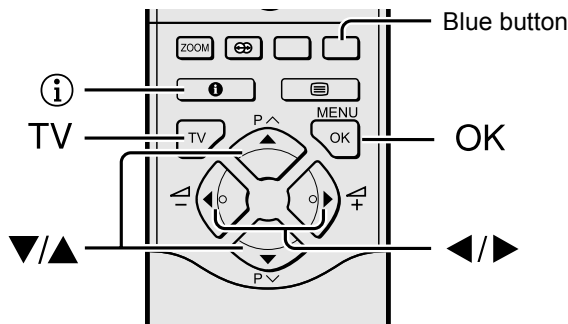


## Basic operation

### 1 Press the **OK** button to display the **MENU** (main menu)

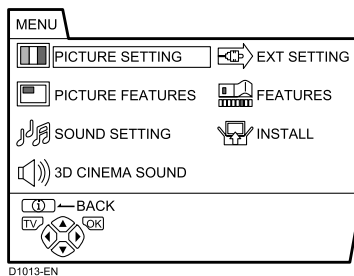

- The display appearing at the bottom of a menu indicates buttons on the remote control you can use when you operate a chosen function.

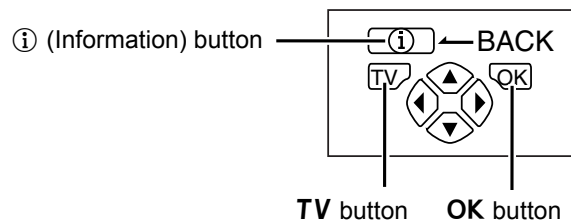

### 2 Press the **◀/▶** and **▼/▲** buttons to choose a menu title, and press the **OK** button

The menu appears.

**To return to the previous menu:**

Press the **ⓘ** (information) button.

**To exit a menu instantly:**

Press the **TV** button.

### 3 Press the **▼/▲** buttons to choose a function

- For details of the functions in the menus, see the following pages.

### 4 Press the **◀/▶** buttons to choose the setting of that function

- If you want to operate a function which appears only with its name, follow the descriptions of that function on the following pages.
- The display appearing at the bottom of a menu shows you a button on the remote control that you can use when you operate a chosen function.


### 5 Press the **OK** button to complete the setting

The menu disappears.

- When watching the television with the NTSC system, the menus are displayed at about half of their normal vertical size.

# PICTURE SETTING

Refer to “Using the TV’s menu” (see page 18) for details of displaying the menu.

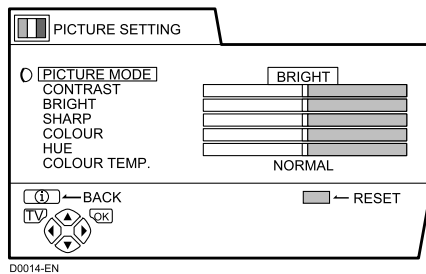

- You can change the HUE setting (picture hue) when the colour system is NTSC 3.58, NTSC 4.43. (See “Specifications” on page 45)

## To return to the default settings in each PICTURE MODE :

Press the blue button.

- This returns the picture settings in the PICTURE MODE mode you have chosen to the default settings, and stores them in the PICTURE MODE mode.

## PICTURE MODE

You can choose one of three PICTURE MODEs to adjust the picture settings automatically.

### **BRIGHT:**

Heightens contrast and sharpness.

### **STANDARD:**

Standardizes picture adjustment.

### **SOFT:**

Softens contrast and sharpness.

## Picture Adjustment

You can change the picture settings of each PICTURE MODE mode as you like.

### **CONTRAST:**

You can adjust the picture contrast.

◀ : lower

▶ : higher

### **BRIGHT:**

You can adjust the picture brightness.

◀ : darker

▶ : brighter

### **SHARP:**

You can adjust the picture sharpness.

◀ : softer

▶ : sharper

### **COLOUR:**

You can adjust the picture colour.

◀ : lighter

▶ : deeper

### **HUE:**

You can adjust the picture tint.

◀ : reddish

▶ : greenish

## COLOUR TEMP.

You can select one of three COLOUR TEMP. modes (three tones of white) to adjust the white balance of the picture. Since white is the colour which is used as a reference for all the other colours, changing the COLOUR TEMP. mode affects the appearance of all the other colours on the screen.

### **COOL:**

A bluish white. Using this mode when watching bright pictures allows you to enjoy a more vivid and bright picture.

### **NORMAL:**


The normal white colour.

### **WARM:**

A reddish white. Using this mode when watching films allows you to enjoy colours that are characteristic of films.

# PICTURE FEATURES

Refer to “Using the TV’s menu” (see page 18) for details of displaying the menu.

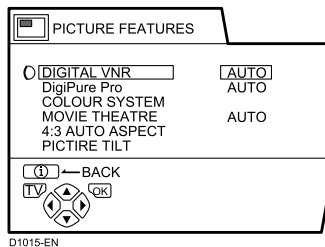

## DIGITAL VNR

The DIGITAL VNR function cuts down the amount of noise in the original picture.

You can choose from the three DIGITAL VNR function settings of AUTO, MIN and MAX.

The TV and external input may be given different DIGITAL VNR settings.

### AUTO:

The TV will automatically adjust the level of the DIGITAL VNR effect to match the amount of noise in the picture, giving you the best possible picture.

- If you set the DIGITAL VNR effect too high it can make the picture less sharp. It is recommended to use the AUTO setting if you can.

### MIN:

The level of the DIGITAL VNR effect is set to the minimum. If you set the DIGITAL VNR function to AUTO but feel that the sharpness of the original picture has not been reproduced fully, change the setting from AUTO to MIN.

- The MIN setting is not suitable for low-quality pictures which contain a lot of noise.

### MAX:

The level of the DIGITAL VNR effect is set to the maximum. If you set the DIGITAL VNR function to AUTO but still notice some noise, change the setting from AUTO to MAX.

- The MAX setting is not suitable for high-quality pictures which contain very little noise.

### OFF:

The DIGITAL VNR function is turned off.

## DigiPure Pro

The DigiPure Pro function uses the latest in digital technology to give you a natural-looking picture.

### DigiPure function:

This function helps to create a natural-looking picture by eliminating unnecessary edges from high-contrast and crisp images. For images with low-contrast, edges are added to produce a sharper, more detailed picture.

You can choose from the three DigiPure function settings of AUTO, MIN and MAX. The TV and external input may be given different DigiPure settings.

- If you set the DigiPure effect too high on a low-quality picture that contains a lot of noise, this may actually make the noise worse. We recommend you use the AUTO setting if you can.

### Picture motion compensation function:

This function displays fast-moving pictures more smoothly and naturally on the screen.

- The effect level of the picture motion compensation function cannot be changed. The effect level is the same no matter which of the AUTO, MIN or MAX settings is used.

### 1 Choose DigiPure Pro

### 2 Press the ◀/▶ buttons to choose a setting. Then press the OK button

### AUTO:

The TV will automatically adjust the level of the DigiPure effect to match the amount of noise in the picture, giving the best possible picture.

### MIN:

The level of DigiPure effect is set to the minimum. When you set the DigiPure Pro function to AUTO and notice some noise, change the setting from AUTO to MIN.

- The MIN setting is not suitable for high-quality pictures which contain very little noise.

**MAX:**

The level of DigiPure effect is set to the maximum. If you set the DigiPure Pro function to AUTO but feel that the original picture quality has not been reproduced fully, change the setting from AUTO to MAX.

- The MAX setting is not suitable for low-quality pictures which contain a lot of noise.

**OFF:**


The DigiPure Pro function is turned off.

---

## COLOUR SYSTEM

---

The colour system is chosen automatically. However, if the picture is not clear or no colour appears, choose the colour system manually.

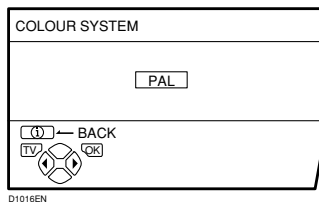

**1 Choose COLOUR SYSTEM then press the OK button**

**2 Press the ◀/▶ buttons to chose the appropriate colour system. Then press the OK button**

**PAL:**

PAL system

**SECAM:**

SECAM system

**NTSC 3.58:**

NTSC 3.58 MHz system

**NTSC 4.43:**

NTSC 4.43 MHz system

**AUTO:**

This function detects a colour system from the input signal. Only when you are viewing a picture from Programme number PR 0 (AV), or EXT terminal, you can choose using the AUTO function.

- The AUTO function may not function properly if you have poor signal quality. If the picture is abnormal in the AUTO function, choose another colour system manually.
- When in the Programme numbers PR 0 (AV) to PR 99, you cannot choose NTSC 3.58 or NTSC 4.43.

---

## MOVIE THEATRE

---

The MOVIE THEATRE function displays a cinema film picture more smoothly and naturally on the screen.

**AUTO:**

The television automatically recognizes the type of signal and turns the function on and off.

**ON:**

This function is turned on.

**OFF:**

This function is turned off.


- The motion may appear unnatural when viewing images with the NTSC colour system. When the MOVIE THEATRE function is set to AUTO or ON, the motion may appear unnatural when viewing images with the NTSC colour system.

### 4:3 AUTO ASPECT

---

You can choose one of three ZOOM modes, REGULAR, PANORAMIC or 14:9 ZOOM, as the ZOOM mode for the normal picture (4:3 aspect ratio).

- 1 Choose **4:3 AUTO ASPECT** then press the **OK** button

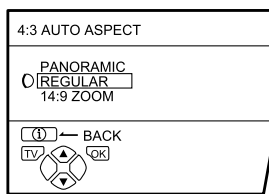


- 2 Press the **▼/▲** buttons to choose a ZOOM mode. Then press the **OK** button

### PICTURE TILT

---

There are cases where the Earth's magnetic force may make the picture tilt. If this happens, you can correct the picture tilt.


- 1 Press the **▼/▲** buttons to choose **PICTURE TILT**. Then press the **OK** button

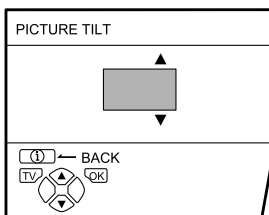

- 2 Press the **▼/▲** buttons until the picture becomes level. Then press the **OK** button

# SOUND SETTING

Refer to “Using the TV’s menu” (see page 18) for details of displaying the menu.

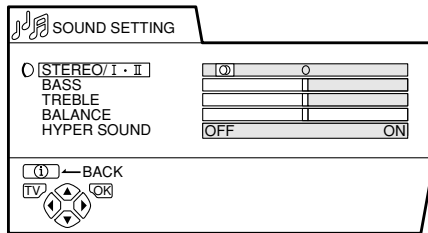

## STEREO / I • II

When you are viewing a bilingual broadcast programme, you can choose the sound from Bilingual I (Sub I) or Bilingual II (Sub II). When the stereo broadcasting is received poorly, you can change from stereo to mono sound so that you can hear the broadcast more clearly and easily.

∞ : Stereo sound

○ : mono sound

I : Bilingual I (sub I)

II : Bilingual II (sub II)

- The sound mode you can choose differs depending on the TV programme.
- This function does not work in the EXT modes. And this function does not appear in the SOUND SETTING menu.

## Sound Adjustment

You can adjust the sound to your liking.

### BASS:

You can adjust the low tone of the sound.

◀ : weaker

▶ : strong

### TREBLE:

You can adjust the high tone of the sound.

◀ : weaker

▶ : strong

### BALANCE:

You can adjust the volume balance between the left and right speaker.

◀ : turn the left speaker’s volume level up.

▶ : turn the right speaker’s volume level up.

## HYPER SOUND

Mono sound is converted to simulated stereo for a more enjoyable audio experience.

### ON:

This function is turned on.

### OFF:


This function is turned off.

- If the audio is stereo sound, the “3D CINEMA SOUND function” (see page 14) is the better choice as it makes your listening experience more akin to sitting in an actual cinema.
- When HYPER SOUND is turned on, 3D CINEMA SOUND turns off, and when 3D CINEMA SOUND is turned on, HYPER SOUND turns off.

# 3D CINEMA SOUND

---

Refer to “Using the TV’s menu” (see page 18) for details of displaying the menu.

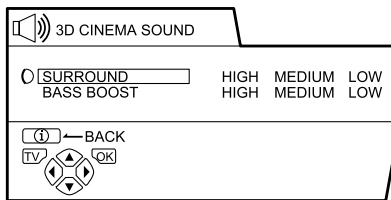

D0063-EN

Adjust the 3D CINEMA SOUND effect. For details on how to turn 3D CINEMA SOUND on and off, read “3D CINEMA SOUND function” (see page 14).

- In order to experience true 3D CINEMA SOUND, the audio needs to be stereo sound.
- When the audio is mono sound, use “HYPER SOUND” (see page 23).

---

## SURROUND

---

Adjust the surround effect. You can choose HIGH, MEDIUM or LOW. Choosing LOW will reduce the surround effect and choosing HIGH will increase the surround effect.

---


## BASS BOOST

---

Adjust the bass sound. You can choose HIGH, MEDIUM or LOW. Choosing LOW will reduce the bass sound and choosing HIGH will increase the bass sound.

# EXT SETTING

Refer to “Using the TV’s menu” (see page 18) for details of displaying the menu.

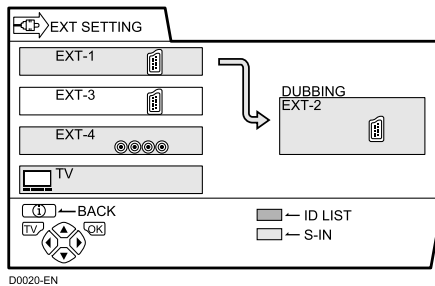

D0020-EN

## S-IN (S-VIDEO input)

When connecting a device (such as S-VHS VCR) which enables an S-VIDEO signal (Y/C signal) to be output, you can enjoy high-quality picture of the S-VIDEO signal (Y/C signal).

### Preparation:

- At first, read the Device Instruction Manual and “Additional preparation” on page 39 to connect the device to the TV properly. Second, follow the Device Instruction Manual to set the device so that an S-VIDEO signal (Y/C signal) can be output to the TV.
- Do not set S-IN (S-VIDEO input) to the EXT terminal connected to a device which cannot output an S-VIDEO (Y/C signal). If it is set wrongly, a picture cannot appear.

### 1 Choose an EXT terminal

### 2 Press the yellow button and set the S-IN (S-VIDEO input).

Then press the OK button

An S-IN (S-VIDEO input) mark is displayed. You can view an S-VIDEO signal (Y/C signal) instead of the regular video signal (composite signal).

### To cancel the S-IN (S-VIDEO input) setting:

Press the yellow button and turn off S-IN (S-VIDEO input) mark. The regular video signal (composite signal) pictures are resumed.


- The EXT-1 terminal does not support S-VIDEO signal (Y/C signal) and you cannot set S-IN (S-VIDEO input) in the EXT-1 terminal.
- Setting S-IN (S-VIDEO input) changes the head character from “E” to “S”. For example, “E2” is changed to “S2”.
- Even a device which enables the S-VIDEO signal (Y/C signal) to be output may output a regular video signal (composite signal) depending on the device setting. If a picture cannot appear because S-IN (S-VIDEO input) setting has been made, read the device Instruction Manual carefully again to check for the device settings.

## ID LIST

You can have a name corresponding to the devices connected for each EXT terminal. Giving a name to an EXT terminal makes the EXT terminal number appear on the screen, together with the name.

### 1 Choose an EXT terminal

### 2 Press the blue button to display the name list (ID LIST)

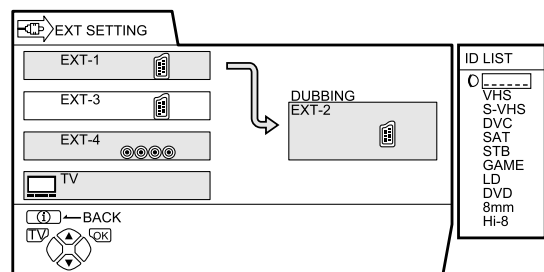

D0021-EN

### 3 Press the ▼/▲ buttons to choose a name. Then press the OK button

The ID LIST disappears and the name is assigned to the EXT terminal.

- You cannot assign an EXT terminal name not found in the name list (ID LIST).

#### To erase a name assigned to the EXT terminal:

Choose a blank space.


### 4 Press the OK button to complete the setting

## DUBBING

You can choose a signal source to be output from an EXT-2 terminal.

You can choose any one of the output signal of the device connected to the EXT terminal and the picture and sound from a TV channel you are currently viewing to output it to the EXT-2 terminal.

### 1 Press the ◀/▶ buttons to choose the arrow from the menu

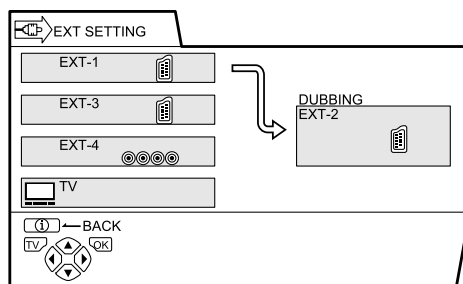

### 2 Press the ▼/▲ buttons to choose an EXT terminal or TV. Then press the OK button

The arrow in the menu represents a signal flow. The left side of the arrow denotes a signal source output from the EXT-2 terminal.

#### EXT-1/EXT-3/EXT-4:

The output signal of the device connected to an EXT terminal passes through the TV and is output from the EXT-2 terminal.


#### TV:

The picture and sound of the TV channel you are currently viewing are output from the EXT-2 terminal.

- During dubbing, you cannot turn off the TV. Turning off the TV also turns off the output from the EXT-2 terminal.
- When you choose an EXT terminal as an output, you can view a TV programme or a picture from the other EXT terminal while dubbing the picture from a device connected to the EXT terminal onto a VCR connected to the EXT-2 terminal.
- The RGB signals from the TV games cannot be output. Teletext programmes cannot be output.

# FEATURES

Refer to “Using the TV’s menu” (see page 18) for details of displaying the menu.

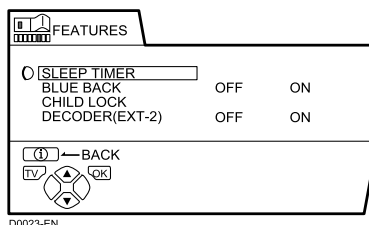


## SLEEP TIMER

You can set the TV to automatically turn off after a specified period of time.

### 1 Choose SLEEP TIMER, then press the OK button

A Sub-menu of the SLEEP TIMER function appears.

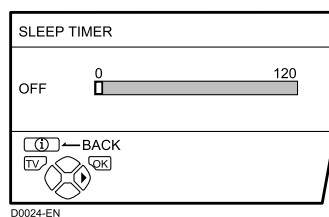

### 2 Press the ◀/▶ buttons to set the period of time.

#### Then press the OK button

You can set the period of time a maximum of 120 minutes (2 hours) in 10 minute increments.

- One minute before the SLEEP TIMER function turns off the TV, “GOODNIGHT!” appears.
- The SLEEP TIMER function cannot be used to turn off the TV’s main power.
- When the SLEEP TIMER function is on, you can display the Sub-menu of the SLEEP TIMER function again to confirm and/or change the remaining period of time of the SLEEP TIMER function. Press the OK button to exit the menu after confirming and / or changing the remaining time.

#### To cancel the SLEEP TIMER function:

Press the ◀ button to set a period of time to “OFF”.

## BLUE BACK

You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an external device.


#### ON:

This function is turned on.

#### OFF:

This function is turned off.


## CHILD LOCK

When there is a TV channel you wish your children not to watch, you can use the CHILD LOCK function to lock out the TV channel. Even when a child chooses a Programme number (PR) in which a locked TV channel has been registered, the screen will change to blue and displays  (CHILD LOCK) so the TV channel cannot be viewed. Unless you enter a pre-set ID number by a special operation, the lock cannot be released and the child cannot view the TV channel programmes.

### ■ To set the CHILD LOCK function

#### 1 Choose CHILD LOCK, then press the 0 (AV) button

“SET ID NO.” (ID number setting screen) appears.

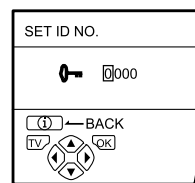


#### 2 Set the ID number to your liking

1 Press the ▼/▲ buttons to choose a number.

2 Press the ◀/▶ buttons to move the cursor.

### 3 Press the **OK** button

The Sub-menu of CHILD LOCK appears.

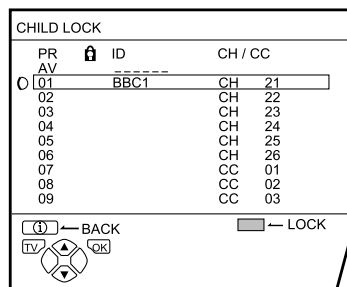

D0026-EN

### 4 Press the **▼/▲** buttons to choose a TV channel

Every time you press the **▼/▲** buttons, the Programme number (PR) changes, and the picture of the TV channel registered in the Programme number (PR) is displayed on the screen.

### 5 Press the blue button and set the CHILD LOCK function. Then press the **OK** button

**Ⓜ** (CHILD LOCK) appears and the TV channel is locked.

#### To reset the CHILD LOCK function:

Press the blue button again.

 
**Ⓜ** (CHILD LOCK) disappears.

To disable easy resetting of the CHILD LOCK function, the menu disappears by choosing the CHILD LOCK function and pressing the **OK** button as in the ordinary menu operation.

## ■ To view a locked TV channel


### 1 Choose a Programme number (PR) in which a TV channel locked with the Number buttons or PR LIST

The screen changes to blue and the **Ⓜ** (CHILD LOCK) appears. You cannot view the TV channel.



D0027-EN

### 2 Press the **(i)** (Information) button to display “ID NO.” (ID NO. input screen).

 

D0028-EN

### 3 Press the Number buttons to enter the ID number

The lock is temporarily released so you can view the TV channel.

#### If you have forgotten the ID number:

Perform step 1 of “To set the CHILD LOCK function”. After confirming the ID number, press the **TV** button to exit the menu.

- Even if you reset the lock temporarily, it does not mean that the CHILD LOCK function set for the TV channel is cancelled. The next time anyone attempts to view the TV channel, it will be locked again.
- When you would like to cancel the CHILD LOCK function, you must perform the operation “To set the CHILD LOCK function” again.
- To disable easy choosing of a Programme number (PR) in which a locked TV channel has been registered, the Programme number (PR) has been set that it cannot be chosen by the **▼/▲** buttons or the operation buttons at the TV.
- To disable easy resetting of the lock, “ID NO.” (ID NO. input screen) is set so that it cannot appear unless you press the **(i)** (Information) button.

---

## DECODER (EXT-2)

---


Only when connecting a Decoder with a T-V LINK compatible VCR connected to the EXT-2 terminal, you can use this function. To operate this function, see “Using the DECODER (EXT-2) function” on page 38.

### Caution

- If you have not connected a Decoder with a T-V LINK compatible VCR connected to the EXT-2 terminal, setting this function to “ON” by mistake causes the picture/ sound of a TV channel you are currently viewing not to be issued.

# INSTALL

Refer to “Using the TV’s menu” (see page 18) for details of displaying the menu.

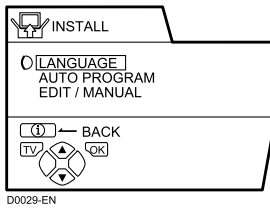


## LANGUAGE

You can choose the language you want to use for the on-screen display from the language list in a menu.

### 1 Choose LANGUAGE, then press the OK button

A sub-menu of the LANGUAGE function appears.

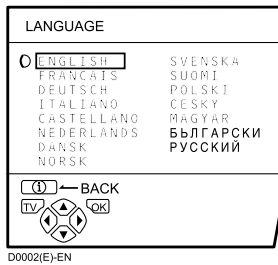


### 2 Press the ◀/▶ and ▼/▲ buttons to choose a language. Then press the OK button

## AUTO PROGRAM

You can automatically register the TV channels which can be received well at your residence in the TV’s Programme numbers (PR) by performing the following.

### 1 Choose AUTO PROGRAM. Then press the OK button

The COUNTRY menu appears as a sub-menu of the AUTO PROGRAM function. There are two COUNTRY menus. Pressing the yellow button changes the COUNTRY menu as follows:

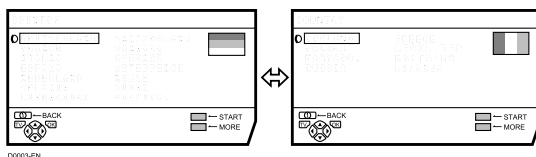


### 2 Press the ◀/▶ and ▼/▲ buttons to choose the country where you are now located

- If you are located in Australia, we recommend you to choose DEUTSCHLAND.

### 3 Press the blue button to start the AUTO PROGRAM function

The AUTO PROGRAM menu appears and received TV channels are automatically registered in the Programme numbers (PR).

- To cancel the AUTO PROGRAM function, press the TV button.

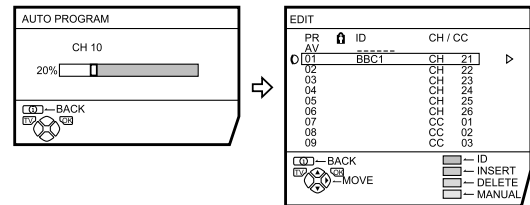

D0004-EN

After the TV channels have been registered in the Programme numbers (PR), the EDIT menu appears.


- You can proceed to edit the Programme numbers (PR) using the EDIT/MANUAL function. For details, see “EDIT/MANUAL” on page 31.
- If you do not need to use the EDIT/MANUAL function, go to the next step.

### If “ACI START/ACI SKIP” appears in the AUTO PROGRAM menu:

You can use the ACI (Automatic Channel Installation) function to decode the ACI data and complete the registration of all the TV channels in a short period of time. For details of the ACI function and how to use it, refer to “Using the ACI function” on page 36.

If you don’t want to use the ACI function, press the ▼/▲ buttons to choose ACI SKIP and then press OK.

#### 4 Press the **OK** button to display the T-V LINK menu

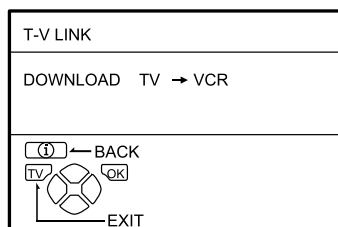

D0005-EN

#### 5 If you do not have a T-V LINK compatible VCR connected:

Press the **TV** button to exit the T-V LINK menu.

#### If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:

Follow the operating procedure “Downloading the data to VCR” on page 37 to transmit the Programme number (PR) data.

- When your TV can detect the TV channel name from the TV channel broadcast signal, it automatically registers the TV channel name (ID) to the Programme number (PR) in which the TV channel has been registered.
- If a TV channel you want to view is not set to a Programme number (PR), manually set it using the MANUAL function. For details, see “EDIT/MANUAL” on page 31.
- The TV channel is not registered in Programme number PR 0 (AV). When you want to register a TV channel to PR 0 (AV) manually set it using the MANUAL function. For details, see “EDIT/MANUAL” on page 31.


## EDIT/MANUAL

The EDIT/MANUAL functions are divided into two types: editing of the current Programme numbers (PR) (EDIT functions) and manual registration of a TV channel you want to view to the Programme number (PR) (MANUAL function). The details about these functions are as follows:

### Caution

- Using the MOVE, DELETE or INSERT function rewrites the current Programme numbers (PR) list. Resultingly, the Programme number (PR) of some of the TV channels will change.
- Using the MANUAL function for a TV channel for which the CHILD LOCK function has been set cancels the CHILD LOCK function for the TV channel.
- Using the MANUAL function for a TV channel for which the DECODER (EXT-2) function has been set to ON returns the setting of the DECODER (EXT-2) function for the TV channel to OFF.
- When a TV channel has already been registered in PR 99, using the INSERT function deletes the TV channel.

### 1 Choose EDIT/MANUAL, then press the **OK** button

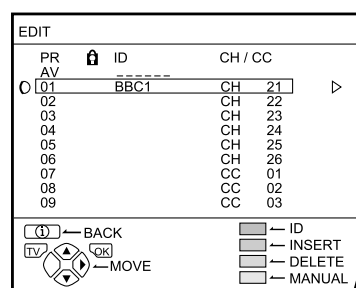

D0038-EN

- For Programme number PR 0, “AV” appears in the Programme numbers (PR) list.
- An EXT terminal number does not appear in the Programme numbers (PR) list.

- The CH/CC number is a number unique to the TV and corresponding to the Channel number of a TV channel. For the relationship of a Channel number and a CH/CC number, see “CH/CC numbers” on page 41.

**2 Follow the operation description of a function you want to use and operate the function**

**MOVE:**

This function changes a Programme number (PR) of a TV channel.

**ID:**

This function registers a Channel name (ID) to a TV channel.

**INSERT:**

This function adds a new TV channel in the current Programme numbers (PR) list by using the CH/CC number.

- You cannot use the INSERT function if you do not know a Channel number of a TV channel. Use the MANUAL function to register a TV channel in the Programme number (PR).

**DELETE:**


This function deletes an unnecessary TV channel.

**MANUAL:**

This function manually registers a new TV channel in a Programme number (PR).

**3 Press the OK button to complete the settings**

The T-V LINK menu appears.

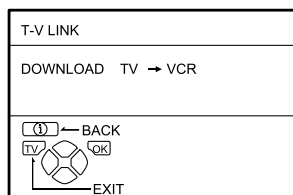

D0005-EN

**4 If you do not have a T-V LINK compatible VCR connected:**

Press the **TV** button to exit the T-V LINK menu.

The T-V LINK menu disappears and all the settings are completed.

**If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:**


Follow the operating procedure “Downloading the data to VCR” on page 37 to transmit the Programme number (PR) data to the VCR.

**MOVE**

**1 Press the ▼/▲ buttons to choose a TV channel**

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the ► button to start the MOVE function**

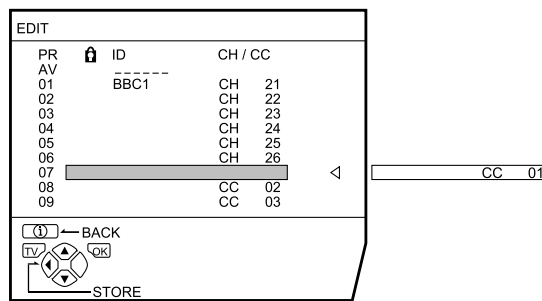

D0030-EN

**3 Press the ▼/▲ buttons to choose a new Programme number (PR)**

**To cancel the MOVE function:**  
Press the **i** (Information) button.


**4 Press the ◀ button to change the Programme number (PR) of a TV channel to a new Programme number (PR)**

■ ID

**1 Press the ▼/▲ buttons to choose a TV channel**


Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the red button to start the ID function**

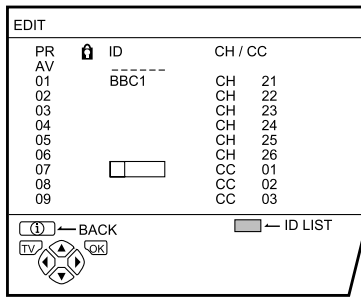


D0031-EN

**3 Press the ▼/▲ buttons to choose the first character of a Channel name (ID) you want to attach to the TV channel**

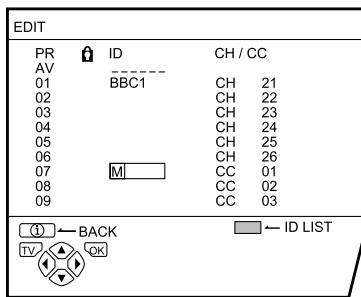

D0032-EN

**4 Press the blue button to display the ID LIST (channel name list)**

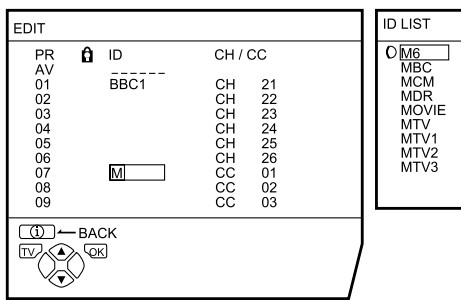

D0033-EN

**5 Press the ▼/▲ buttons to choose the Channel name (ID)**

**To cancel the ID function:**

Press the (i) (Information) button.

**6 Press the OK button to register a Channel name (ID) to a TV channel**

- You can register your unique Channel name (ID) to the TV channel. When step 3 is completed, do not go to step 4, but press the ◀/▶ buttons to move the cursor and the ▼/▲ buttons to choose a character for completing the Channel name (ID). Then press the OK button to register the Channel name (ID) to the TV channel.


■ INSERT

**Preparation:**

- A CH/CC number unique to this TV and corresponding to the Channel number of a TV channel is required. Find the corresponding CH/CC number from a table “CH/CC numbers” on page 41 based on the Channel number of the TV channel.

**1 Press the ▼/▲ buttons to choose a Programme number (PR) for which you will register a new TV channel**

**2 Press the green button and start the INSERT function.**

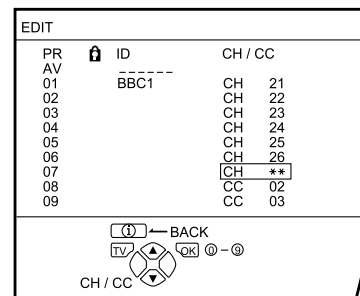

D0034-EN

- Press the ▼/▲ buttons to choose “CC” or “CH” according to the CH/CC number of the TV channel

**To cancel the INSERT function:**  
Press the ⓘ (Information) button.

- Press the Number buttons to enter the remaining CH/CC number

The TV shifts to registration mode. When the registration is completed, the picture of the TV channel appears on the screen.

- The CH/CC number is a number indicating the broadcast frequency to the TV. If the TV cannot detect the TV channel corresponding to the broadcast frequency indicated by the CH/CC number, a picture in the no-signal state appears.

## ■ DELETE

- Press the ▼/▲ buttons to choose a TV channel

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

- Press the yellow button to delete the TV channel


The TV channel is deleted from the Programme numbers (PR) list.

## ■ MANUAL

- Press the ▼/▲ buttons to choose a Programme number (PR) to which you want to register a new TV channel

- Press the blue button to activate the MANUAL function

At the right side following the CH/CC number, the SYSTEM (broadcasting system) of the TV channel appears.

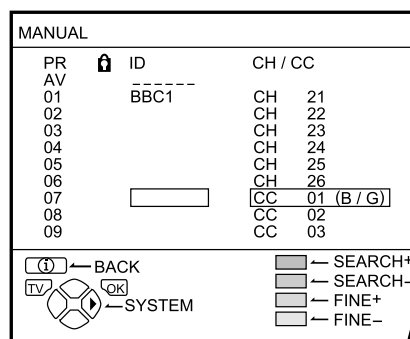

D0035-EN

**To cancel the MANUAL function:**  
Press the ⓘ (Information) button.

- Press the ► button to choose the SYSTEM (broadcasting system) for a TV channel you want to register

If you do not know the correct broadcasting system, set the SYSTEM to “B/G”. If “B/G” is not correct, it results in the fact that you will not hear the sound normally when the TV detects a TV channel. In this case, retry to set the SYSTEM again correctly so that no problem arises.

---

**4 Press the green or red button to search for a TV channel**

Scanning stops when the TV finds a TV channel. Then the TV channel is displayed.

---

**5 Press the green or red button repeatedly until the TV channel you want appears****If the TV channel reception is poor:**

Press the blue or yellow button to fine-tune the TV channel.

**If you cannot hear the normal sound even when the picture of the TV channel appears normally:**

The SYSTEM setting is wrong. Press the ► button and choose a SYSTEM that has normal sound.

---

**6 Press the OK button and register the TV channel to a Programme number (PR)**

The normal EDIT menu is resumed.

# Additional menu operations

---

## Using the ACI function

---

This TV has an ACI function which decodes the ACI (automatic Channel Installation) data.

Using the ACI function allows all TV channels transmitted from the cable TV station to be properly registered quickly according to the data from the cable TV station.

### Caution

- If your cable TV station broadcasts ACI data and if “ACI START/ACI SKIP” appears in the AUTO PROGRAM menu, the ACI function is enabled. In all other cases, it is disabled.

- 
- 1 **Press the ▼/▲ buttons to choose ACI START. Then press the OK button to start the ACI function**

#### **When you don't want to use the ACI function:**

Press the ▼/▲ buttons to choose ACI SKIP and then press the **OK** button.

#### **If the AUTO PROGRAM menu changes to another menu:**

Depending on your cable TV station, there may be a broadcast selection menu set up by the cable TV station.

Follow the menu indications and use the ◀/▶ and ▼/▲ buttons to operate the menu. After you have made the setting, press the **OK** button.

#### **If “ACI ERROR” is displayed in the AUTO PROGRAM menu:**

“ACI ERROR” denotes that the ACI function is not working properly. Press the **OK** button to start the ACI function again.

If “ACI ERROR” still appears even after you have tried to start the ACI function several times, press the ▶ button to start the AUTO PROGRAM function. It does not cause any problem because all the TV channels are registered to the Programme numbers (PR) by the AUTO PROGRAM function.

- 
- 2 **When the settings are completed, the EDIT menu is displayed. Return to the instructions that you were reading before, and continue the operation**

#### **When the “Initial settings” has been made:**

Return to step 6 of “Initial settings” on page 6.

#### **When the “AUTO PROGRAM” has been made:**

Return to step 4 of “AUTO PROGRAM” on page 31.


- 
- If you have any questions about the items in the Broadcast Selection menu or how to operate the menu, please contact your cable TV station.
  - When the cable TV broadcast reception is poor, the ACI function will not work properly.
  - If there is an error in the ACI data itself, the TV channel cannot be registered properly. If this happens, turn the ACI function off (ACI SKIP) and use the AUTO PROGRAM function. Alternatively, use the EDIT/MANUAL function to correct the Programme number (PR) setting.
-

## Downloading the data to VCR

You can transmit to the latest Programme numbers (PR) data to the VCR with the T-V LINK function.

### Caution

- Only when the T-V LINK compatible VCR is connected to the EXT-2 terminal, this operation is enabled.
- Only when the T-V LINK menu is being displayed, this operation is enabled.

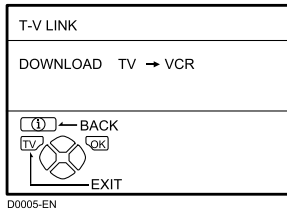


D0005-EN

### 1 Turn on the VCR
 
### 2 Press the OK button

The data transmission begins.



D0037-EN

The T-V LINK menu disappears once the data transmission ends.

### When the T-V LINK menu is changed over to another menu:

The menu operation at the TV side is completed and it is shifted to the menu operation at the VCR side. Refer to the VCR Instruction Manual and operate the VCR.

If “FEATURE NOT AVAILABLE”

appears at the T-V LINK menu, ensure the following three items are correct; then press the **OK** button to retry data transmission.

- Has the T-V LINK compatible VCR been connected to the EXT-2 terminal?
- Has the VCR power been turned on?
- Does the SCART cable that is connected to the EXT-2 terminal to T-V LINK compatible VCR have all proper connections?

## Changing the COUNTRY setting

After the AUTO PROGRAM function is completed, you can change the country you have already set by using the AUTO PROGRAM function.


### 1 Display the INSTALL menu

#### When the EDIT menu is currently being displayed:

Press the **i** (Information) to return to the INSTALL menu.

### 2 Press the ▼/▲ buttons to choose AUTO PROGRAM. Then press the OK button

A COUNTRY menu appears as a sub-menu of the AUTO PROGRAM function. There are two COUNTRY menus. Pressing the yellow button changes the COUNTRY as follows:

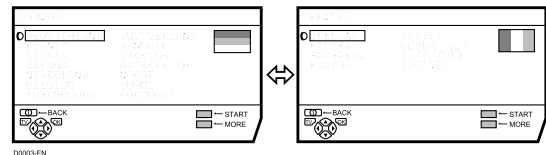

D0003-EN

**3 Press the ◀/▶ and the ▼/▲ buttons to choose a country**

**4 Press the OK button to complete the setting**

The menu disappears.

**To return to the INSTALL menu from the COUNTRY menu:**

Press the ⓘ (Information) button instead of the OK button.

## Using the DECODER (EXT-2) function

When connecting a Decoder with a T-V LINK compatible VCR connected to the EXT-2 terminal, use the DECODER (EXT-2) function to unscramble the scrambled TV channels.

**1 Turn on the Decoder power**

**2 Display the TV channel capable of being unscrambled with the Decoder on the TV**


Even if the Decoder is functioning, a scrambled picture appears at this time.

**3 Press the OK button to display the MENU**

The MENU (main menu) appears.

**4 Press the ▼/▲ buttons to choose FEATURES. Then press the OK button**

The FEATURES menu appears.

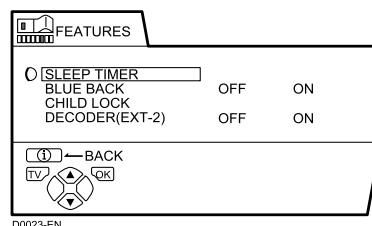

D0023-EN

**5 Press the ▼/▲ buttons to choose DECODER (EXT-2). Then press the ◀/▶ buttons to choose ON**


An unscrambled picture appears.

**To cancel the DECODER (EXT-2) function:**

Press the ◀/▶ buttons to choose OFF.

**6 Press the OK button to complete the setting**

The T-V LINK menu appears.

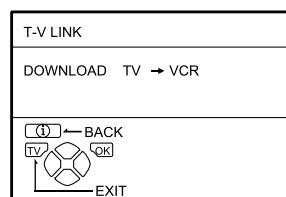

D0005-EN

**7 Follow the operating procedure “Downloading the data to VCR” on page 37 to transmit the Programme number (PR) data to the VCR**

**8 If you have another TV channel capable of being unscrambled with a Decoder, repeat steps 2 through 7**

If for some reason the DECODER (EXT-2) function has been set to “ON” but the TV channel cannot be unscrambled, check the following:

- Has the Decoder been connected to the VCR properly according to the VCR and Decoder Instruction Manuals?
- Has the Decoder power been turned on?
- Can the TV channel be unscrambled with a Decoder?
- Is it necessary to change the VCR settings in order to connect the Decoder? Confirm that the VCR is set properly by rechecking the VCR Instruction Manual.

# Additional preparation

## Connecting the external devices


Connect the devices to the TV, paying attention to the following connection diagram.

### Before connecting anything:


- Read the manuals provided with the devices. Depending on the devices, the connection method may differ from the figure. In addition, the device settings may be changed depending on the connection method to secure proper operation.
- Turn off all the devices including the TV.
- The “Specifications” on page 45 contains the details of the EXT terminals. If you are connecting a device not listed in the following connection diagram, see the table to choose the best EXT terminal.
- Note that connecting cables are not supplied.
- If the VCR’s audio output is in mono, connect the VCR’s AUDIO OUT (audio output) terminal and the TV’s EXT-4 AUDIO L/MONO terminal with an audio cable.

- ① VCR (composite signal)
- ② VCR (composite signal/S-VIDEO signal)
- ③ T-V LINK compatible VCR (composite signal/S-VIDEO signal)
- ④ Decoder
- ⑤ DVD player (composite signal/S-VIDEO signal)
- ⑥ DVD player (composite signal/RGB signal)
- ⑦ TV game (composite signal/RGB signal)
- ⑧ TV game (composite signal/S-VIDEO signal)
- ⑨ Headphones
- ⑩ Camcorder (composite signal/S-VIDEO signal)
- ⑪ SCART cable
- ⑫ Audio cable
- ⑬ Video cable
- ⑭ S-VIDEO cable

Side of the TV

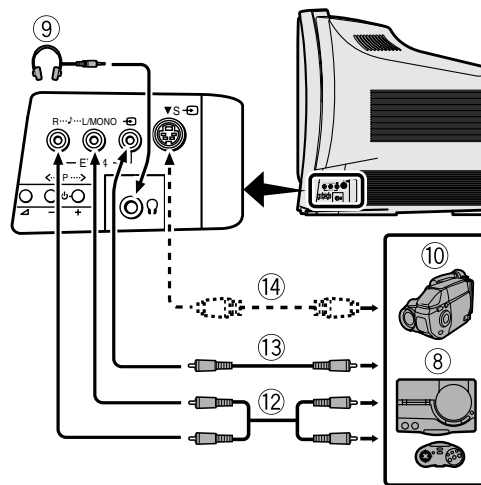

Back of the TV

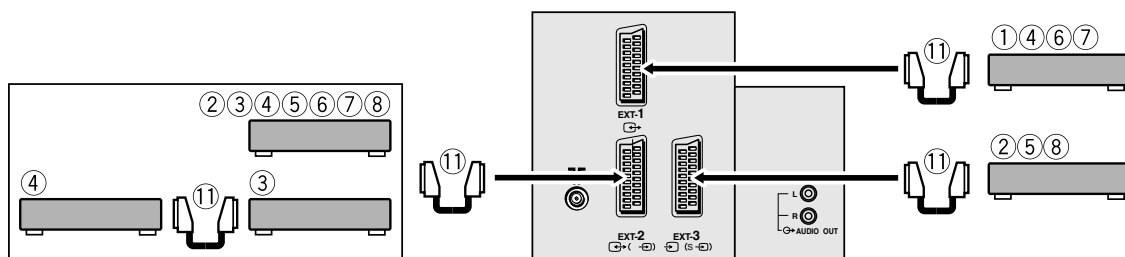

■ **Devices which can output the S-VIDEO signal (Y/C signal) such as a S-VHS VCR**

Connect the device to an EXT terminal other than the EXT-1 terminal.

You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details of how to operate the device, see “S-IN (S-VIDEO input)” on page 25.

■ **T-V LINK compatible VCR**

Be sure to connect the T-V LINK compatible VCR to the EXT-2 terminal. If not, the T-V LINK function will not work properly.

- When connecting a T-V LINK compatible VCR to the EXT-2 terminal, be sure to connect the Decoder to the VCR. If not, the T-V LINK function may not work properly. After you have registered TV channels to the Programme numbers (PR), set the DECODER (EXT-2) function for the Programme number (PR) to ON in order to unscramble a scrambled TV channel. For details of operation, see “Using the DECODER (EXT-2) function” on page 38.

■ **Connecting headphones**

Connect the headphones with a stereo mini-jack (of 3.5 mm in diameter) to the headphone jack at the TV rear panel.

- When you connect the headphones, the TV speakers issue no sound.

■ **Video/sound signal output from the EXT-2 terminal**

You can arbitrarily change over the output of the video/sound signal from the EXT-2 terminal. It is useful when you want to dub the video/sound from another device on the VCR connected to the EXT-2 terminal. For details on how to do this operation, see “DUBBING” on page 26.

■ **TV output from the EXT-1 terminal**

The output of video/sound signal of a TV channel you are currently viewing is always output from the EXT-1 terminal.

- Changing over a Programme number (PR) also changes over the TV output from the EXT-1 terminal.
- The video/sound signal from an EXT terminal cannot be output.
- Teletext programmes cannot be output.


■ **Connecting Speakers/Amplifier**

While referring to the Audio equipment connection diagram, connect the audio equipment you desire to the TV. You can use external front speakers to listen to the TV sound instead of the TV speakers.

**Before connecting anything:**

- Read the manuals provided with the amplifier and speakers.
- Turn the TV and Amplifier off.
- To prevent magnetism from the speakers adversely effecting the TV screen, use magnetic-shielded speakers for the front speakers.
- Note that connecting cables are not supplied.

Back of the TV

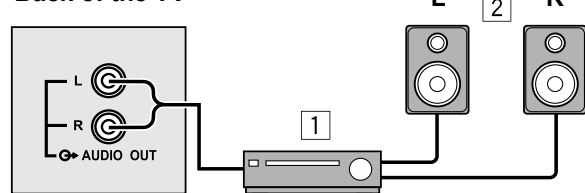

- 1 Amplifier
- 2 Front speakers (Magnetic-shielded type)

- The output from the AUDIO OUT terminal is not interrupted by headphone connection to the TV. You cannot cut the sound from the front speaker even if you connect a headphone to the TV.
- Adjust the volume of the external speakers with the amplifier.

# CH/CC numbers

When you want to use the INSERT function on page 33, find the CH/CC number corresponding to the Channel number of the TV channel from this table.

CH	Channel	CH	Channel	CC	Channel	CC	Channel
CH 02	E2, R1	CH 40	E40, R40	CC 01	S1, AU5	CC 31	S31
CH 03	E3, ITALY A, AU1	CH 41	E41, R41	CC 02	S2	CC 32	S32
CH 04	E4, ITALY B, R2, AU2	CH 42	E42, R42	CC 03	S3	CC 33	S33
CH 05	E5, ITALY D, R6, AU6	CH 43	E43, R43	CC 04	S4	CC 34	S34
CH 06	E6, ITALY E, R7, AU7	CH 44	E44, R44	CC 05	S5	CC 35	S35
CH 07	E7, ITALY F, R8, AU8	CH 45	E45, R45	CC 06	S6, AU5A	CC 36	S36
CH 08	E8, R9, AU9	CH 46	E46, R46	CC 07	S7	CC 37	S37
CH 09	E9, ITALY G	CH 47	E47, R47	CC 08	S8	CC 38	S38
CH 10	E10, ITALY H, R10, AU10	CH 48	E48, R48	CC 09	S9	CC 39	S39
CH 11	E11, ITALY H+1, R11, AU11	CH 49	E49, R49	CC 10	S10	CC 40	S40
CH 12	E12, ITALY H+2, R12	CH 50	E50, R50	CC 11	S11	CC 41	S41
CH 21	E21, R21	CH 51	E51, R51	CC 12	S12	CC 75	X
CH 22	E22, R22	CH 52	E52, R52	CC 13	S13	CC 76	Y, R3
CH 23	E23, R23	CH 53	E53, R53	CC 14	S14	CC 77	Z, ITALY C, R4, AU3
CH 24	E24, R24	CH 54	E54, R54	CC 15	S15	CC 78	Z+1, R5
CH 25	E25, R25	CH 55	E55, R55	CC 16	S16	CC 79	Z+2, AU4
CH 26	E26, R26	CH 56	E56, R56	CC 17	S17		
CH 27	E27, R27	CH 57	E57, R57	CC 18	S18		
CH 28	E28, R28	CH 58	E58, R58	CC 19	S19		
CH 29	E29, R29	CH 59	E59, R59	CC 20	S20		
CH 30	E30, R30	CH 60	E60, R60	CC 21	S21		
CH 31	E31, R31	CH 61	E61, R61	CC 22	S22		
CH 32	E32, R32	CH 62	E62, R62	CC 23	S23		
CH 33	E33, R33	CH 63	E63, R63	CC 24	S24		
CH 34	E34, R34	CH 64	E64, R64	CC 25	S25		
CH 35	E35, R35	CH 65	E65, R65	CC 26	S26		
CH 36	E36, R36	CH 66	E66, R66	CC 27	S27		
CH 37	E37, R37	CH 67	E67, R67	CC 28	S28		
CH 38	E38, R38	CH 68	E68, R68	CC 29	S29		
CH 39	E39, R39	CH 69	E69, R69	CC 30	S30		

# Troubleshooting

If a problem arises while you are using the TV, please read this “Troubleshooting” well before you request having the TV repaired. You may be able to fix it easily by yourself. For example, if the AC plug is disconnected from the AC outlet, or the TV aerial has problems, you may think there is a problem with the TV itself.

## Important:

- This Troubleshooting guide only covers problems whose cause are not easy to determine. If a question arise when you are operating a function, read the page(s) corresponding to the operation of the function well, not this Troubleshooting guide.
- After you have followed the Troubleshooting description or the operating description of the functions concerned without any success, remove the AC plug from the AC outlet and request a repair of your TV. Do not attempt to repair the TV by yourself or remove the rear cover of the TV.

## ■ If you cannot turn on the TV

- Is the AC plug connected to the AC outlet?
- Is the Power lamp lit? If not, press the Main power button.

## ■ No picture/No sound

- Have you chosen a TV channel whose reception is extremely bad? In this case, the BLUE BACK function will be activated, the entire screen becomes blue, and the sound is muted. In spite of this, if you want to view the TV channel, follow the description “BLUE BACK” on page 27 to try to change the BLUE BACK function setting to OFF.
- Have you connected the headphones to the TV? Connecting the headphones to the TV causes sounds not to be issued from the TV speakers.
- If the SYSTEM setting for a TV channel is incorrect, it may prevent the sound from being issued. Follow the description “EDIT/MANUAL” on page 31 to use the MANUAL function to try to change the SYSTEM setting.

## ■ Poor picture

- If noise totally obscures the picture (snow), the aerial or aerial cable may have trouble. Check the following to try to solve the trouble:
  - Has the TV and aerial been connected properly?
  - Has the aerial cable been damaged?
  - Is the aerial pointed to the right direction?
  - Is the aerial itself faulty?
- If the TV or aerial receives interference from the other devices, stripes or noise may appear in the picture. Move such devices as an amplifier, personal computer, or a hair drier that can cause interference away from your TV, or try changing its location. If the aerial suffers interference from a radio tower or high-voltage wire, please contact your local dealer.
- If the TV receives interference from signal reflecting from mountains or building, double-pictures (ghosting) will occur. Try to change the aerial’s direction or replace the antenna with the one with better directionality.
- Are your COLOUR SYSTEM settings for the TV channels correct? Follow the description “COLOUR SYSTEM” on page 21 to try to solve the trouble.

- Has COLOUR or BRIGHT been controlled properly? Follow the description “Picture Adjustment” on page 19 to try to adjust them properly.
- Videotaping teletext is not recommended because it may not record correctly.
- When a white and bright still image (such as a white dress) is displayed on the screen, the white part may look as if it were coloured. It is a phenomenon unavoidable due to the nature of the picture tube itself, and not due to a TV failure. When the picture disappears from the screen, the unnatural colours will also disappear.
- When viewing images from commercially available video software products, or videos from videotapes which have been recorded improperly, the top of the image may be distorted. This is due to the condition of the video signal, and not because of malfunction.

#### ■ Poor sound

Have you adjusted BASS or TREBLE properly? If not, follow the description “Sound Adjustment” on page 23 to try to adjust them properly.

When the TV channel reception is poor, it can be hard to hear the stereo or bilingual sound. In this case, follow the description “STEREO / I • II” on page 23 to hear the sound more easily by changing it to a mono sound.

#### ■ Operation disabled

- Have the batteries of the remote control become exhausted? Follow the description “Putting the batteries into the Remote control” on page 4 and replace them with new batteries to try to solve the problem.
- Have you attempted to use the remote control at the sides or rear of the TV or at a location more than seven meters apart from the TV location? Operate the remote control in the front of your TV or a location less than seven meters from your TV to try to solve the problem.
- When you are viewing a teletext programme, you cannot operate the menus. Press the **TV** button to return the teletext programme to the ordinary TV programme to try operating the menus.
- If the TV operation becomes disabled suddenly, press the Main power button on the TV and turn off the main power. Try to press the Main power button again to turn on the main power. If the TV returns to a normal state, it is not a failure.

#### ■ Other concerns

- When the SLEEP TIMER function operates, the TV is automatically turned off. If the TV is turned off suddenly, try to press the  $\odot$ /I (Standby) button to turn on the TV once again. At this time, if the TV resumes a normal state, there is no problem.
- When a WSS signal is included in the broadcast signal or the signal from an external device, or when the TV is receiving a control signal from an external device, the ZOOM mode will change automatically. When you want to return to the previous ZOOM mode, press the **ZOOM** button to choose the ZOOM mode again.

- If you bring a magnetised device such as a speaker near to your TV, a picture may be warped or unnatural colours appear at the corners of the screen. In this case, keep the device apart from your TV. If the speakers causes such phenomena, use the magnetic-shielded speakers instead.
- A picture may be tilted due to the influence of the earth's magnetism. In this case, use the "PICTURE TILT" on page 22 to complete the tilt.
- It takes a short period of time from the time an operation such as changing channels is performed until an image is displayed. This is not a malfunction. This is the time required for the image to stabilize before it can be displayed.
- The TV may emit a crackling sound due to a sudden change in temperature. It does not matter if a picture or sound does not show any abnormality. If you hear crackling sounds frequently while you are viewing the TV, other causes may be assumed. For precautionary purposes, request your service technician to inspect it.
- Touching the screen may cause you feel a slight electric shock due to its static electricity. It is an unavoidable phenomenon due to the construction of the picture tube. It is not a problem with the TV. You can rest assured that this static discharge does not have harmful influence over the human body.

# Specifications

Item	Model	AV-32X4BA
Broadcasting systems		CCIR B/G, I, D/K
Colour systems		PAL, SECAM • The EXT terminals also support the NTSC 3.58/4.43 MHz system.
Channels and frequencies		• E2-E12, E21-E69, S1-S41, X, Y, Z, Z+1, Z+2, ITALY A-H, ITALY H+1, ITALY H+2, R1-R12, R21-R69, AU1-AU11
Sound-multiplex systems		A2 (B/G, D/K), NICAM (B/G, I, D/K) system
Teletext systems		FLOF (Fastext), TOP, WST (World Standard System)
Power requirements		220 - 240 V AC, 50 Hz
Power consumption		130 W, Standby: 2.5 W
Picture tube size		Viewable area 76 cm (measured diagonally)
Audio output		Rated Power output: 10 W + 10 W
Speakers		(13 cm × 6.5 cm) oval × 2
EXT-1 terminal		Euroconnector (21-pin, SCART) • Video input, Audio L/R inputs and RGB inputs are available. • TV broadcast outputs (Video and Audio L/R) are available.
EXT-2 terminal		Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input, Audio L/R inputs and RGB inputs are available. • Video and Audio L/R outputs are available. • T-V LINK functions are available.
EXT-3 terminal		Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.
EXT-4 terminal		RCA connectors × 3 S-VIDEO connector × 1 • Video input, S-VIDEO (Y/C) input, Audio L/MONO and R inputs are available.
AUDIO OUT terminal		RCA connectors × 2 • Audio L/R outputs are available.
Headphone jack		Stereo mini-jack (3.5 mm in diameter)
Dimensions (W × H × D)		864 mm × 587 mm × 550 mm
Weight		53.0 kg
Accessories		Remote control unit × 1 (RM-C64) AAA/R03 dry cell battery × 2

## Design and specifications subject to change without notice.

Pictures displayed on the screen using this TV's ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this constitutes an infringement of copyright.



**JVC**

# Other ManualsLib Projects



[www.manualslib.com](http://www.manualslib.com)



[www.manualslib.de](http://www.manualslib.de)



[www.manualslib.es](http://www.manualslib.es)



[www.manualslib.fr](http://www.manualslib.fr)



[www.manualslib.nl](http://www.manualslib.nl)



[www.manualslib.mx](http://www.manualslib.mx)



[www.manualslib.tech](http://www.manualslib.tech) 30+ Languages