

JVC AV-T2122 INSTRUCTIONS MANUAL



Table of Contents

[Table of Contents](#)

[Front & Rear Panel Diagrams](#)

[Connecting the Antenna and VCR](#)

[Connecting other External Devices](#)

[Remote Control](#)

[CHANGING THE BATTERIES](#)

[Power](#)

[Adjusting Volume](#)

[Changing Channels](#)

the onscreen menus

Using the Menu

Initial Setup

Auto Tuner Setup

Background

Closed Caption

Language (for on-screen menus)

Noise Muting

Tint

Color

Picture

Bright

Detail

Sound Settings

Bass

Treble

Balance

MTS (Multi-channel TV Sound)

Some Sound Advice

General Items

Set Clock

On/Off Timer

Channel Summary

Set Lock Code

Child Lock

Display

Closed Caption

Video Status

Sleep Timer

Hyper Surround

Number Buttons (10 Key Pad)

Muting

Menu Buttons

TV/Video

Color System

Return

Picture Booster

Troubleshooting

 
Specifications

Other ManualsLib Projects

JVC

COLOR TELEVISION

AV-T2122

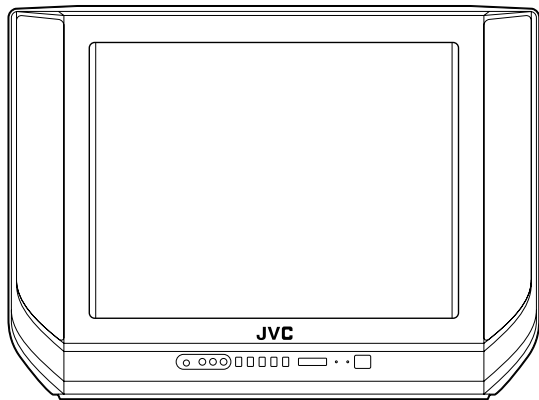

INSTRUCTIONS



Thank you for purchasing this JVC color television.

To ensure your complete understanding, please read this manual thoroughly before operation.

 
WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:

TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS TV.

1. Operate only from the power source specified on the TV.
2. Avoid damaging the power plug and power cord.
3. Avoid improper installation and never position this TV where good ventilation is unattainable. When installing this TV distance recommendations must be maintained between the floor and wall, as well as installment in a tightly enclosed area or piece of furniture. Adhere to the minimum distance guidelines shown for safe operation.

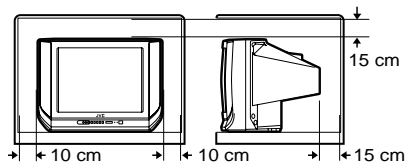

4. Do not allow objects or liquid into the cabinet openings.
5. In the event of a fault, unplug this TV and call a service technician. Do not attempt to repair it by yourself or remove the rear cover.

* When you do not use this TV for a long period of time, be sure to disconnect the power plug from the AC outlet.

TABLE OF CONTENTS

CONNECTIONS

Front & Rear Panel Diagrams	3
Connecting the Antenna and VCR	4
Connecting other External Devices	4

GETTING STARTED

Remote Control	6
Power	7
Adjusting Volume	7
Changing Channels	7

MENU FUNCTIONS

Using the Menu	8
Initial Setup	
<i>Auto Tuner Setup</i>	9
<i>Background</i>	9
<i>Closed Caption</i>	9
<i>Language (for on-screen menus)</i>	9
<i>Noise Muting</i>	9
Picture Settings	
<i>Tint</i>	10
<i>Color</i>	10
<i>Picture</i>	10
<i>Bright</i>	10
<i>Detail</i>	10
Sound Settings	
<i>Bass</i>	11
<i>Treble</i>	11
<i>Balance</i>	11
<i>MTS (Multi-channel TV Sound)</i>	11
<i>Some Sound Advice</i>	11
General Items	
<i>Set Clock</i>	12
<i>On/Off Timer</i>	12
<i>Channel Summary</i>	13
<i>Set Lock Code</i>	14
<i>Child Lock</i>	14

BUTTON FUNCTIONS

Display	15
Closed Caption	15
Video Status	15
Sleep Timer	15
Hyper Surround	15
Number Buttons (10 Key Pad)	16
100+	16
Muting	16
Menu Buttons	16
TV/Video	16
Color System	16
Return+	17
Picture Booster	17


APPENDICES

Troubleshooting	18
Specifications	19




FRONT & REAR PANEL DIAGRAMS

 Front Panel

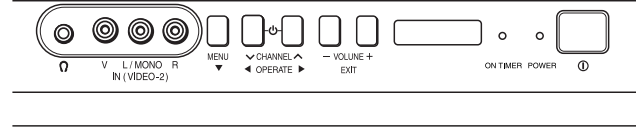


Rear Panel

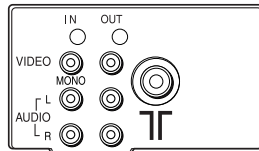 

CONNECTING THE ANTENNA AND VCR

 - For further details, refer to the manuals provided with the devices you are connecting.
- Connecting cables are not supplied.

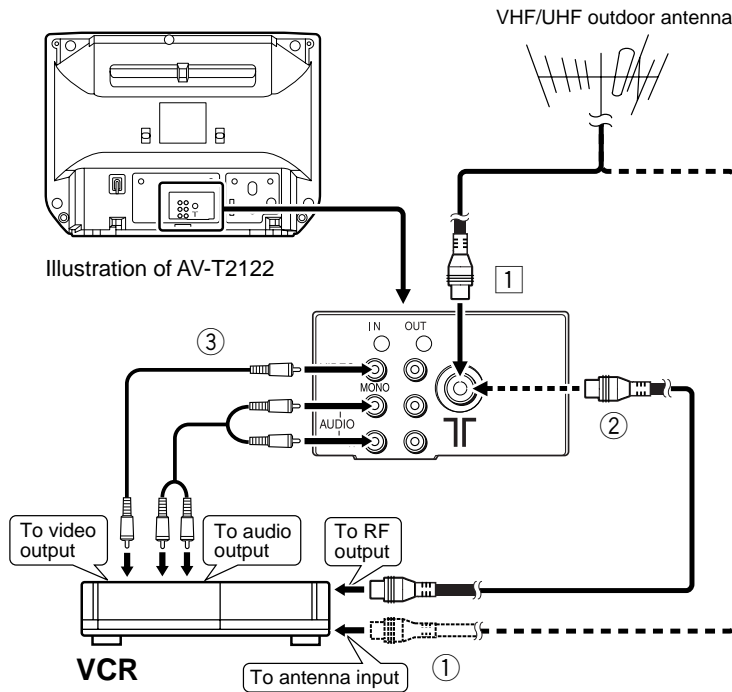


If not connecting a VCR, do ①.
 If connecting a VCR, proceed ① → ② → ③.
 • You can view images from the VCR without doing ③.

Note: When connecting monaural audio to the TV, use the L/MONO jack.

Note: The sound and picture that you are watching are output from VIDEO/AUDIO (L/R) output jacks on the rear panel.

Note: The front and rear AUDIO/VIDEO input jacks are directly connected so that input to either jack is output through both. You cannot provide input to both the front and rear jacks at the same time. Disconnect one input, or use one of the jacks as an output jack only (for monitoring or recording).

 CONNECTING OTHER EXTERNAL DEVICES

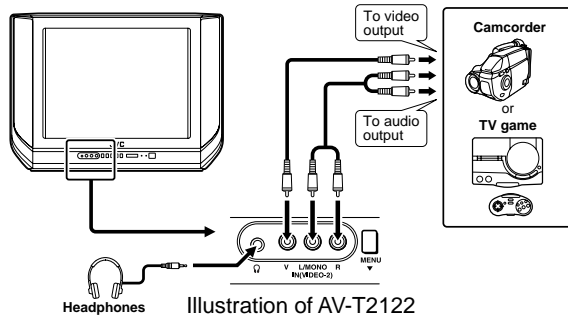

Note: Use headphones with a stereo mini jack. When using headphones, the speaker sound output is disabled.

CONNECTING OTHER EXTERNAL DEVICES


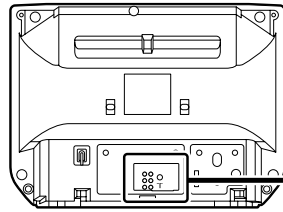 


Illustration of AV-T2122

 


Note: When connecting monaural audio to the TV, use the L/MONO jack.

Note: The sound and picture that you are watching are output from VIDEO/AUDIO (L/R) output jacks on the rear panel.

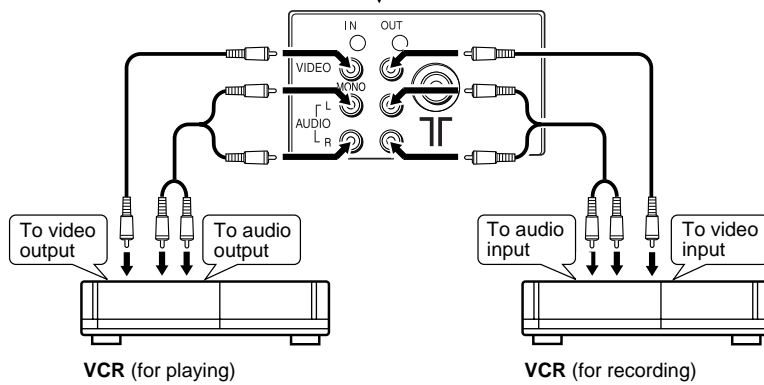

GETTING STARTED

 REMOTE CONTROL

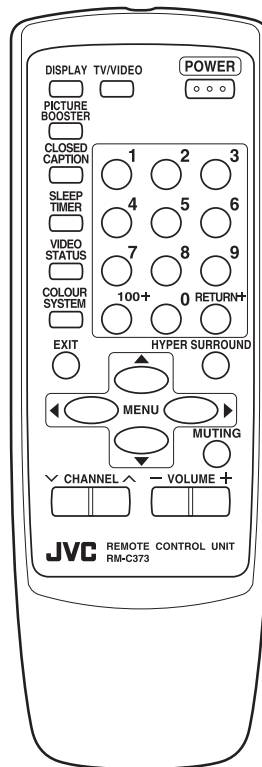

RM-C373

 
CHANGING THE BATTERIES

Be sure to use only size AA/R6/UM-3 batteries.

- 1** Raise the latch on the remote's back cover to remove it.
- 2** Insert the two supplied batteries, carefully noting the "+" and "-" markings on the batteries and remote control. To avoid a short circuit, insert "-" end first.
- 3** Snap the cover back into place.


 


If the remote control acts erratically, replace the batteries. Typical battery life is usually about six months to one year.

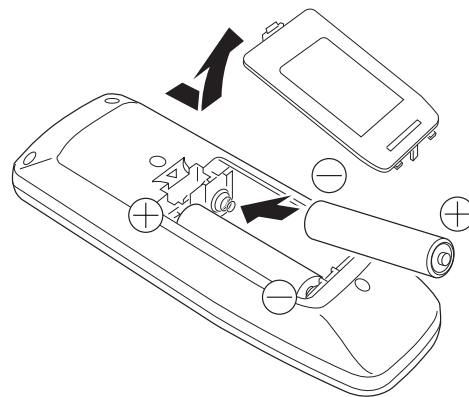We recommend that you use the supplied batteries initially and replace them as soon as operation becomes erratic.
The supplied batteries are for testing, not regular use.





POWER

- ❑ Press the Power button () on the TV front panel. The Power lamp will light red.
- ❑ If the TV will not be turned on even if you press the POWER button, the TV is in the stand-by mode. Press the POWER button on the remote control to turn on the TV.
- ❑ To turn the power off, press the POWER button on the remote control. The Power lamp will light red.
- ❑ The On Timer lamp will light when the On/Off Timer is set, even when the TV power is off.
- ❑ When you do not use the television for a long period of time, turn the power off by pressing the Power button () on the TV front panel. The Power lamp will go out.
- ❑ There are two methods to turn the power on after turning it off by pressing the POWER button on the remote control or by using the On/Off Timer function:
 - 1) Press the POWER button on the remote control.
 - 2) Press the CHANNEL  button and CHANNEL  button on the TV front panel at the same time.
- ❑ When the On-Timer function is set, the On-Timer lamp will light. Even if you turn the power off by pressing the POWER button on the remote control, if the On-Timer function is active the On-Timer lamp stays lit. See page 12 to set On/Off Timer.

ADJUSTING VOLUME

- 1** Press the VOLUME button on the front panel or remote control. The volume level bar will appear.



- 2** Press the MUTING button to instantly turn the volume off to zero. To restore the volume to your previous level, simply press the MUTING button again.

CHANGING CHANNELS

- 1** **10 key direct access.**

Press the numbers on the remote's 10 key pad. For single-digit channel numbers press 0 then the number. For channels above 100, press the 100+ button plus the 2-digit number.

- 2** **CHANNEL  /  button.**

 

Press the CHANNEL  /  button, it will scan the channels in order.

- ❑ *NOTE: After you operate the Auto Tuner Setup (page 9), all of the blank or empty, channels will be removed from scanning so that there is no noise or channel snow when you scan, only active channels.*

- 3** **Return.**

Press the release of the RETURN+ button to return to the previous channel. First, select a channel (game #1). Then, select another channel (game #2) with the 10 key pad and push the RETURN+ button to flip directly back and forth.

- 4** **Return+.**

Press and hold down the RETURN+ button for three seconds. The message, "RETURN CHANNEL PROGRAMMED !" will appear and you can scan as you wish with the CHANNEL  /  button. Press RETURN+ again and you will go back to the Return+ channel you programmed.

To cancel the Return+ channel, press and hold down the RETURN+ button for another three seconds and the message, "RETURN CHANNEL CANCELED !" appears.

- ❑ Pressing any number key or turning the TV off will also cancel a Return+ channel.



USING THE MENU

USING THIS GUIDE:

Throughout this guide there are certain symbols we use as shorthand to show you what to do. When you see them, keep these factors in mind:

- ▲ ▼ Up and down arrows mean press the MENU UP or MENU DOWN buttons. Pressing the up or down buttons allows you to:
 - Move vertically in the main menu screen
 - Move through a submenu, or
 - Move to the next letter, number, or other choice in a submenu, or
 - Back up to correct an error

- ◀ ▶ Left and right arrows mean press the MENU LEFT or MENU RIGHT button to:
 - Select the highlighted item, or
 - Select the options in a submenu



The "Press Button" means you should press that button on the remote control

- Important information, or a note, about a feature follows a cube like this one.

SMALL CAPITAL LETTERS are used when we refer to buttons ... this is important because some menu functions have the same name.

THE ONSCREEN MENUS:

To bring up the onscreen menu, press any of the 4-way cursor control (MENU) buttons on the remote, and the menu will appear on the screen. The item that appears yellow is the selected item. When you use the menu buttons, the Picture Settings menu will appear first. However, since Initial Setup is so important, this guide begins here.

INITIAL SETUP ITEMS

AUTO TUNER SETUP				
NOISE MUTING		ON	OFF	
BACKGROUND		BLACK	CLEAR	
CLOSED CAPTION				
LANGUAGE		POR	SPA	ENG
SELECT BY ▲▼				
OPERATE BY ◀▶				
EXIT BY EXIT				

PICTURE SETTINGS

TINT	----- -----
COLOR	----- -----
PICTURE	----- -----
BRIGHT	----- -----
DETAIL	----- -----
SELECT BY ▲▼	
OPERATE BY ◀▶	
EXIT BY EXIT	

SOUND SETTINGS

BASS	----- -----		
TREBLE	----- -----		
BALANCE	----- -----		
MTS	STEREO	SAP	MONO
	ON AIR ↗		
SELECT BY ▲▼			
OPERATE BY ◀▶			
EXIT BY EXIT			

GENERAL ITEMS

SET CLOCK			
ON/OFF TIMER			
CHANNEL SUMMARY			
SET LOCK CODE			
CHILD LOCK		ON	OFF
SELECT BY ▲▼			
OPERATE BY ◀▶			
EXIT BY EXIT			

- If you use the Menu button on the TV's front panel, an additional menu indicating the current channel and the TV/Video status will appear before the picture settings screen.
- In the Picture screens menu, the "Tint" option only appears if the TV signal is NTSC.

 


AUTO TUNER SETUP

During Auto Tuner Setup, the TV will automatically scan through all available channels and memorize the active ones so that when you scan, you do not pick up weak or noisy channels.

▲▼ To AUTO TUNER SETUP


◀▶ To operate

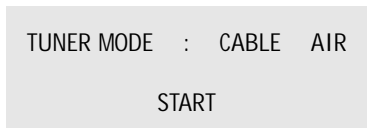

◀▶ To choose CABLE or AIR

▲▼ To move to START

 ◀▶ To start Auto Tuner Setup

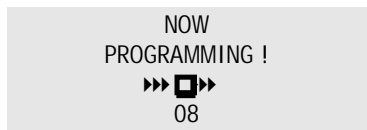

The Programming takes approximately 1 to 2 minutes



 
Note: Noise Muting will not work while Auto Tuner Setup is working.

BACKGROUND

Turn the background color of the on-screens to black or clear.

▲▼ To BACKGROUND

◀▶ To operate



Exit when finished

CLOSED CAPTION

If they are included in a program, you can view closed captions or text information.

▲▼ To CLOSE CAPTION

◀▶ To operate and select a caption or text channel



▲▼ To FINISH

◀▶ To save settings

EXIT when finished

Note: Captions are usually found on CC1 and text on T1. The other caption and text channels are workable but are for future purposes.

Note: See page 15 for complete details on how to access captioning with the CLOSED CAPTION button.

NOTE:

During Initial Setup, the TV will be programmed to only receive active channels. Once the channels are activated by the Auto Tuner Setup they will be included in Scan. Some weak channels may be included or omitted during this procedure. You can add or delete any channels for scanning in the Channel Summary, page 13.

LANGUAGE

Choose from English, Portuguese, or Spanish on-screen menus and displays.

▲▼ To LANGUAGE

◀▶ To activate



Exit when finished

NOISE MUTING

Eliminates noise from channels that are not broadcasting or are too weak.

▲▼ To NOISE MUTING

◀▶ To turn ON/OFF

Exit when finished

Note: Noise Muting will not work when you operate Auto Tuner Setup or Channel Summary.



PICTURE SETTINGS

NOTE:

To exit the Picture Settings menu, press the Exit button at any time.

TINT (NTSC ONLY)

Tint allows you to adjust the levels of red and green in the picture. The tint option appears only when the TV color system is NTSC.

- ▲▼ To TINT
- ▶ To accentuate green
- ◀ To accentuate red
- ▲▼ To move to the next or previous

COLOR

Color allows you to adjust both the vividness and subtlety of the color.

- ▲▼ To COLOR
- ▶ To make colors more vivid
- ◀ To subdue colors
- ▲▼ To move to the next or previous

PICTURE

Picture allows you to adjust the range between black and white in the picture.

- ▲▼ To PICTURE
- ▶ To increase contrast
- ◀ To decrease contrast
- ▲▼ To move to the next or previous

BRIGHT

Adjust the degree of light and dark in the picture.

- ▲▼ To BRIGHT
- ▶ To lighten the picture
- ◀ To darken the picture
- ▲▼ To move to the next or previous

DETAIL

Detail allows you to adjust the level of detail within the picture.

- ▲▼ To DETAIL
- ▶ To make the picture sharper
- ◀ To make the picture smoother
- ▲▼ To move to the next or previous

SOUND SETTINGS



BASS

The Bass level adjustment feature allows you to increase or decrease the level of lower frequencies in the TV's sound.

- ▲▼ To BASS
- ▶ To emphasize bass
- ◀ To reduce bass
- ▲▼ To move to next

TREBLE

The Treble level adjustment feature allows you to increase or decrease the level of higher frequencies in the TV's sound.

- ▲▼ To TREBLE
- ▶ To increase treble
- ◀ To decrease treble
- ▲▼ To move to next

BALANCE

The Balance adjustment feature allows you to center the TV's sound to your needs.

- ▲▼ To BALANCE
- ▶ To shift the speaker balance to the right
- ◀ To shift the speaker balance to the left
- ▲▼ To move to next

MTS (Multi-Channel Television Sound)

MTS technology gives you a choice among stereo, mono, and Second Audio Programs (SAP).

- ▲▼ To MTS



- ◀▶ Select the mode
(The ON AIR arrow tells you if the current signal contains Stereo or SAP)

Note: Keep the TV in STEREO mode to get the fullest sound quality.

Note: SAP will allow you to hear an alternative soundtrack, if available.

Note: Choose MONO to reduce excess noise in a program or channel.

Some Sound Advice

You can tell if a program is broadcast in stereo by the position of the ON AIR arrow in the MTS menu. Unfortunately, it is common for some cable companies to squash the transmission of stereo programs to mono because they only have mono equipment. If connected to a cable system, the sound is at the mercy of that cable company — if they broadcast in mono, you receive mono sound regardless of the original stereo programming.

Fortunately, most programs that are broadcast in stereo are aired on the major television networks. If you connect your TV to an antenna instead of cable, and set the tuner mode in the Auto Tuner Setup to "Air" instead of "Cable," you will be able to pick up stereo broadcasts in stereo.



GENERAL ITEMS

SET CLOCK

The Clock is the heart of all timer functions. You must set the clock before any timer functions will work.

- ▲▼ To SET CLOCK
- ◀▶ To operate

```

TIME          12:34   AM
                START CLOCK
  
```

- ◀▶ To set the hour (AM/PM)
- ▼ To move to minutes
- ◀▶ To set the minutes
- ▼ To move to START CLOCK when done with settings
- ◀▶ To start the clock

THANK YOU !!

If you want to synchronize the TV clock with another clock or time signal, press Left or Right Menu arrow at the appropriate time, and the clock will start.

Note: If the TV is unplugged or you experience a power outage, you must reset the clock in order for any of your timer functions to work.

CLOCK SET MESSAGE:

If you do not set the clock but attempt to use a timer function anyway, you will get the following message:

```

PLEASE SET CLOCK FIRST !!
TIME          --:--  --
                START CLOCK
  
```

ON/OFF TIMER

Use the On/Off Timer as an alarm to wake up, as a program reminder, or as a decoy when you're out of the house.

- ▲▼ To ON/OFF TIMER
- ◀▶ To operate

```

ON TIME          12 : 00  AM
OFF TIME         1 : 00  AM
CHANNEL          07
MODE             ONCE  EVERYDAY
ON/OFF TIMER     YES NO
                FINISH
  
```

- ◀▶ To set the hour (AM/PM) you want the TV to turn on
- ▼ To move to minutes
- ◀▶ To set the minutes
- ▼ To set ON TIME and to move to OFF TIME (set time for TV to turn off)
- ▼ To move to CHANNEL
- ◀▶ To select channel
- ▼ To move to MODE
- ◀▶ Choose ONCE or EVERYDAY
- ▼ To ON/OFF TIMER
- ◀▶ Choose YES for on, NO for off
- ▼ To FINISH
- ◀▶ To save settings

THANK YOU !!

Note: In order for ON/OFF Timer to work, the clock must be set. After a power interruption it will be cancelled.

Note: ON/OFF Timer cannot be set to locked or guarded channels.



CHANNEL SUMMARY

You can add or delete channels from the channel scanning. You can also lock out any "unauthorized" viewers from one or up to all 181 channels.




▲▼ To CHANNEL SUMMARY

◀▶ To operate

ADD

You can manually set channels to scan that were too weak to be picked up during Auto Tuner Setup. (If you have not performed the Auto Tuner Setup described on page 9, do so now.) Conversely, if a channel was too weak to receive a good picture but was picked up anyway, delete it by removing the X.

 CHANNEL ▼ / ▲ to select the channel

CH	ADD		:	CH	ADD	
01	X	-	:	06	X	-
02	X		:	07	-	-
03	-	-	:	08	-	-
04	X	-	:	09	X	-
05	X	-	:	10	X	-

▲▼ To the ADD column

◀▶ To include or delete from scan

 Exit when finished

Note: Channels set to scan will be marked with an X.


Note: Some cable systems experience interference from radio frequencies on Cable Channel 95. If you like, you can delete this channel from scanning by removing the X.





CHANNEL GUARD - LOCK

▲▼ To CHANNEL SUMMARY


◀▶ To operate

▲▼ To the Lock column

 The access code zero (0) to lock or unlock that channel

CH	ADD		:	CH	ADD	
01	X	-	:	06	X	-
02	X	-	:	07	-	
03	X	-	:	08	-	
04	X	-	:	09	X	-
05	X	-	:	10	X	-

Use the Channel ▼ / ▲ button to go to any other channel you want to lock

 Exit when finished

CHANNEL GUARD MESSAGE:

This message appears when a viewer attempts to watch a guarded channel:

THIS CHANNEL IS LOCKED BY
CHANNEL GUARD.
PLEASE ENTER LOCK CODE BY
10 KEY PAD TO UNLOCK IT.
NO. ---

To watch a channel you have locked, enter the lock code using the 10 key pad.

If the wrong lock code is entered, this message will flash on the screen:

INVALID LOCK CODE !

NOTES:

There are two sections in Channel Summary.

To move up and down a column (e.g. from channel to channel) use the Channel ▼ / ▲ button.

To move from item to item (e.g. from channel number to add to lock) use the arrow up/down keys.

Noise Muting will not work while you operate the Channel Summary.



GENERAL ITEMS

SET LOCK CODE

The Lock Code locks and unlocks Channel Guard. Write this three digit number down and keep it where would-be viewers will not look for it!

▲▼ To SET LOCK CODE

◀▶ To operate

The padlock icon appears



 Zero (the access code is zero)

LOCK CODE	000
FINISH	

▲▼ To the first number place

◀▶ To choose the number

▲▼ To move to the next place

Continue to follow these directions for all three numbers

▲▼ To FINISH

◀▶ To save settings and exit

Note: If you forget the Lock Code you can set another one this same way.

Note: After a power interruption you must reset the lock code.


CHILD LOCK

You can disable the front control buttons of the TV.

When this function is set to ON, the TV can be operated using only the remote control.

▲▼ To CHILD LOCK

◀▶ To turn ON/OFF

 Exit when finished

Note: The Child Lock is canceled when you turn the TV's main power off.

BUTTON FUNCTIONS



DISPLAY


The Display screen shows the current status of timers and inputs.



DISPLAY

07	
NOW	12:20 PM
SLEEP TIMER	OFF
ON/OFF TIMER	EVERYDAY
ON TIME	7:00 PM
OFF TIME	10:00 PM

 - The channel or AV input (Channel 07)
- Current time (12:20 PM)
- Sleep Timer status minutes remaining (Off)
- On/Off Timer status (Everyday, on at 7:00 PM, off at 10:00 PM)
- Each press of the Display button changes the display mode:




CLOSED CAPTION

View the closed captions or text when included in a program.



 CLOSED CAPTION



- Note:** To change caption or text channels see page 9.
- Note:** To access a captioning option or to turn one off, allow the display to remain on screen until it disappears. In a few seconds the captions will start.
- Note:** CC2, CC3, CC4, T2, T3, and T4 are functional, however, they are for future purposes.
- Note:** If a large black box covers 80% of your screen, the Text Mode is probably set. Press CLOSED CAPTION to turn it off.

VIDEO STATUS

The Video Status button lets you select the settings when you play a game, watch a movie, or want to reset to factory settings.

“Standard” resets the picture settings to factory standard levels.

“Cinema” for a film-like look to video.

“Game” enhances video graphics.



VIDEO STATUS

 


SLEEP TIMER

Sleep Timer turns off the TV for you in case you fall asleep. Program it to work in intervals of 15 minutes up to 180 minutes.



Sleep Timer



SLEEP TIMER MESSAGE:

20 seconds prior to the automatic shut-off, this message will appear:

GOOD NIGHT !!
PUSH SLEEP TIMER BUTTON
TO EXTEND.

You then have 20 seconds to press the SLEEP TIMER button to delay turn off for another 15 minutes.

HYPER SURROUND

Creates a deep, 3-dimensional sound effect by channeling the sound through the TV's front firing speakers.



HYPER SURROUND

NOTE:

Please note that if the clock, SleepTimer, or On/Off Timer are not set, the initial Display screen will state “Clock Not Set,” “Sleep Timer Off,” and “On/Off Timer Off,” respectively.




BUTTON FUNCTIONS


NUMBER BUTTONS

10 KEY PAD

Press two of the number buttons to move to single and double digit channels.

To move to Channel 7:


 0 (zero)


 7 (seven)


100 + BUTTON

The 100+ button accesses all channels above Channel 99.

To move to Channel 124:

 100+

 2 (two)

 4 (four)

MUTING

The *MUTING* button turns the sound off completely when you press it.

 *MUTING*

The sound will turn off completely.

Note: To return the original volume press the *MUTING* button again.

MENU BUTTONS

The *MENU* buttons allow you to control the options located in the menu screens. A complete discussion on these buttons and on the menu system is located on page 8.

TV / VIDEO

TV/Video selects the input mode.

 TV/VIDEO



 
VIDEO-1: The video signal input to the input terminal on the rear panel is selected.

VIDEO-2: The video signal input to the input terminal on the front panel is selected.

COLOR SYSTEM

The color system is automatically selected, but if the picture not clear or no color appears, select the color system manually.

 COLOR SYSTEM



BUTTON FUNCTIONS



RETURN+

There are two kinds of Return.

Return+ — Set a "Return Channel" to return to after scanning with CHANNEL ∇/\wedge .



RETURN+ and hold for 3 seconds

RETURN CHANNEL
PROGRAMMED !

Scan with CHANNEL ∇/\wedge



RETURN+

Note: To cancel a Return channel, press and hold the RETURN+ button for another 3 seconds until "Return Channel Cancelled !" appears.

Return — Return to the last channel viewed after moving to another channel via the 10 key pad.



RETURN+

Move to another channel with the 10 key pad.



RETURN+

PICTURE BOOSTER

You can select the sharpness of picture when receiving RF.



PICTURE BOOSTER

→ OFF → HIGH → LOW →

OFF: The Picture Booster off. (Standard)

HIGH: The Picture Booster is functioning at maximum.

LOW: The Picture Booster is functioning at minimum.

Note: If the picture becomes abnormal when you set the Picture Booster to HIGH, then set it to LOW or OFF.



TROUBLESHOOTING

PROBLEMS	CHECK
There is no power	<ul style="list-style-type: none"> • See if the power cord became unplugged. • Perhaps you have experienced a blown circuit breaker or fuse or a power outage.
There is no picture or no sound	<ul style="list-style-type: none"> • The antenna could be disconnected. • The input mode (TV or Video) could not be set properly, refer to page 16. • The tuner mode (in the Auto Tuner Setup) could be set improperly, refer to page 9. • The station may be having difficulties, check to see if other channels are operating normally.
Remote control is not operating or operating properly	<ul style="list-style-type: none"> • Check that the batteries are still working and properly installed. • Make sure there are no objects blocking a clear path from the remote to the TV. • Maybe you are too far from the TV, you must be within 7m.
You cannot select a certain channel	<ul style="list-style-type: none"> • Make sure the channels are programmed. See Channel Summary, page 13. • Perhaps the channel is locked, select it with the 10 key pad and follow instructions, on page 13.
The power turns off by itself	<ul style="list-style-type: none"> • Perhaps the On/Off Timer is set, press the POWER button, check page 12. • The power was interrupted or the power cord unplugged. Reset the clock, check page 12. • The Sleep Timer may be set.
The clock is wrong	<ul style="list-style-type: none"> • The power was interrupted and the clock not reset. Reset the clock, check page 12.
On Timer lamp is blinking	<ul style="list-style-type: none"> • There is a problem with the TV. Unplug the set and call for service.
PICTURE	CHECK
The picture color quality is poor	<ul style="list-style-type: none"> • Tint and color may be improperly adjusted. Check page 10. • Video Status mode may be set to an inappropriate setting. Check page 15.
There are lines across the picture	<ul style="list-style-type: none"> • There could be interference from another energy consuming appliance, such as a computer, another TV or VCR. Move any other such appliances farther away from the TV.
The picture is spotted	<ul style="list-style-type: none"> • There could be interference from a running high wattage appliance such as a hair-dryer, vacuum cleaner, or neon sign. You will have to move the antenna away from the source of the interference or change it to a coaxial cable which is less prone to interference.
Double picture (Ghosts)	<ul style="list-style-type: none"> • A building or airplane can reflect the original signal producing a second, delayed one. Adjust the antenna position.
Snowy picture/ Image noise	<ul style="list-style-type: none"> • The antenna may be damaged, disconnected or turned. Check the antenna connection, page 3 and page 4. If it is damaged, you will have to replace it.
Screen is 80% black	<ul style="list-style-type: none"> • Closed Caption Text Mode in on. Press the CLOSED CAPTION button until you select Off.
SOUND	CHECK
Bilingual or stereo programs can not be heard	<ul style="list-style-type: none"> • Make sure the MTS mode is properly set. Refer to page 11 for details on setting MTS Modes.
NOT A PROBLEM	DON'T WORRY ABOUT THIS, IT'S NORMAL
Static electricity	<ul style="list-style-type: none"> • It is normal to feel a surge of static electricity if you brush over or touch the screen.
You hear occasional crackling sounds	<ul style="list-style-type: none"> • It is normal for the TV to emit crackling sounds when turned on or off. Unless the sound or picture become abnormal, this is fine.

S P E C I F I C A T I O N S



MODEL	AV-T2122
Color systems	PAL-M, PAL-N, NTSC-M
TV RF systems	M, N
Channels	VHF 2 to 13, VHF 14 to 69 Sub Mid, Super, Hyper and Ultra bands
Sound-multiplex system	BTSC (Multi Channel Sound)
Power input	AC 110 to 240 V, 50/60 Hz (operating AC 90 to 260 V, 50/60 Hz)
Power Consumption	87 W
Screen size (measured diagonally)	Picture tube 55 cm Visible area 51 cm
Audio output (Rated power output)	1.5 W + 1.5 W
Speakers	(6 cm × 12 cm) oval x2 (stereo sound)
External input/output	VIDEO-1/VIDEO-2: VIDEO input (RCA) AUDIO L/R input (RCA) VIDEO output (RCA) AUDIO L/R output (RCA)
Headphone jack	Stereo mini jack (dia. 3.5 mm, sound is stereo)
Dimensions (W × H × D)	619 mm × 458 mm × 486.5 mm
Weight	22 kg
Accessories	<ul style="list-style-type: none"> • Remote control unit: RM-C373 × 1 • AA/R6/UM-3 dry cell battery × 2

Design and specifications subject to change without notice.



Other ManualsLib Projects



www.manualslib.com



www.manualslib.de



www.manualslib.es



www.manualslib.fr



www.manualslib.nl



www.manualslib.mx



www.manualslib.tech 30+ Languages