


# TOSHIBA

FILE NO. 050-200620GR  
(MFR'S VERSION A)

## SERVICE MANUAL

## COLOR TELEVISION

# 26DF56

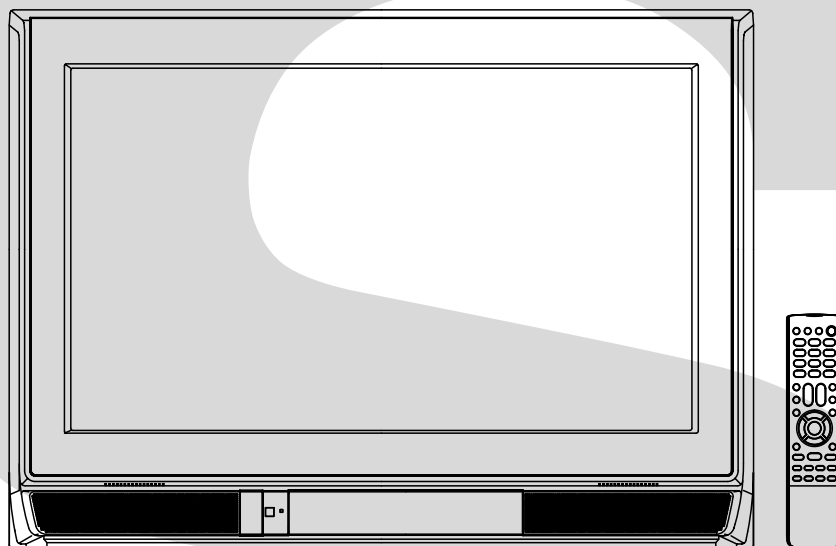

The above model is classified as a green product (\*1), as indicated by the underlined serial number. This Service Manual describes replacement parts for the green product. When repairing this green product, use the part(s) described in this manual and lead-free solder (\*2).

For (\*1) and (\*2), see the next page.

(\*1)

## GREEN PRODUCT PROCUREMENT

The EC is actively promoting the WEEE & RoHS Directives that define standards for recycling and reuse of Waste Electrical and Electronic Equipment and for the Restriction of the use of certain Hazardous Substances. From July 1, 2006, the RoHS Directive will prohibit any marketing of new products containing the restricted substances.

Increasing attention is given to issues related to the global environmental. Toshiba Corporation recognizes environmental protection as a key management tasks, and is doing its utmost to enhance and improve the quality and scope of its environmental activities. In line with this, Toshiba proactively promotes Green Procurement, and seeks to purchase and use products, parts and materials that have low environmental impacts.

Green procurement of parts is not only confined to manufacture. The same green parts used in manufacture must also be used as replacement parts.

(\*2)

## LEAD-FREE SOLDER

This product is manufactured using lead-free solder as a part of a movement within the consumer products industry at large to be environmentally responsible. Lead-free solder must be used in the servicing and repair of this product.

### **WARNING**

**This product is manufactured using lead free solder.**

### **DO NOT USE LEAD BASED SOLDER TO REPAIR THIS PRODUCT !**

The melting temperature of lead-free solder is higher than that of leaded solder by 86°F to 104°F (30°C to 40°C). Use of a soldering iron designed for lead-based solders to repair product made with lead-free solder may result in damage to the component and or PCB being soldered. Great care should be made to ensure high-quality soldering when servicing this product — especially when soldering large components, through-hole pins, and on PCBs — as the level of heat required to melt lead-free solder is high.

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  $\triangle$  mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### **[Note 1]**

If you have not the 500V insulation resistance meter, use a Tester.

#### **[Note 2]**

External exposure metal: Antenna terminal  
Headphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## IMPORTANT

When you exchange IC and Transistor with a heat sink, apply silicon grease on the contact section of the heat sink. Befor applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

# TABLE OF CONTENTS

<b>GREEN PRODUCT PROCUREMENT</b> .....	A1-1
<b>LEAD-FREE SOLDER</b> .....	A1-1
<b>SERVICING NOTICES ON CHECKING</b> .....	A1-2
<b>HOW TO ORDER PARTS</b> .....	A1-2
<b>IMPORTANT</b> .....	A1-2
<b>TABLE OF CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-5
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF ANODE CAP .....	B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....	B2-1, B2-2
<b>SERVICE MODE LIST</b> .....	C-1
<b>WHEN REPLACING EEPROM (MEMORY) IC</b> .....	C-1, C-2
<b>RE-WRITE FOR DIGITAL SOFT FIRMWARE</b> .....	C-3
<b>ELECTRICAL ADJUSTMENTS</b> .....	D-1~D-8
<b>BLOCK DIAGRAM</b>	
MAICON/CHROMA .....	E-1, E-2
SD DIGITAL MODULE .....	E-3, E-4
<b>RINTED CIRCUIT BOARDS</b>	
TV MT/FRONT JACK .....	F-1~F-4
CRT/VM COIL/AV .....	F-5, F-6
DIGITAL .....	F-7, F-8
<b>SCHEMATIC DIAGRAMS</b>	
TUNER/REGULATOR .....	G-1, G-2
CRT/SVM .....	G-3, G-4
MICON .....	G-5, G-6
CHROMA/IF .....	G-7, G-8
DEFLECTION .....	G-9, G-10
POWER .....	G-11, G-12
AV SW/SOUND AMP/TONE CTL .....	G-13, G-14
IN/OUT .....	G-15, G-16
COMB FILTER .....	G-17, G-18
ASIC .....	G-19, G-20
SDRAM .....	G-21, G-22
FLASH .....	G-23, G-24
FRONT END .....	G-25, G-26
AV OUT .....	G-27, G-28
<b>INTERCONNECTION</b> .....	G-29, G-30
<b>WAVEFORMS</b> .....	H-1, H-2
<b>MECHANICAL EXPLODED VIEWS</b> .....	I-1~I-3
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1, J1-2
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J2-1~J2-6

# GENERAL SPECIFICATIONS

<b>G-1</b>	<b>TV System</b>	CRT	CRT Size / Visual Size	26 inch / 656.7mmV	
			CRT Type	Flat (16:9)	
			Magnetic Field	BV/BH	+0.45G/0.18G
		Color System			NTSC
		Display Capability			480i
		Speaker			2 Speaker
			Position		Front
			Size		1.8 x 3.9 Inch
			Impedance		8 ohm
		Sound Output	MAX		2.5W+2.5W
	10%(Typical)		= W		
	NTSC3.58+4.43 /PAL60Hz			No	
<b>G-2</b>	<b>Tuning System</b>	Broadcasting System	Analog	US System M	
			Digital	ATSC(8VSB)/QAM	
		Tuner and Receive CH	System	1Tuner	
		CH Coverage	Destination	USA(W/ CABLE)	
				2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84	
		Intermediate Frequency	Digital		44.00MHz
			Analog	Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.50MHz
		Preset CH			No
Stereo/Dual TV Sound			Yes		
Tuner Sound Muting			Yes		
<b>G-3</b>	<b>Power</b>	Power Source	AC	120V AC 60Hz	
			DC		
		Power Consumption		at AC	
			Stand by (at AC)		130 W at AC 120 V 60 Hz
			Per Year		3 W at AC 120 V 60 Hz
		Energy Star			-- kWh/Year
		Protector			No
	Power Fuse		Yes		
	Safety Circuit		Yes		
	IC Protector(Micro Fuse)		Yes		
<b>G-4</b>	<b>Regulation</b>	Safety		UL	
		Radiation		FCC	
		X-Radiation		DHHS	
<b>G-5</b>	<b>Temperature</b>	Operation		+50C ~ +40oC	
		Storage		-20oC ~ +60oC	
<b>G-6</b>	<b>Operating Humidity</b>			Less than 80% RH	
<b>G-7</b>	<b>OSD Language</b>			English French Spanish	
<b>G-8</b>	<b>Clock and Timer</b>	Clock		Yes	
		Sleep Timer	Max Time	120 Min	
			Step	10 Min	
		On Timer/Off Timer	Program	Yes(1 Program)	
		Game Timer		Yes	
		Wake Up Timer		No	
		Timer Back-up (at Power Off Mode)	more than		-- Min Sec

# GENERAL SPECIFICATIONS

<b>G-9</b>	<b>Remote Control</b>	Unit	RC-KK		
		Glow in Dark Remocon	Yes		
		Remocon Format	TOSHIBA		
		Format	TOSHIBA		
		Custom Code	<u>40-BF h</u>		
		Power Source	Voltage(D.C) UM size x pcs	3V UM-4 x 2 pcs	
		Total Keys		<u>44</u>	
		Keys	Power	Yes	
			TV/VIDEO	Yes	
			Recall	Yes	
			Mute	Yes	
			1	Yes	
			2	Yes	
			3	Yes	
			4	Yes	
			5	Yes	
			6	Yes	
			7	Yes	
			8	Yes	
			9	Yes	
			0	Yes	
			100 / +10	Yes	
			CH Return / Ent	Yes	
			CH +	Yes	
			CH -	Yes	
			VOL +	Yes	
			VOL -	Yes	
			SLEEP	Yes	
			Picture Size	Yes	
			UP	Yes	
			LEFT / FAV -	Yes	
			MENU/ENTER/DVD MENU	Yes	
			RIGHT / FAV +	Yes	
			DOWN	Yes	
			EXIT	Yes	
			Multi Brand Keys	TV	Yes
				CBL/SAT	Yes
				VCR	Yes
				DVD	Yes
				ENTER	Yes
				PAUSE	Yes
				PLAY	Yes
				STOP	Yes
				REW	Yes
		FF		Yes	
SKIP/SEARCH <<	Yes				
SKIP/SEARCH>>	Yes				
TOP MENU	Yes				
REC	Yes				
CLEAR	Yes				
TV/VCR	Yes				

## GENERAL SPECIFICATIONS

G-10	Features		
	Picture	Brightness, Contrast, Color, Tint, Sharpness	Yes
		Mode (Picture preference)	No
		Color Temperature	No
	Audio	MTS	Yes
		Tone Control (Bass, Treble, Balance)	Yes
		Surround	Yes
		Stable Sound	Yes
		BBE	No
		SRS WOW(SRS 3D/Focus/Tru Bass)	No
		Variable Audio Out	No
	Tuning	TV/CABLE	Yes
		CH Program	Yes
		Add/ Delete	Yes
	Label	CH Label	Yes
		Video Label	No
	Favorite CH		Yes
	Lock	Hotel Lock	No
		Channel Lock	Yes
		Video Lock	Yes
		Panel Lock	Yes
	Auto Shut Off		Yes
	Auto Setup		Yes
	Power On Memory		Yes
	V-Chip		Yes
		Type	USA, ORION Type
	RRT		Yes
	Image Tilt		Yes
	SVM Circuit		Yes
	Comb Filter		Yes
			3 -Lines
	Cable Clear		No
	Cinema Mode		No
	Display Format		No
	Aspect		No
	Closed Caption		Yes
	CC Advance		Yes
	Picture Size		Yes
	Picture Scroll		Yes
	FBT Leak Test Protect		Yes
	Menu=Volume Up+Volume Down		Yes
	POD (Point Of Deployment)		No
	TV Guide (EPG)		No
	Digital Out	Dolby Digital	Yes
		MPEG	No
		PCM	Yes
		DTS	No
	HDMI Input		No
	Component Input		Yes
		720x480i (4:3)	Yes (60Hz)
		720x480i (16:9)	Yes (60Hz)
		720x480p (4:3)	No
		720x480p (16:9)	No
		720x576i (4:3)	No
		720x576i (16:9)	No
		720x576p (4:3)	No
		720x576p (16:9)	No
		1280x720p	No
		1920x1080i	No

## GENERAL SPECIFICATIONS

<b>G-11</b>	<b>Accessories</b>	Owner's Manual	Language	English / Spanish	
			W/ Warranty	Yes	
		Remote Control Unit		Yes	
		Rod Antenna		No	
			Poles		
			Terminal		
		Loop Antenna		No	
			Terminal	-	
		U/V Mixer		No	
		DC Car Cord (Center+)		No	
		Guarantee Card		No	
		Warning Sheet		No	
		Circuit Diagram		No	
		Antenna Change Plug		No	
		Service Station List		No	
		Important Safety Instruction		No	
		Dew/AHC Caution Sheet		No	
		AC Plug Adapter		No	
		Quick Set-up Sheet		No	
		Battery		Yes	
			UM size x pcs	UM-4 x 2 pcs	
			OEM Brand	No	
		AC Cord		No	
		AV Cord (2Pin-1Pin)		No	
		Registration Card (NDL Card)		Yes	
		PTB Sheet		No	
ESP Card		No			
300 ohm to 75 ohm Antenna Adapter		No			
Information Sheet(for HDMI)		No			
Information Sheet(Channel)		Yes			
Information Sheet(RRT)		Yes			
Sheet Information(RETURN)		No			
<b>G-12</b>	<b>Interface</b>	Switch	Front	Power	Yes
				Channel Up/Menu Up	Yes
				Channel Down/Menu Down	Yes
				Volume Up/Menu Right	Yes
				Volume Down/Menu Left	Yes
		Indicator		Power	Yes(RED)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input = VIDEO2	RCA
				Audio Input = VIDEO2	RCA x 2 (L/MONO,R)
				S Input = VIDEO2	No
				Other Terminal	No
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2)	No
				S Input(Rear1) = VIDEO1	Yes
				S Input(Rear2)	No
				Audio Input(Rear1) = VIDEO1	RCA x 2 (L/MONO,R)
				Audio Input(Rear2)	No
				Video Output	No
				Audio Output	RCA x 2 (L/MONO,R)
				Component Input1(w/ Analog Audio L/R)	RCA x 5 (L/MONO,R)
				Component Input2(w/ Analog Audio L/R)	No
				HDMI Input1(w/ Analog Audio L/R)	No
				HDMI Input2(w/ Analog Audio L/R)	No
				Digital Audio Out	Coaxial x 1
				Cable Card Slot	No
		IR Blaster	No		
		VHF/UHF Antenna Input	F Type		
		AC Outlet	No		
<b>G-13</b>	<b>Set Size</b>	Approx.	W x D x H (mm)	<u>700</u> x <u>502</u> x <u>495.5</u>	
<b>G-14</b>	<b>Weight</b>	Net (Approx.)		<u>35.5 kg</u> ( <u>78.3 lbs</u> )	
		Gross (Approx.)		<u>41.0kg</u> ( <u>90.4lbs</u> )	

## GENERAL SPECIFICATIONS

<b>G-15</b>	<b>Carton</b>	Master Carton	Content	----	No
			Material	----	Sets
			Dimensions W x D x H(mm)	-- x -- x --	
			Description of Origin		No
		Gift Box	Material		Double/Brown
			Dimensions W x D x H(mm)	840 x 620 x 627	
			Description of Origin		Yes
		Drop Test			Natural Dropping At 1 Corner / 2 Edges / 4 Surfaces
			Height (cm)		60 (ORION SPEC:31)
		Container Stuffing		156	Sets/40' container
<b>G-16</b>	<b>Material</b>	Cabinet	Cabinet Front	PS 94V0	DECABROM
			Cabinet Rear	PS 94V0	NON-DECABROM
		PCB	Non-Halogen Demand		No
			Eyelet Demand		Yes
<b>G-17</b>	<b>Environment</b>	Environmental standard requirement (by buyer)		Green procurement of TOSHIBA	
		Pb-free		Phase3(Phase3A)	
		Measures for Whisker		Yes	

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF ANODE CAP


Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.


### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 1-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver. A cracking noise will be heard as the voltage is discharged.

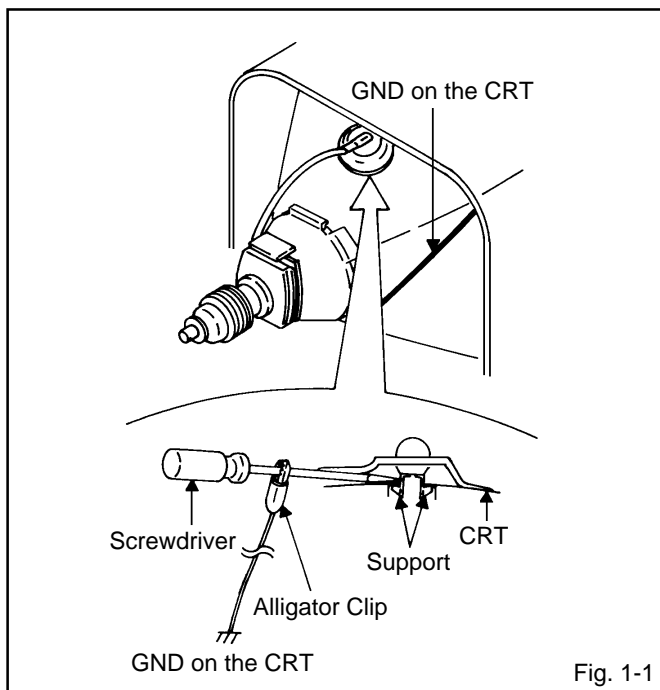

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 1-2.)

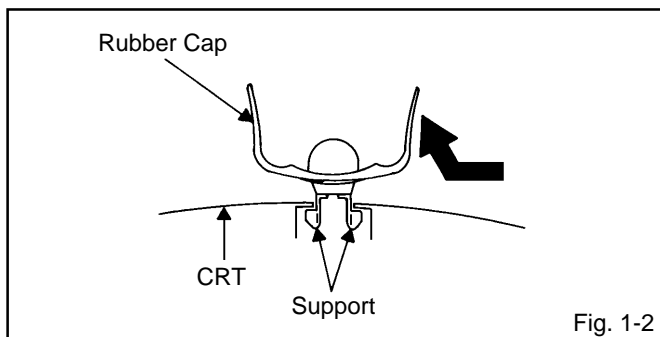


3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION


1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

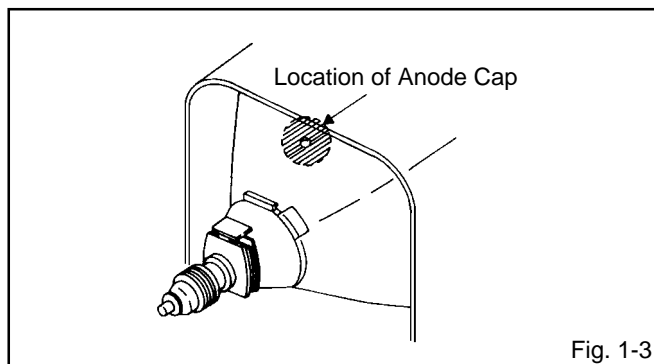


### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

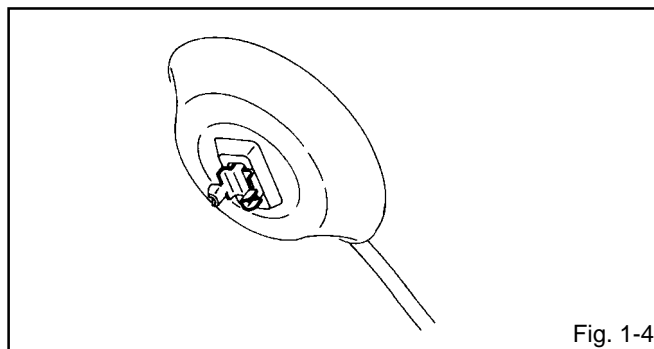

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

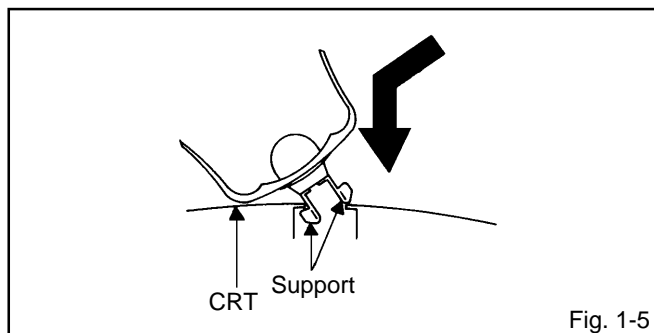

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

# DISASSEMBLY INSTRUCTIONS


## 2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

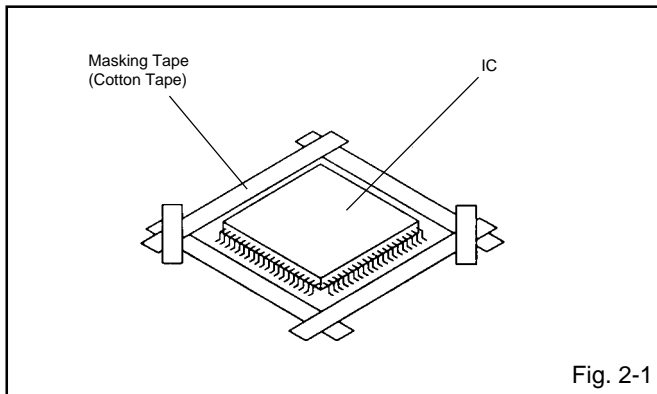

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

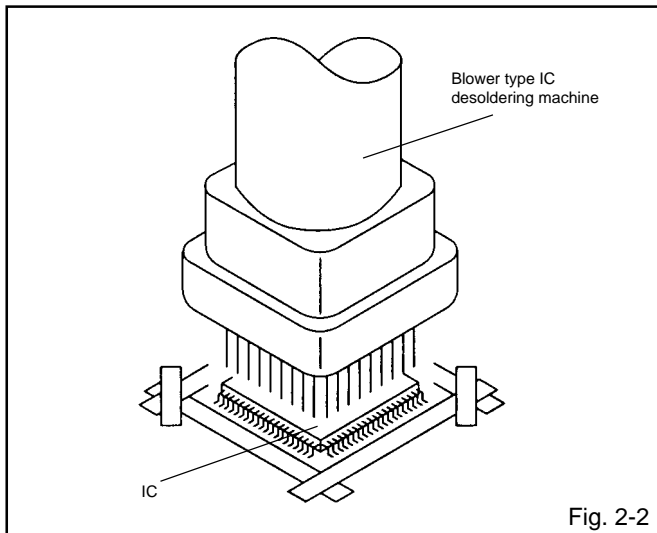

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

#### NOTE

Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

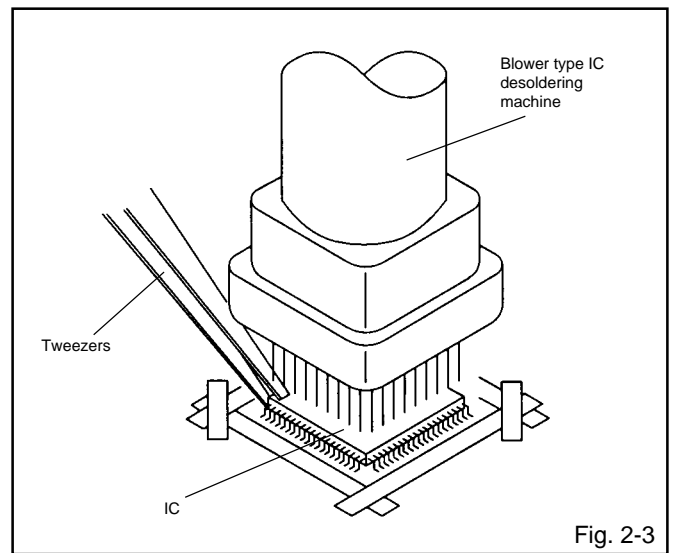


4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

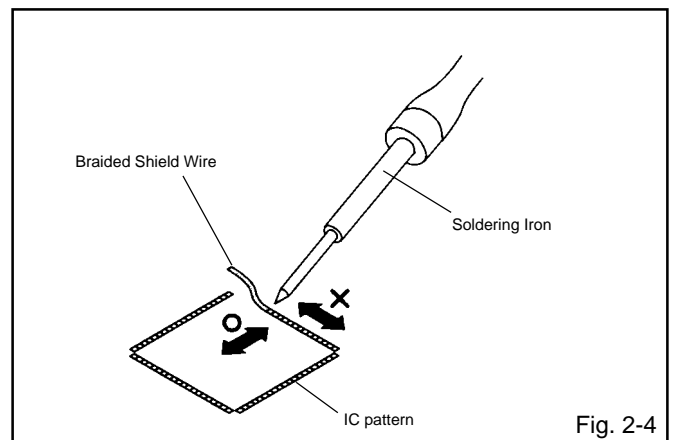


# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 2-5.)

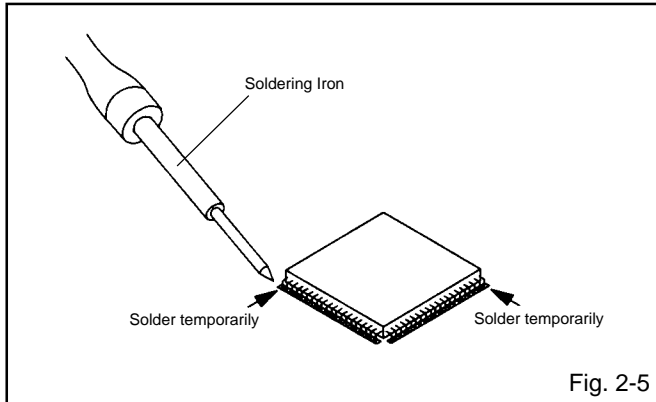


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 2-6.)

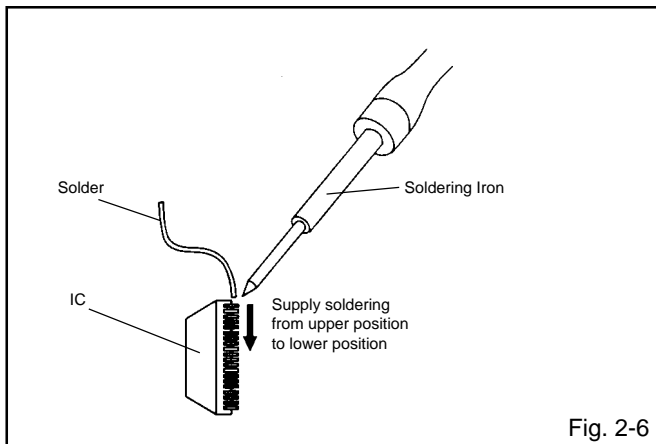


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 2-7.)

### NOTE

Do not absorb the solder to excess.

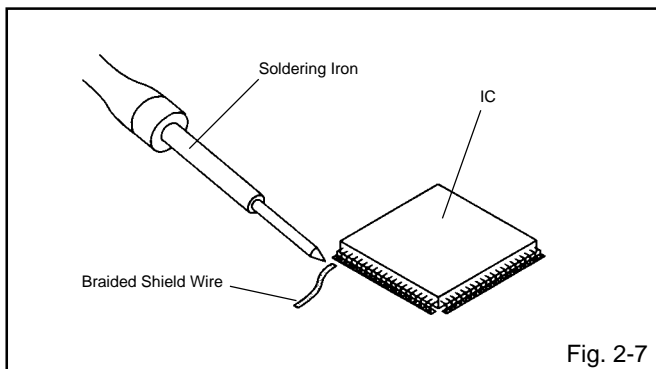

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 2-8.)

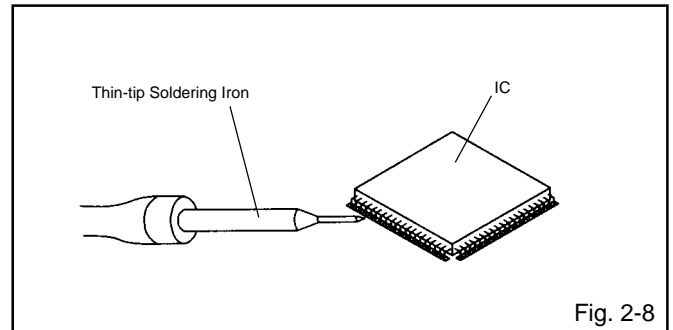

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

## SERVICE MODE LIST

This unit is provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter the Service Mode, press both set key and remote control key for more than 2 seconds.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of factory data. NOTE: Do not use this for normal servicing. If you set factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	8	Check of the SUM DATA and MICON VERSION on the screen. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	6	Check for the firmware version.  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

### WHEN REPLACING EEPROM (MEMORY) IC

#### CONFIRMATION OF CHECK SUM, POWER ON TOTAL HOURS, MICON VERSION AND DIGITAL TV MICON FIRMWARE VERSION

Initial total of MEMORY IC, POWER ON total hours, MICON VERSION and Digital TV MICON Firmware VERSION can be checked on the screen. Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

**Please refer to "CONFIRMATION OF INITIAL DATA" when SUM DATA is not corresponding.**

1. Turn on the POWER, and set to the TV mode.
2. Set the VOLUME to minimum.
3. Press both VOL. DOWN button on the set and Channel button **(8)** on the remote control for more than 2 seconds.
4. After the confirmation of each check sum, power on total hours, micon version and Digital TV MICON Firmware version, turn off the power.

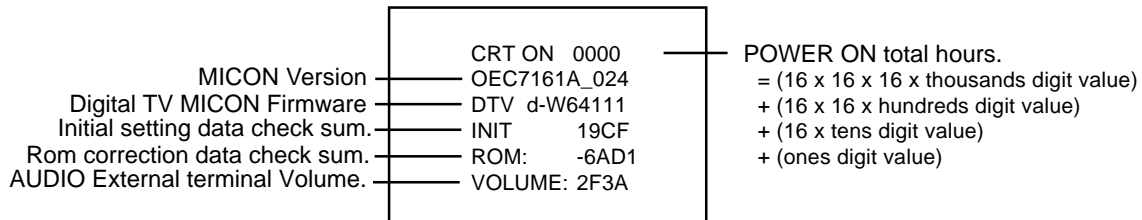


FIG. 1

## WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	C1	A6	0D	C5	36	08	02	0A	C0	80	07	00	28	36	03	00
10	68	20	11	11	88	88	16	00	00	00	10	00	00	05	AA	00
20	E3	00	00	12	00	04	00	00	00	00	00	00	00	00	00	00
30	39	C0	07	22	03	03	00	00	00	01	D1	02	B1	13	7F	00
40	00	00	00	00	00	00	00	40	40	40	00	40	20	00	C0	40
50	40	40	00	95	00	14	07	00	63	2F	01	01	00	00	00	00
60	20	B7	81	00	00	00	00	00	82	00	00	00	82	00	00	00
70	00	00	00	00	00	00	05	08	82	00	00	00	00	00	00	00
80	6C	70	74	7C	80	84	88	8E	92	96	9A	9E	A2	A6	AA	AE
90	B2	B5	B8	BB	BD	BE	BF	C0	C0	C1	C1	C2	C3	C4	C5	C6
A0	C7	C8	C9	CA	CB	CB	CC	CC	CD	CE	CF	D0	D0	D1	D2	D3
B0	D4	D5	D6	D7	D8	D9	DA	DA	DB	DB	DB	DC	DC	DC	DD	DD
C0	00	02	00	00	00	00	00	00	00	00	00	00	20	82	00	00
D0	00	00	00	EE	ED	00	08	02	00	00	00	00	00	00	00	00
E0	01	00	00	02	00	00	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	01	B7	81	02	00	00	00	00	82	00	00
100	00	82	00	00	00	00	00	00	00	00	00	05	08	01	00	00
110	00	00	00	00	00	00	03	00	00	00	00	00	00	00	00	00
120	86	20	01	00	00	00	00	00	ED	ED	00	08	02	A7	00	00
130	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

Table 1

### CONFIRMATION OF INITIAL DATA

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press RIGHT/LEFT button to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using UP/DOWN button until required DATA value has been selected.
6. Pressing RIGHT/LEFT button will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

**After the data input, set to the initializing of shipping.**

9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 2 seconds.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

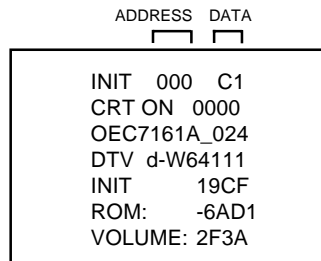
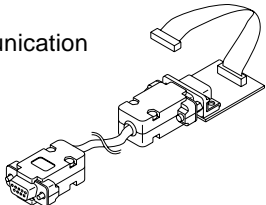
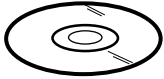
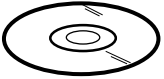


FIG. 1


## RE-WRITE FOR DIGITAL SOFT FIRMWARE

JG198 Serial Communication Change JIG  	JG199 Flash UP-Date Soft Disc  	JG176 USA SD DTV ROM DISC  
--	---	---

Ref. No.	Part No.	Parts Name	Remarks
JG198	APJG198000	Serial Communication Change JIG	Connect the set to personal computer
JG199	APJG199000	Flash UP-Date Soft Disc	Up-Date of the Firmware
JG176	APJG176110	USA SD DTV ROM DISC	Up-Date of the Firmware

1. Confirm that the AC cord is plugged out.
2. Using the Serial Communication Change JIG (**JG198**), connect the set to personal computer. (**Refer to Fig. 1**)

**NOTE:** It is possible to write only with the personal computer of WINDOWS.

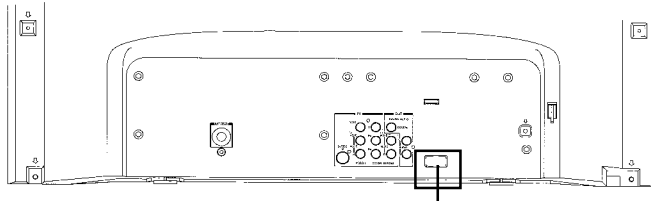

**Fig. 1**

3. Using the Flash UP-Date Soft Disc (**JG199**) and USA SD DTV ROM DISC (**JG176**), please Re-write the DIGITAL SOFT FIRMWARE.  
The operating manual for Re-writing is included in Flash UP-Date Soft Disc (**JG199**).

# ELECTRICAL ADJUSTMENTS

## 1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION


- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor with a heat sink, apply silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Pattern Generator

### On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 2 seconds to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

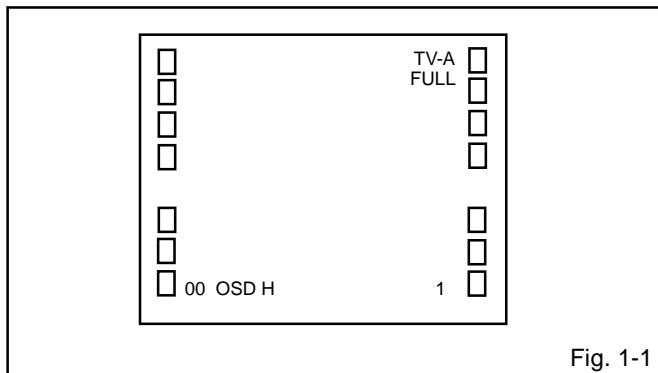

2. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
3. Press the MENU button on the remote control to end the adjustments.
4. To display the adjustment screen for AV and YUV mode, press the TV/VIDEO button on the remote control to set to the AV and YUV mode.
5. To display the adjustment screen for DIGITAL mode, press the Channel button **(0-9)** on the remote control to select to the DIGITAL broadcasting.

NO.	FUNCTION	NO.	FUNCTION	NO.	FUNCTION
00	OSD H	20	COR BTM	40	COL.MIN
01	OSD C	21	S CORR	41	TINT CENT
02	CUT OFF	22	CORNER	42	SHARP.CENT
03	H.POSI	23	C PARA	43	SHARP.MAX
04	H BLK L	24	C SAW	44	SHARP.MIN
05	H BLK R	25	V SYMM	45	SUB BIAS
06	H.SIZE	26	R.BIAS	46	TILT CENTER
07	V. SIZE	27	G.BIAS	47	TEST STEREO
08	V. POSI	28	B.BIAS	48	TEST AUDIO
09	V. LIN	29	R.DRV	49	H FREQ
10	V CORR	30	G.DRV		
11	VS CORR	31	B.DRV		
12	V EHT	32	BRI.CENT		
13	H EHT	33	BRI.MAX		
14	V BLKP	34	BRI.MIN		
15	V BLKS	35	CONT.CENT		
16	V LIMIT	36	CONT.MAX		
17	EW PARA	37	CONT.MIN		
18	TRAPE	38	COL.CENT		
19	COR TOP	39	COL.MAX		

Fig. 1-2

## 2. BASIC ADJUSTMENTS

### 2-1: CONSTANT VOLTAGE

1. Place the set in AV MODE without signal.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Connect the digital voltmeter to the **TP401**.
4. Adjust the **VR501** until the digital voltmeter is  $130 \pm 0.5V$ .

### 2-2: CUT OFF

1. Press the PIC SIZE button on the remote control to select the FULL screen mode.
2. Adjust the unit to the following setting.  
R. BAIS=64, G. BIAS=64, B.BIAS=64,  
R DRIVE=64, G DRIVE=10, B DRIVE=64
3. Place the set in Aging Test for more than 15 minutes.
4. Place the set in AV MODE without signal.
5. Using the remote control, set the brightness and contrast to normal position.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "CUT OFF".
7. Adjust the **Screen Volume** until a dim raster is obtained.

### 2-3: FOCUS

1. Press the PIC SIZE button on the remote control to select the FULL screen mode.
2. Receive the monoscope pattern.
3. Turn the Focus Volume fully counterclockwise once.
4. Adjust the **Focus Volume** until picture is distinct.

## ELECTRICAL ADJUSTMENTS

### 2-4: WHITE BALANCE

**NOTE:** Adjust after performing CUT OFF adjustment.

1. Place the set in Aging Test for more than 15 minutes.
2. Receive the white 100% signal from the Pattern Generator.
3. Press the PIC SIZE button on the remote control to select the FULL screen mode.
4. Using the adjustment control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**26**) on the remote control to select "R.BIAS".
6. Using the VOL. UP/DOWN button on the remote control, adjust the R.BIAS.
7. Press the CH. UP/DOWN button on the remote control to select the "G.BIAS", "B.BIAS", "R.DRIVE" or "B.DRIVE".
8. Using the VOL. UP/DOWN button on the remote control, adjust the G.BIAS, B.BIAS, R.DRIVE and B.DRIVE.
9. Perform the above adjustments 7 and 8 until the white color is achieved.

### 2-5: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**32**) on the remote control to select "BRI. CENT".
5. Press the VOL. UP/DOWN button on the remote control until the white 5.4% is starting to be visible
6. Receive the monoscope pattern. (Audio Video Input)
7. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~5.
8. Receive the monoscope pattern.
9. Press the TV/VIDEO button on the remote control to set to the YUV mode. Then perform the above adjustments 2~5.
10. Press the MENU button on the remote control to end the adjustments.
11. Receive the DIGITAL broadcasting.
12. Press the Channel button (**0-9**) on the remote control to select to the DIGITAL broadcasting.
13. Press the PIC SIZE button on the remote control to select the FULL screen mode.
14. Using the remote control, set the brightness, contrast, color and tint to normal position.
15. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**32**) on the remote control to select "BRI. CENT".
16. Press the VOL. UP/DOWN button on the remote control to increase the step numbers by 10 steps to the AV.

### 2-6: CONTRAST MAX

1. Receive an over 70dB color bar pattern. (RF Input)
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**36**) on the remote control to select "CONT.MAX".
5. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "110".
6. Receive a broadcast and check if the picture is normal.
7. Receive the color bar pattern. (Audio Video Input)
8. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~6.
9. Receive the monoscope pattern.
10. Press the TV/VIDEO button on the remote control to set to the YUV mode. Then perform the above adjustments 2~6.
11. Press the MENU button on the remote control to end the adjustments.
12. Receive the DIGITAL broadcasting.
13. Press the Channel button (**0-9**) on the remote control to select to the DIGITAL broadcasting.
14. Press the PIC SIZE button on the remote control to select the FULL screen mode.
15. Using the remote control, set the brightness, contrast, color and tint to normal position.
16. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**36**) on the remote control to select "CONT.MAX".
17. Press the VOL. UP/DOWN button on the remote control to increase the step numbers by 5 steps to the AV.

## ELECTRICAL ADJUSTMENTS

### 2-7: TINT

1. Receive the color bar pattern. (RF Input)
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Connect the oscilloscope to **TP024**.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**41**) on the remote control to select "TINT CENT".
6. Press the VOL. UP/DOWN button on the remote control until the section A becomes as straight line.  
**(Refer to Fig. 2-1)**
7. Receive the color bar pattern. (Audio Video Input)
8. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~6. **(Refer to Fig. 2-1)**
9. Receive the color bar pattern.
10. Press the TV/VIDEO button on the remote control to set to the YUV mode. Then perform the above adjustments 2~6. **(Refer to Fig. 2-1)**
11. Press the MENU button on the remote control to end the adjustments.
12. Receive the DIGITAL broadcasting.
13. Press the Channel button (**0-9**) on the remote control to select to the DIGITAL broadcasting.
14. Press the PIC SIZE button on the remote control to select the FULL screen mode.
15. Using the remote control, set the brightness, contrast, color and tint to normal position.
16. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**41**) on the remote control to select "TINT CENT".
17. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "83".

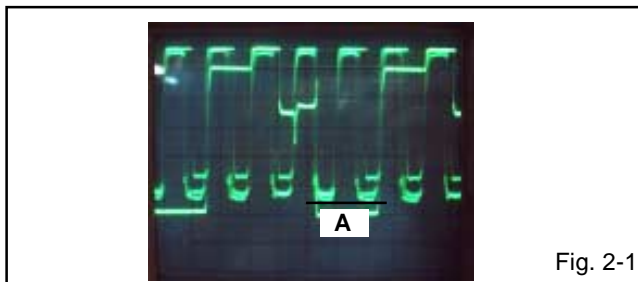


Fig. 2-1

### 2-8: COLOR CENT

1. Receive the color bar pattern. (RF Input)
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness, contrast, color and tint to normal position.
4. Connect the oscilloscope to **TP022**.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**38**) on the remote control to select "COL.CENT".
6. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to  $105 \pm 10\%$  of the white level. **(Refer to Fig. 2-2)**
8. Receive the color bar pattern. (Audio Video Input)
9. Press the AV mode. Then perform the above adjustments 2~6. **(Refer to Fig. 2-2)**
10. Receive the color bar pattern.
11. Press the TV/VIDEO button on the remote control to set to the YUV mode. Then perform the above adjustments 2~6. **(Refer to Fig. 2-2)**
12. Press the MENU button on the remote control to end the adjustments.
13. Receive the DIGITAL broadcasting.
14. Press the Channel button (**0-9**) on the remote control to select to the DIGITAL broadcasting.
15. Press the PIC SIZE button on the remote control to select the FULL screen mode.
16. Using the remote control, set the brightness, contrast, color and tint to normal position.
17. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**38**) on the remote control to select "COL.CENT".
18. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "63".

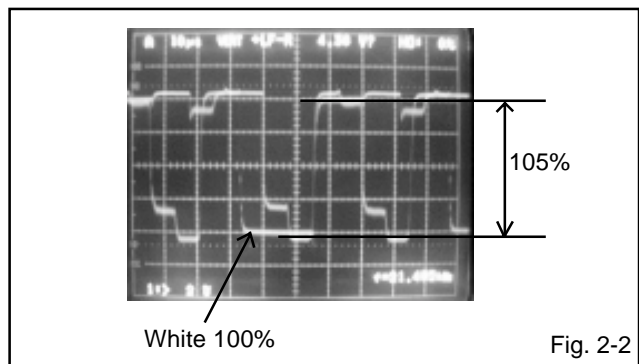


Fig. 2-2

# ELECTRICAL ADJUSTMENTS

## 2-9: HORIZONTAL POSITION

1. Receive the monoscope pattern.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**03**) on the remote control to select "H.POSI".
5. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

## 2-10: HORIZONTAL SIZE


1. Receive the monoscope pattern.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**06**) on the remote control to select "H.SIZE".
5. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on the right and left becomes  $10 \pm 2\%$ .

## 2-11: VERTICAL LINEARITY

1. Receive the monoscope pattern.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness, contrast, to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**09**) on the remote control to select "V.LIN".
5. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

## 2-12: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**08**) on the remote control to select "V.POSI".
5. Press the VOL. UP/DOWN button on the remote control until the horizontal line becomes fit to the notch of the shadow mask. (**Refer to Fig. 2-3**)

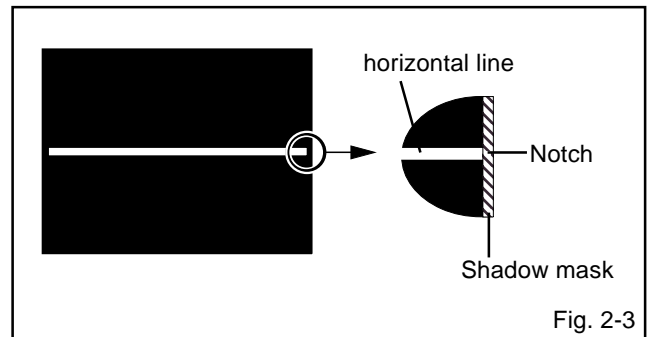

## 2-13: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**07**) on the remote control to select "V. SIZE".
5. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes  $10 \pm 2\%$ .

## 2-14: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**18**) on the remote control to select "TRAPE".
5. Press the VOL. UP/DOWN button on the remote control until the both ends right and left vertical lines of the 1th length lines screen become parallel.

## 2-15: PARABOLA CORR

1. Receive the chosshatch pattern.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**17**) on the remote control to select "EW PARA".
5. Press the VOL. UP/DOWN button on the remote control, so that the line becomes straight from the outside of the right and left.

## ELECTRICAL ADJUSTMENTS

### 2-16: COR TOP/BTM

1. Receive the crosshatch signal from the Pattern Generator.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(19)** on the remote control to select "COR. TOP".
5. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines become straight.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(20)** on the remote control to select "COR. BTM".
7. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines of the screen become parallel.

### 2-17: OSD H POSITION

1. Receive the monoscope pattern from the Pattern Generator.
2. Press the PIC SIZE button on the remote control to select the FULL screen mode.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(00)** on the remote control to select "OSD H".
5. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum.  
**(Refer to Fig. 2-4)**

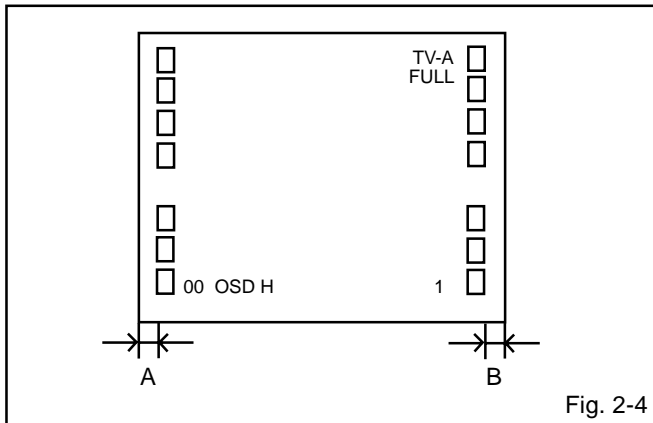


Fig. 2-4

### 2-18: TILT CENT

1. Connect the digital voltmeter between **CP403**.
2. Receive the crosshatch signal from the Pattern Generator.
3. Press the PIC SIZE button on the remote control to select the FULL screen mode.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(46)** on the remote control to select "TILT CENT".
6. Press the VOL. UP/DOWN button on the remote control until the voltage become minimum(0V).

## ELECTRICAL ADJUSTMENTS

### 2-19: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of each of the adjustment items are set correctly referring below.  
(TV/AV/YUV/DIGITAL)

NO.	FUNCTION	FULL				NATURAL			
		TV	AV	YUV	DIGITAL	TV	AV	YUV	DIGITAL
		Step No.	Step No.	Step No.	Step No.	Step No.	Step No.	Step No.	Step No.
1	OSD C	07	07	07	07	07	07	07	07
4	K BLK L	00	00	00	00	07	07	07	07
5	K BLK R	03	03	03	03	00	00	00	00
10	V CORR	15	15	15	15	15	15	15	15
11	VS CORR	35	35	35	35	35	35	35	35
12	V EHT	02	02	02	02	02	02	02	02
13	H EHT	01	01	01	01	01	01	01	01
14	V BLK P	31	31	31	31	31	31	31	31
15	V BLK S	31	31	31	31	31	31	31	31
16	V LIMIT	00	00	00	00	00	00	00	00
21	S CORR	17	17	17	17	17	17	17	17
22	CORNER	26	26	26	26	26	26	26	26
25	V SYMM	128	128	128	128	128	128	128	128
33	BRI.MAX	100	100	100	110	100	100	100	110
34	BRI.MIN	40	40	40	50	40	40	40	50
35	CONT.CENT	60	60	60	60	60	60	60	60
37	CONT.MIN	10	10	10	10	10	10	10	10
39	COL.MAX	127	127	127	127	127	127	127	127
40	COL.MIN	00	00	00	00	00	00	00	00
42	SHARP.CENT	25	25	25	25	25	25	25	25
43	SHARP.MAX	63	63	63	63	63	63	63	63
44	SHARP.MIN	00	00	00	00	00	00	00	00
45	SUB BIAS	127	127	127	127	127	127	127	127
47	TEST STEREO	00	00	00	00	00	00	00	00
48	TEST AUDIO	00	00	00	00	00	00	00	00
49	H FREQ	63	63	63	63	63	63	63	63

# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

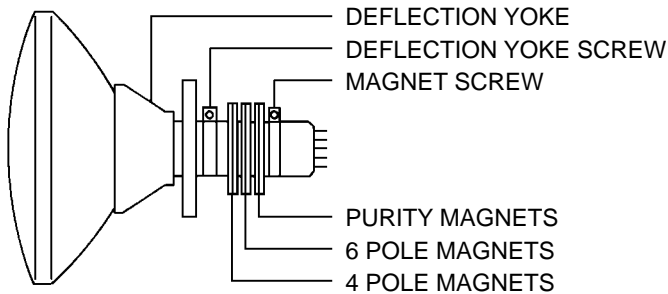


Fig. 3-1

### 3-3: STATIC CONVERGENCE

### NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

### NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**


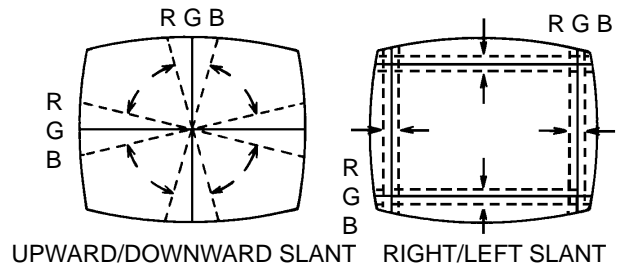


Fig. 3-2-a

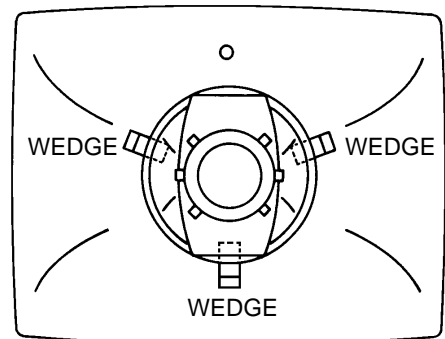


WEDGE POSITION


Fig. 3-2-b

# ELECTRICAL ADJUSTMENTS


## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

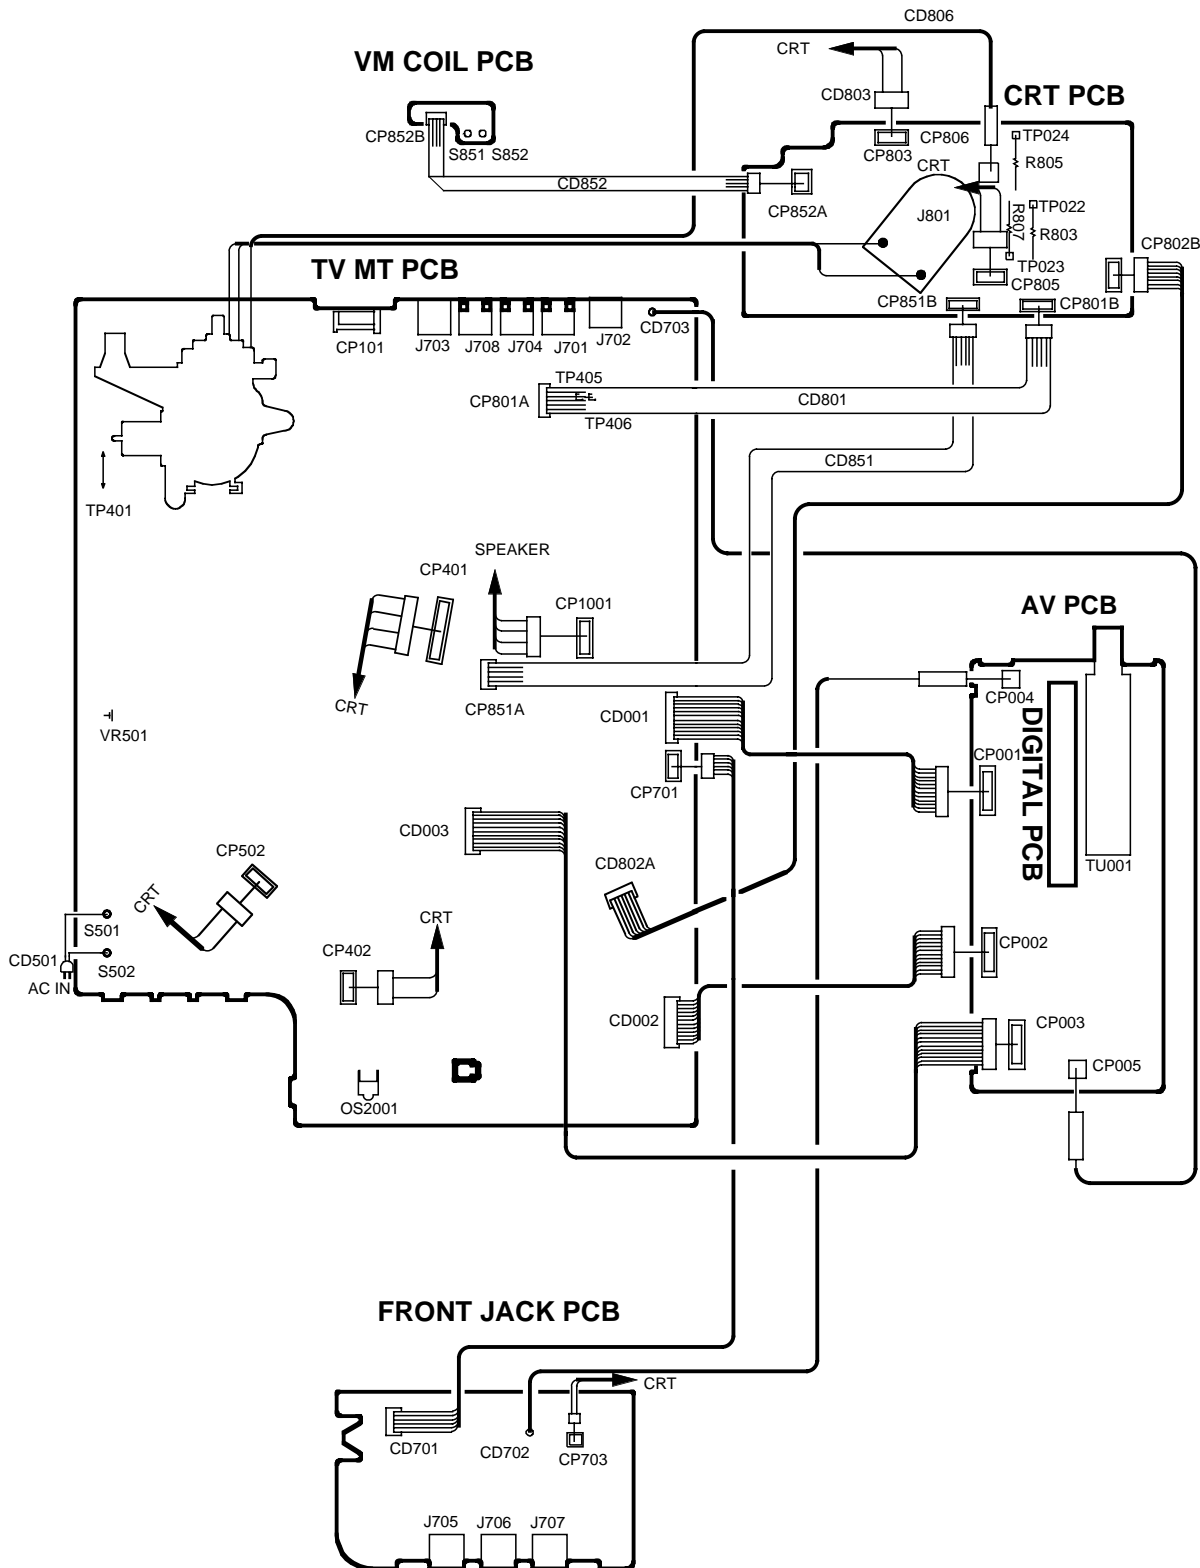


# MAICON/CHROMA BLOCK DIAGRAM

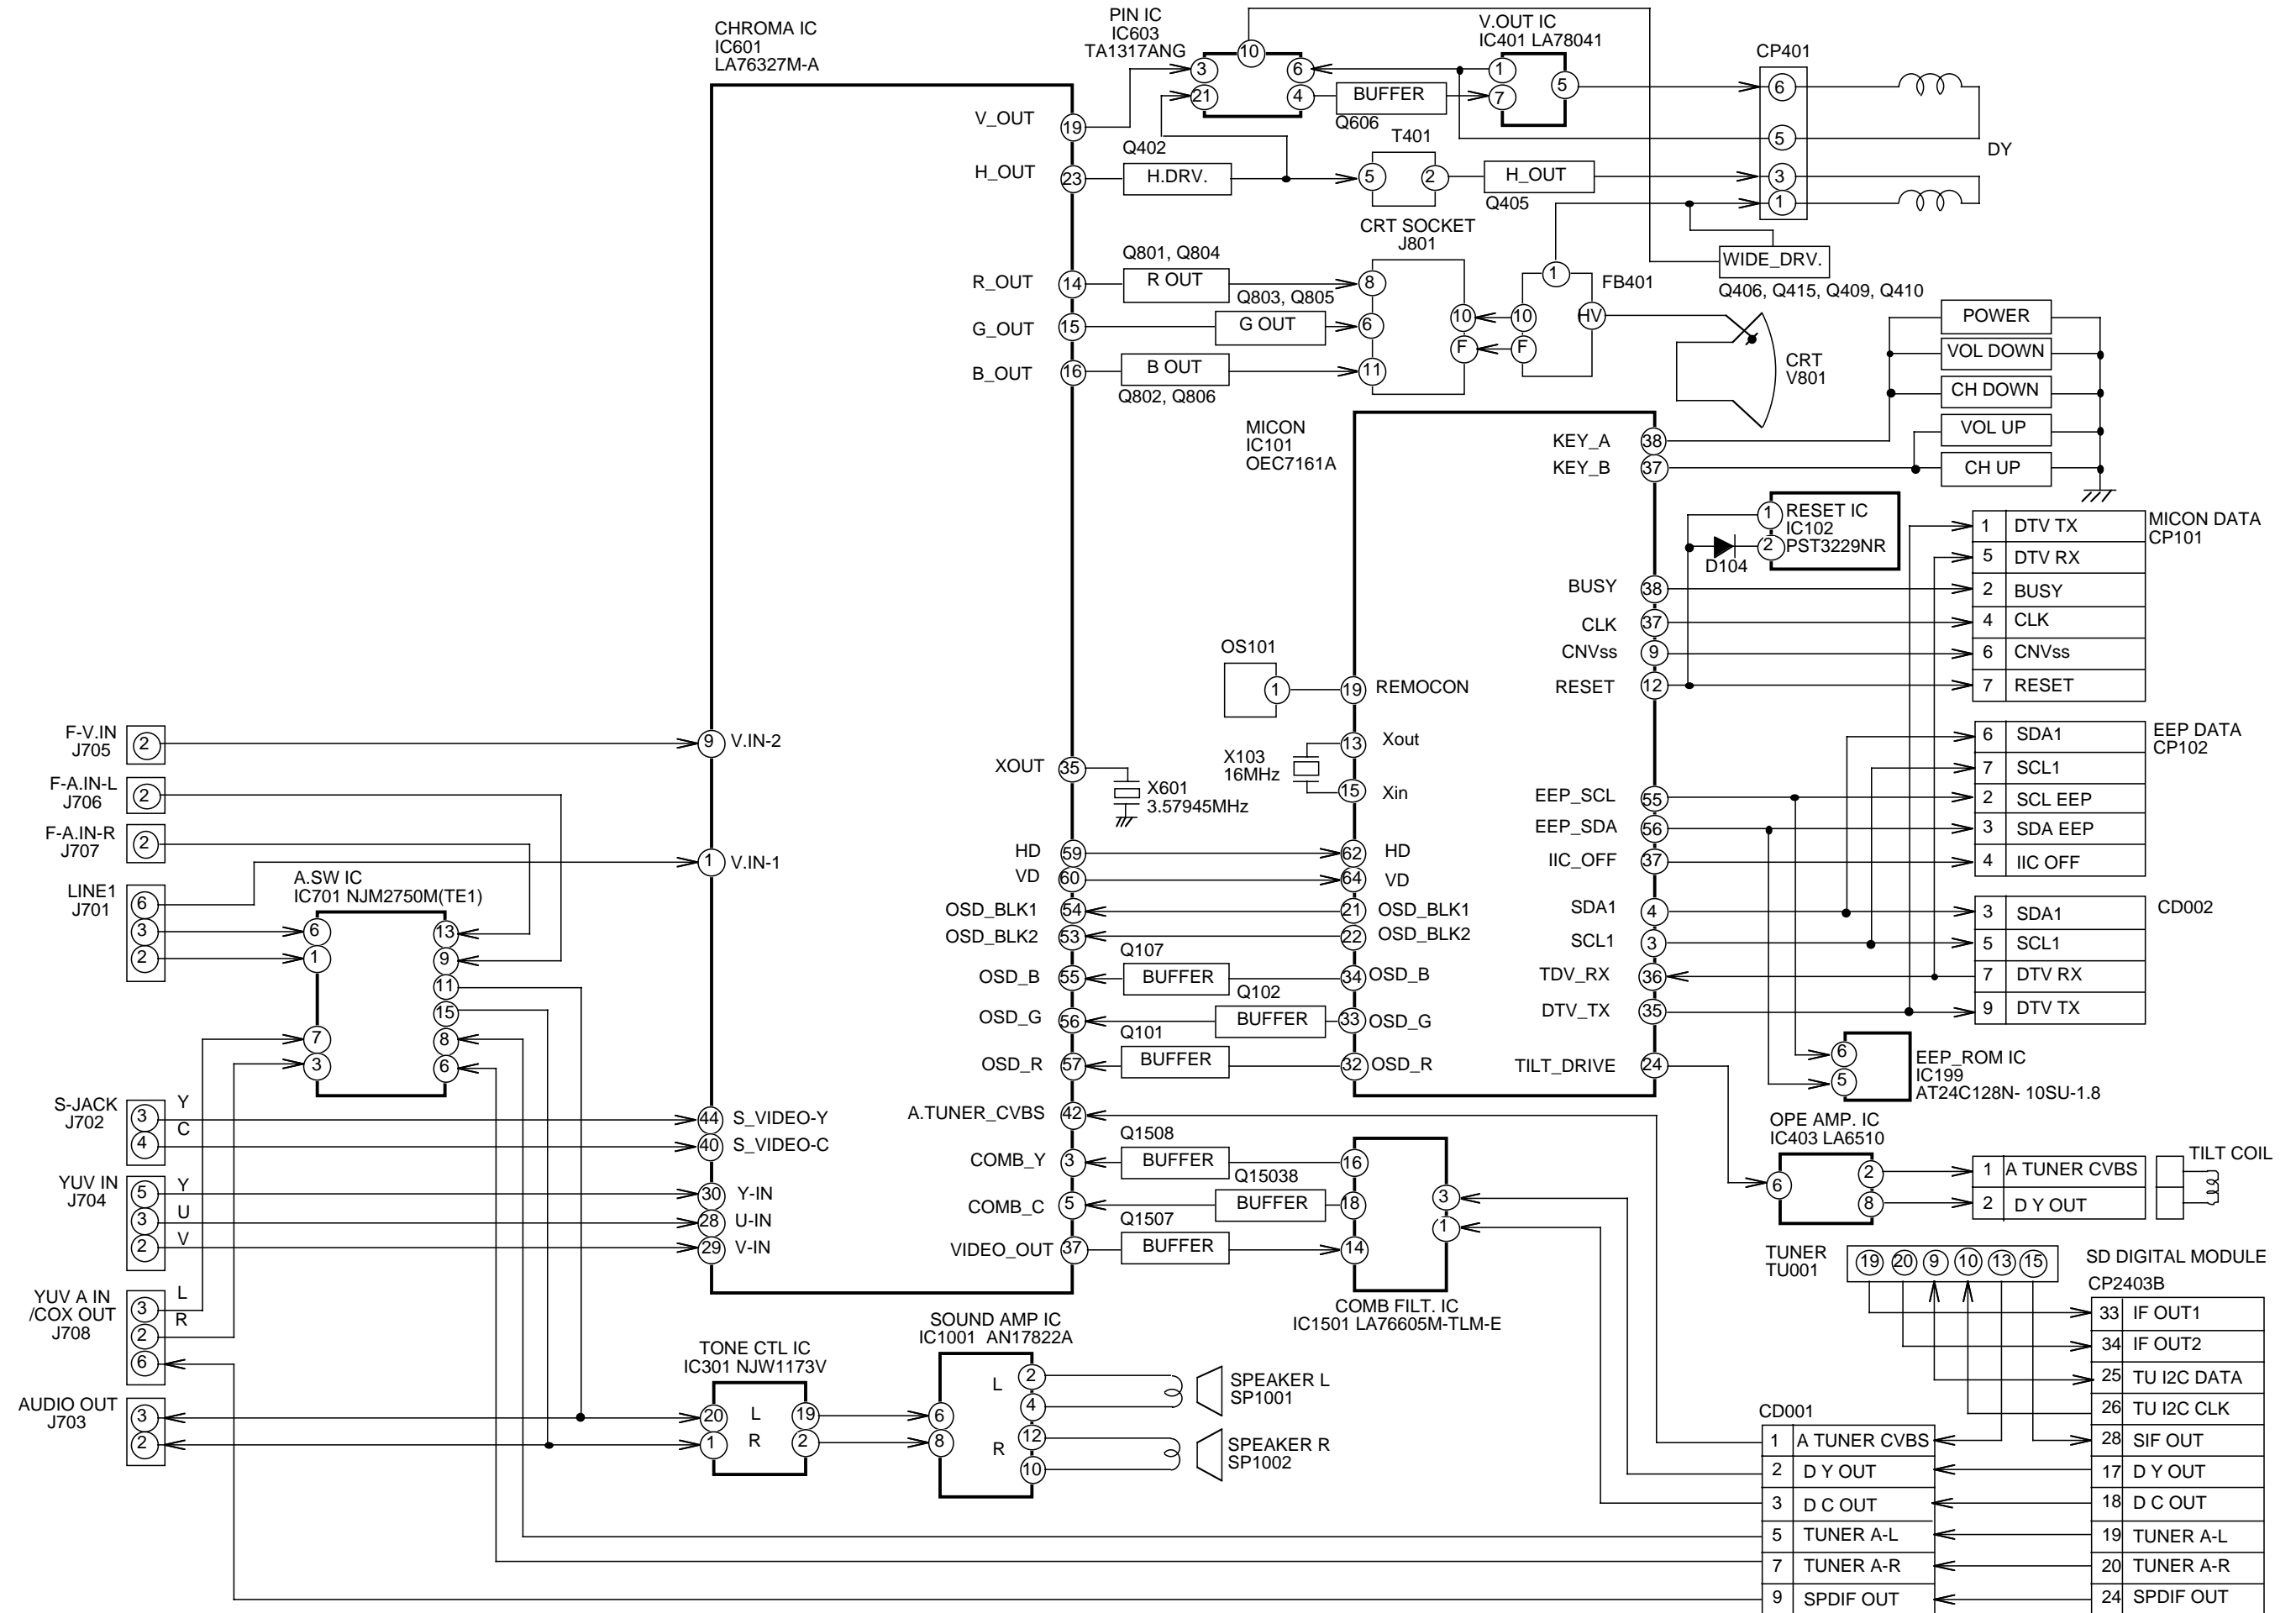


# SD DIGITAL MODULE BLOCK DIAGRAM

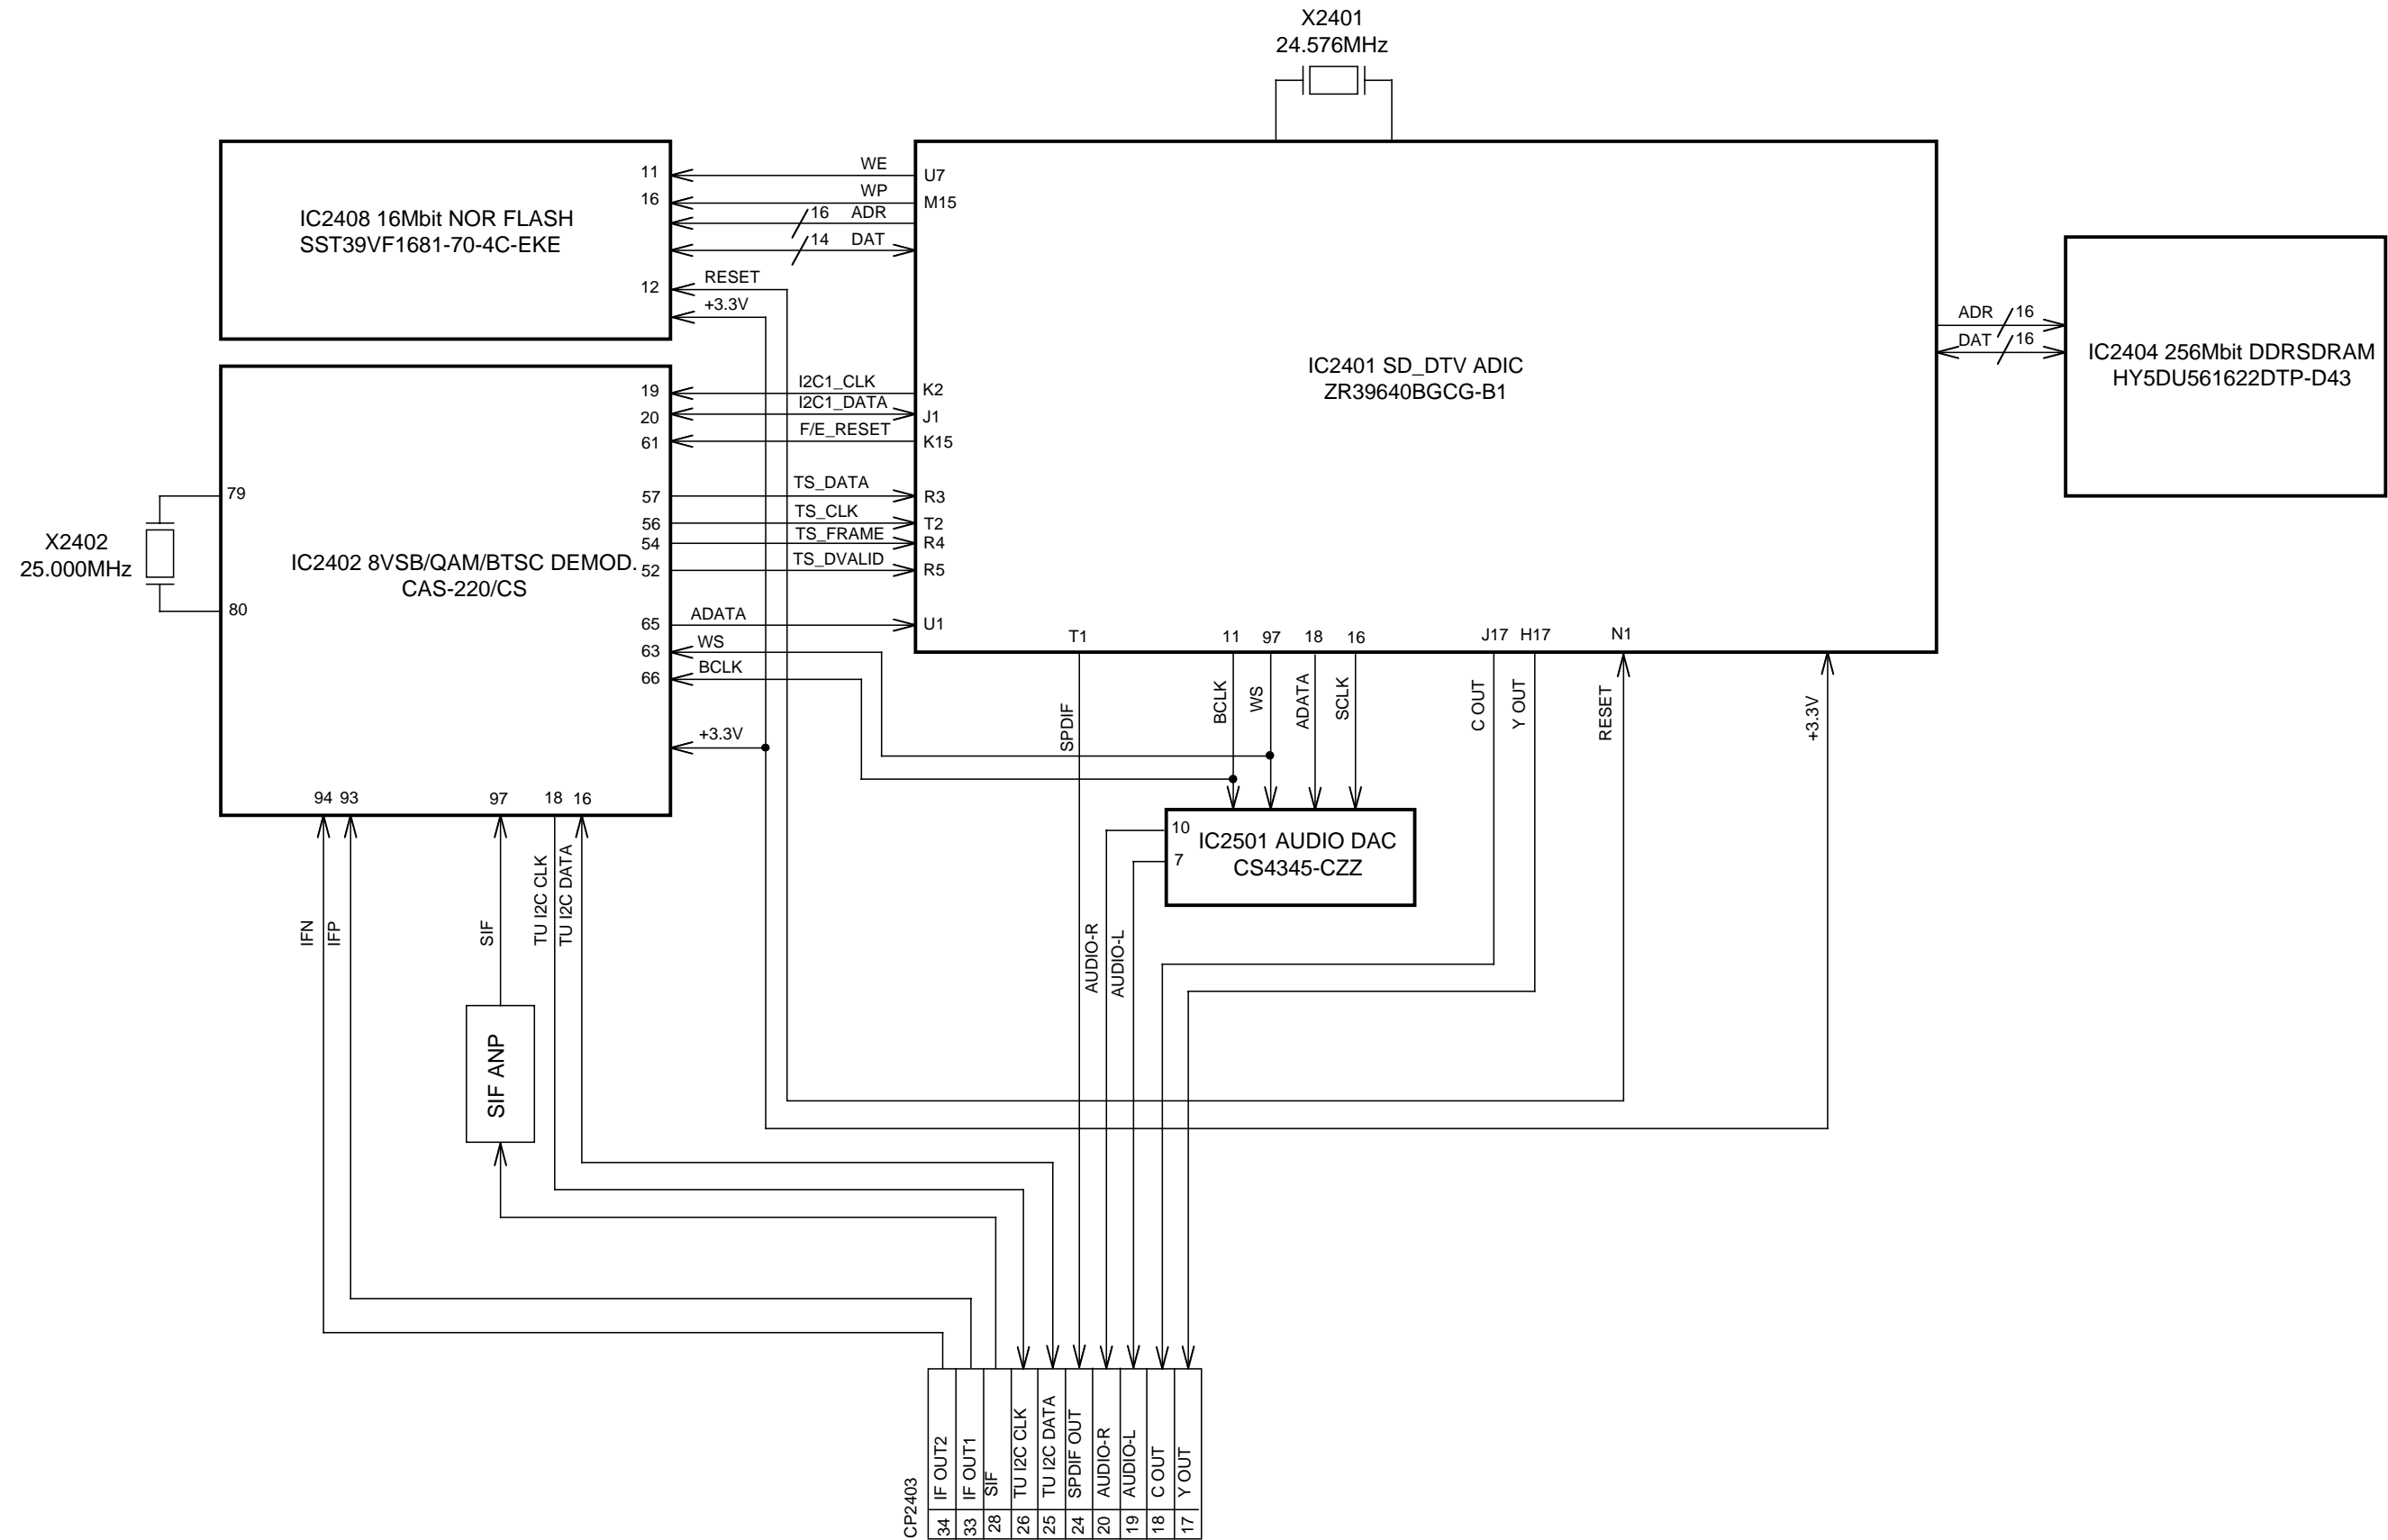

PRINTED CIRCUIT BOARDS  
TV MT/Front JACK (INSERTED PARTS)  
SOLDER SIDE

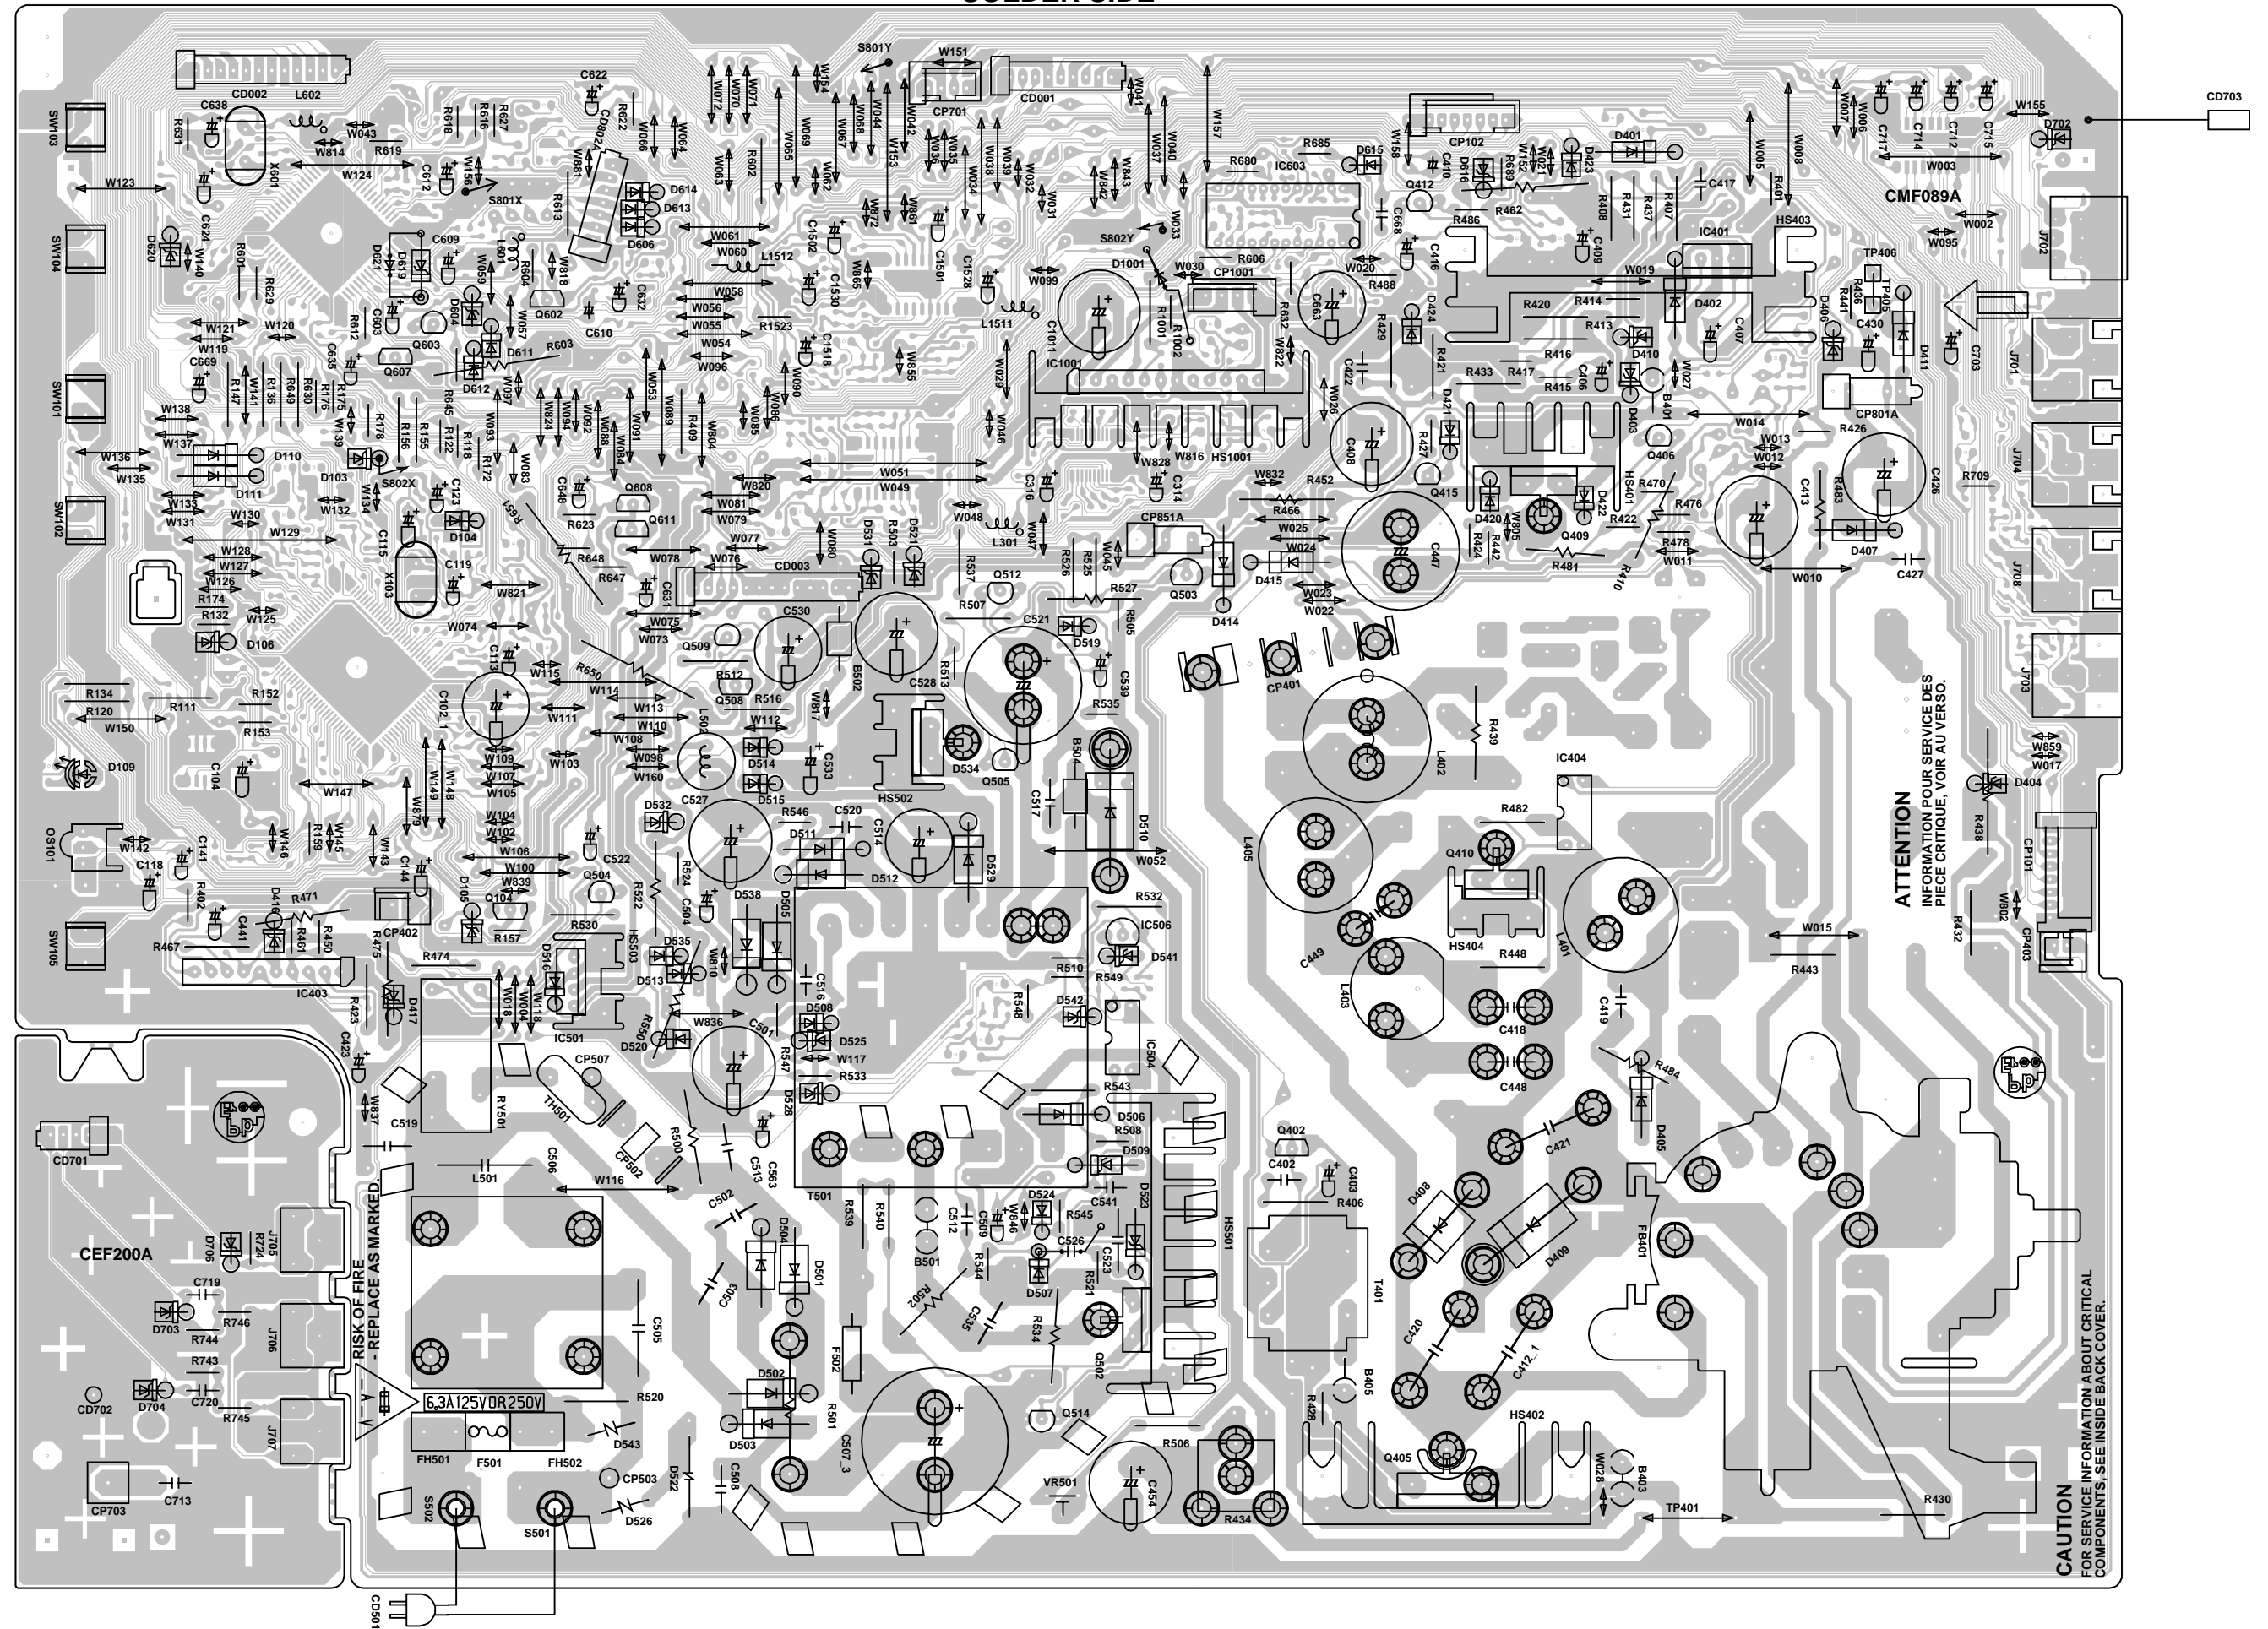


PRINTED CIRCUIT BOARDS  
TV MT/Front JACK (CHIP MOUNTED PAERTS)  
SOLDER SIDE

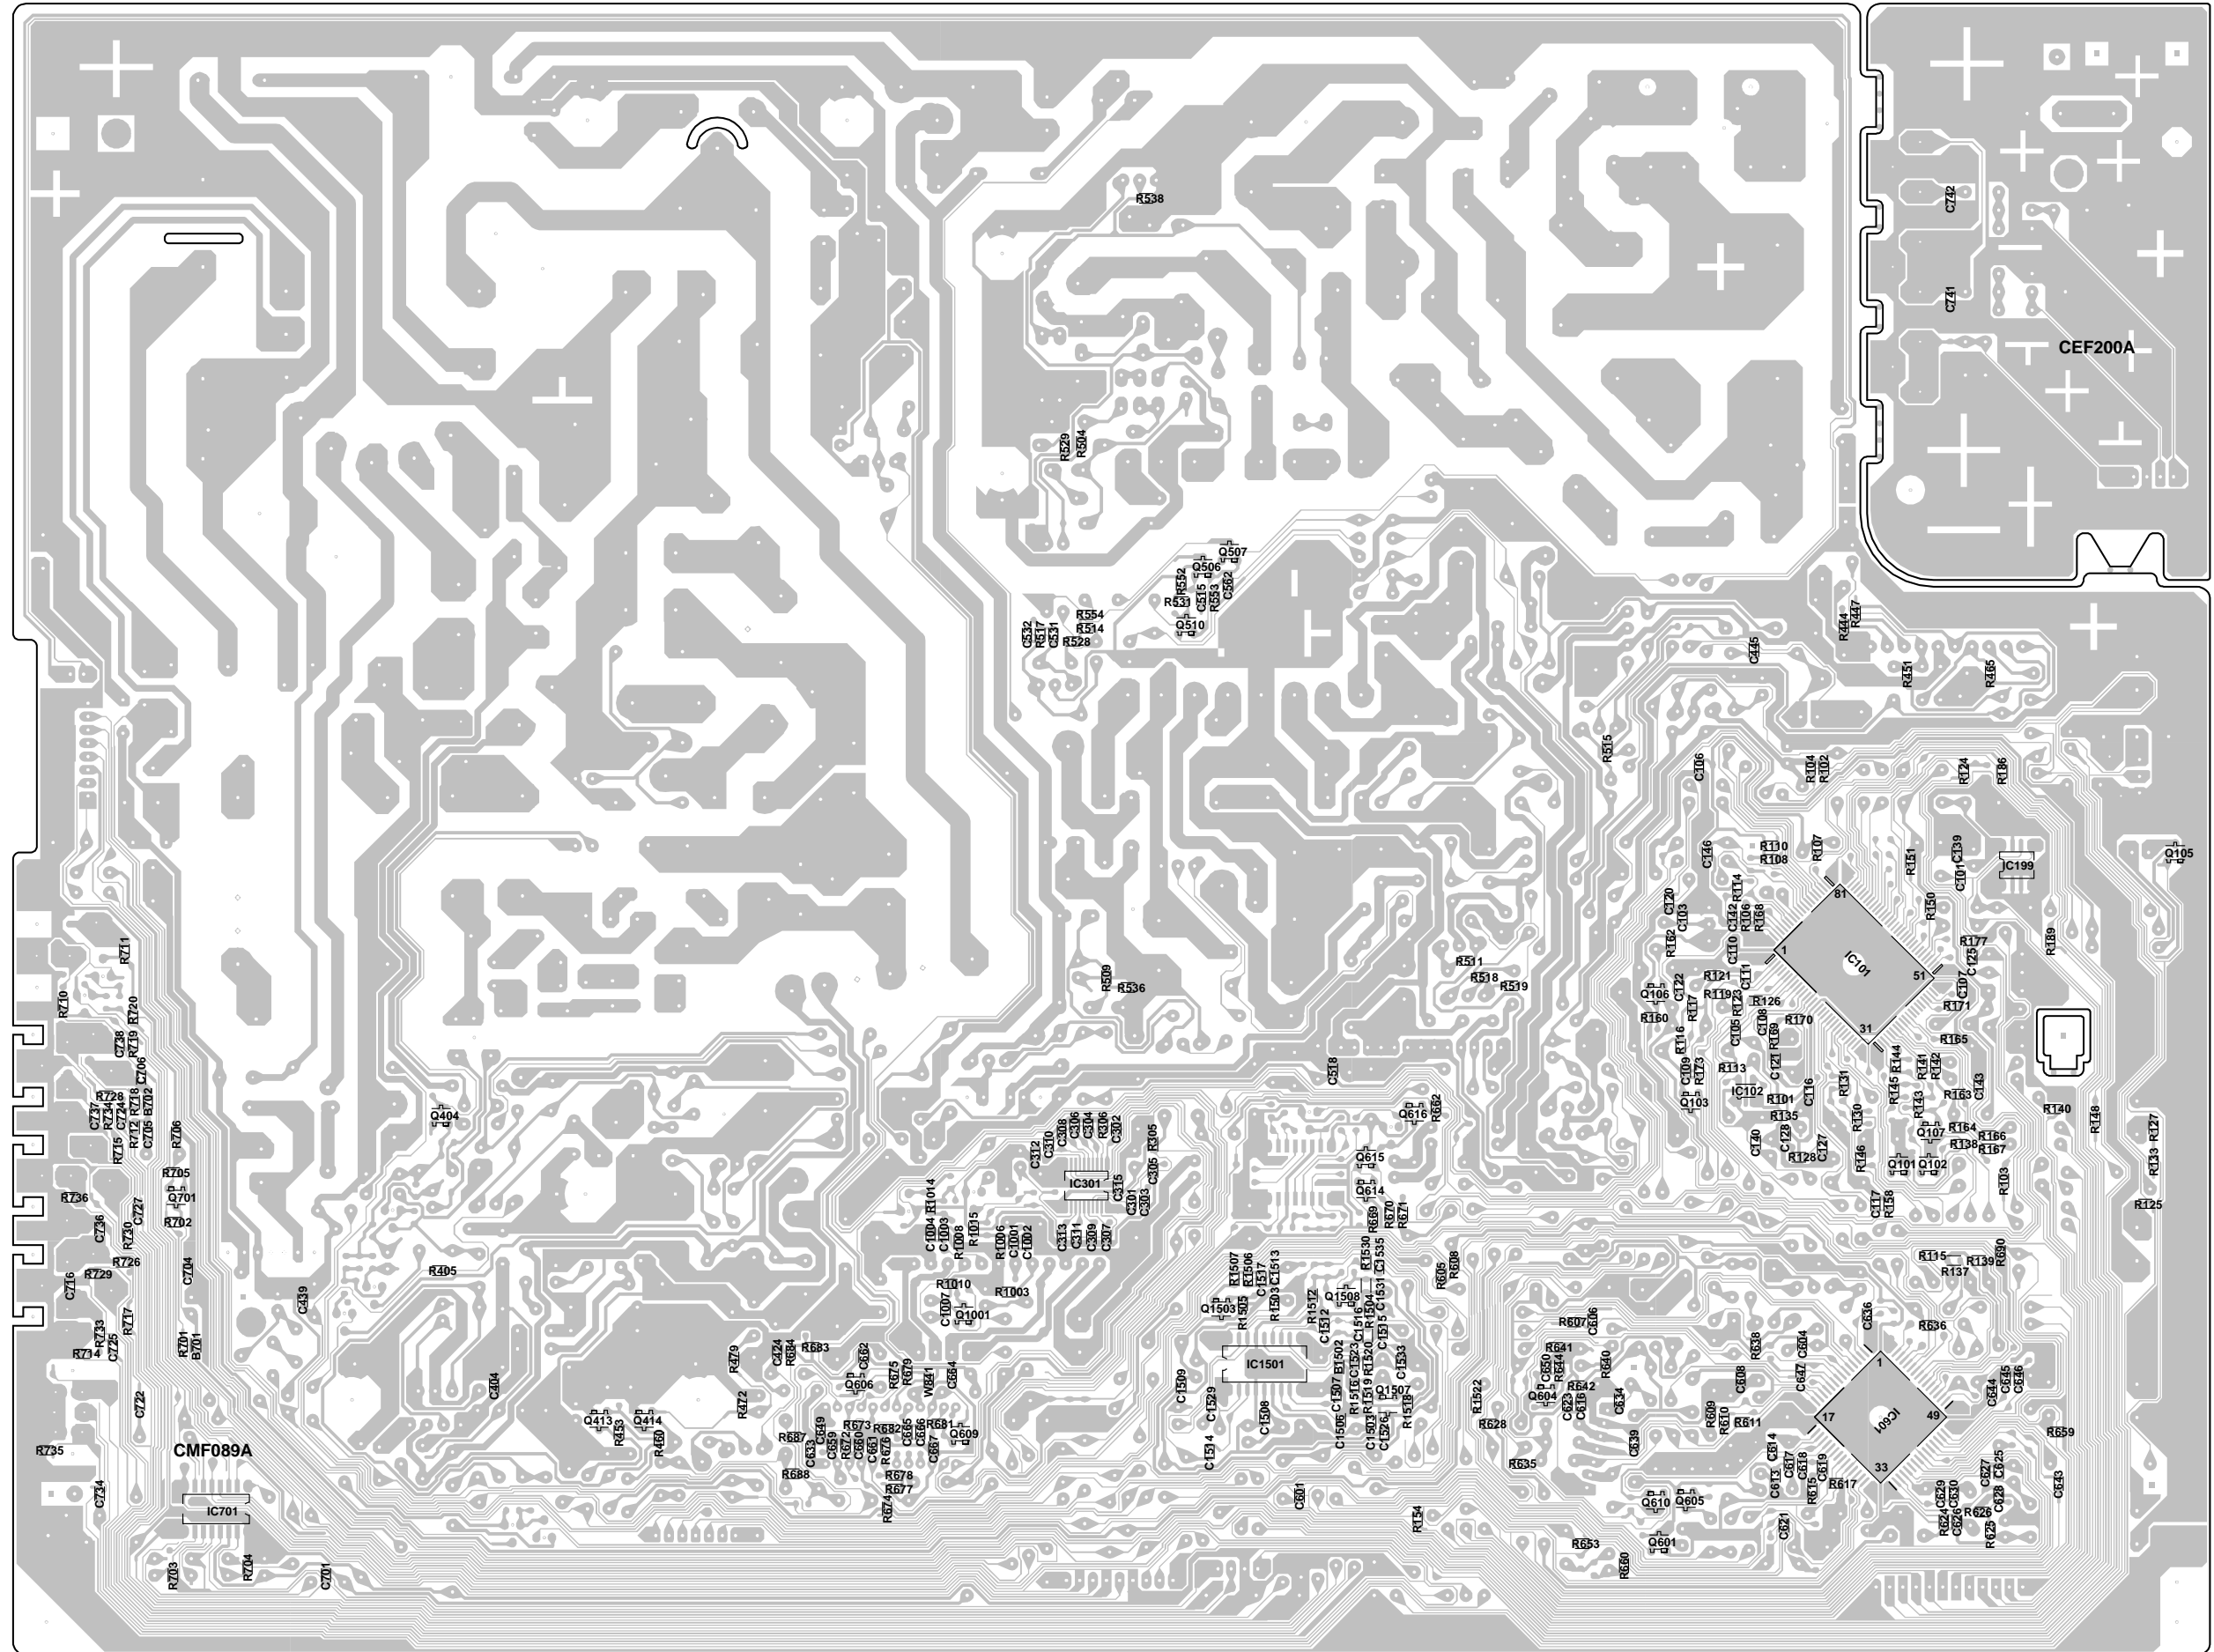





# TUNER/REGULATOR SCHEMATIC DIAGRAM (AV PCB)

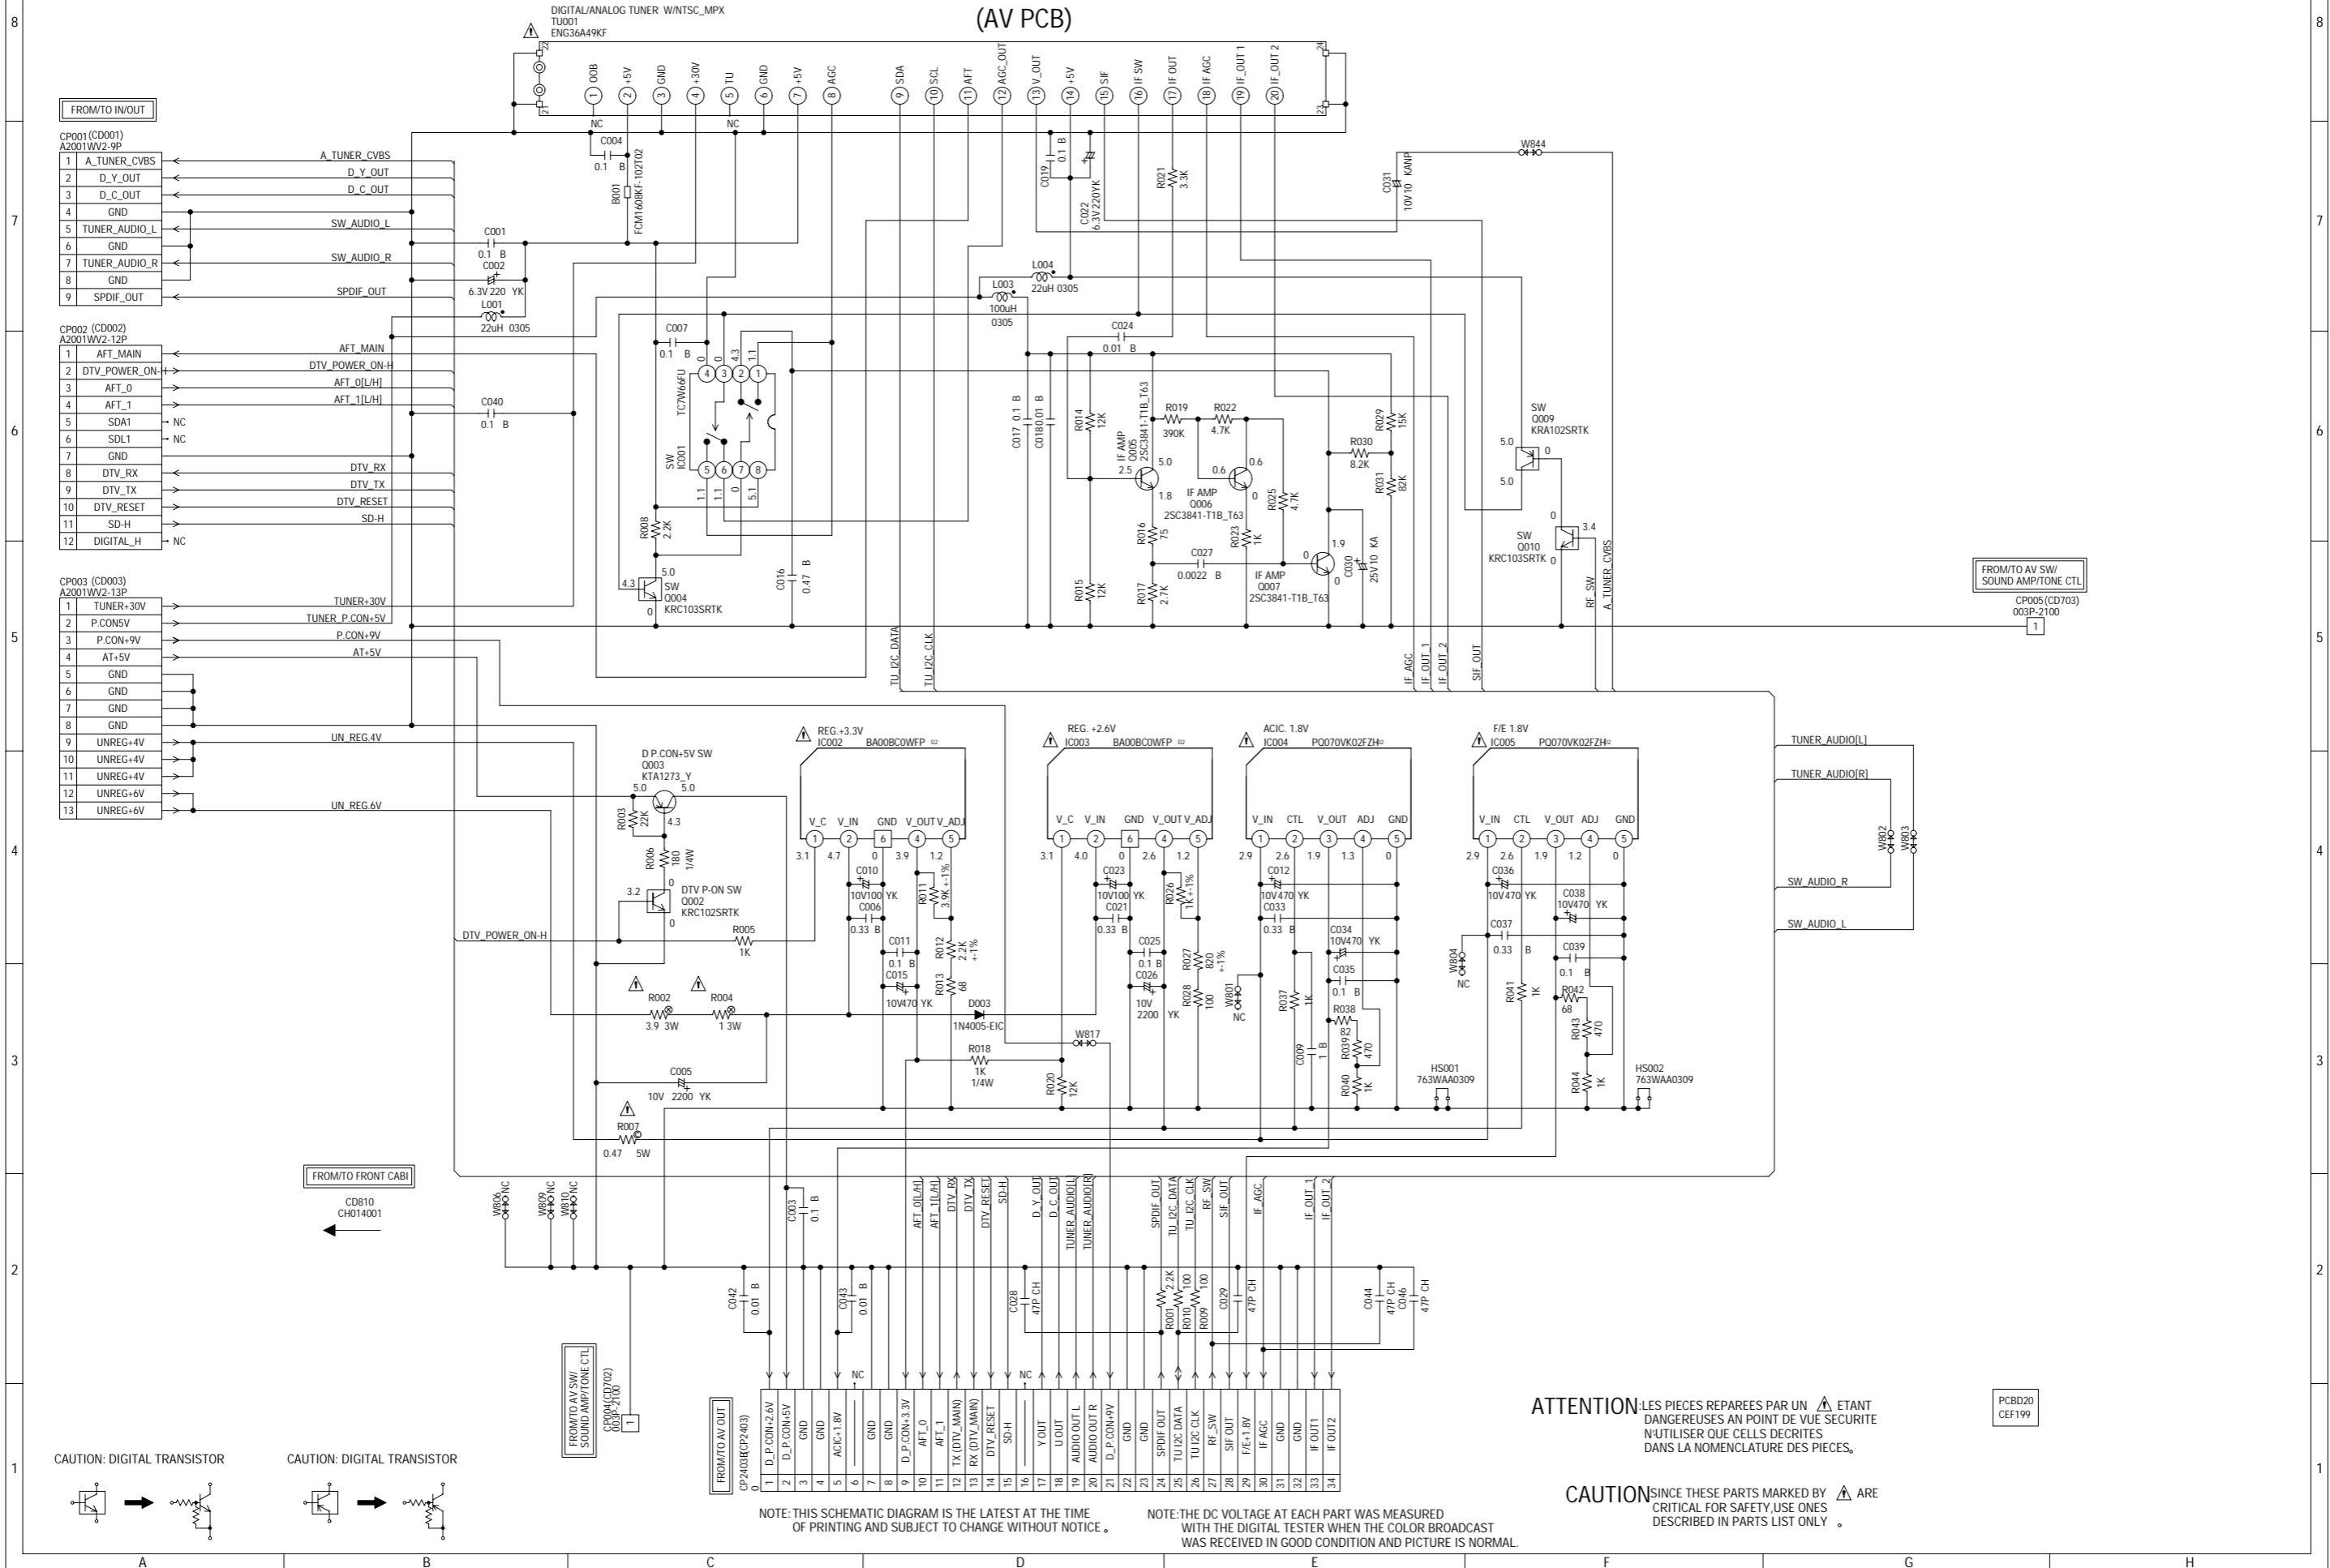

FROM/TO IN/OUT

1	A_TUNER_CVBS
2	D_Y_OUT
3	D_C_OUT
4	GND
5	TUNER_AUDIO_L
6	GND
7	TUNER_AUDIO_R
8	GND
9	SPDIF_OUT

1	AFT_MAIN
2	DTV_POWER_ON-H
3	AFT_0
4	AFT_1
5	SDA1
6	SDL1
7	GND
8	DTV_RX
9	DTV_TX
10	DTV_RESET
11	SD-H
12	DIGITAL_H



1	TUNER+30V
2	P.CON+5V
3	P.CON+9V
4	AT+5V
5	GND
6	GND
7	GND
8	GND
9	UNREG+4V
10	UNREG+4V
11	UNREG+4V
12	UNREG+6V
13	UNREG+6V

FROM/TO FRONT CABI

1	CD10
2	CH014001

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR



1	D.P.CON+2.6V
2	D.P.CON+5V
3	GND
4	GND
5	ACIC-1.8V
6	GND
7	GND
8	D.P.CON+3.3V
9	AFT_0
10	AFT_1
11	TX (DTV_MAIN)
12	TX (DTV_MAIN)
13	RX (DTV_MAIN)
14	DTV_RESET
15	SD-H
16	Y_OUT
17	U_OUT
18	AUDIO_OUT_L
19	AUDIO_OUT_R
20	D.P.CON+9V
21	GND
22	GND
23	SPDIF_OUT
24	SPDIF_OUT
25	TU_I2C_DATA
26	TU_I2C_CLK
27	RF_SW
28	SIF_OUT
29	F/E-1.8V
30	IF_AGC
31	GND
32	GND
33	IF_OUT1
34	IF_OUT2

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**ATTENTION** LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.


**CAUTION** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY USE ONES DESCRIBED IN PARTS LIST ONLY.

PCBD20  
CEF199


# CRT/SVM SCHEMATIC DIAGRAM

## (CRT PCB)


## CRT BLOCK

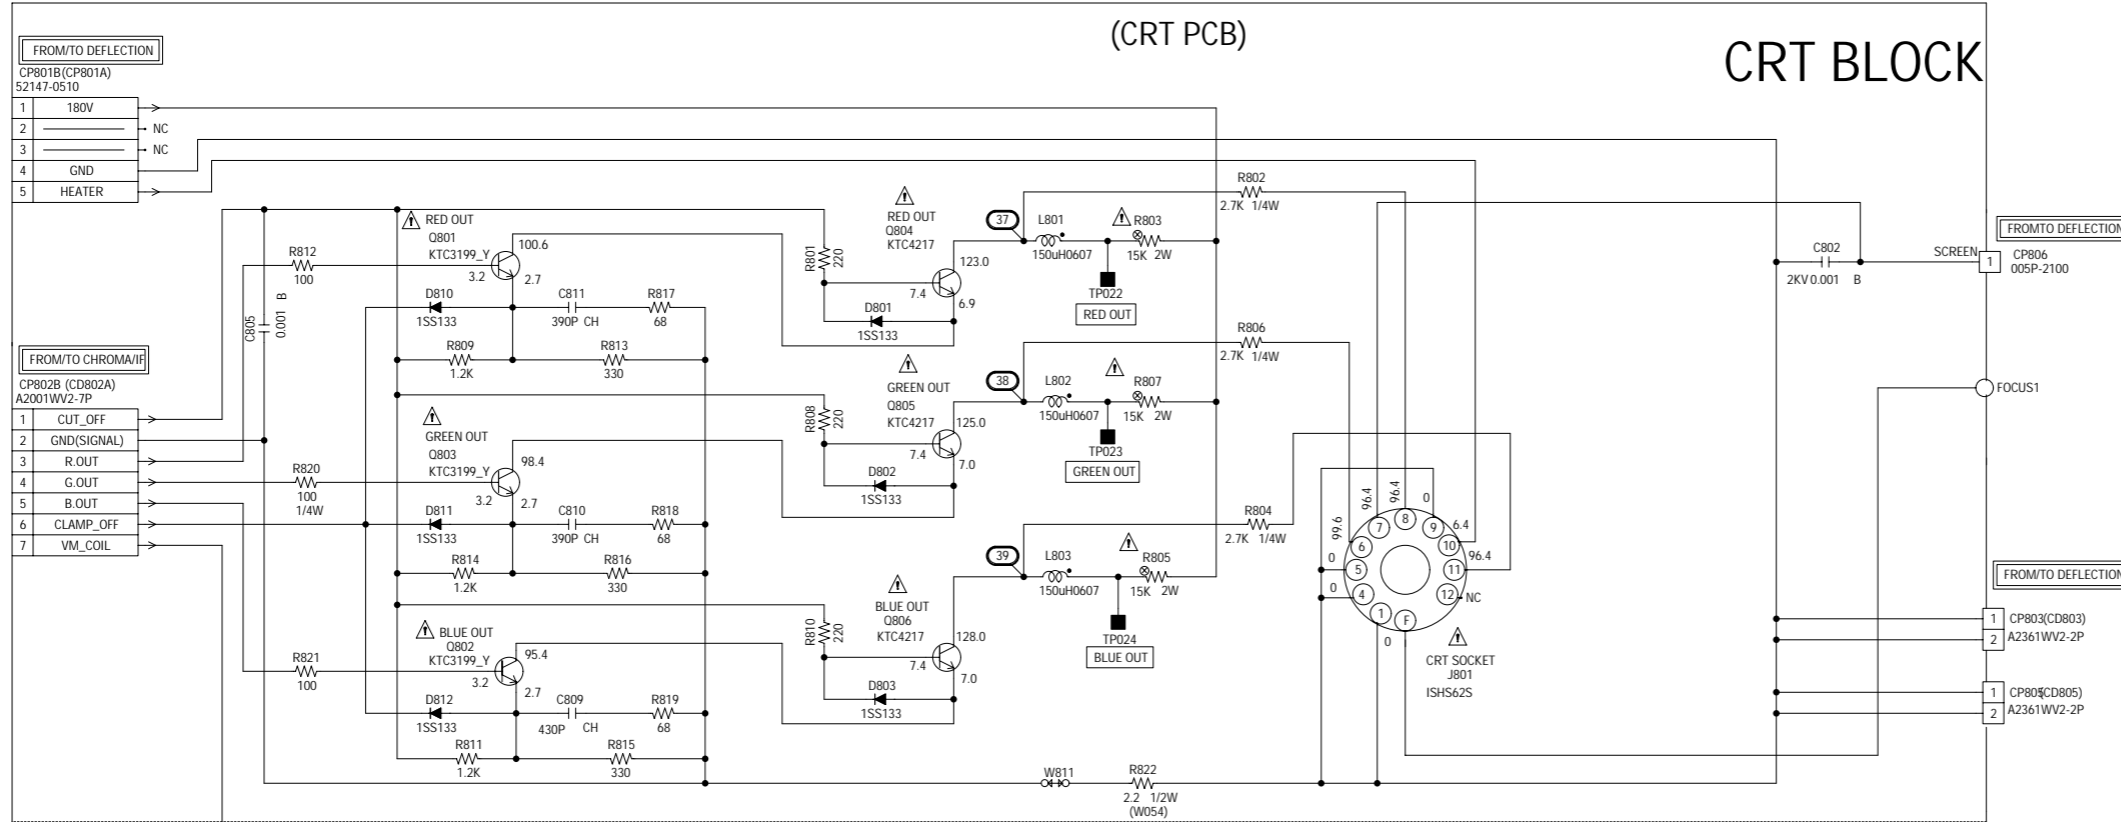

## SVM BLOCK

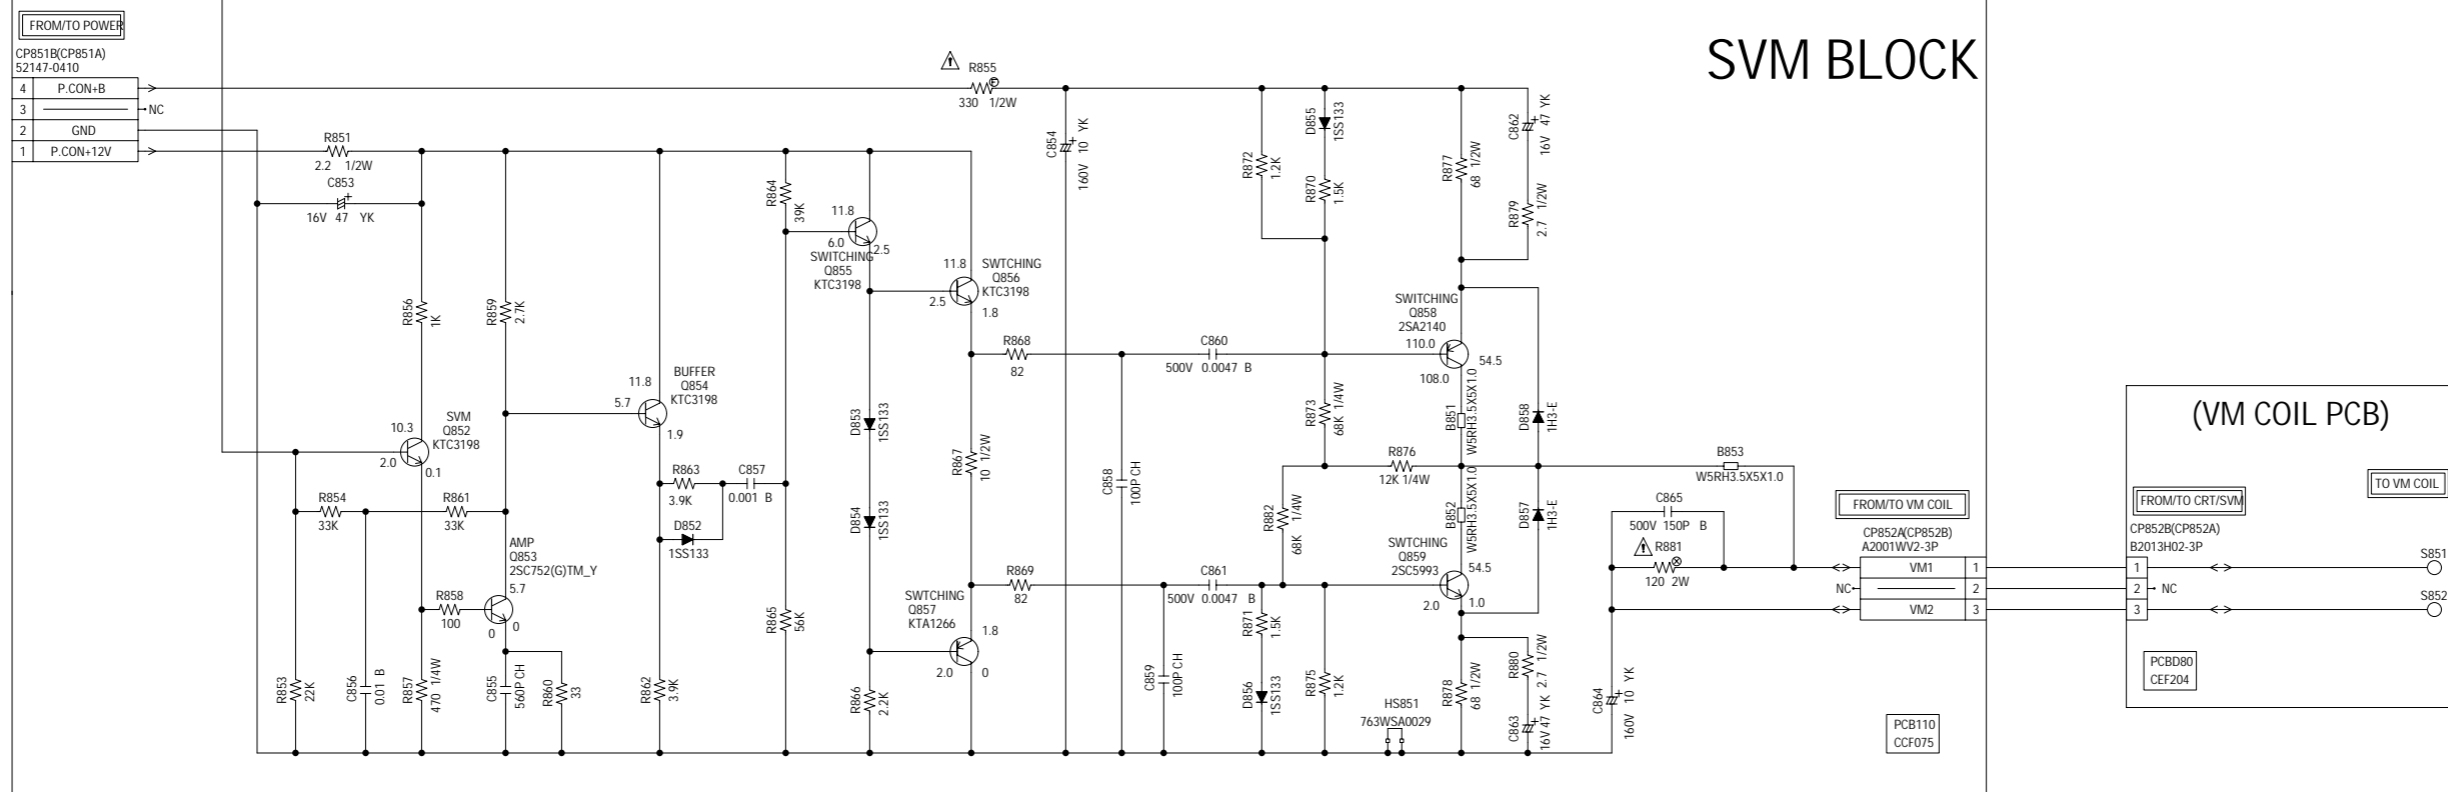

## (VM COIL PCB)

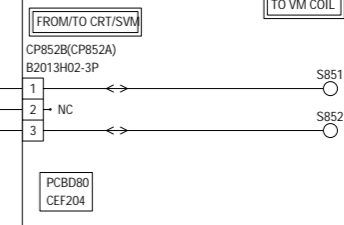


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


**CAUTION** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

# MICON SCHEMATIC DIAGRAM (TV MT PCB)

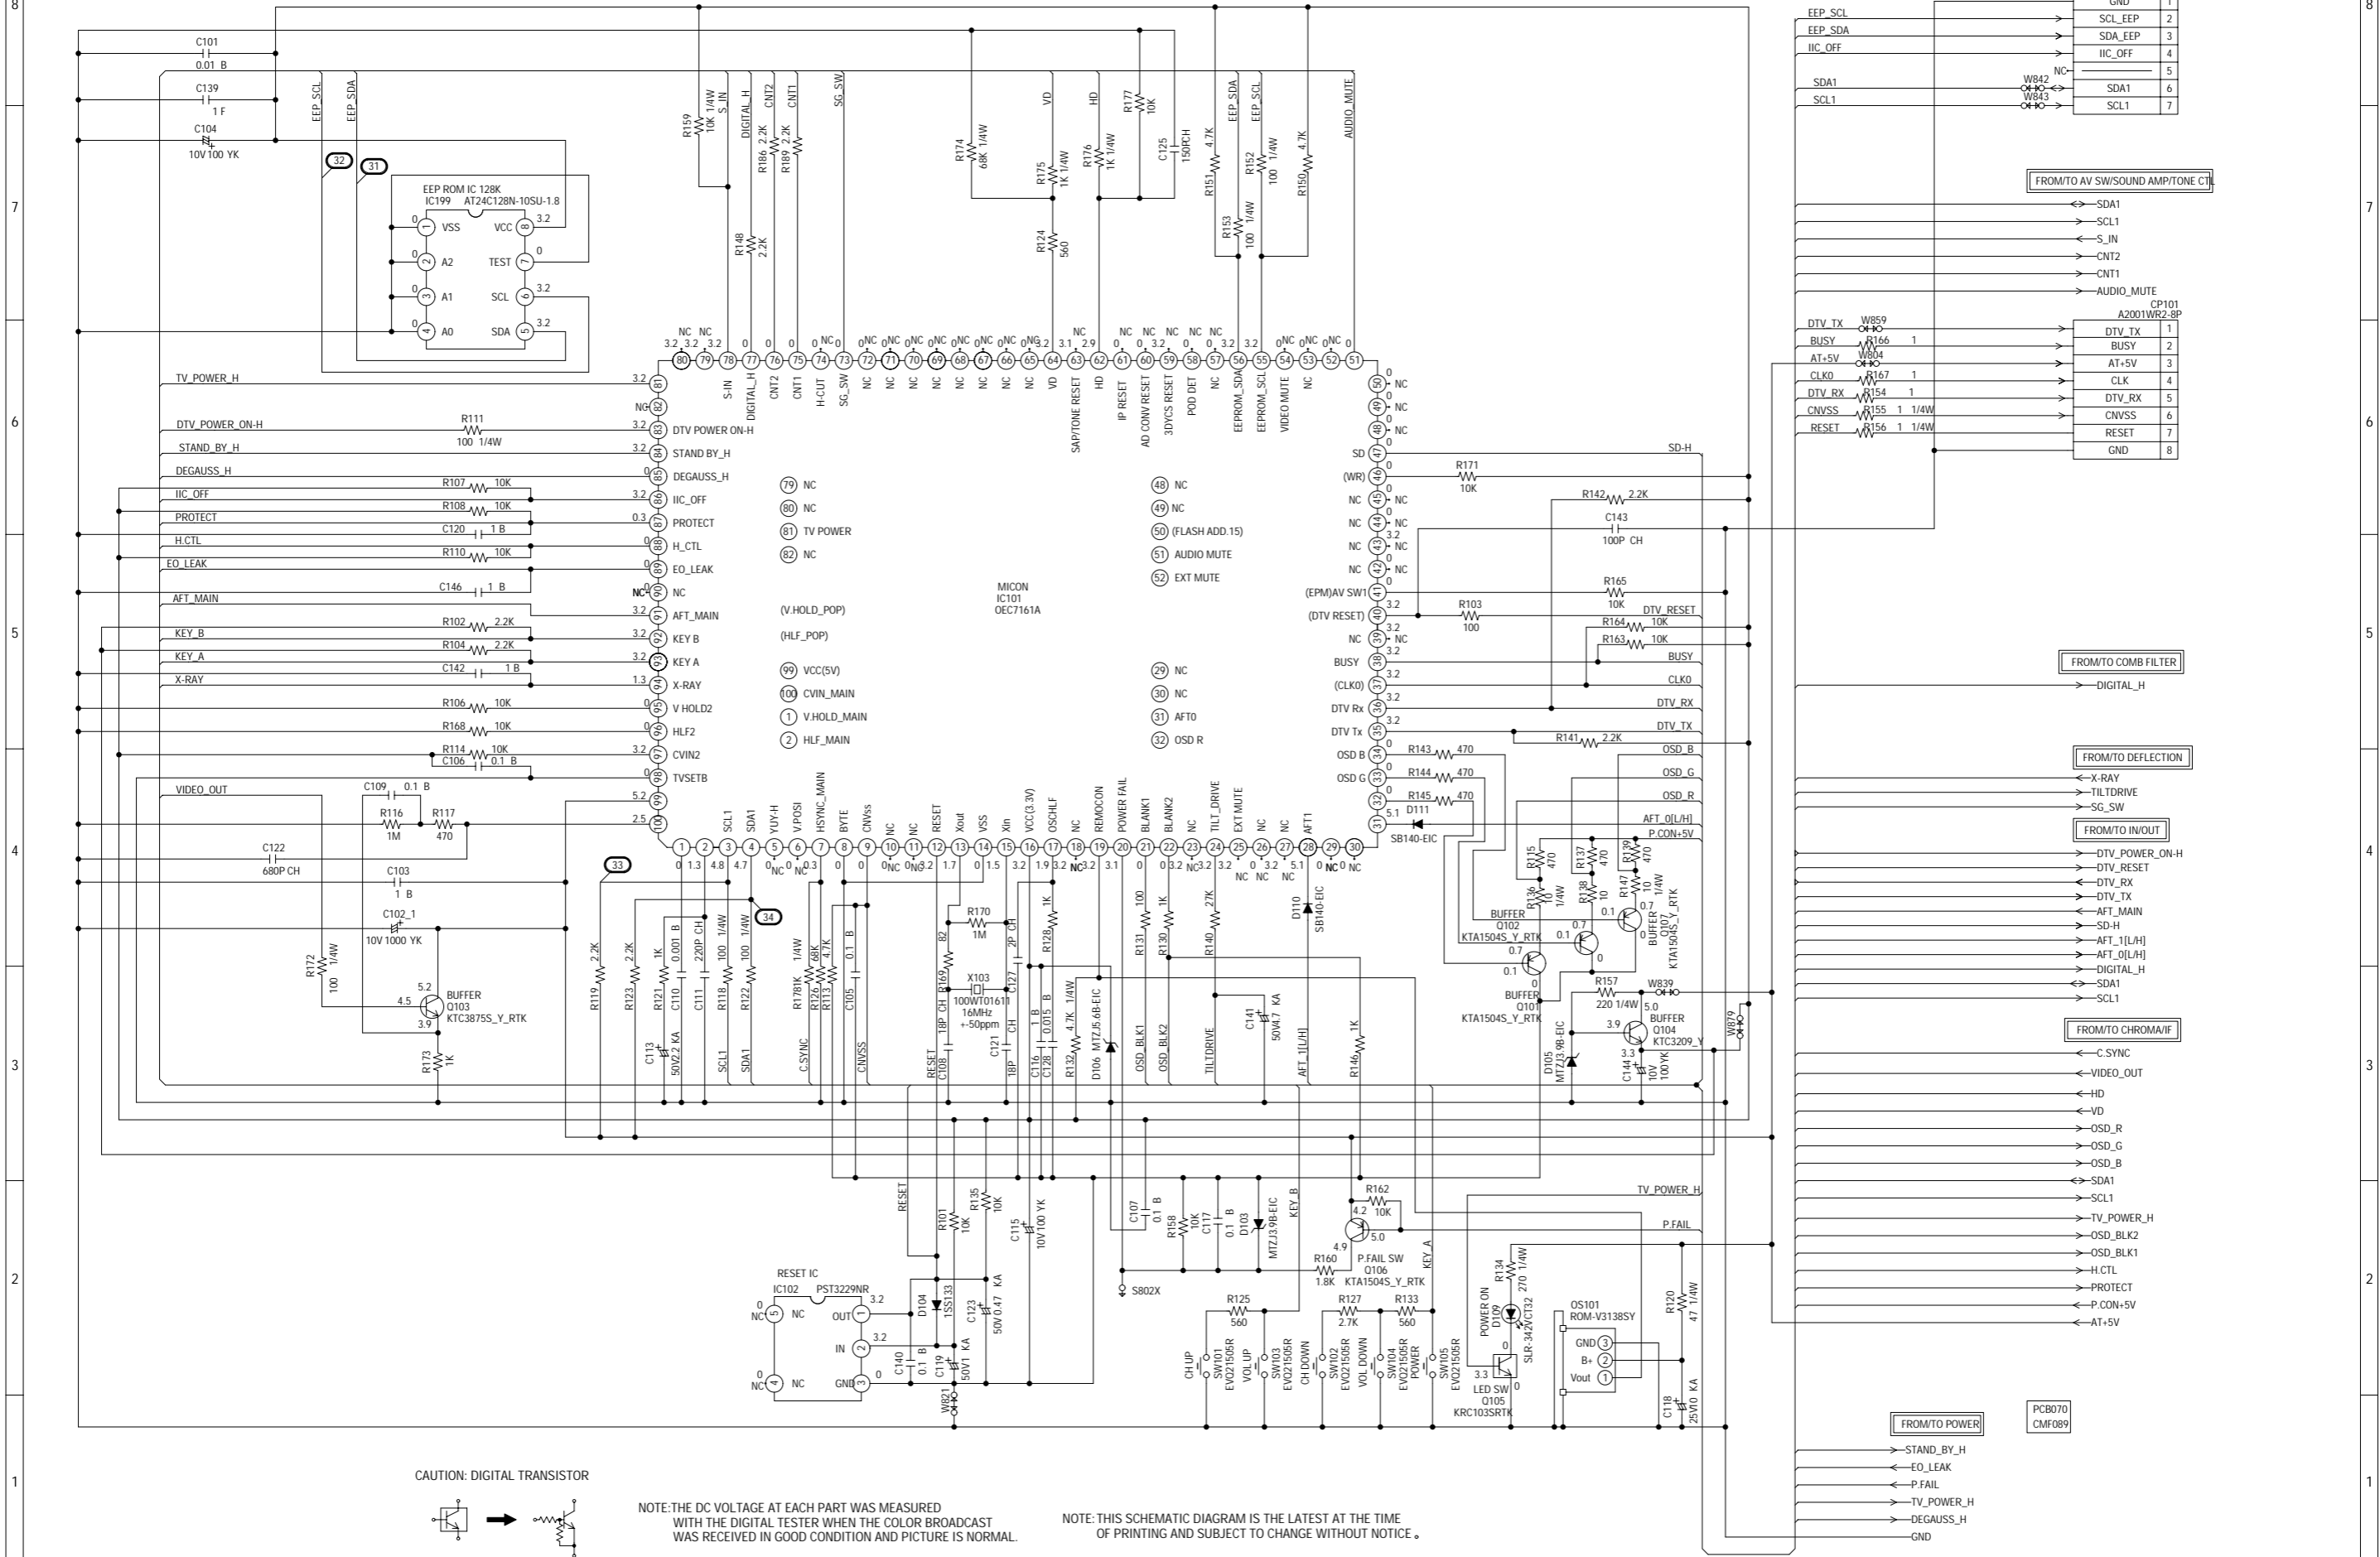

CAUTION: DIGITAL TRANSISTOR



NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CP102 A2001WV2-7P	
GND	1
SCL_EEP	2
SDA_EEP	3
IIC_OFF	4
NC	5
SDA1	6
SCL1	7

CP101 A2001WR2-8P	
DTV_TX	1
BUSY	2
AT+5V	3
CLK0	4
DTV_RX	5
CNVSS	6
RESET	7
GND	8

FROM/TO COMB FILTER	
DTV_TX	1
BUSY	2
AT+5V	3
CLK0	4
DTV_RX	5
CNVSS	6
RESET	7
GND	8

FROM/TO DEFECTION	
X-RAY	1
TILTDRIVE	2
SG_SW	3


FROM/TO IN/OUT	
DTV_POWER_ON-H	1
DTV_RESET	2
DTV_RX	3
DTV_TX	4
AFT_MAIN	5
SD-H	6
AFT_1[L/H]	7
AFT_0[L/H]	8
DIGITAL_H	9
SDA1	10
SCL1	11

FROM/TO CHROMA/IF	
C_SYNC	1
VIDEO_OUT	2
HD	3
VD	4
OSD_R	5
OSD_G	6
OSD_B	7
SDA1	8
SCL1	9
TV_POWER_H	10
OSD_BLK2	11
OSD_BLK1	12
H_CTL	13
PROTECT	14
P.CON+5V	15
AT+5V	16

FROM/TO POWER	
STAND_BY_H	1
EO_LEAK	2
P.FAIL	3
TV_POWER_H	4
DEGAUSS_H	5
GND	6

PCB070  
CMF089

# CHROMA/IF SCHEMATIC DIAGRAM (TV MT PCB)

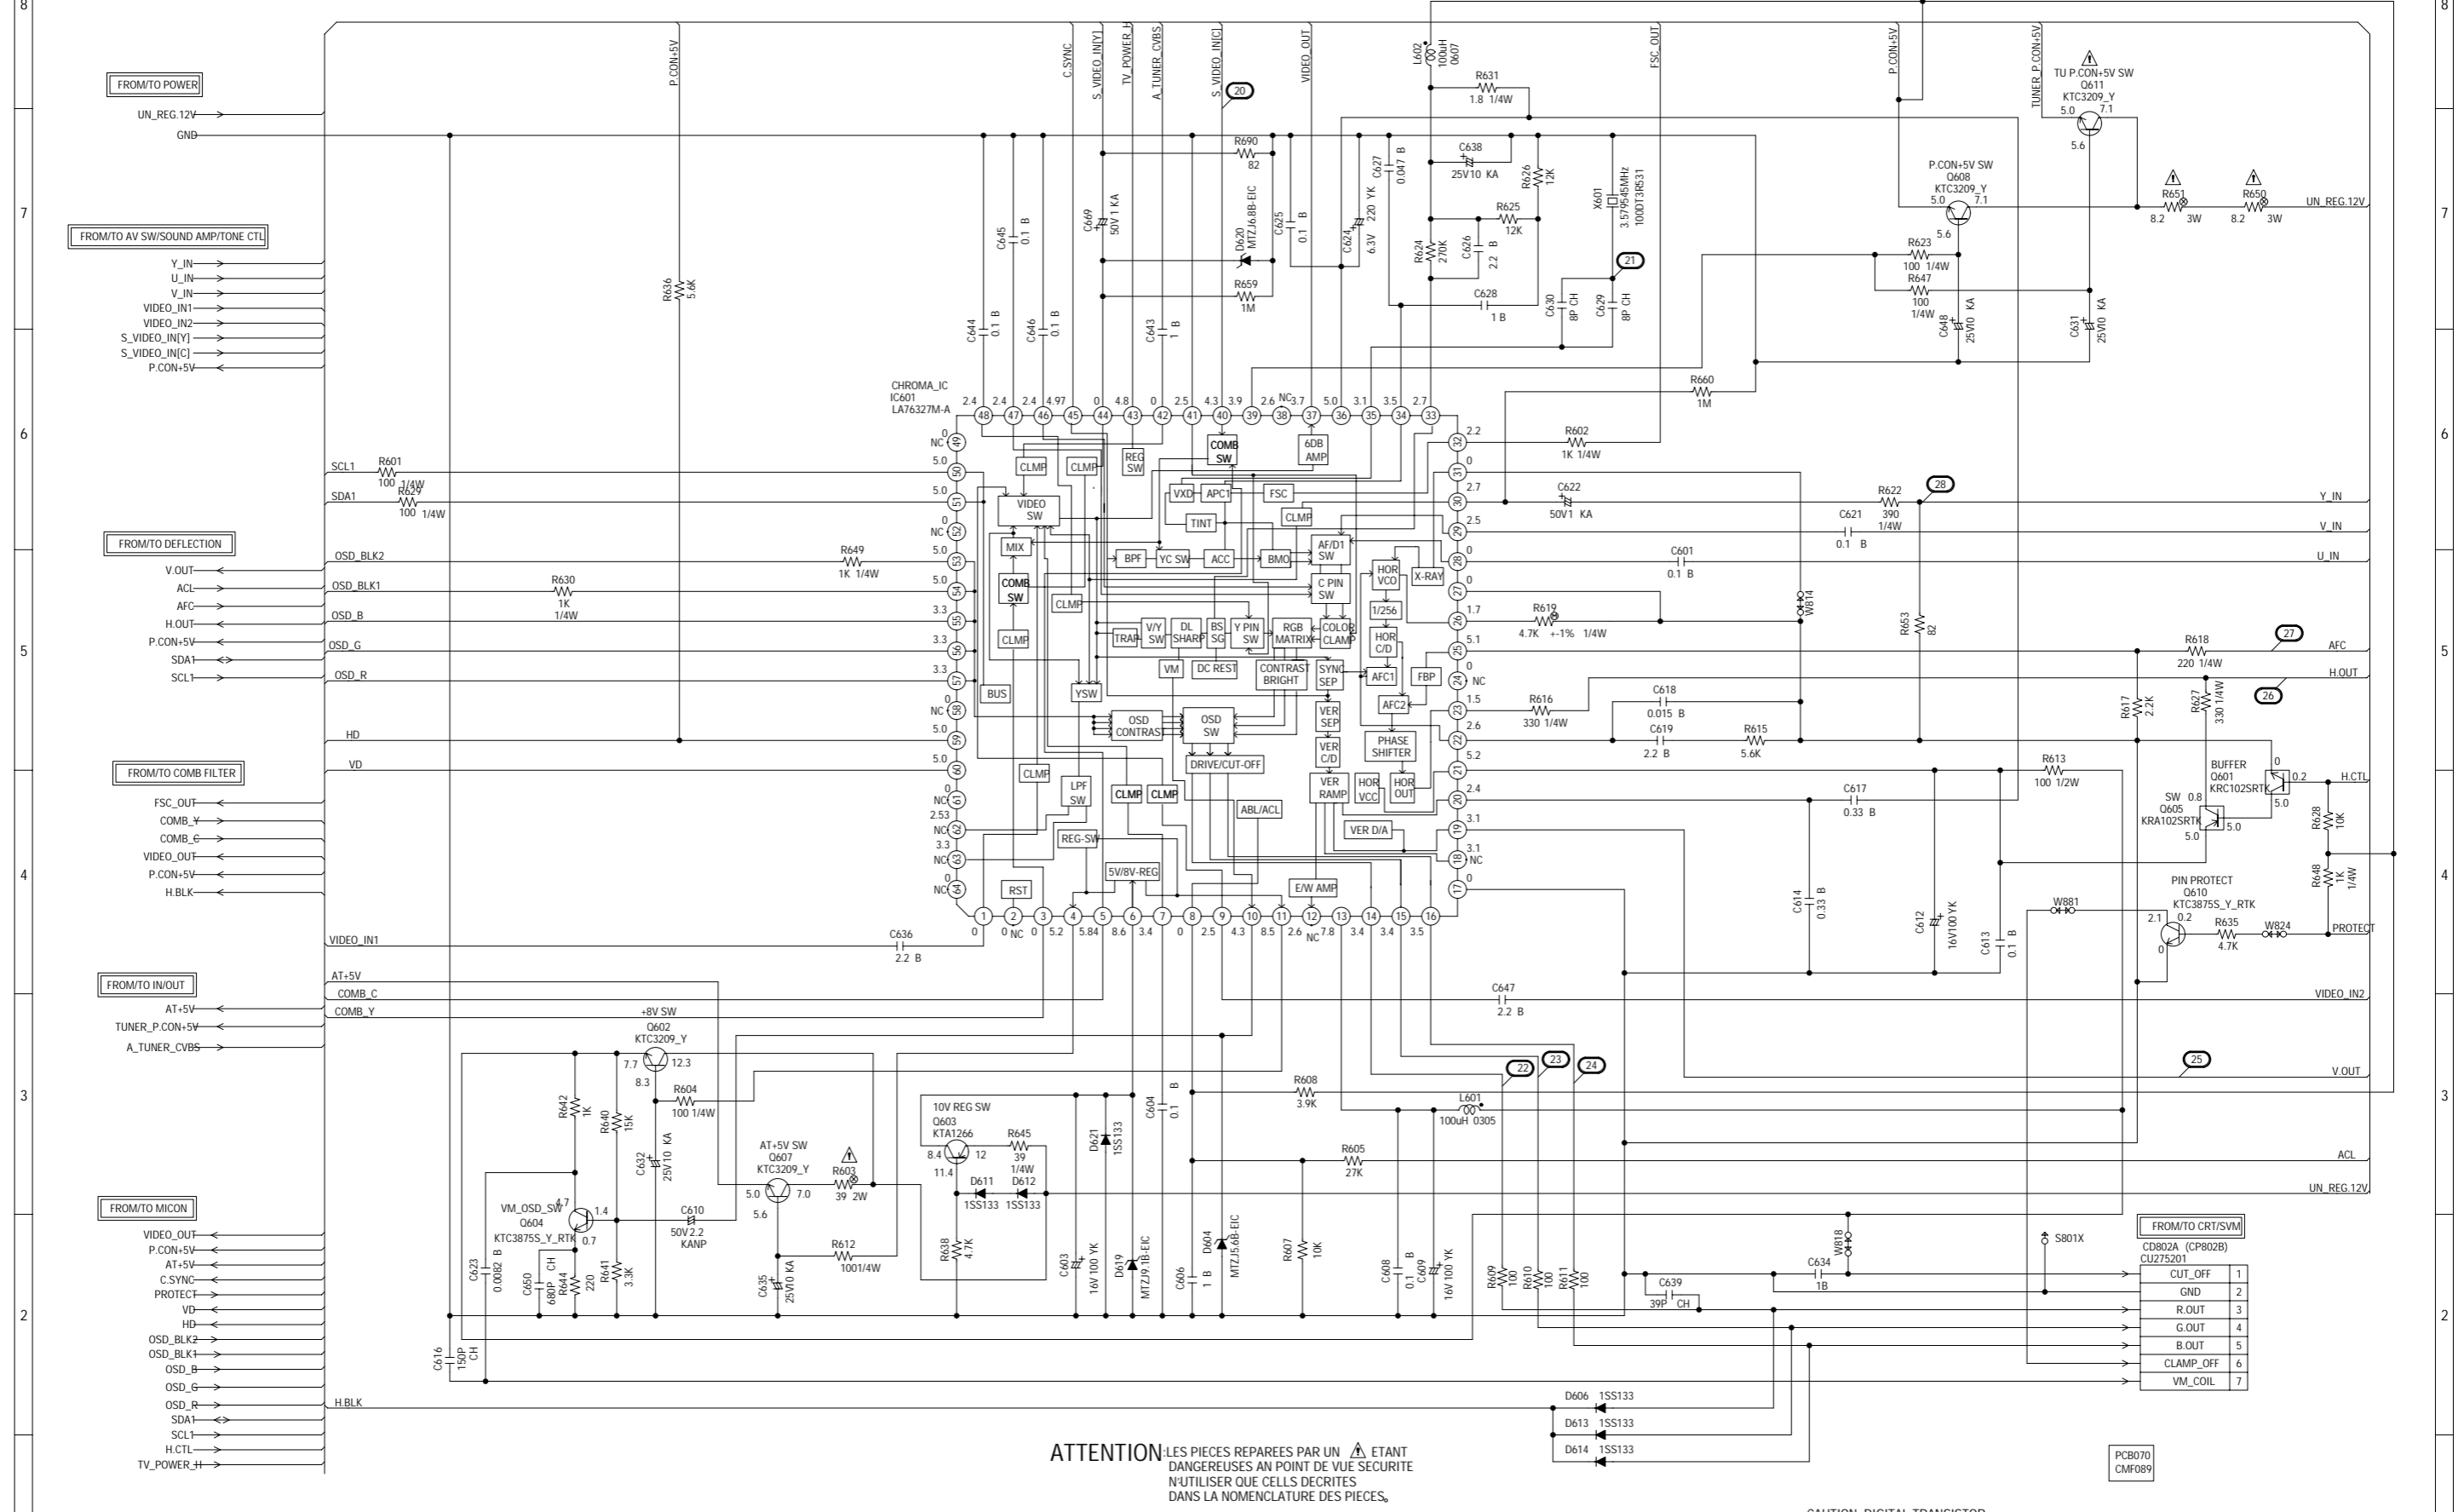


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

CAUTION: DIGITAL TRANSISTOR



CAUTION: DIGITAL TRANSISTOR




ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

FROM/TO CRT/SVM	
CUT_OFF	1
GND	2
R.OUT	3
G.OUT	4
B.OUT	5
CLAMP_OFF	6
VM_COIL	7

PCB070  
CMF089

# DEFLECTION SCHEMATIC DIAGRAM (TV MT PCB)

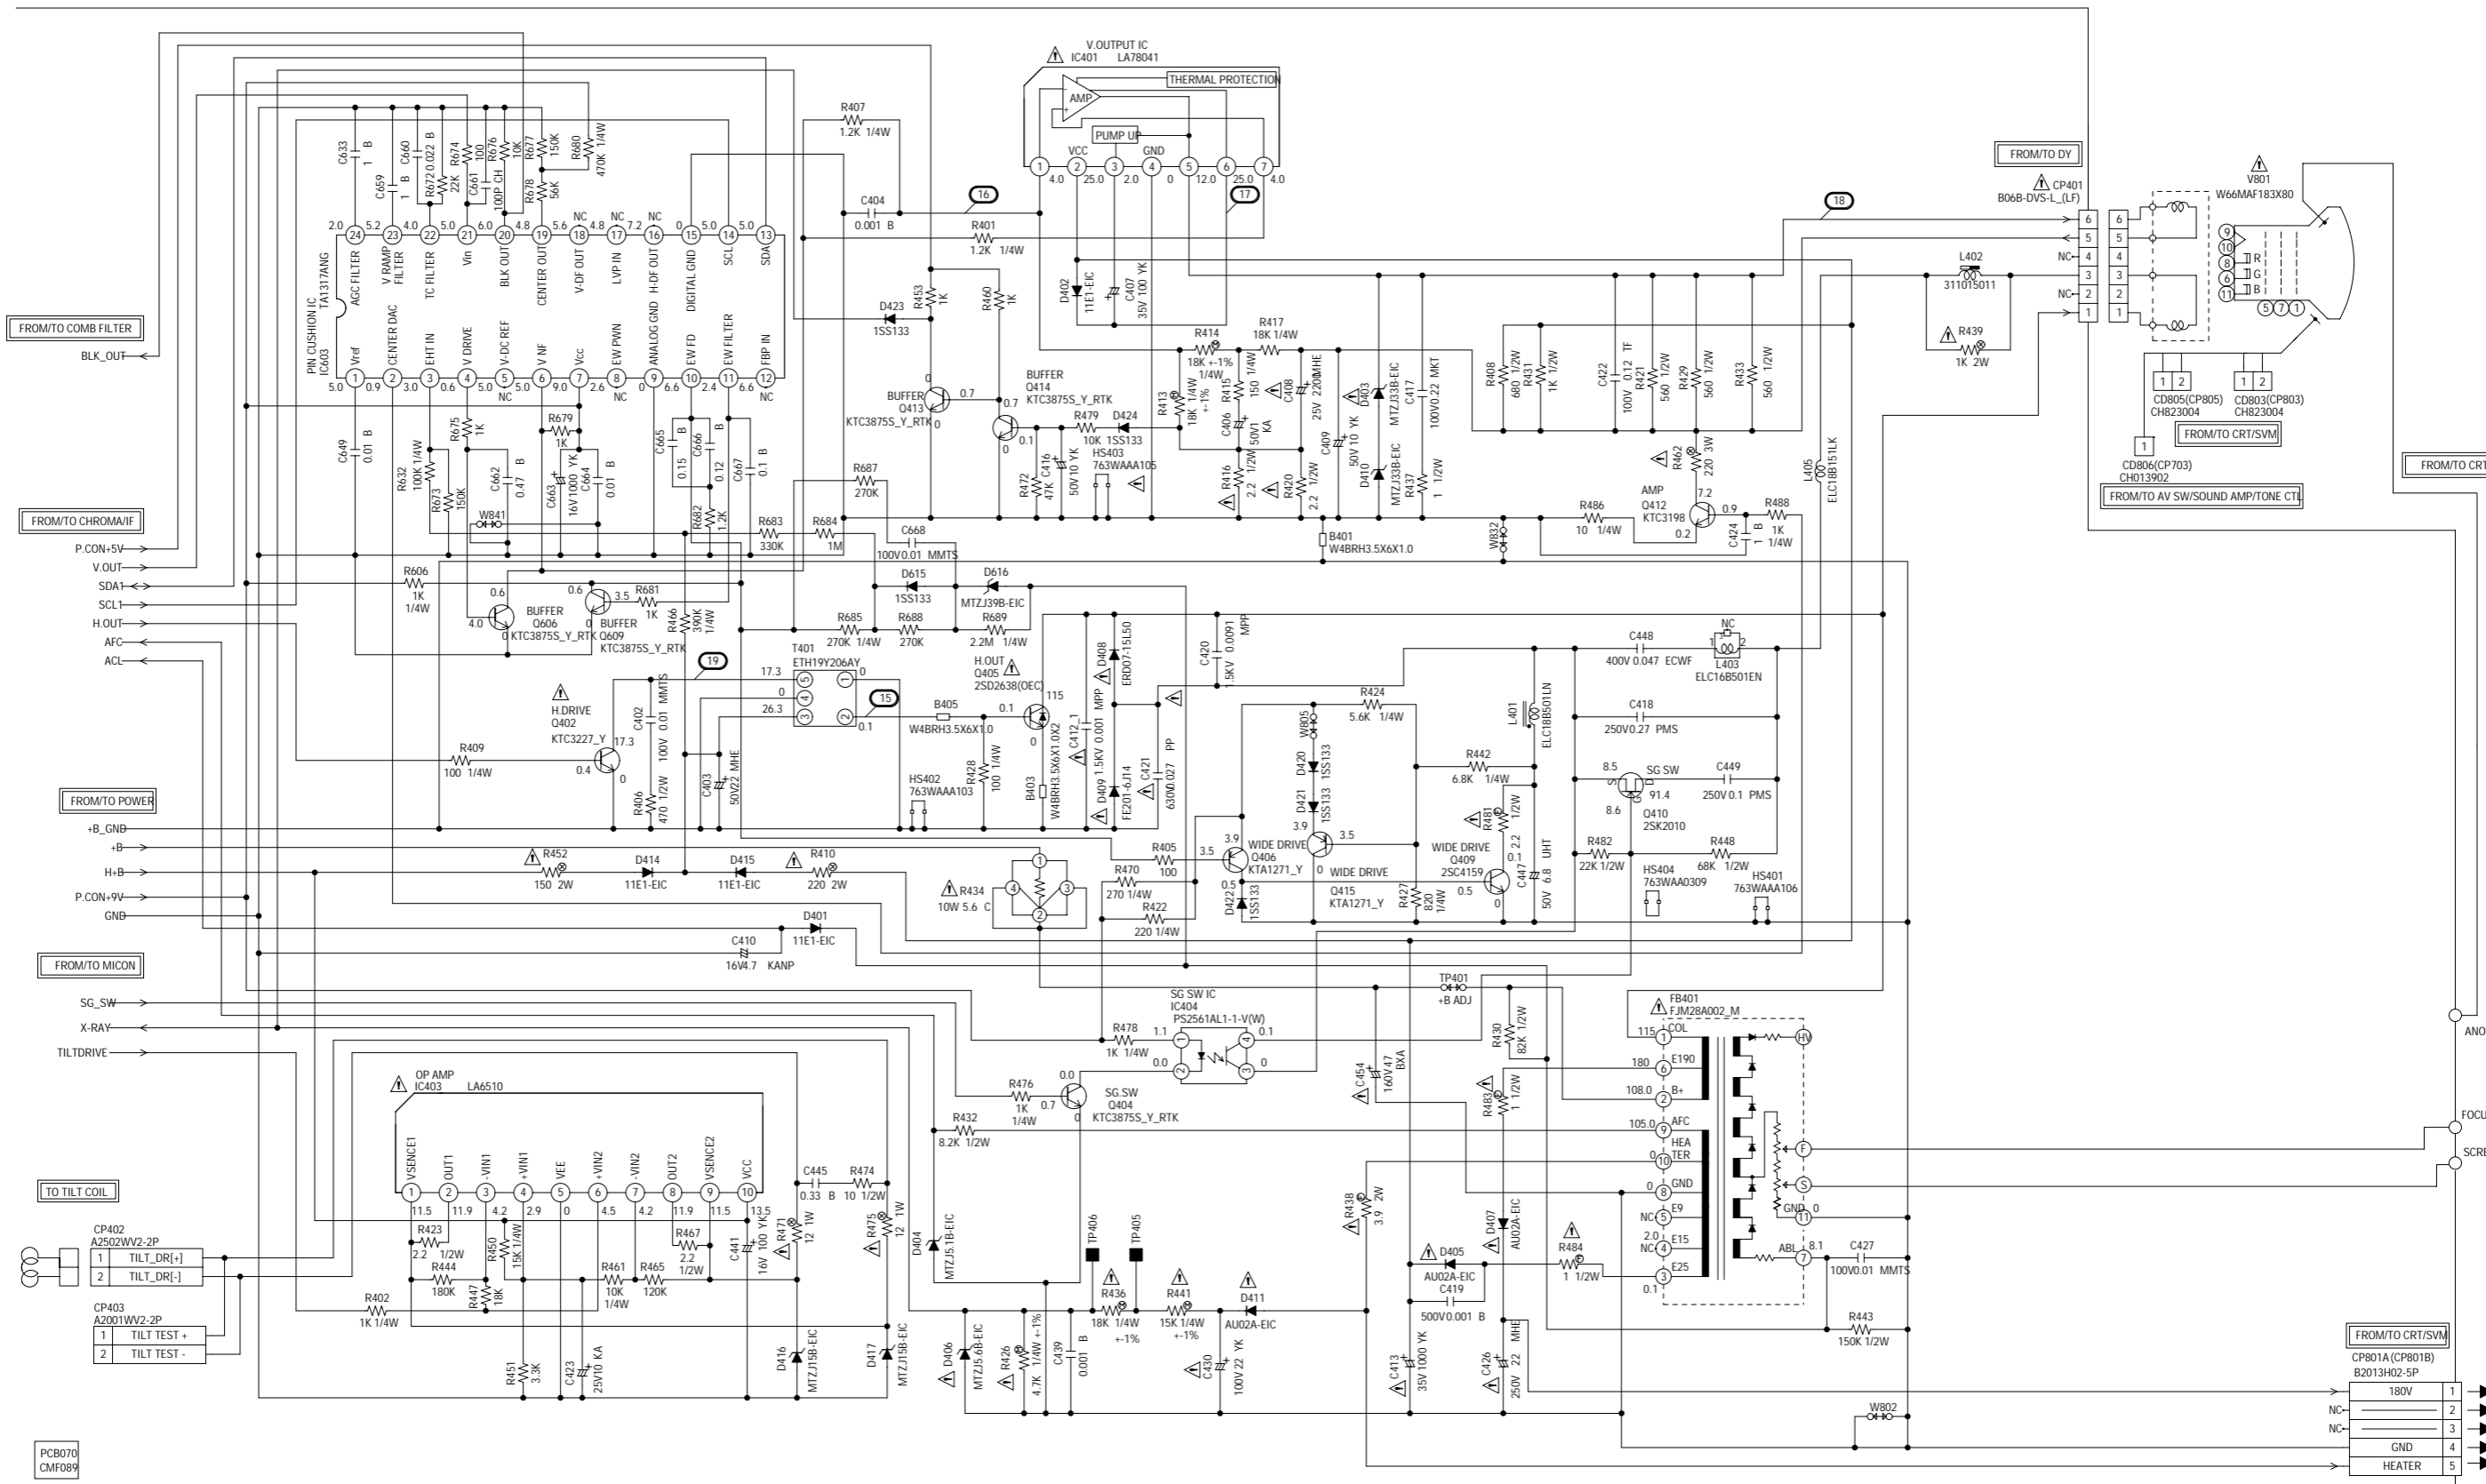

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLS DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

# POWER SCHEMATIC DIAGRAM (TV MT PCB)

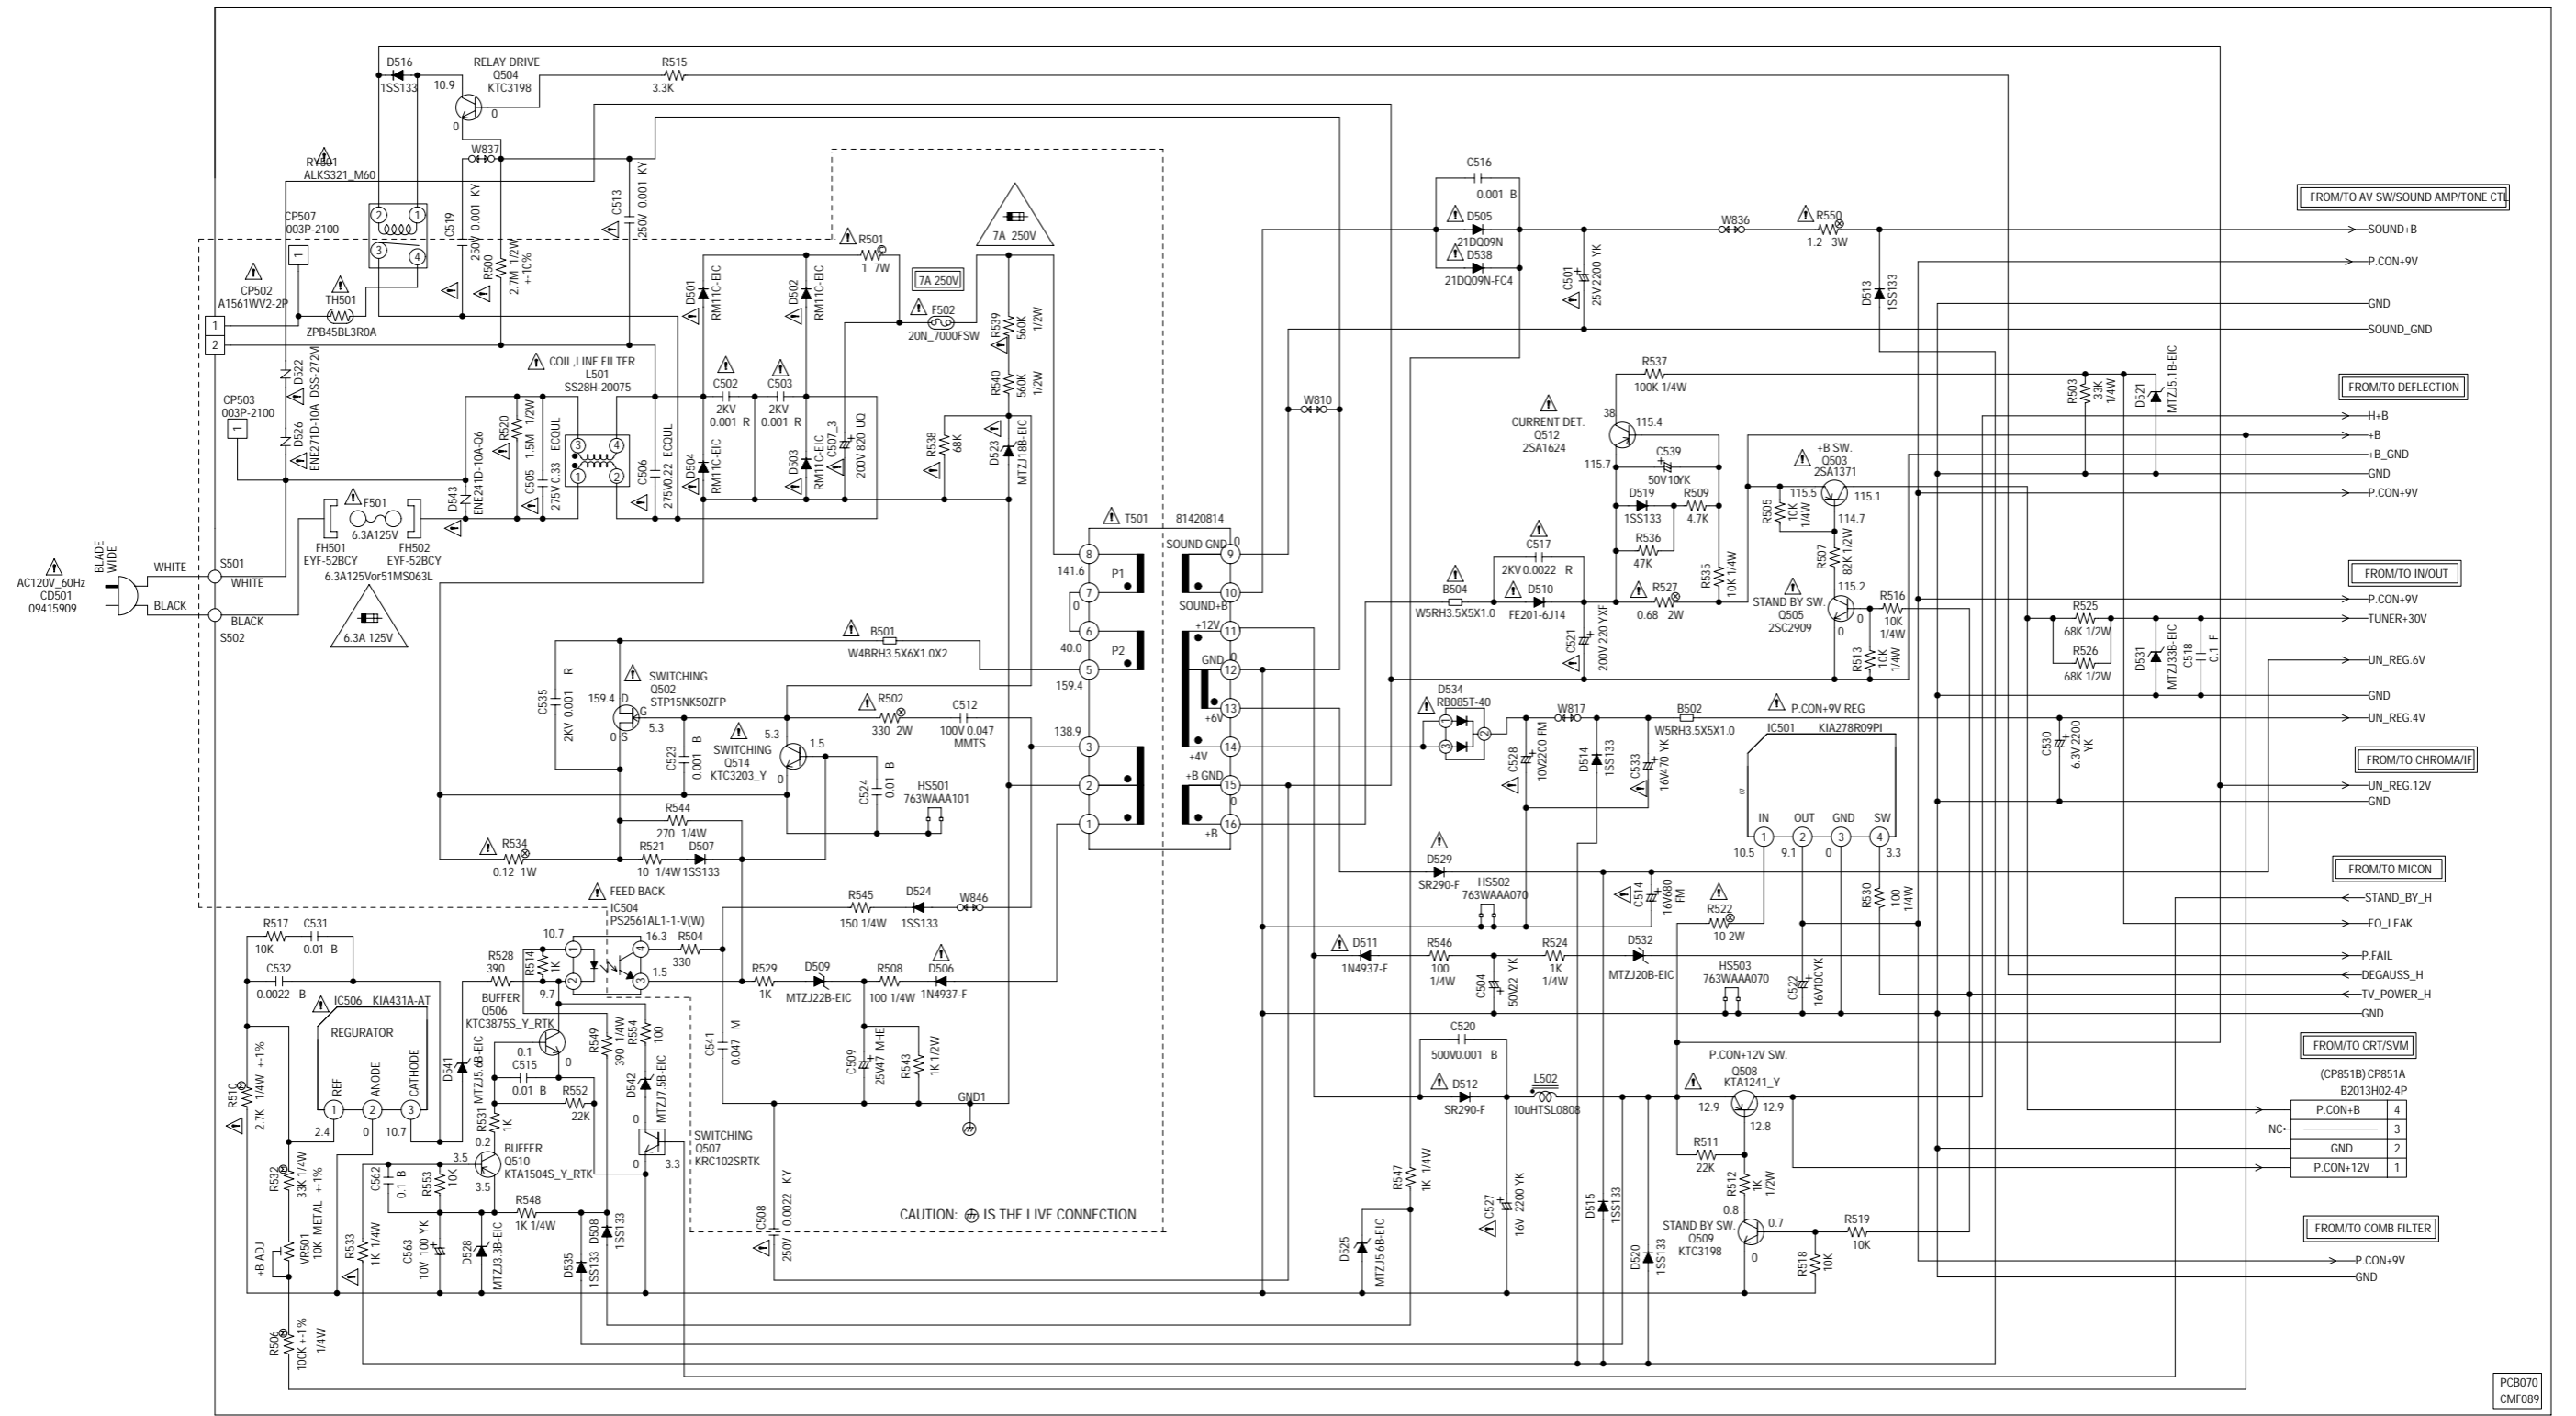

**CAUTION:** FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V(F501) , 7A 250V(F502) AND 5A 125V (F503)

**ATTENTION:** POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V(F501) 7A 250V(F502) ET 5A 125V (F503)

**CAUTION:** F502 AND F503 ARE MANUFACTURED BY SKYGETE CO.,LTD TYPE 20N

**NOTE:** THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

**NOTE:** THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**NOTE:** THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.



**CAUTION:** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY .

**ATTENTION:** LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

**CAUTION:** DIGITAL TRANSISTOR

PCB070  
CMF089

# AV SW/SOUND AMP/TONE CTL SCHEMATIC DIAGRAM (TV MT PCB)

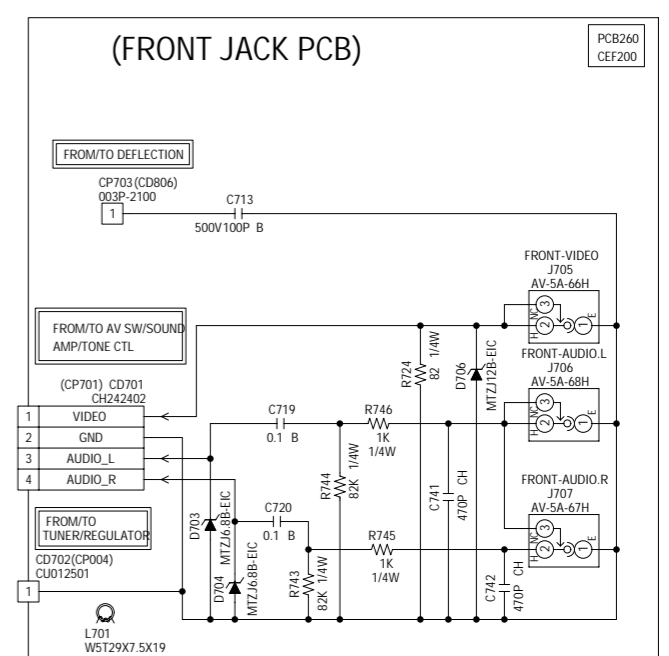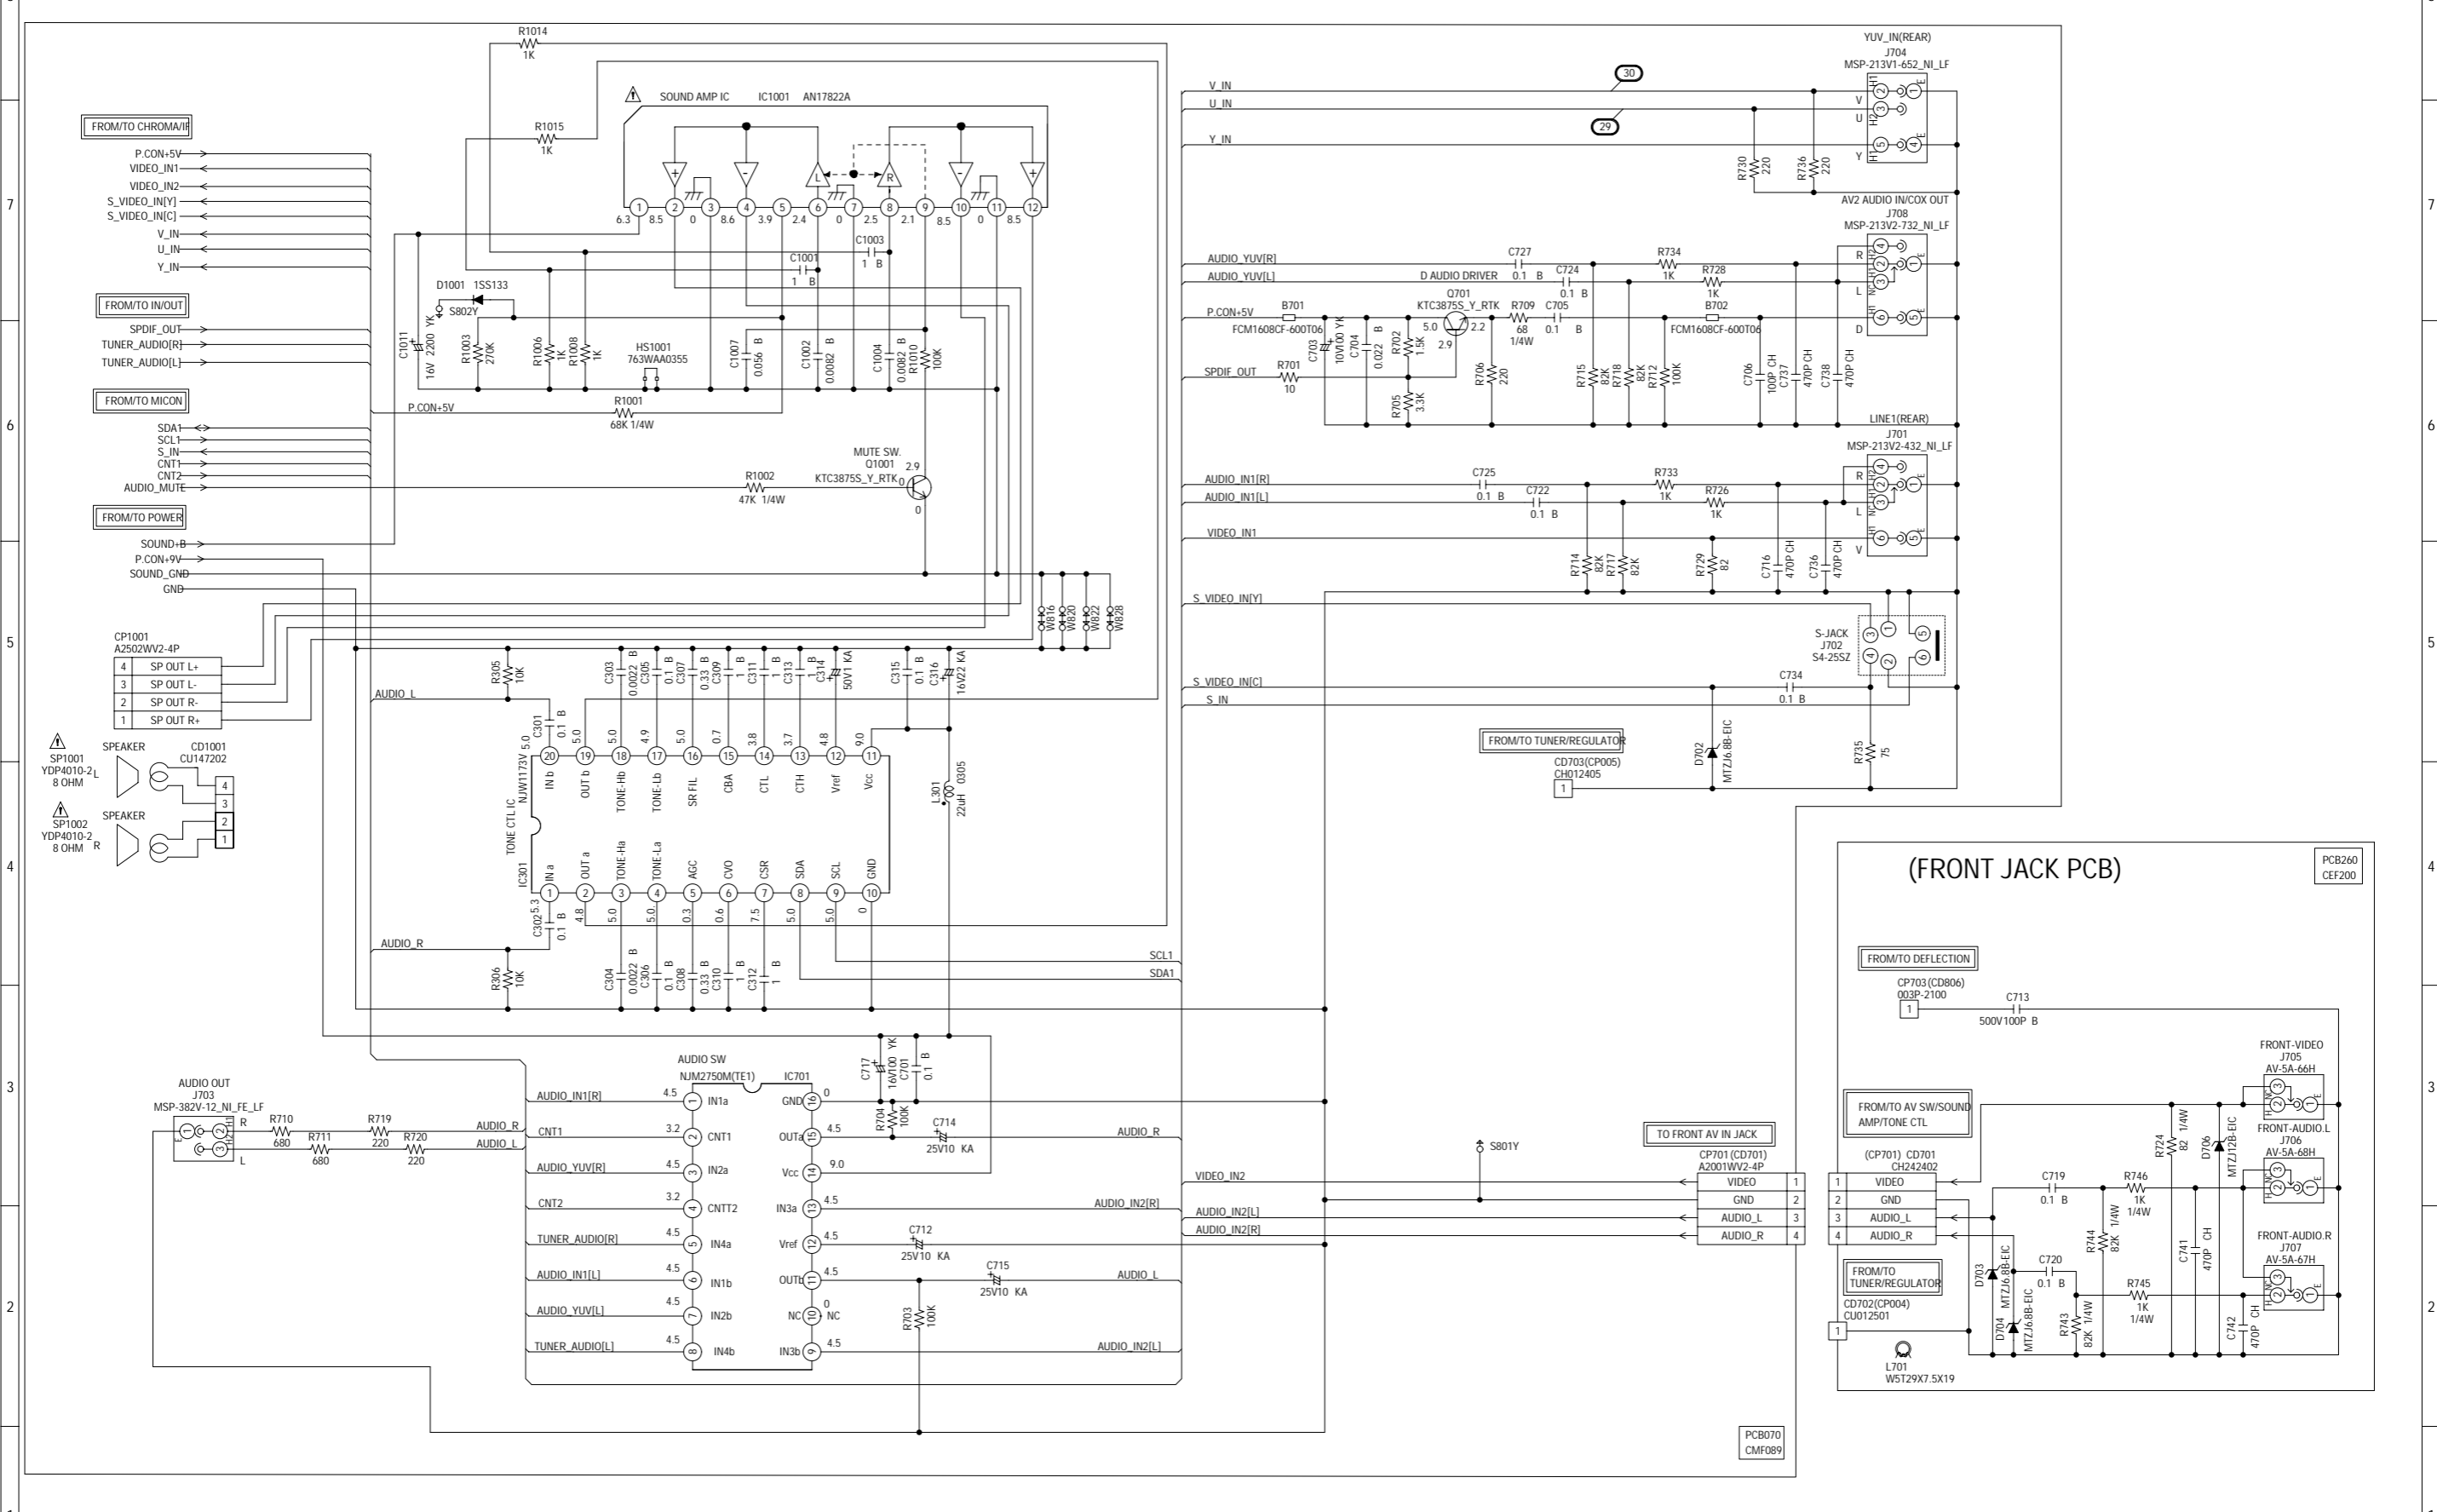


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**CAUTION** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY. **ATTENTION** LES PIECES REPAREES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

# IN/OUT SCHEMATIC DIAGRAM (TV MT PCB)

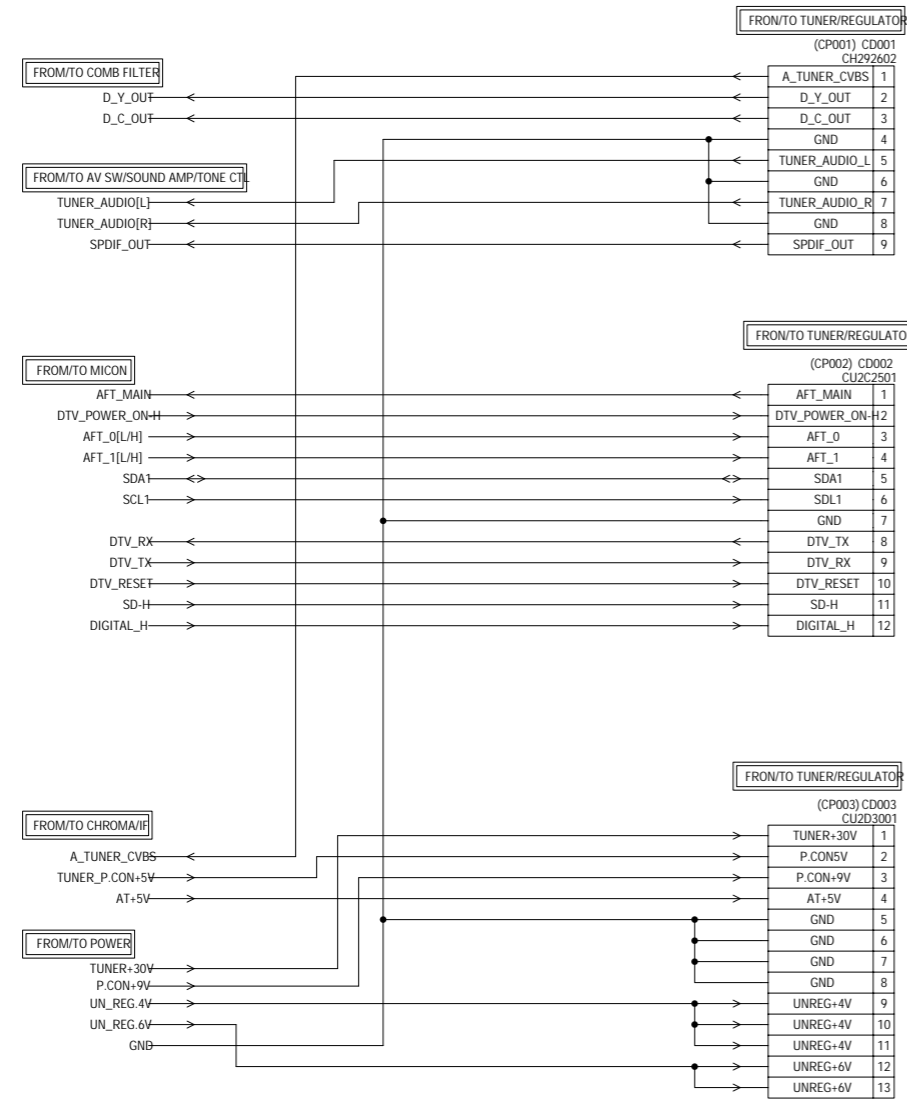

L002  
W5T29X7.5X19

PCB070  
CMF089


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.





# SDRAM SCHEMATIC DIAGRAM (DIGITAL PCB)

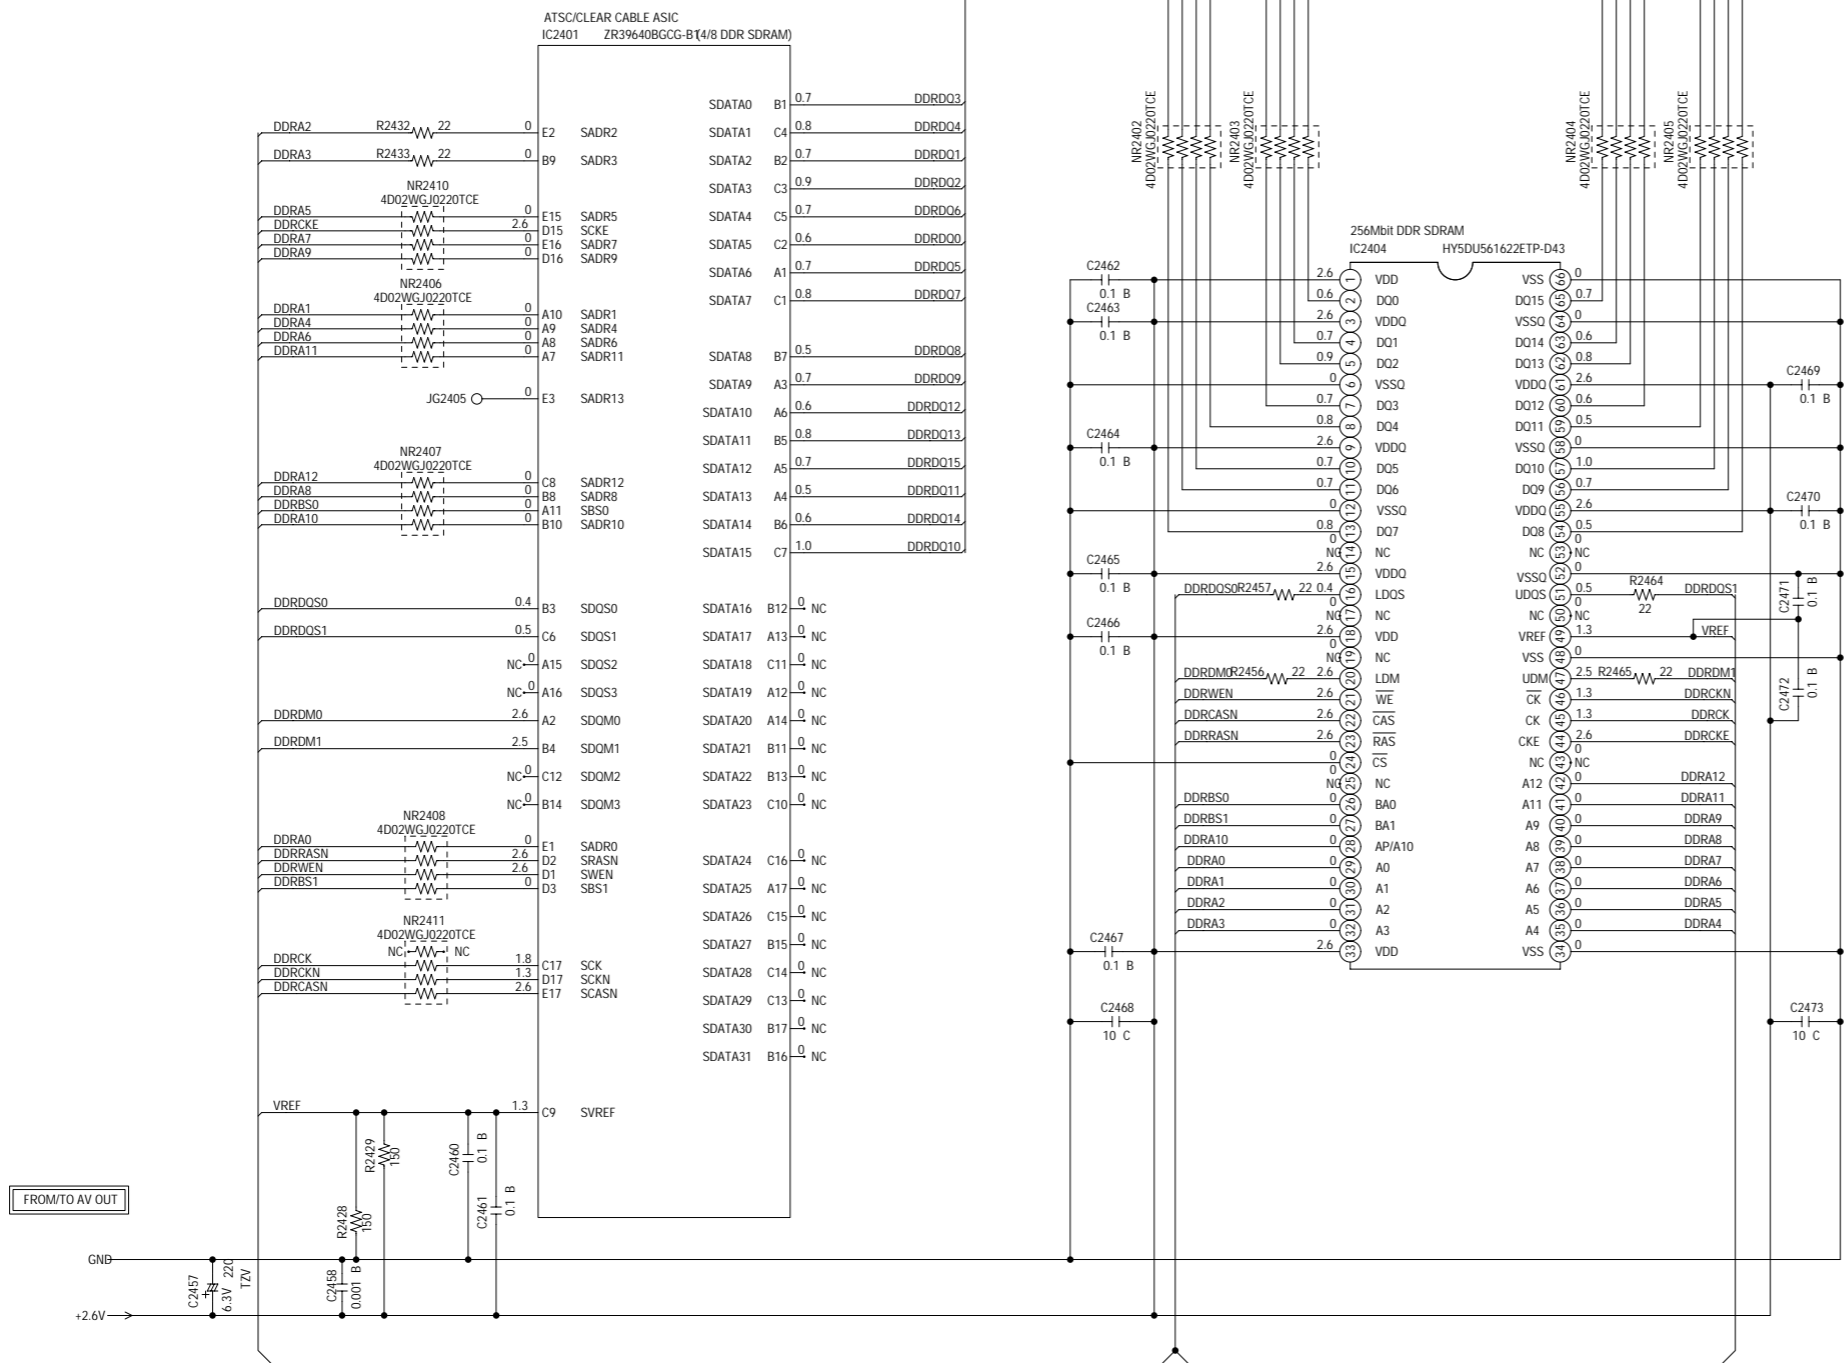


PCBDH0  
CEE139

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

# FLASH SCHEMATIC DIAGRAM (DIGITAL PCB)

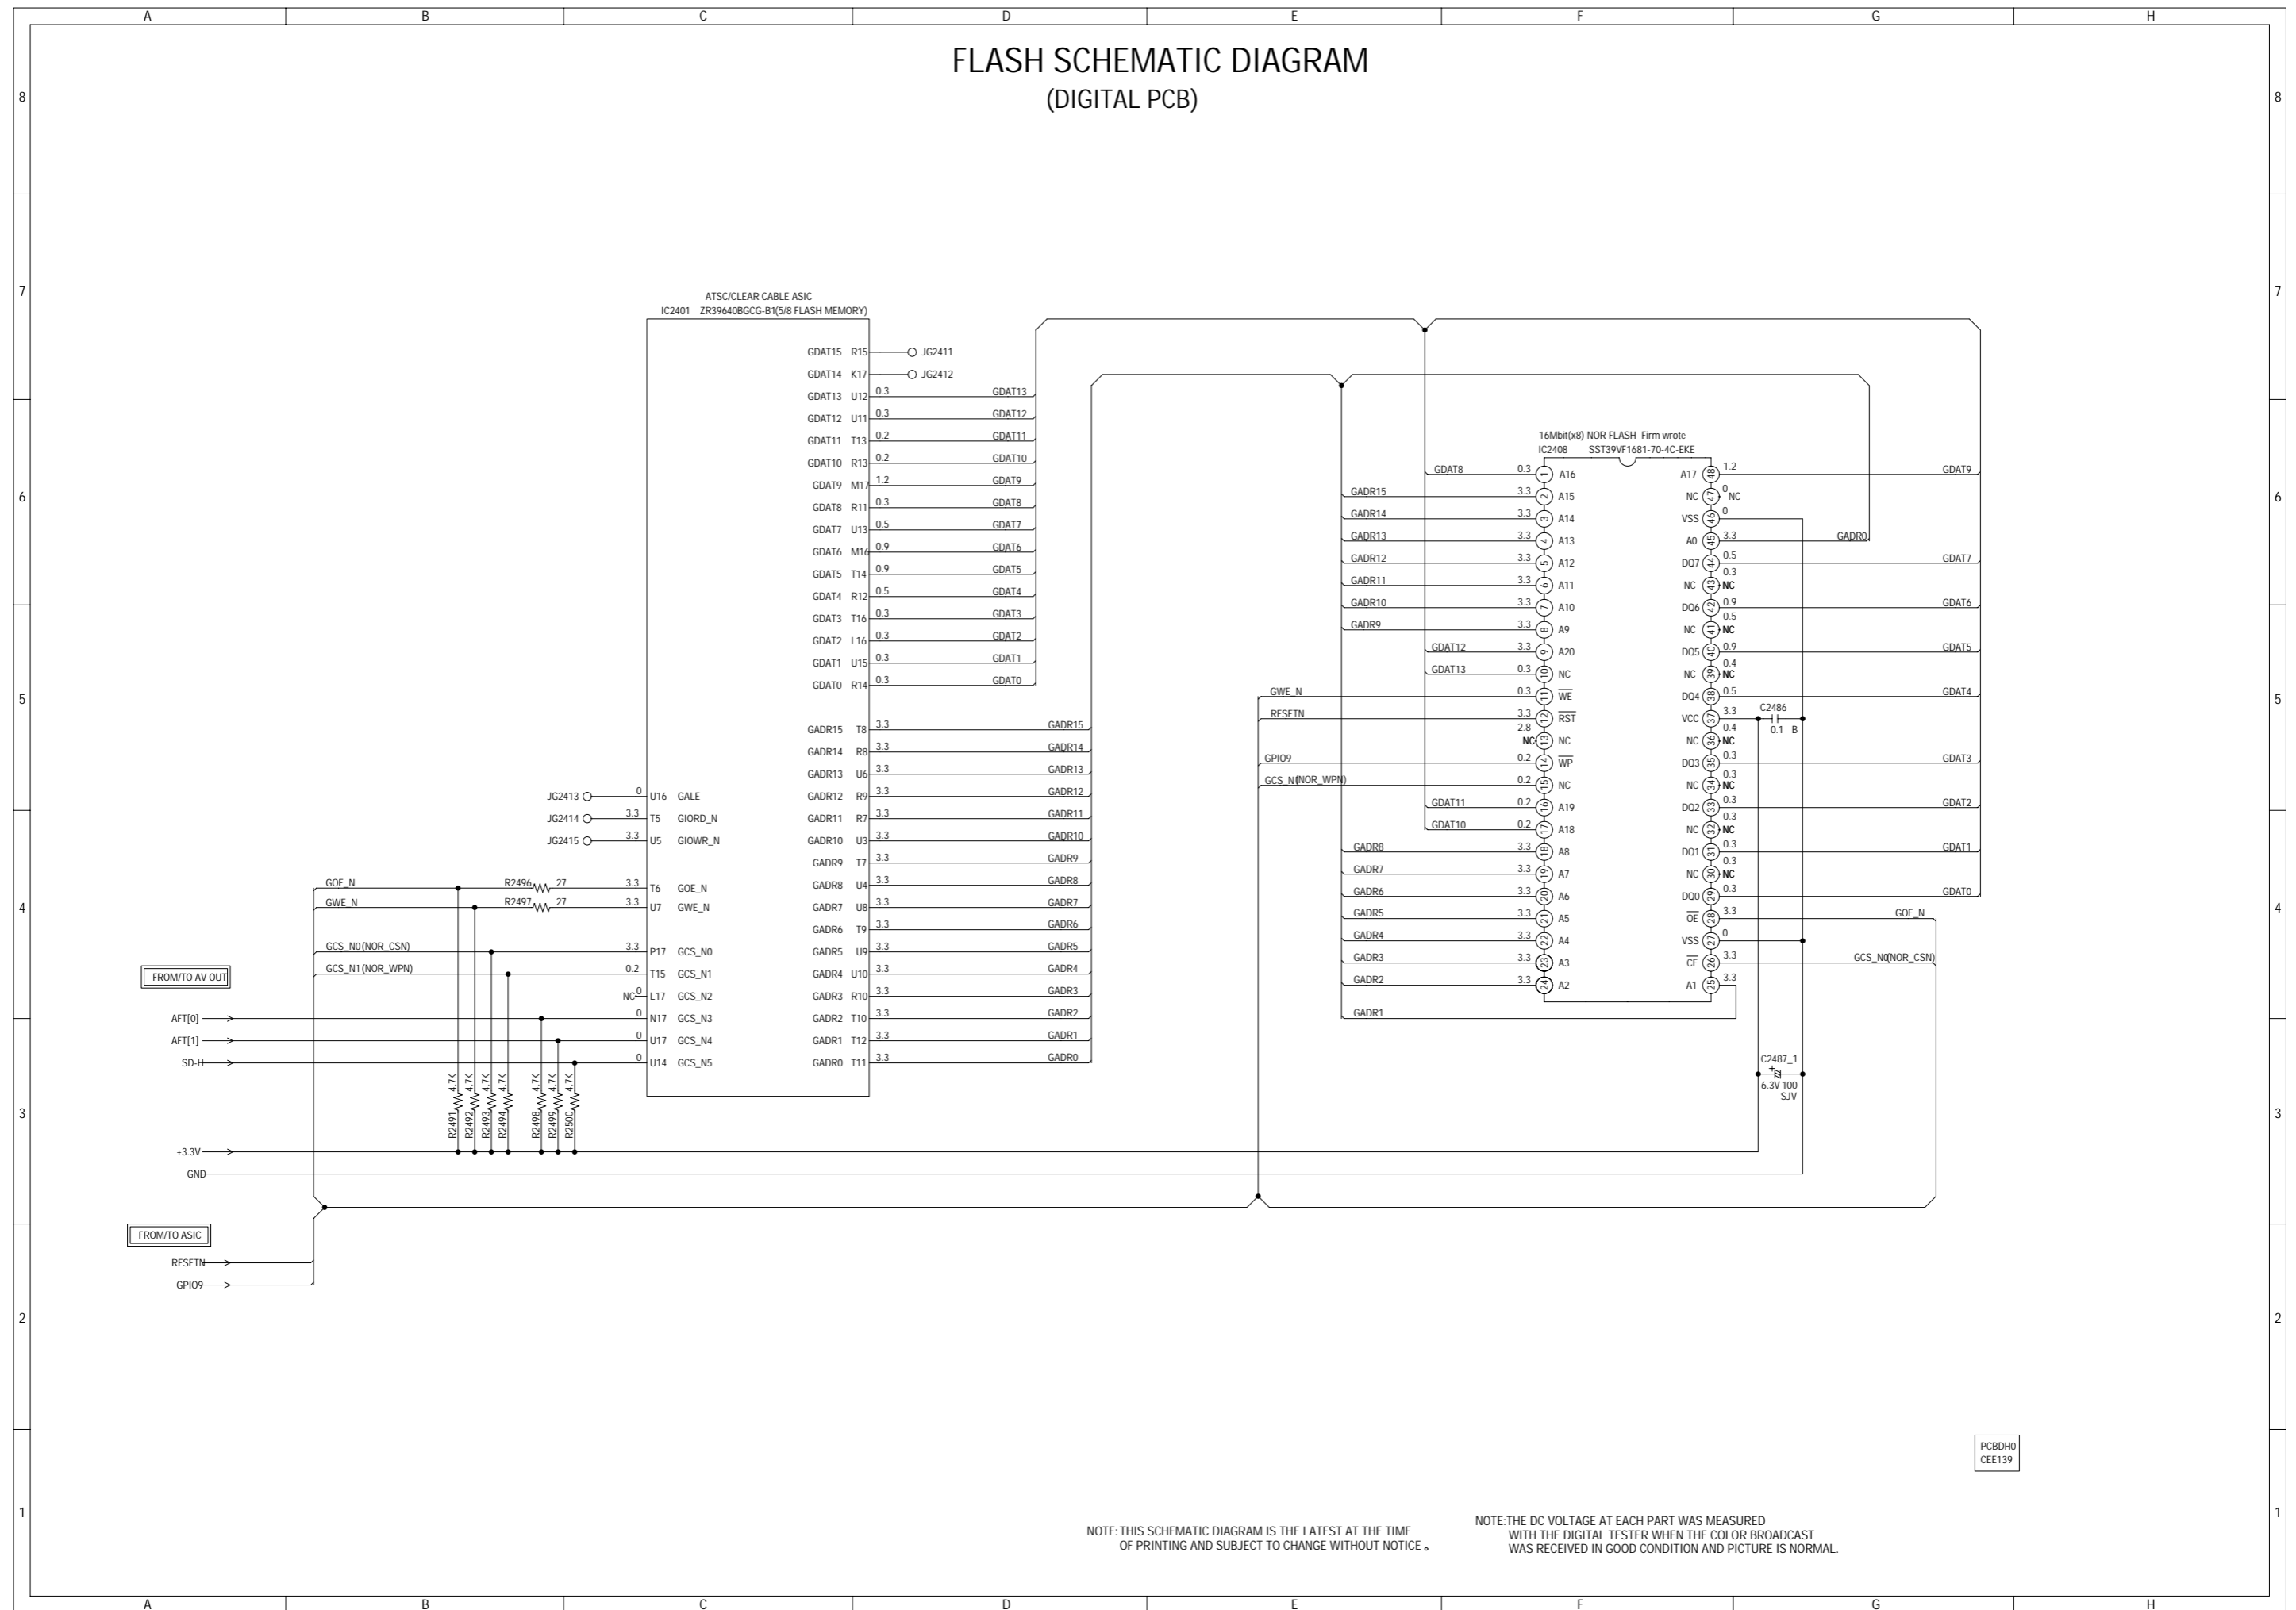


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCBDH0  
GEE139

# FRONT END SCHEMATIC DIAGRAM (DIGITAL PCB)

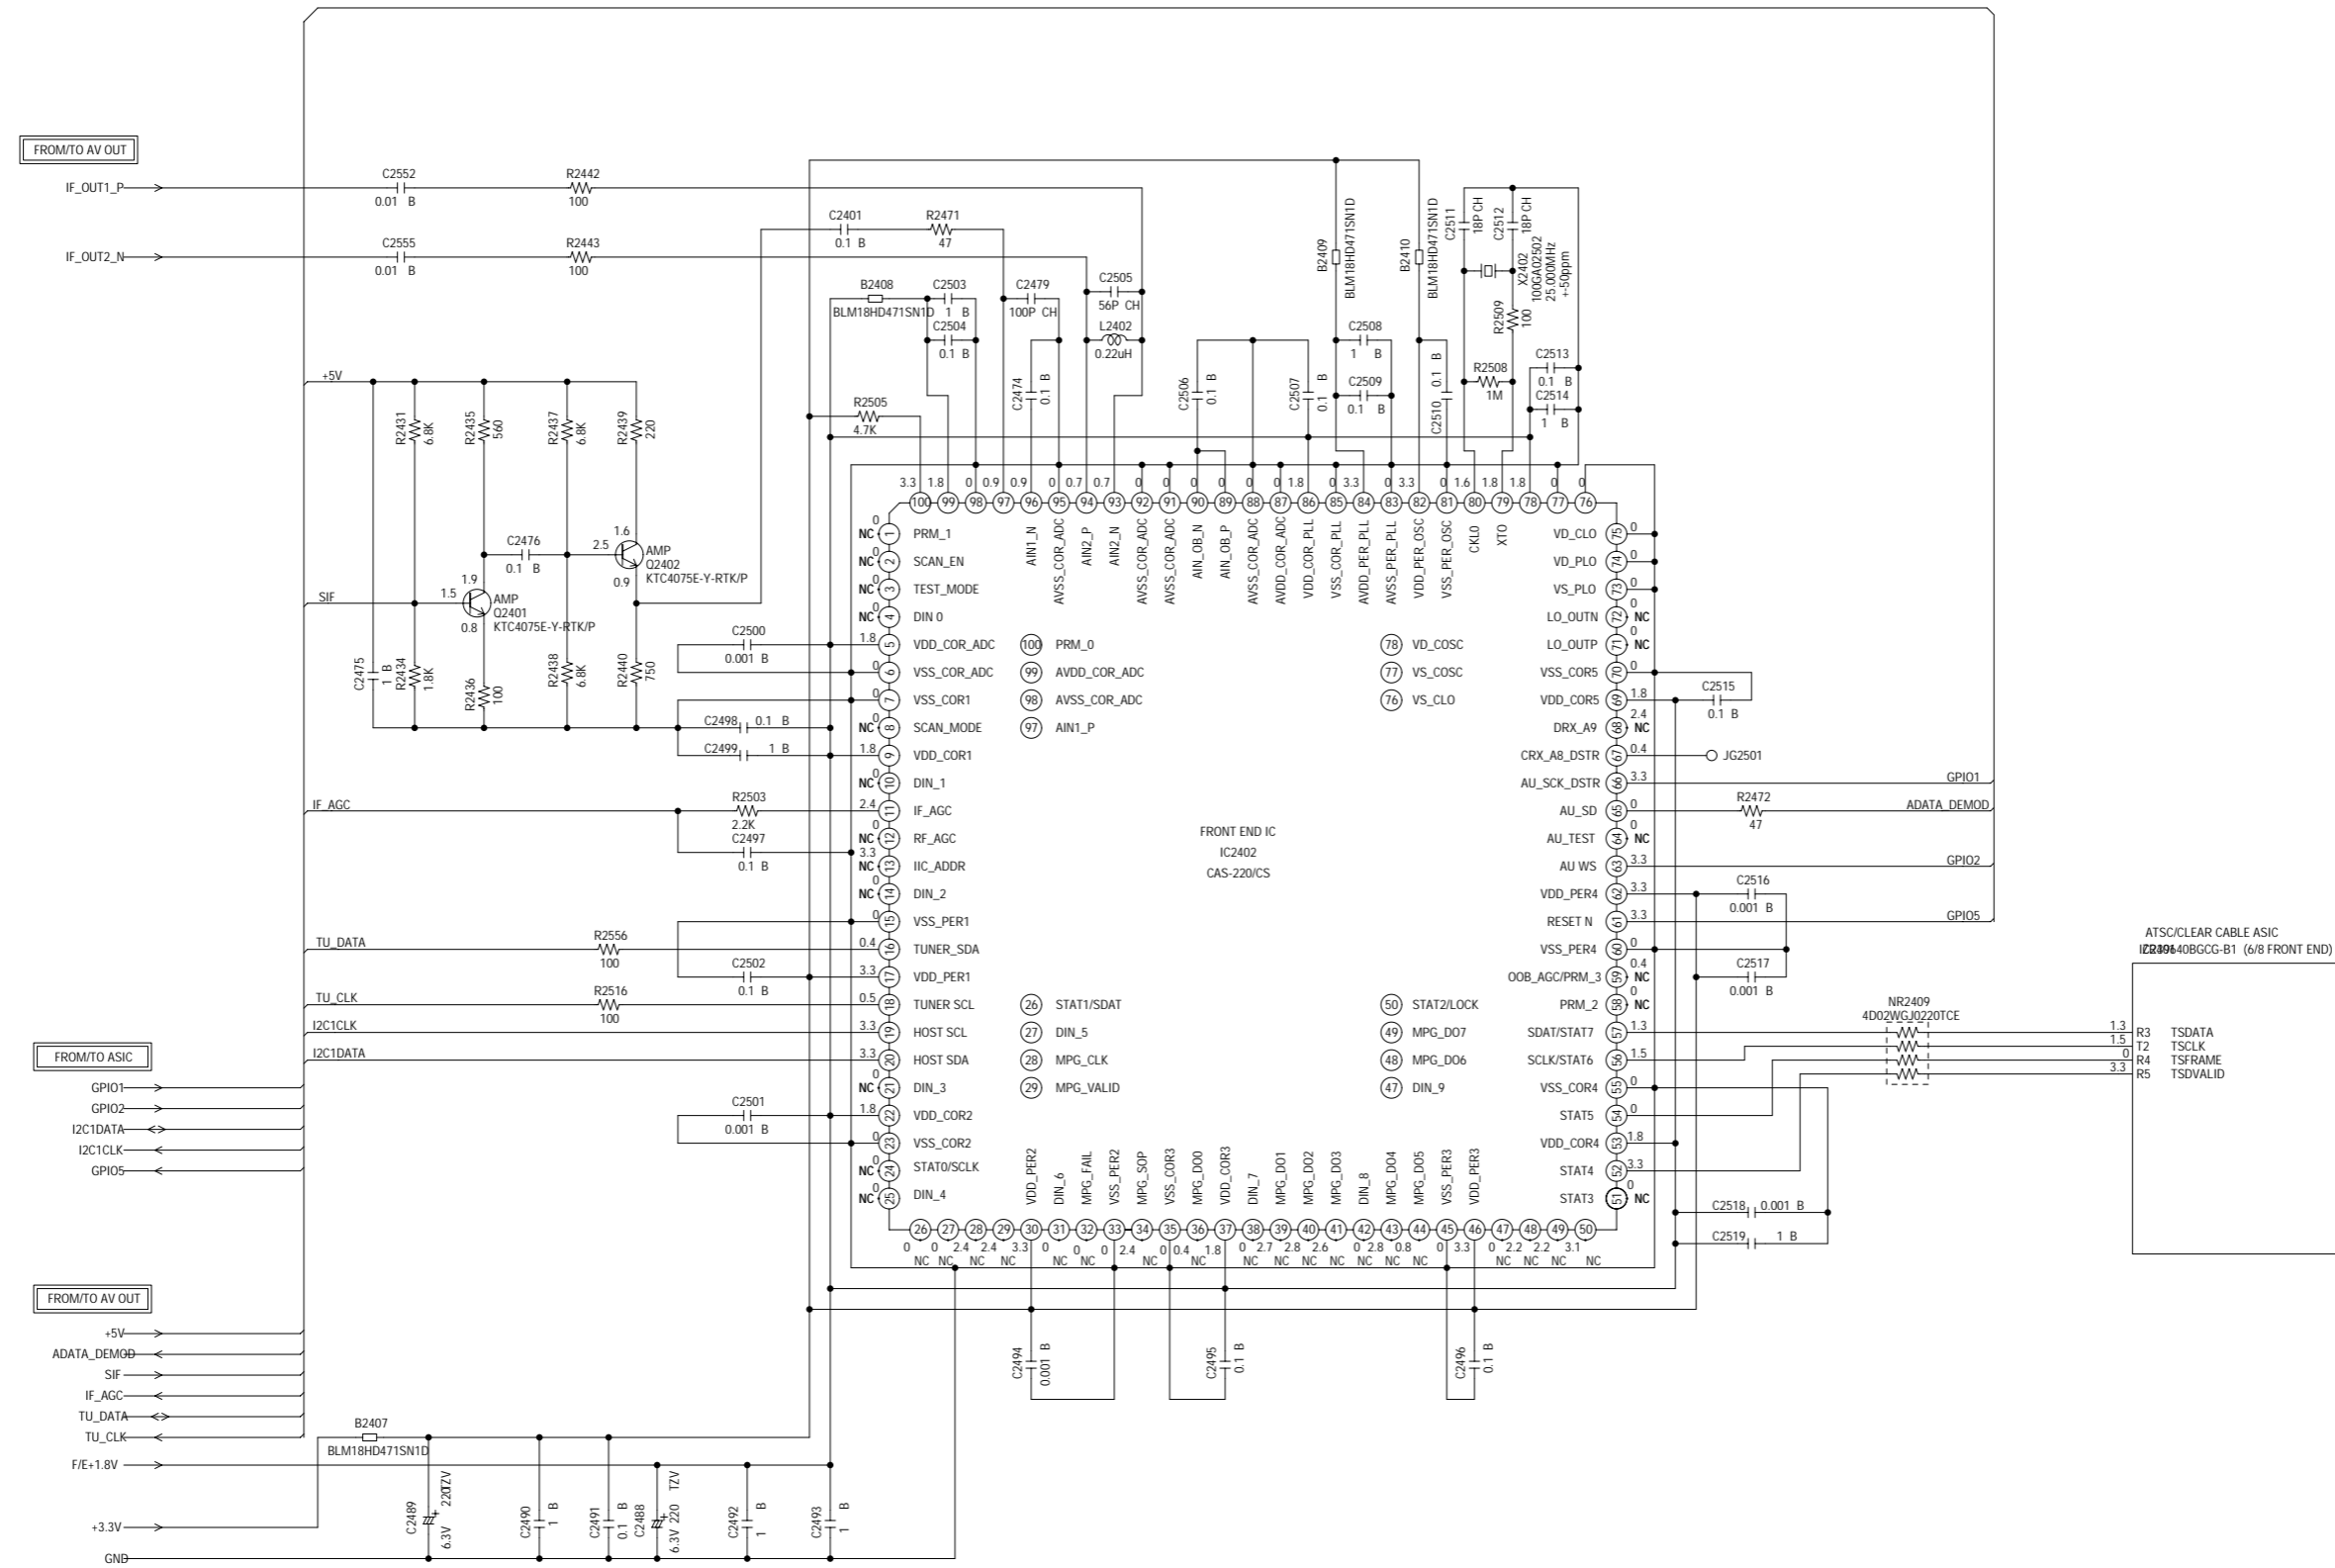


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCBD40  
CEE139


# AV OUT SCHEMATIC DIAGRAM (DIGITAL PCB)

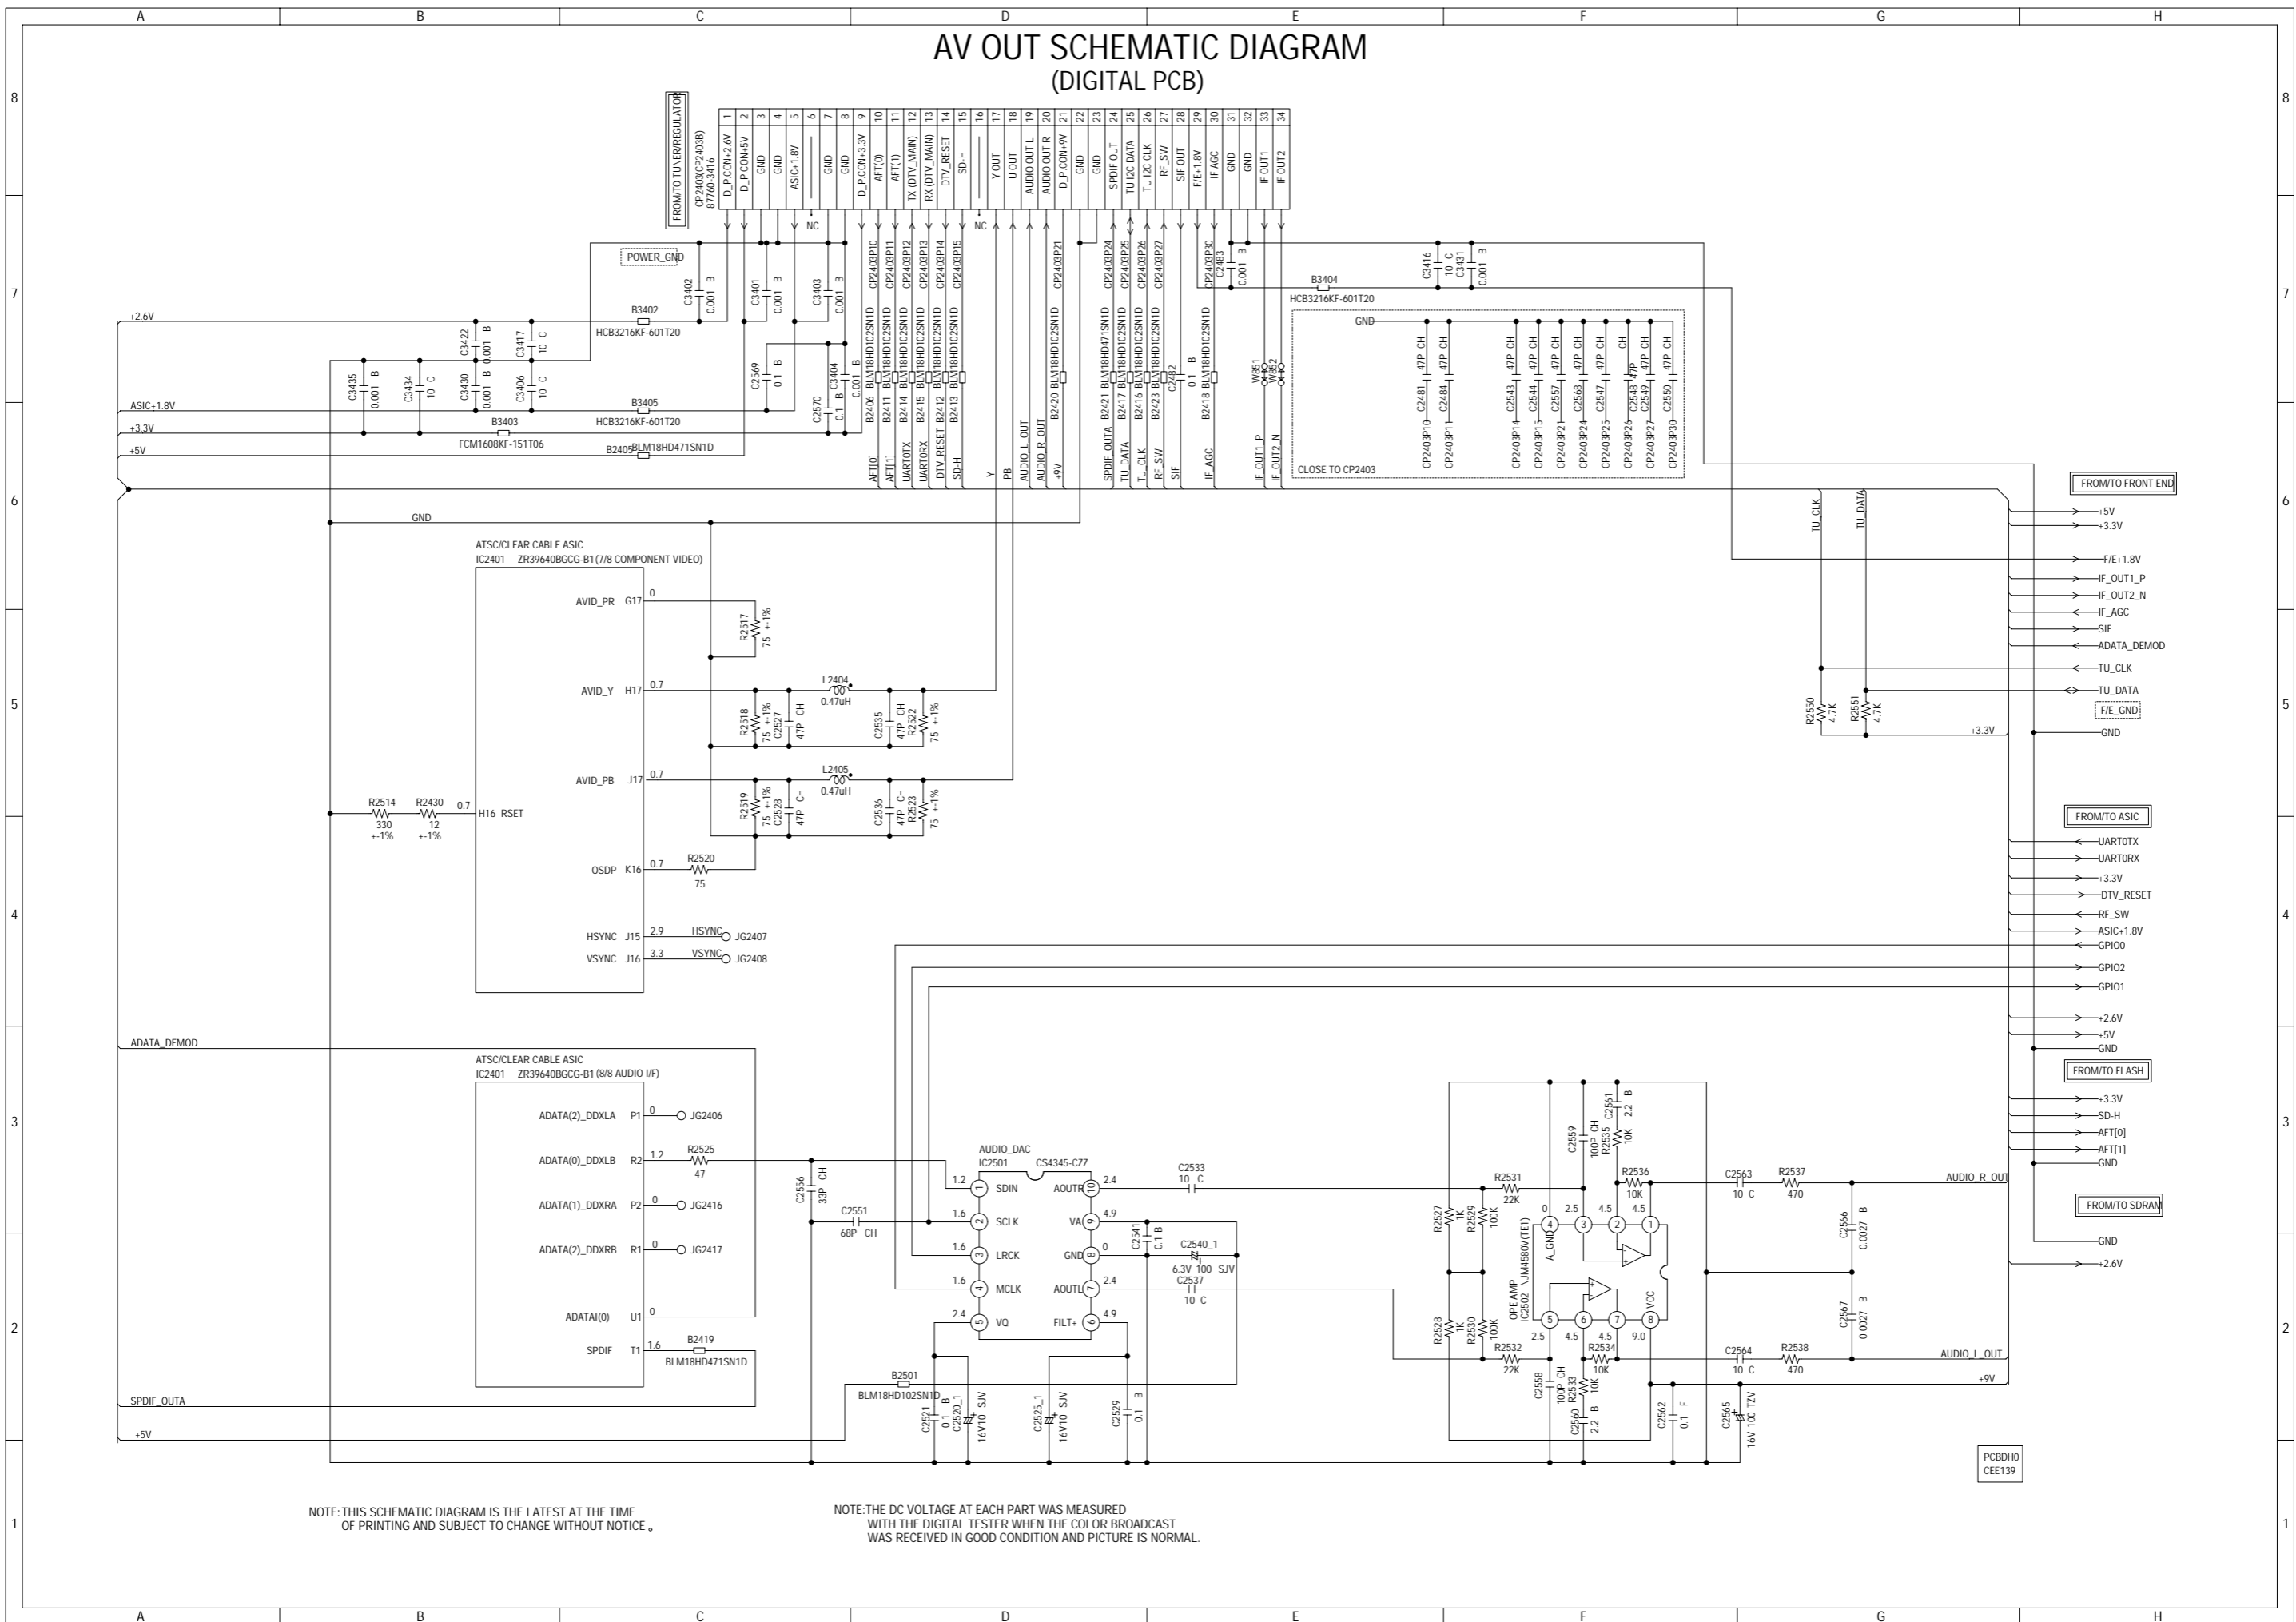

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

# INTERCONNECTION DIAGRAM

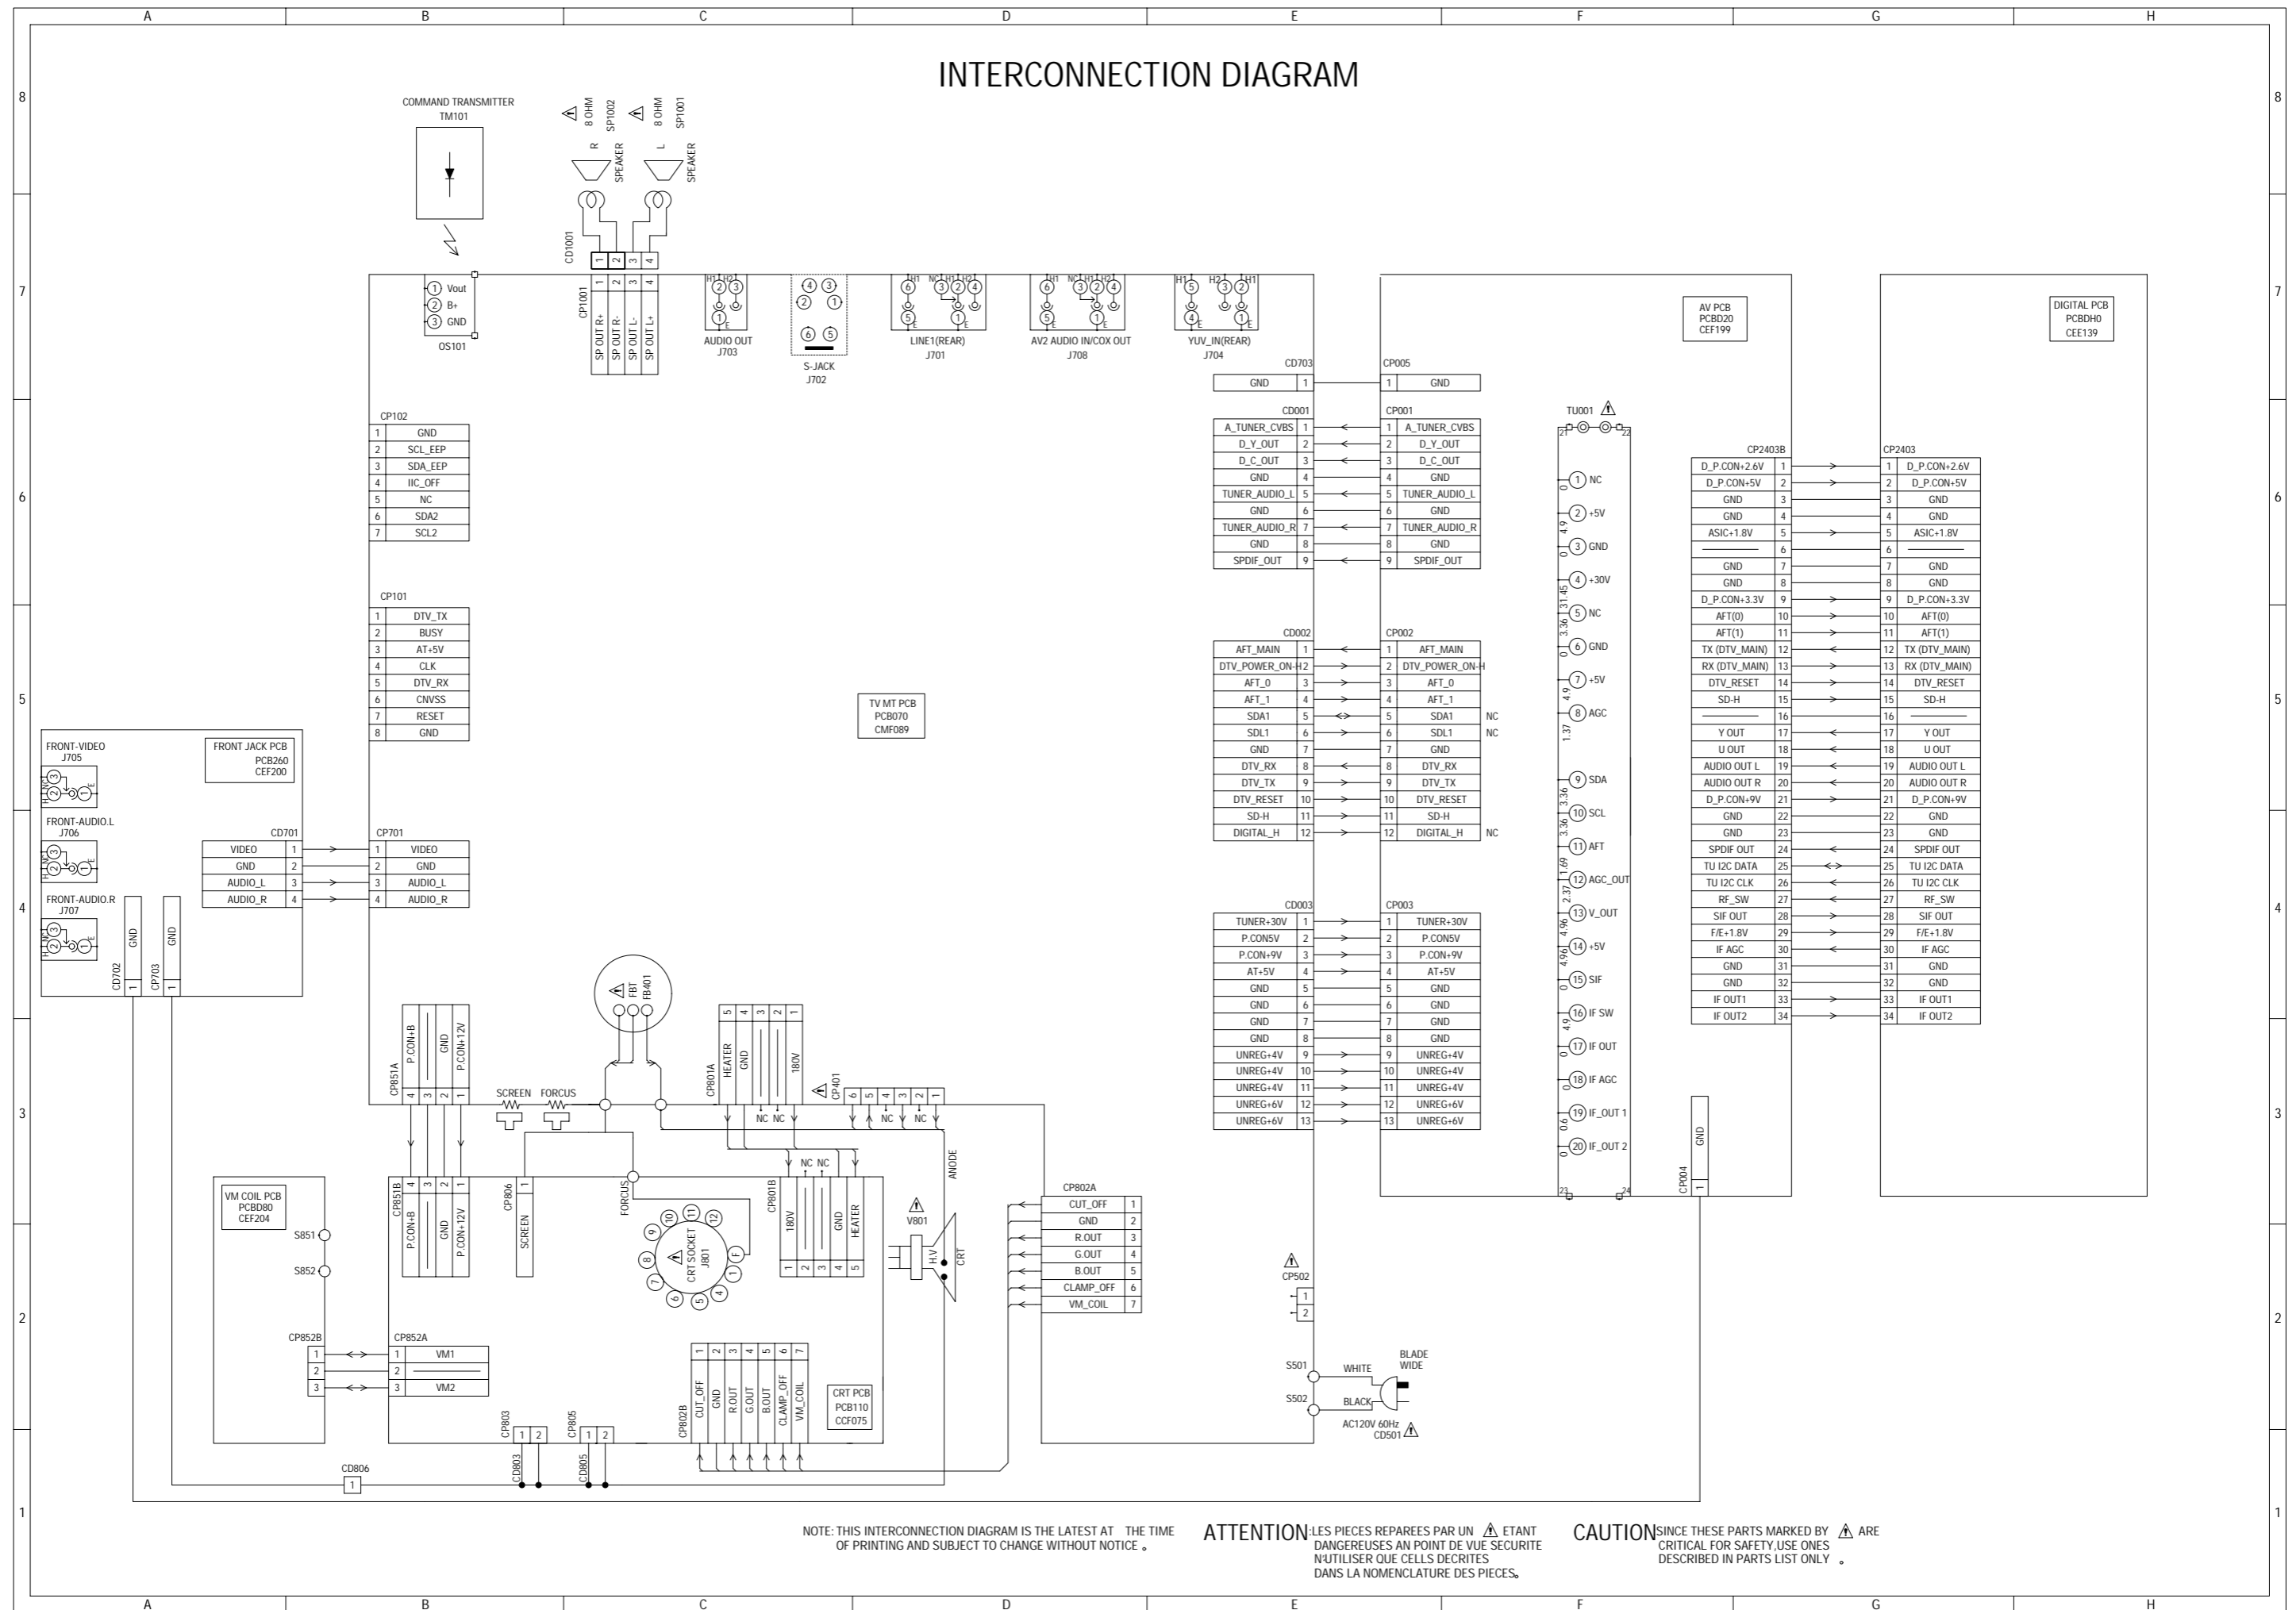


NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

**ATTENTION:** LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.














**CAUTION:** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY .

# WAVEFORMS


## DEFLECTION

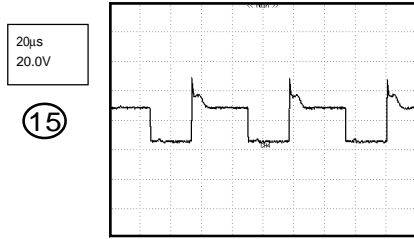

## CHROMA/IF

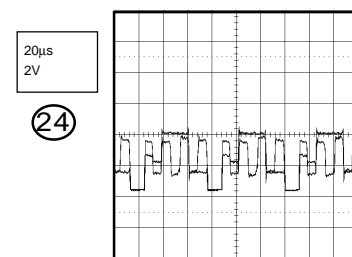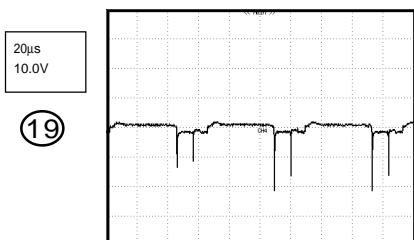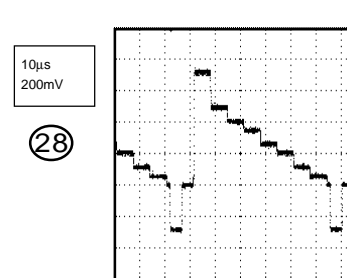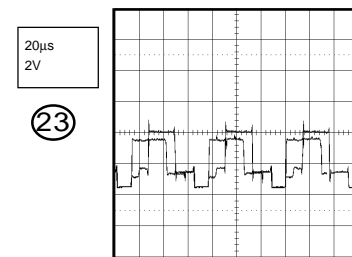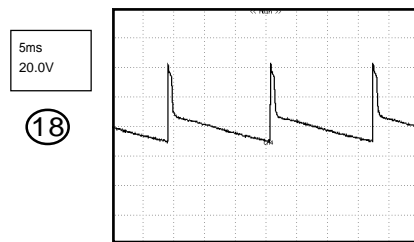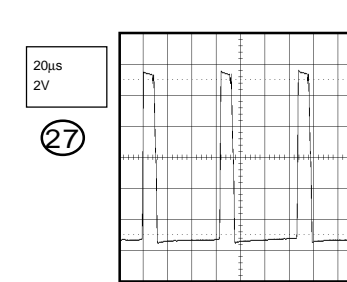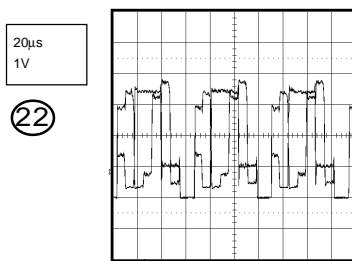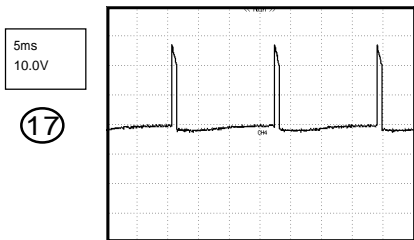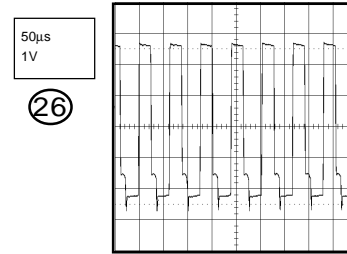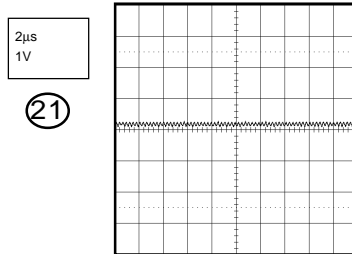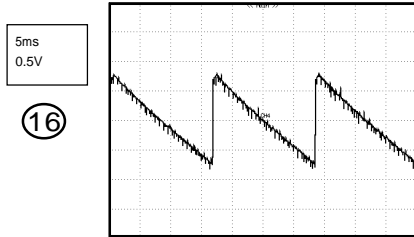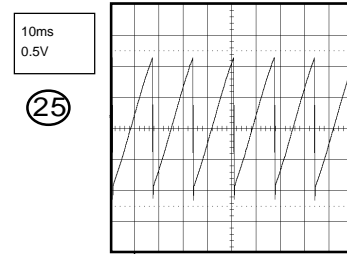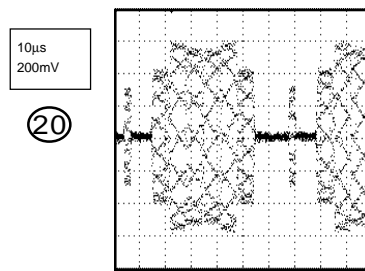



## AV SW/SOUND AMP/TONE CTL

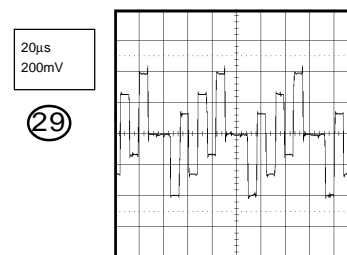







**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# WAVEFORMS

## CRT/SVM

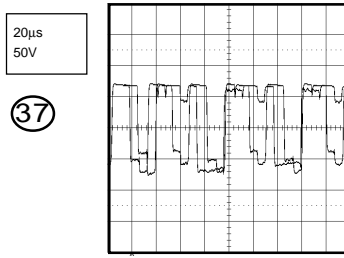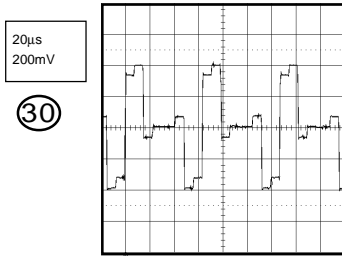


## MICON

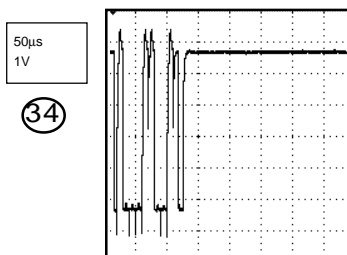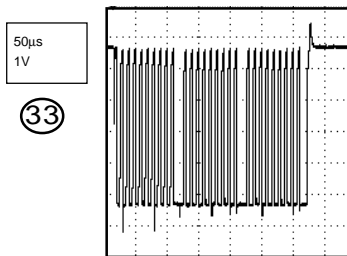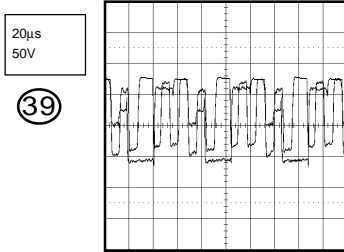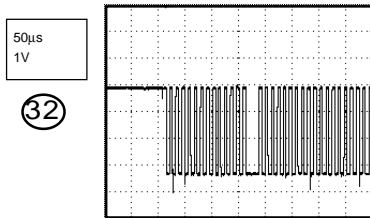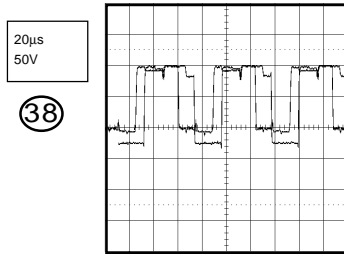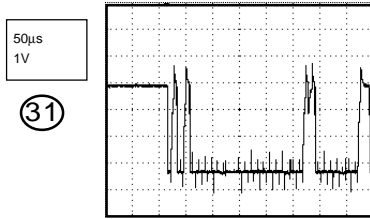


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


# MECHANICAL EXPLODED VIEW

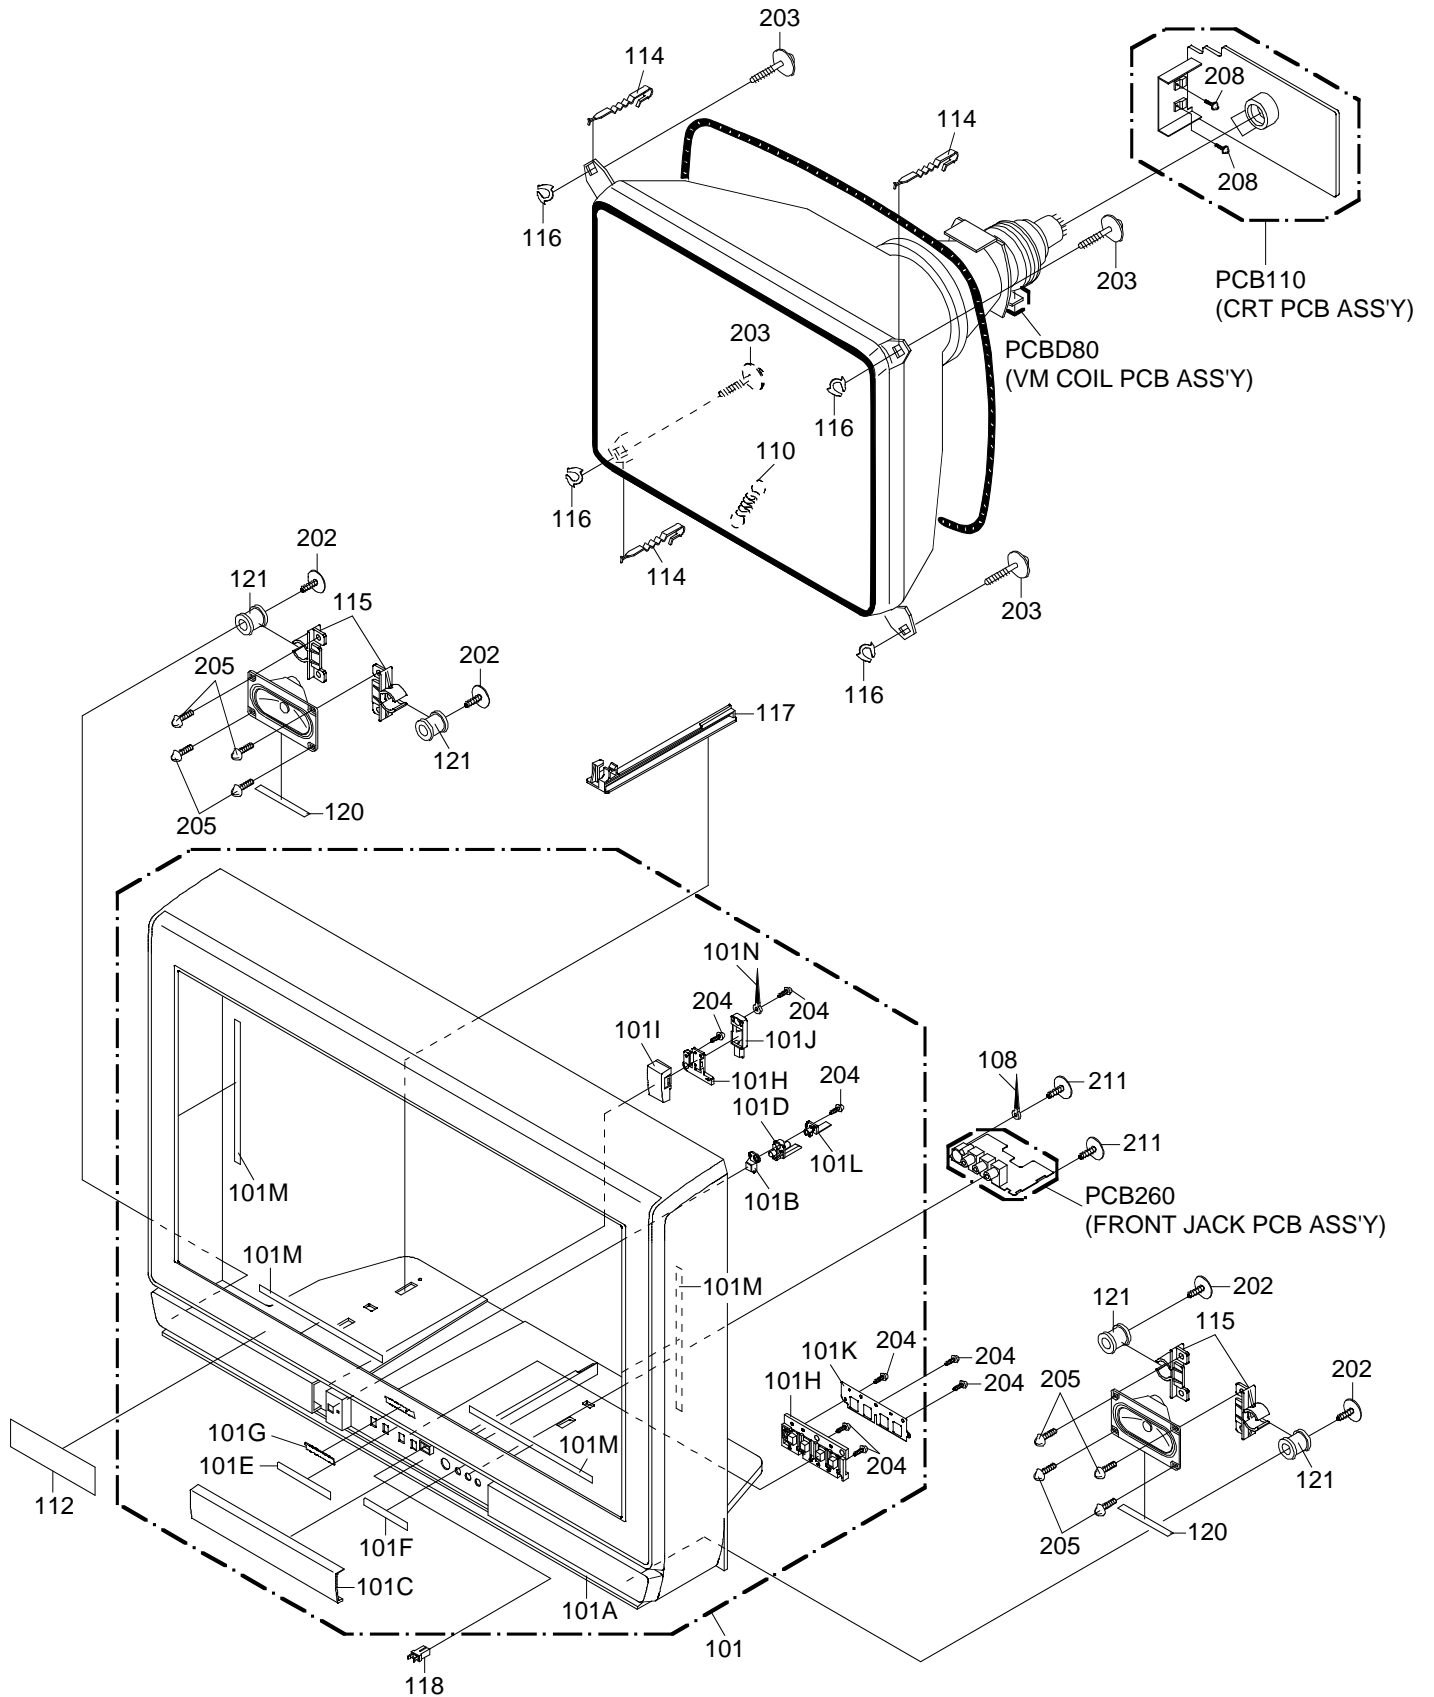

# MECHANICAL EXPLODED VIEW

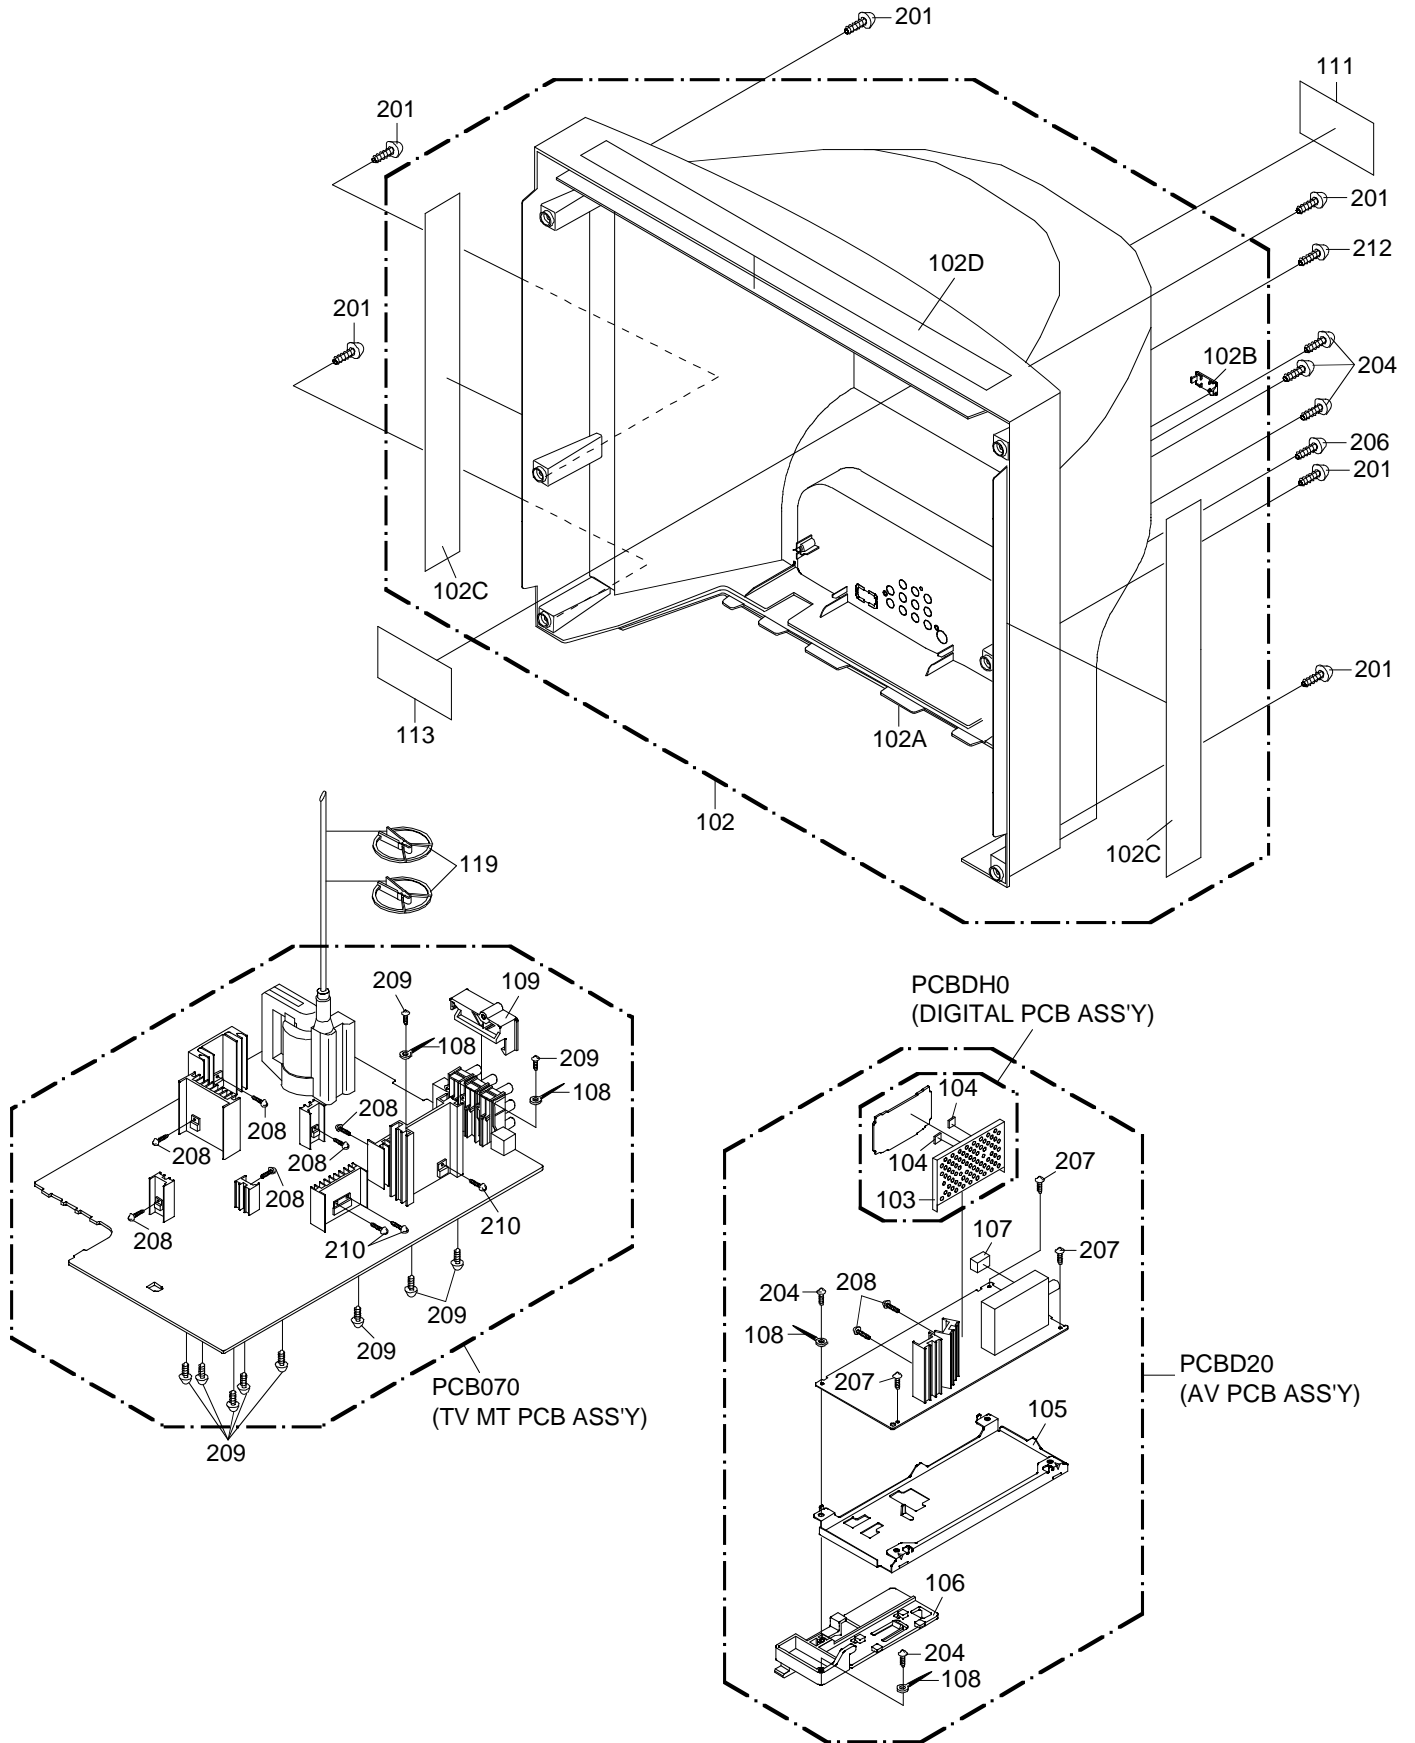

# MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

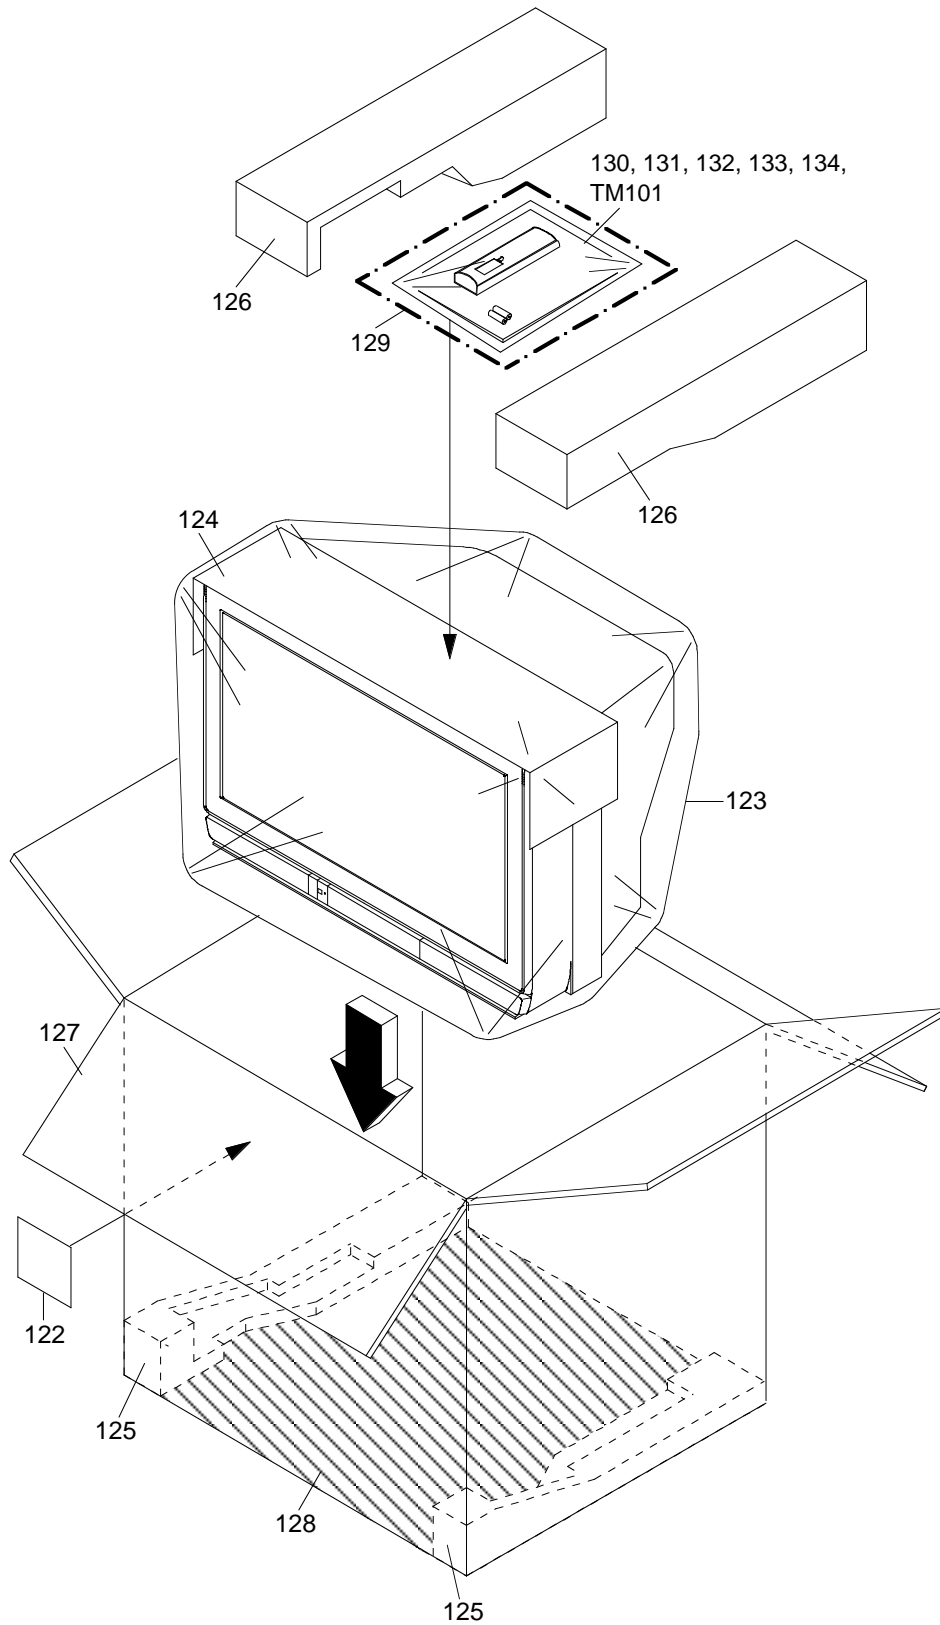

# MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
101	75003302	7A7010232B	FRONT CABI ASS'Y
101A	75003500	701WPJ1448	CABINET FRONT
101B	72799403	711WPA0210	PLATE,FRONT
101C	75003501	712WPJ0966	DOOR
101D	72799464	713WPA0334	GUIDE,REMOCON
101E	72799568	7230007791	SHEET,BUTTON
101F	75003502	7230008157	AV LABEL
101G	72781985	7235490036	BADGE,BRAND
101H	75003503	735WPB0340	BUTTON FRAME
101I	75003504	735WPJ0252	BUTTON POWER
101J	72799819	738WPA0106	STOPPER BUTTON
101K	75003505	753WSA0172	SHIELD BUTTON
101L	72799910	761WPA0344	HOLDER,LED
101M	72796103	800WQA052	FELT SHEET
101N	72795680	8995034000	CORD CLIP UL CO.
102	75003301	7A7020090A	BACK CABI ASS'Y
102A	75003506	702WPA1246	CABINET,BACK
102B	72783574	706WPAA003	COVER CONNECTOR
102C	72798774	800WQA045	FELT SHEET
102D	72798776	800WQA050	FELT,SHEET
103	72783857	7G7520037A	SHIELD,BOTTOM ASS'Y
104	72783345	800WR00079	SHEET,SILICONE
105	75003507	752WSA0588	PLATE,BOTTOM
106	75003508	761WPA0447	HOLDER,PCB
107	72798807	8965TS1010	CUSHION 65TS10-10(10*10*25)
108	72795699	899EFBA002	WIRING-CLIP
109	72783347	761WPA0424	HOLDER,JACK
110	72795687	741WUA0021	SPRING EARTH
111	75003509	7225490244	SHEET RATING
112	75003510	7230008159	POP LABEL
113	72782486	726000A124	SHEET,CRT SERVICEMAN
114	72798684	762WPA0011	HOLDER CRT WIRE
115	72796254	761WPAA115	HOLDER SPEAKER
116	72799963	769WSAA008	WASHER,CRT T=0.5
117	72782471	761WPA0418	HOLDER,PCB RAIL
118	72795058	890DL20000	DOOR LATCHES(DL2)
119	72794734	899HV3T000	HOLDER ANODE WIRE
120	72781200	800WF00062	CUSHION 55*5*T1
121	72794733	801WR00001	DAMPER SPEAKER
122	75003511	7230008161	SHEET BARCODE
123	72794741	791WHAA116	FILM,BAG
124	72782503	791WHAA138	LIGHTRON SHEET
125	75002729	792WHAA206	PACKAGE BOTTOM
126	72799987	792WHA0548	PACKAGE,TOP
127	75003512	793WCD1771	GIFT BOX
128	75003513	795WCA0689	PAD 818*600
129	75003514	A3Y9010975	INSTRUCTION BOOK KIT
130	72781630	JA4ND400	POLYBAG INSTRUCTION(REDCAUTION)
131	72781569	J3N51617A	REGISTRATION CARD
132	72784153	J3W60229A	INFORMATION SHEET(CHANNEL)
133	75002744	J3W60329A	INFORMATION SHEET(RRT)
134	75003515	J3Y90121A	INSTRUCTION BOOK(E/S)

# MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
201	72798795	8117540B0U	SCREW TAPPING(B0) TRUSS 4*20 CH
202	72781295	8162540A6U	SCREW TAPPING (B0) WASHER 18
203	72781286	8141H60D5U	SCREW,TAP TITE(P) GW20 6*45 CH HEXAGON
204	72798791	8110630A0U	SCREW TAP TITE(P) BRAZIER 3*10 CH
205	72798790	811063080U	SCREW TAP TITE(P) BRAZIER 3*8 CH
206	72781236	810763060U	SCREW TAP TITE(S) BRAZIER 3*6 CH
207	72798787	810923080U	SCREW TAP TITE(B) BIND 3*8 CH
208	72798789	8109I30A0U	SCREW TAP TITE(B) WH7 3*10 CH
209	72781251	810963080Q	SCREW TAP TITE(B) BRAZIER 3*8 STAINLESS
210	72798786	810763080U	SCREW TAP TITE(S) BRAZIER 3*8 CH
211	72781293	8159130A0U	SCREW TAPPING(B) WASHER12 PAN 3*10 CH
212	72781279	8117540A6U	SCREW TAPPING(B0) TRUSS 4*16 CH

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
<b>RESISTORS</b>				
△R002	72797928	R3X28B3R9J	R,METAL	3.9 OHM 3W
△R004	72794621	R3X28B010J	R,METAL OXIDE	1 OHM 3W
△R007	75003516	R5X2CDR47J	R,CEMENT	0.47 OHM 5W
△R410	72781693	R3K58A221J	R,METAL OXIDE	220 OHM 2W
△R416	72794597	R002T22R2J	RC	2.2 OHM 1/2W
△R420	72794597	R002T22R2J	RC	2.2 OHM 1/2W
△R426	72781722	R4K1T4472F	R,METAL	4.7K OHM 1/4W
△R434	72797994	R5X34F5R6J	R,CEMENT	5.6 OHM 10W
△R436	72781717	R4K1T4183F	R,METAL	18K OHM 1/4W
△R438	72798039	R6558A3R9J	R,FUSE	3.9 OHM 2W
△R439	75003517	R3K58A102J	R,METAL OXIDE	1K OHM 2W
△R441	72783394	R4K1T4153F	R,METAL	15K OHM 1/4W
△R452	72795507	R3X28A151J	R,METAL OXIDE	150 OHM 2W
△R462	72797919	R3X28B221J	R,METAL OXIDE	220 OHM 3W
△R471	72781672	R3K581120J	R,METAL OXIDE	12 OHM 1W
△R475	72781672	R3K581120J	R,METAL OXIDE	12 OHM 1W
△R481	72795518	R655822R2J	R,FUSE	2.2 OHM 1/2W
△R483	72794614	R65582010J	R,FUSE	1 OHM 1/2W
△R484	72794614	R65582010J	R,FUSE	1 OHM 1/2W
△R500	72794631	ROG3K2275K	RC	2.7M OHM 1/2W
△R501	72797976	R5X2CE010J	R,CEMENT	1 OHM 7W
△R502	72781694	R3K58A331J	R,METAL OXIDE	330 OHM 2W
△R510	72781719	R4K1T4272F	R,METAL	2.7K OHM 1/4W
△R520	72795500	R002T2155J	RC	1.5M OHM 1/2W
△R522	75003518	R3K58A100J	R,METAL OXIDE	10 OHM 2W
△R527	72796440	R3X28AR68J	R,METAL OXIDE	0.68 OHM 2W
△R533	72794657	R002T4102J	RC	1K OHM 1/4W
△R534	72797864	R3X181R12J	R,METAL OXIDE	0.12 OHM 1W
△R538	72794678	R803R9683J	RC	68K OHM 1/16W
△R539	75003519	R002T2564J	RC	560K OHM 1/2W
△R540	75003519	R002T2564J	RC	560K OHM 1/2W
△R550	72797916	R3X28B1R2J	R,METAL OXIDE	1.2 OHM 3W
△R603	72782609	R3X18A390J	R,METAL OXIDE	39 OHM 2W
△R650	72783396	R3X28B8R2J	R,METAL OXIDE	8.2 OHM 3W
△R651	72783396	R3X28B8R2J	R,METAL OXIDE	8.2 OHM 3W
△R803	72796459	R3X18A153J	R,METAL OXIDE	15K OHM 2W
△R805	72796459	R3X18A153J	R,METAL OXIDE	15K OHM 2W
△R807	72796459	R3X18A153J	R,METAL OXIDE	15K OHM 2W
R822	72794597	R002T22R2J	RC	2.2 OHM 1/2W
△R855	72794663	R65582331J	R,FUSE	330 OHM 1/2W
△R881	72797873	R3X18A121J	R,METAL OXIDE	120 OHM 2W
<b>CAPACITORS</b>				
C005	72797374	E02LF1222M	CE	2200 UF 10V
C026	72797374	E02LF1222M	CE	2200 UF 10V
△C408	72794381	E5EZF3222M	CE	2200 UF 25V
△C409	72794400	E02LU5100M	CE	10 UF 50V
△C412	72797717	P4N8FK102H	CMPP	0.001 UF 1.5KV
△C413	72794398	E02LF4102M	CE	1000 UF 35V
C418	72796346	P4J7F3274J	CMPP	0.27 UF 250V PMS
△C420	75003520	P4N8FK912H	CMPP	0.0091UF 1.5KV
△C421	72797680	P3N1F5273J	CPP	0.027 UF 630V
△C426	72794394	E5EZF2220M	CE	22 UF 250V
△C430	72794396	E02LU8220M	CE	22 UF 100V
C447	72794397	E736F56R8M	CE	6.8 UF 50V
C448	72781644	P411F4473J	CMPP	0.047 UF 400V ECWF
C449	75003521	P4J7F3104J	CMPP	0.1 UF 250V PMS
△C454	72797508	E62DFB470M	CE	47 UF 160V
△C501	72795574	E02LF3222M	CE	2200 UF 25V
△C502	72794393	C03L0R713K	CC	0.001 UF 2KV R
△C503	72794393	C03L0R713K	CC	0.001 UF 2KV R
△C505	72794401	P2122B334M	CMP	0.33 UF 275V ECQUL
△C506	72795566	P2122B224M	CMP	0.22 UF 275V ECQUL
△C507	72794402	E51DFC821M	CE	820 UF 200V
△C508	72796318	CC3LE0MH3M	CC	0.0022UF 250V
△C513	72796319	CC3LE0M13M	CC	0.001 UF 250V
△C514	72781398	E61FT2681D	CE	680 UF 16V
△C517	72795583	C03L0R7H3K	CC	0.0022UF 2KV R
△C519	72796319	CC3LE0M13M	CC	0.001 UF 250V
△C521	72794411	E62NFC221M	CE	220 UF 200V
C526	72795820	CQGTB0414K	CC	0.01 UF 50V B
△C527	72796330	E02LF2222M	CE	2200 UF 16V
△C528	72781392	E61FF1222D	CE	2200 UF 10V
△C533	72794434	E02LT2471M	CE	470 UF 16V
C535	72794399	C0PLRR713K	CC	0.001 UF 2KV R
C802	72795578	C0JBB0713K	CC	0.001 UF 2KV B

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
C1011	72796330	E02LF2222M	CE	2200 UF 16V
<b>CAPACITORS</b>				
<b>DIODES</b>				
D003	72795626	D2WXN40050	DIODE,SILICON	1N4005-EIC
D103	72783213	D9WU03R92B	DIODE,ZENER	MTZJ3.9B-EIC
D104	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D105	72783213	D9WU03R92B	DIODE,ZENER	MTZJ3.9B-EIC
D106	72783214	D9WU05R62B	DIODE,ZENER	MTZJ5.6B-EIC
D109	72795529	0021721150	LED	SLR-342VCT32
D110	72795627	D2WXS1400	DIODE,SCHOTTKY	SB140-EIC
D111	72795627	D2WXS1400	DIODE,SCHOTTKY	SB140-EIC
D401	72794488	D2WT011E10	DIODE,SILICON	11E1-EIC
D402	72794488	D2WT011E10	DIODE,SILICON	11E1-EIC
△D403	72781366	D9WU03302B	DIODE,ZENER	MTZJ33B-EIC
D404	72781368	D9WU05R12B	DIODE,ZENER	MTZJ5.1B-EIC
△D405	72794472	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
△D406	72783214	D9WU05R62B	DIODE,ZENER	MTZJ5.6B-EIC
△D407	72794472	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
△D408	72794470	D2CF0715L0	DIODE,SILICON	ERD07-15L50
△D409	72783412	D2CF2016J0	DIODE,SILICON	FE201-6J14
D410	72781366	D9WU03302B	DIODE,ZENER	MTZJ33B-EIC
△D411	72794472	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D414	72794488	D2WT011E10	DIODE,SILICON	11E1-EIC
D415	72794488	D2WT011E10	DIODE,SILICON	11E1-EIC
D416	72783366	D9WU01502B	DIODE,ZENER	MTZJ15B-EIC
D417	72783366	D9WU01502B	DIODE,ZENER	MTZJ15B-EIC
D420	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D421	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D422	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D423	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D424	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
△D501	72794473	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
△D502	72794473	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
△D503	72794473	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
△D504	72794473	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
△D505	72794480	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
△D506	75003522	D2LXN49370	DIODE,FAST RECOVERY	1N4937-F
D507	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D508	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D509	72781365	D9WU02202B	DIODE,ZENER	MTZJ22B-EIC
△D510	72783412	D2CF2016J0	DIODE,SILICON	FE201-6J14
△D511	75003522	D2LXN49370	DIODE,FAST RECOVERY	1N4937-F
△D512	72783906	D2LXSR2900	DIODE,SCHOTTKY	SR290-F
D513	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D514	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D515	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D516	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D519	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D520	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D521	72781368	D9WU05R12B	DIODE,ZENER	MTZJ5.1B-EIC
△D522	72794484	DOU002720M	DIODE,VARISTA	DSS-272M-S00B
△D523	72783211	D9WU01802B	DIODE,ZENER	MTZJ18B-EIC
D524	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D525	72783214	D9WU05R62B	DIODE,ZENER	MTZJ5.6B-EIC
△D526	72795544	D6E027110A	DIODE,VARISTA	ENE271D-10A
D528	72781367	D9WU03R32B	DIODE,ZENER	MTZJ3.3B-EIC
△D529	72783906	D2LXSR2900	DIODE,SCHOTTKY	SR290-F
D531	72781366	D9WU03302B	DIODE,ZENER	MTZJ33B-EIC
D532	75003523	D9WU02002B	DIODE,ZENER	MTZJ20B-EIC
△D534	72781353	D27A85T400	DIODE,SCHOTTKY	RB085T-40
D535	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
△D538	72783368	D28F21DQN9	DIODE,SCHOTTKY	21DQ09N-FC4
D541	72783214	D9WU05R62B	DIODE,ZENER	MTZJ5.6B-EIC
D542	75003524	D9WU07R52B	DIODE,ZENER	MTZJ7.5B-EIC
△D543	72797313	D6CE24110A	DIODE,VARISTA	ENE241D-10A-Q6
D604	72783214	D9WU05R62B	DIODE,ZENER	MTZJ5.6B-EIC
D606	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D611	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D612	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D613	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D614	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D615	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D616	72783764	D9WU03902B	DIODE,ZENER	MTZJ39B-EIC
D619	72783769	D9WU09R12B	DIODE,ZENER	MTZJ9.1B-EIC
D620	72781369	D9WU06R82B	DIODE,ZENER	MTZJ6.8B-EIC
D621	72794491	D1VT001330	DIODE,SILICON	1SS133T-77

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
<b>DIODES</b>				
D702	72781369	D9WU06R82B	DIODE,ZENER	MTZJ6.8B-EIC
D703	72781369	D9WU06R82B	DIODE,ZENER	MTZJ6.8B-EIC
D704	72781369	D9WU06R82B	DIODE,ZENER	MTZJ6.8B-EIC
D706	72781364	D9WU01202B	DIODE,ZENER	MTZJ12B-EIC
D801	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D802	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D803	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D810	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D811	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D812	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D852	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D853	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D854	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D855	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D856	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D857	72783759	D4AT01H3E0	DIODE,RECTIFIER	1H3-E
D858	72783759	D4AT01H3E0	DIODE,RECTIFIER	1H3-E
D1001	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
<b>ICS</b>				
IC001	72783369	I55J07W660	IC	TC7W66FU(TE12L,F)
△IC002	72781440	I07F0C0WF0	IC	BA00BC0WFP-E2
△IC003	72781440	I07F0C0WF0	IC	BA00BC0WFP-E2
△IC004	72783370	I0GA9VK020	IC	PQ070VK02FZH
△IC005	72783370	I0GA9VK020	IC	PQ070VK02FZH
IC101	75003525	S3Y9010M01	MEMORY DATA	OEC7161A
IC102	72795101	I9UF032290	IC	PST3229NR
IC199	75003526	S3Y9010E01	MEMORY DATA	AT24C128N-10SU-1.8
IC301	72783378	I5AFF11730	IC	NJW1173V(TE1)
△IC401	72794507	I03TD80410	IC	LA78041
△IC403	72797545	I03S065100	IC	LA6510
△IC404	72794512	000220002W	PHOTO COUPLER	PS2561AL1-1-V(W)
△IC501	72795905	I1KA78R090	IC	KIA278R09PI
△IC504	72794512	000220002W	PHOTO COUPLER	PS2561AL1-1-V(W)
△IC506	72794508	I1KJ9A431A	IC	KIA431A-AT
IC601	72783380	I03FC6327A	IC	LA76327M-A-MPB-E
IC603	72797548	I05DD13170	IC	TA1317ANG
IC701	72783381	I0QF027500	IC	NJM2750M(TE1)
△IC1001	72795536	I0FSP7822A	IC	AN17822A
IC1501	72797544	I03FE76605	IC	LA76605M-TLM-E
IC2401	72783373	ICQK039640	IC	ZR39640BGC-G-B1
IC2402	72783374	IFYK002200	IC	CAS-220/CS
IC2404	72783776	ICLJ022ET5	IC	HY5DU561622ETP-D43
IC2408	75003527	S3Y9010F01	MEMORY DATA	SST39VF1681-70-4C-EKE
IC2501	72783377	I1FF043450	IC	CS4345-CZZ
IC2502	72797569	I0QF0580V0	IC	NJM4580V(TE1)
<b>TRANSISTORS</b>				
Q002	72795962	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q003	72798325	TAAT01273Y	TRANSISTOR,SILICON	KTA1273_Y
Q004	72794567	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q005	72783390	T82A03841Q	TRANSISTOR,SILICON	2SC3841-T1B_T63
Q006	72783390	T82A03841Q	TRANSISTOR,SILICON	2SC3841-T1B_T63
Q007	72783390	T82A03841Q	TRANSISTOR,SILICON	2SC3841-T1B_T63
Q009	72795963	TPAAB05001	COMPOUND TRANSISTOR	KRA102SRTK
Q010	72794567	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q101	72794566	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q102	72794566	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q103	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q104	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q105	72794567	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q106	72794566	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q107	72794566	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
△Q402	72794561	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT
Q404	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
△Q405	72794562	TD50026380	TRANSISTOR,SILICON	2SD2638(OEC)
Q406	72798324	TAAT012714	TRANSISTOR,SILICON	KTA1271_Y-AT
Q409	72794563	TC30041590	TRANSISTOR,SILICON	2SC4159(D,E)
Q410	72781788	T230002010	TRANSISTOR,FIELD EFF	ECT 2SK2010
Q412	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q413	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q414	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q415	72798324	TAAT012714	TRANSISTOR,SILICON	KTA1271_Y-AT
△Q502	72798351	TJXG15NK50	FET	STP15NK50ZFP
△Q503	72795475	TA3T1371A0	TRANSISTOR,SILICON	2SA1371(D,E)-AE
Q504	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
△Q505	72795474	TC3T029090	TRANSISTOR,SILICON	2SC2909(S,T)-AA

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
<b>TRANSISTORS</b>				
Q506	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q507	72795962	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
▲Q508	72798323	TAAT01241Y	TRANSISTOR,SILICON	KTA1241_Y-AT
Q509	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q510	72794566	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
▲Q512	72794569	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
▲Q514	72795476	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q601	72795962	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q602	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q603	72794578	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q604	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q605	72795963	TPAAB05001	COMPOUND TRANSISTOR	KRA102SRTK
Q606	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q607	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q608	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q609	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q610	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
▲Q611	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q614	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q615	72794566	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q616	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q701	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
▲Q801	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
▲Q802	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
▲Q803	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
▲Q804	72794574	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
▲Q805	72794574	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
▲Q806	72794574	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
Q852	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q853	72794576	TCUT0752GY	TRANSISTOR,SILICON	2SC752(G)TM_Y(TP2
Q854	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q855	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q856	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q857	72794578	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q858	72794579	TA10021400	TRANSISTOR,SILICON	2SA2140
Q859	72794580	TC10059930	TRANSISTOR,SILICON	2SC5993
Q1001	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1503	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1507	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1508	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2401	72783391	TCAA040754	TRANSISTOR,SILICON	KTC4075E-Y-RTK/P
Q2402	72783391	TCAA040754	TRANSISTOR,SILICON	KTC4075E-Y-RTK/P
<b>COILS &amp; TRANSFORMERS</b>				
L001	72794526	02167F220J	COIL	22 UH
L002	72796088	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L003	72794540	02167F101J	COIL	100 UH
L004	72794526	02167F220J	COIL	22 UH
L301	72794526	02167F220J	COIL	22 UH
L401	72782568	02D3000057	COIL,CHOKE	ELC18B501LN
▲L402	72782055	022K00051A	COIL,LINEARITY	311015011
L403	72796647	02D1000001	COIL	ELC16B501EN
L405	72796650	02D3000063	COIL,CHOKE	ELC18B151LK
▲L501	72796639	029X000098	COIL,LINE FILTER	SS28H-20075
L502	72796087	02167E100K	COIL	10 UH
▲L503	72783750	028R260006	COIL,DEGAUSS	8R260006
L601	72794540	02167F101J	COIL	100 UH
L602	72796407	02167D101K	COIL	100 UH
L701	72796088	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L801	72794539	02167D151K	COIL	150 UH
L802	72794539	02167D151K	COIL	150 UH
L803	72794539	02167D151K	COIL	150 UH
L1511	72795932	02167F150J	COIL	15 UH
L1512	72796571	021LA6220J	COIL	22 UH
L2402	72783383	021AS9224J	COIL	0.22 UH
L2404	72783384	0216SDR47J	COIL	0.47 UH
L2405	72783384	0216SDR47J	COIL	0.47 UH
T401	72794690	0450190171	TRANS.HORIZONTAL DRIVE	ETH19Y206AY
▲T501	75003528	0481420814	TRANSFORMER,SWITCHING	81420814
<b>JACKS</b>				
J701	72794518	060J431020	RCA JACK	MSP-213V2-432_NI_LF
J702	72783793	063E700012	JACK	S4-25SZ
J703	72783382	060J411045	RCA JACK	MSP-382V-12_NI_FE_LF
J704	72795493	060J411032	RCA JACK	MSP-213V1-652_NI_LF
J705	72783794	060K421056	RCA JACK	AV-5A-66H
J706	72783795	060K421058	RCA JACK	AV-5A-68H

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
<b>JACKS</b>				
J707	72783796	060K421057	RCA JACK	AV-5A-67H
J708	72798996	060J431022	RCA JACK	MSP-213V2-732_NI_LF
▲J801	72794523	066F130021	SOCKET,CATHODE RAY,TUBE	ISHS62S
<b>SWITCHES</b>				
SW101	72794688	0504101T34	SWITCH,TACT	EVQ21505R
SW102	72794688	0504101T34	SWITCH,TACT	EVQ21505R
SW103	72794688	0504101T34	SWITCH,TACT	EVQ21505R
SW104	72794688	0504101T34	SWITCH,TACT	EVQ21505R
SW105	72794688	0504101T34	SWITCH,TACT	EVQ21505R
<b>VARIABLE RESISTORS</b>				
VR501	72798392	V1K6314BTE	VOLUME,SEMI FIXED	NVG6TLTAB103
<b>P.C.BOARD ASSEMBLIES</b>				
PCB070	75003529	A3Y9010070	TV MT PCB ASS'Y	CMF089A
PCB110	75003530	A3Y9010110	CRT PCB ASS'Y	CCF075A
PCB260	75003531	A3Y9010260	FRONT JACK PCB ASS'Y	CEF200A
PCBD20	75003532	A3Y9010D20	AV PCB ASS'Y	CEF199A
PCBD80	75003533	A3Y9010D80	VM COIL PCB ASS'Y	CEF204A
PCBDH0	75003534	A3Y9010DH0	DIGITAL PCB ASS'Y	CEE139B
<b>MISCELLANEOUS</b>				
B001	72783356	024HC51023	CORE,BEADS	FCM1608KF-102T02
B401	72794356	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B403	72794355	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
B405	72794356	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
▲B501	72794355	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
B502	72794357	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
▲B504	72794357	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B701	72783359	024HC56005	CORE,BEADS	FCM1608CF-600T06
B702	72783359	024HC56005	CORE,BEADS	FCM1608CF-600T06
B851	72794357	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B852	72794357	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B853	72794357	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B1502	72783356	024HC51023	CORE,BEADS	FCM1608KF-102T02
B2402	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2403	72783357	024HC51513	CORE,BEADS	FCM1608KF-151T06
B2404	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2405	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2406	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2407	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2408	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2409	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2410	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2411	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2412	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2413	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2414	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2415	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2416	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2417	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2418	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2419	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2420	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2421	75003535	024AC5471S	CORE,BEADS	BLM18HD471SN1D
B2423	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B2501	75003536	024AC5102S	CORE,BEADS	BLM18HD102SN1D
B3402	72783358	024HC16014	CORE,BEADS	HCB3216KF-601T20
B3403	72783357	024HC51513	CORE,BEADS	FCM1608KF-151T06
B3404	72783358	024HC16014	CORE,BEADS	HCB3216KF-601T20
B3405	72783358	024HC16014	CORE,BEADS	HCB3216KF-601T20
BT001	72783174	141U004016	BATTERY,MANGAN	MNAAA(R03)
BT002	72783174	141U004016	BATTERY,MANGAN	MNAAA(R03)
CD001	75003537	06CH292602	CORD,CONNECTOR	CH292602
CD002	72796903	06CU2C2501	CORD,CONNECTOR	CU2C2501
CD003	72795880	06CU2D3001	CORD,CONNECTOR	CU2D3001
▲CD501	72799246	1209415909	CORD,AC BUSH	9415909
CD701	72783741	06CH242402	CORD,CONNECTOR	CH242402
CD702	72796871	06CU012501	CORD,CONNECTOR	CU012501
CD703	75003538	06CH012405	CORD,CONNECTOR	CH012405
CD801	75003539	WCL6832038	FLAT CABLE	AWM2468 AWG26 5C GRAY 320MM
CD803	72794460	06CH823004	CORD,CONNECTOR	CH823004
CD805	72794460	06CH823004	CORD,CONNECTOR	CH823004
CD806	75003540	06CH013902	CORD,CONNECTOR	CH013902
CD810	75003541	06CH014001	CORD,CONNECTOR	CH014001
CD851	72781813	WBL6038038	FLAT CABLE	AWM2468 AWG26 4C BLACK 380MM
CD852	72794464	06CU232001	CORD,CONNECTOR	CU232001
CP001	72796804	069S290629	CONNECTOR PCB SIDE	A2001WV2-9P

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
<b>MISCELLANEOUS</b>				
CP002	72796809	069S2C0629	CONNECTOR PCB SIDE	A2001WV2-12P
CP003	72796810	069S2D0629	CONNECTOR PCB SIDE	A2001WV2-13P
CP004	72796825	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP005	72796825	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP101	72783364	069S280639	CONNECTOR PCB SIDE	A2001WR2-8P
CP102	72796801	069S270629	CONNECTOR PCB SIDE	A2001WV2-7P
△CP401	72782003	069X460109	CONNECTOR PCB SIDE	B06B-DVS-L_(LF)
CP402	72796792	069S120419	CONNECTOR PCB SIDE	A2502WV2-2P
CP403	72796800	069S220629	CONNECTOR PCB SIDE	A2001WV2-2P
△CP502	72796821	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP503	72796825	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP507	72796825	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP701	72796796	069S240629	CONNECTOR PCB SIDE	A2001WV2-4P
CP703	72796825	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP803	72796816	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P
CP805	72796816	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P
CP806	72796767	069D010010	CONNECTOR PCB SIDE	005P-2100
CD1001	75002754	06CU147202	CORD,CONNECTOR	CU147202
CD802A	72783365	06CU275201	CORD,CONNECTOR	CU275201
CP1001	72796793	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P
CP2403	72799043	069R2Y0700	CONNECTOR PCB SIDE	87760-3416
CP801A	72796751	067U005049	WIRE HOLDER	B2013H02-5P
CP801B	72796781	069R250589	CONNECTOR PCB SIDE	52147-0510
CP802B	72796801	069S270629	CONNECTOR PCB SIDE	A2001WV2-7P
CP851A	72796750	067U004029	WIRE HOLDER	B2013H02-4P
CP851B	72796780	069R240589	CONNECTOR PCB SIDE	52147-0410
CP852A	72796794	069S230629	CONNECTOR PCB SIDE	A2001WV2-3P
CP852B	72796749	067U003029	WIRE HOLDER	B2013H02-3P
EL0701	72797069	124116281A	EYE LET	XRY16X28BD
EL0702	72797070	124120301A	EYE LET	XRY20X30BD
EL1101	72797069	124116281A	EYE LET	XRY16X28BD
ELD201	72797070	124120301A	EYE LET	XRY20X30BD
△F501	72794493	081PC6R305	FUSE	51MS063L
△F502	72796952	0835A07005	MICRO FUSE	20N_7000FSW
△FB401	72798965	043228010F	TRANSFORMER,FLYBACK	FJM28A002_M
FH501	72794496	06710T0009	HOLDER,FUSE	EYF-52BCY
FH502	72794496	06710T0009	HOLDER,FUSE	EYF-52BCY
NR2402	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2403	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2404	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2405	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2406	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2407	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2408	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2409	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2410	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
NR2411	72783385	110P4220M6	R.NETWORK	4D02WGJ0220TCE
OS101	72783489	077A000027	REMOTE RECEIVER	ROM-V3138SY
△RY501	72798987	0560V20119	RELAY	ALKS321_M60
△SP1001	72799166	070N546012	SPEAKER	YDP4010-2
△SP1002	72799166	070N546012	SPEAKER	YDP4010-2
△TH501	72795546	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
TM101	72799186	076D0KK010	TRANSMITTER	ORT204N7404359-U
△TU001	72783398	0164100005	DIGITAL TUNER	ENG36A49KF
△V801	72799209	0981280C02	CRT W/DY	W66MAF183X80
X103	72799226	100WT01611	CRYSTAL	HC-49/U-S
X601	72794704	100DT3R531	CRYSTAL	HC-49/U
X2401	72783399	100GA02402	CRYSTAL	B24576K010
X2402	72783400	100GA02502	CRYSTAL	B25000H006

**RESISTOR**

RC..... CARBON RESISTOR

**CAPACITORS**

CC..... CERAMIC CAPACITOR  
 CE..... ALUMI ELECTROLYTIC CAPACITOR  
 CP..... POLYESTER CAPACITOR  
 CPP..... POLYPROPYLENE CAPACITOR  
 CPL..... PLASTIC CAPACITOR  
 CMP..... METAL POLYESTER CAPACITOR  
 CMPL..... METAL PLASTIC CAPACITOR  
 CMPP..... METAL POLYPROPYLENE CAPACITOR

# **TOSHIBA CORPORATION**

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN