

JVC

SERVICE MANUAL



COLOR TELEVISION

AV-36F703/Y
AV-36F713/Y
AV-36F803/Y

BASIC CHASSIS

GJ

UBE

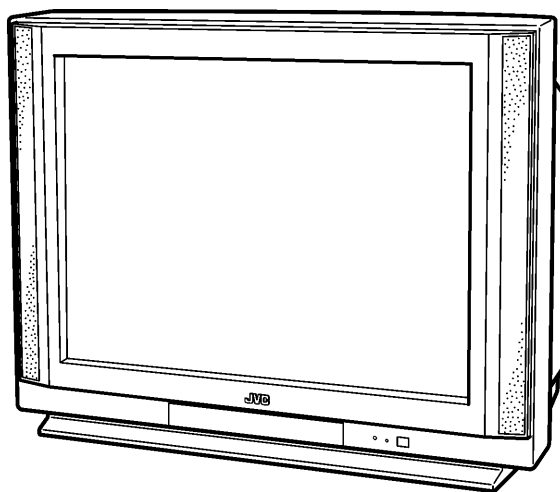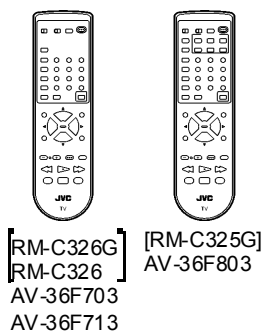

CONTENTS

| | |
|---------------------------------------|-----|
| ■ SPECIFICATIONS | 2 |
| ■ SAFETY PRECAUTIONS | 3 |
| ■ FEATURES | 4 |
| ■ HOW TO IDENTIFY MODELS | 4 |
| ■ MAIN DIFFERENCE LIST | 5 |
| ■ FUNCTIONS | 6 |
| ■ SPECIFIC SERVICE INSTRUCTIONS | 8 |
| ■ SERVICE ADJUSTMENTS | 12 |
| ■ PARTS LIST | 33 |
| ★ OPERATING INSTRUCTIONS | |
| ★ STANDARD CIRCUIT DIAGRAM | 2-1 |

SPECIFICATIONS

| Items | Contents |
|--|---|
| Dimensions (W×H×D) | 38-1/8"×30"-3/8"×24-1/8" (967mm×770mm×610mm) |
| Mass | 189.2 lbs (86.0 kg) |
| TV System and Color System | TV RF System CCIR(M) Color System NTSC Sound System BTSC System (Multi-Channel Sound) |
| TV Receiving Channels and Frequency | VL Band (02~06) 54MHz~88MHz VH Band (07~13) 174MHz~216MHz UHF Band (14~69) 470MHz~806MHz |
| CATV Receiving Channels and Frequency | Low Band (02~06, A-8) by (02~06&01) High Band (07~13) by (07~13) Mid Band (A~1) by (14~22) Super Band (J~W) by (23~36) Hyper Band (W+1~W+28) by (37~64) Ultra Band (W+29~W+84) by (65~125) Sub Mid Band (A8, A4~A1) by (01, 96~99) |
| | (54MHz~804MHz) |
| TV/CATV Total Channel | 180 Channels |
| Intermediate Frequency | 45.75MHz |
| Video IF Carrier | 41.25MHz (4.5MHz) |
| Sound IF Carrier | 41.25MHz (4.5MHz) |
| Color Sub Carrier | 3.58MHz |
| Power Input | 120V AC, 60Hz |
| Power Consumption | 160W |
| Picture Tube | 36" (90cm) Measured Diagonally |
| High Voltage | 31.4kV±1.3kV (at zero beam current) |
| Speaker | 2"×4-3/4" (5×12cm) Oval type×2 |
| Au dio Power Output | 5W + 5W |
| Input terminals | Input 1 (Rear) S-Video Y: 1V(p-p) Positive (Negative sync provided, when terminated with 75Ω) C: 0.286V(p-p) (Burst signal, when terminated with 75Ω) |
| | Video 1V(p-p), 75Ω |
| | Au dio (L/MONO, R) 500mV(rms) (-4dBs), High Impedance |
| | Input 2 (Rear) Video 1Vp-p, 75Ω |
| | Component video Y: 1V(p-p) Positive (Negative sync provided, when terminated with 75Ω) P _B , P _R : 0.7V(p-p), 75Ω |
| | Au dio (L/MONO, R) 500mV(rms) (-4dBs), High Impedance |
| | Input 3 (Front) Video 1V(p-p), 75Ω |
| | Au dio (L/MONO, R) 500mV(rms) (-4dBs), High Impedance |
| Input 4 (Rear) (For AV-36F803) | Component video Y: 1V(p-p) Positive (Negative sync provided, when terminated with 75Ω) P _B , P _R : 0.7V(p-p), 75Ω |
| | Au dio (L/MONO, R) 500mV(rms) (-4dBs), High Impedance |
| | Fix Audio Output 500mV(rms) (-4dBs), LOW Impedance (400Hz when modulated 100%) |
| AV compulink III Input | 3.5mm mini jack |
| Antenna terminal | 75Ω (VHF/UHF) Terminal, F-Type Connector |
| Remote Control Unit | RM-C326G(AV-36F703) / RM-C326(AV-36F713) / RM-C325G(AV-36F803) (AA/R6/UM-3 battery×2) |

Design & specifications are subject to change without notice.

SAFETY PRECAUTIONS

- The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
- Alterations of the design or circuitry of the products should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
- Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. **Electrical components having such features are identified by shading on the schematics and by (Δ) on the parts list in Service manual.** The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list of Service manual may cause shock, fire, or other hazards.
- Use isolation transformer when hot chassis.**
 The chassis and any sub-chassis contained in some products are connected to one side of the AC power line. An isolation transformer of adequate capacity should be inserted between the product and the AC power supply point while performing any service on some products when the HOT chassis is exposed.
- Don't short between the LIVE side ground and ISOLATED (NEUTRAL) side ground or EARTH side ground when repairing.**
 Some model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (\perp) side GND, the ISOLATED(NEUTRAL) : (⏏) side GND and EARTH : (\oplus) side GND. Don't short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND and never measure with a measuring apparatus (oscilloscope etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND at the same time.
 If above note will not be kept, a fuse or any parts will be broken.
- If any repair has been made to the chassis, it is recommended that the B1 setting should be checked or adjusted (See ADJUSTMENT OF B1 POWER SUPPLY).
- The high voltage applied to the picture tube must conform with that specified in Service manual. Excessive high voltage can cause an increase in X-Ray emission, arcing and possible component damage, therefore operation under excessive high voltage conditions should be kept to a minimum, or should be prevented. If severe arcing occurs, remove the AC power immediately and determine the cause by visual inspection (incorrect installation, cracked or melted high voltage harness, poor soldering, etc.). To maintain the proper minimum level of soft X-Ray emission, components in the high voltage circuitry including the picture tube must be the exact replacements or alternatives approved by the manufacturer of the complete product.
- Do not check high voltage by drawing an arc. Use a high voltage meter or a high voltage probe with a VTVM. Discharge the picture tube before attempting meter connection, by connecting a clip lead to the ground frame and connecting the other end of the lead through a 10k Ω 2W resistor to the anode button.
- When service is required, observe the original lead dress. Extra precaution should be given to assure correct lead dress in the high voltage circuit area. Where a short circuit has occurred, those components that indicate evidence of overheating should be replaced. Always use the manufacturer's replacement components.

10. Isolation Check

(Safety for Electrical Shock Hazard)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the cabinet (antenna terminals, video/audio input and output terminals, Control knobs, metal cabinet, screwheads, earphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

(1) Dielectric Strength Test

The isolation between the AC primary circuit and all metal parts exposed to the user, particularly any exposed metal part having a return path to the chassis should withstand a voltage of 1100V AC (r.m.s.) for a period of one second.

(... Withstand a voltage of 1100V AC (r.m.s.) to an appliance rated up to 120V, and 3000V AC (r.m.s.) to an appliance rated 200V or more, for a period of one second.)

This method of test requires a test equipment not generally found in the service trade.


(2) Leakage Current Check

Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground (water pipe, etc.). Any leakage current must not exceed 0.5mA AC (r.m.s.).

However, in tropical area, this must not exceed 0.2mA AC (r.m.s.).

● Alternate Check Method



Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Use an AC voltmeter having 1000 ohms per volt or more sensitivity in the following manner. Connect a 1500 Ω 10W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground (water pipe, etc.). Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75V AC (r.m.s.). This corresponds to 0.5mA AC (r.m.s.). However, in tropical area, this must not exceed 0.3V AC (r.m.s.). This corresponds to 0.2mA AC (r.m.s.).

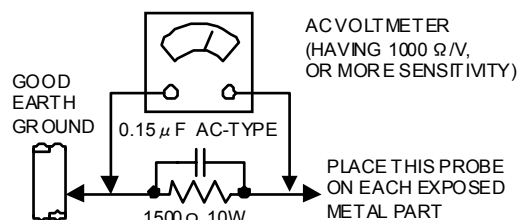

11. High voltage hold down circuit check.

After repair of the high voltage hold down circuit, this circuit shall be checked to operate correctly.

See item "How to check the high voltage hold down circuit".

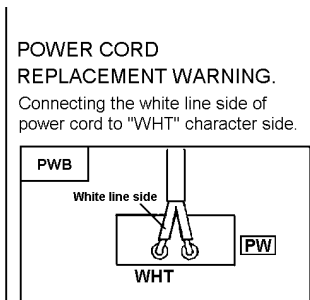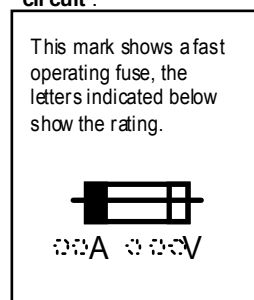

AV-36F703
AV-36F713
AV-36F803

FEATURES

- New chassis design enables use of a single board with simplified circuitry.
- Users can make fun to connect the DVD player with the component video signal input terminal.
- Provided with miniature tuner (TV/CATV).
- Multifunctional remote control permits picture adjustment.
- Adoption of the CHANNEL GUARD function prevents the specific channels from being selected, unless the "ID number" is key in.
- I²C bus control utilizes single chip ICs.
- Adoption of the VIDEO STATUS / THEATER PRO. function.
- Adoption of the ON/OFF TIMER and SLEEP TIMER function.
- Built-in V-CHIP system.
- Closed-caption broadcasts can be viewed.
- Built-in MTS system, BBE / HYPER-SURROUND system.
- S-VIDEO input terminal for taking best advantage of Super VHS.
- Digital Comb filter Improved picture quality.
- Built-in EZ SURF system.(AV-36F803)
By pushing the EZ SURF key, the counterprogram information can be displayed in the text form that is obtained from the three program information: the CALL LETTER (broadcasting station ID), network names and program names in the XDS data. When the PIP function is turned on, the counterprograms will be displayed on the PIP one by one while the text on the main screen is displayed simultaneously.

HOW TO IDENTIFY MODELS

How to recognize from the appearance of the model concerned is written below. Please distinguish from several contents currently printed on the rating label.

The diagram illustrates how to identify the model from a rating label. It shows a sample rating label with a 'Y' character in a box. An arrow points from this 'Y' to a table titled 'Indicated Basic Model Name' which lists AV-36F703, AV-36F713, and AV-36F803. Another arrow points from the 'Y' to a box labeled 'Indicated "Y" letter as model attribute name.'

[RATING LABEL]

JVC MODEL NO. AC 120V 60Hz | xxx W INCHES ME
TV SERIAL NO. xxx
WARNING: ELECTRIC SHOCK HAZARD-DO NOT OPEN

THE FOLLOWING TWO CONDUITS ARE REQUIRED FOR THE PROPER OPERATION OF THIS TELEVISION. (1) THE SHIELDING CONDUIT FOR THE CABLE COMPATIBLE TELEVISION APPARATUS, CANADA. TELEVISION CABLES COMPATIBLE, CANADA.
ASSEMBLED IN MEXICO BY JVC INDUSTRIAL DE MEXICO, VICTOR COMPANY OF JAPAN, LIMITED, 12-1-CHOME, MORIYA-CHO, SAKAGAWA-KU, TOKYO-KU, 121-8558, JAPAN.

CHASSIS NO. _____
MANUFACTURED SERIAL NO. _____

Indicated Basic Model Name

| |
|-----------|
| AV-36F703 |
| AV-36F713 |
| AV-36F803 |



Indicated "Y" letter as model attribute name.

MAIN DIFFERENCE LIST

| △ | Model name | AV-36F803/Y | AV-36F703/Y | AV-36F713/Y |
|---|-----------------------|-----------------------------|----------------------------|------------------------|
| | Parts Name | | | |
| | MAIN PWB | SGJ-1001A-M2 | SGJ-1009A-M2 | SGJ-1008A-M2 |
| | PIP PWB | SGJ-4001A-M2 | × | × |
| | AV SEL PWB | SGJ-5001A-M2 | SGJ-5002A-M2 | ← |
| | 3D Y/C SEP MODULE PWB | SGJ0Y001A-M2 | × | × |
| △ | FRONT CABI. ASSY | LC11153-003B-A (Silver) | ← | LC11153-004A-A (Black) |
| | JVC MARK | LC41193-001A-C | ← | LC41193-002A-C |
| △ | DOOR | LC20628-001C-A | ← | LC20628-002A-A |
| △ | KNOB (POWER) | LC31237-001A-A | ← | LC31237-002A-A |
| | OPERATION SHEET | LC31238-004A-A | ← | LC31238-005A-A |
| △ | CONTROL KNOB | LC20217-004B-A | ← | LC20217-006A-A |
| △ | TERMINAL BOARD | LC20899-005A-A | LC20899-004A-A | ← |
| | REMOCON UNIT | RM-C325G-1A | RM-C326G-1A | RM-C326-1A |
| | Comb filter | 3D Y/C separate comb filter | 3 line digital comb filter | ← |
| | Picture in Picture | 2 Tuner PIP | NO | ← |
| | EZ Surf | YES | NO | ← |
| | Input Terminal | Input1 ~ Input4 | Input1 ~ Input3 | ← |

FUNCTIONS


FRONT PANEL CONTROL

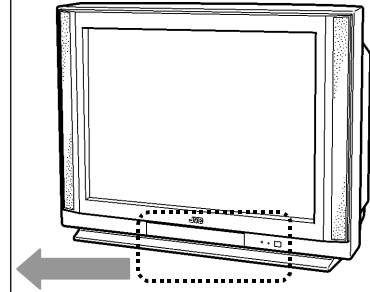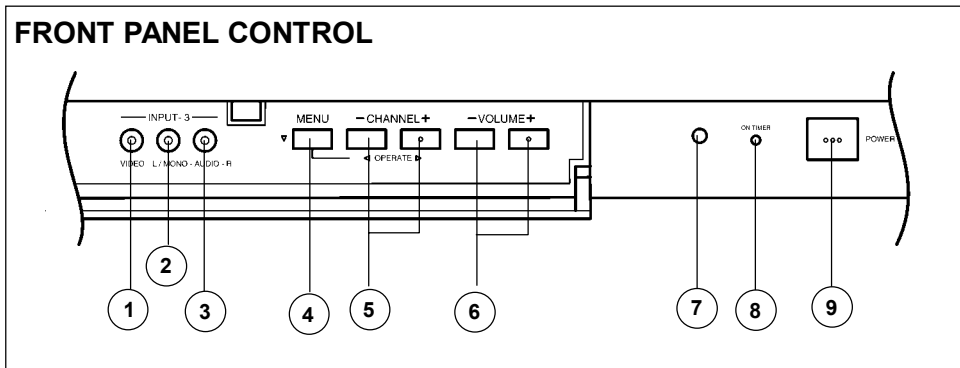

| | |
|---|--------------------------|
| ① INPUT3 VIDEO terminal | ⑥ VOLUME +/- buttons |
| ② INPUT3 AUDIO L/MONO terminal | ⑦ SENSOR, REMOTE CONTROL |
| ③ INPUT3 AUDIO R terminal | ⑧ ON TIMER LED |
| ④ MENU button (▼) | ⑨ POWER button |
| ⑤ CHANNEL +/- buttons OPERATE ◀▶ buttons (use MENU screen) | |

REAR TERMINAL


[AV-36F703 γ , AV-36F713 γ]

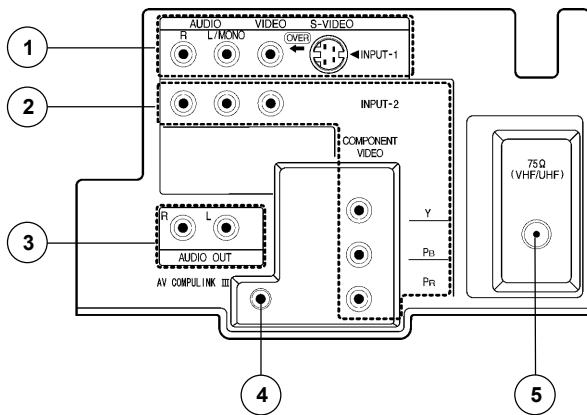

[AV-36F703 γ , AV-36F713 γ]

- ① INPUT 1 (S-VIDEO, V, L/MONO, R) terminals
- ② INPUT 2 (V, L/MONO, R) terminals
/ COMPONENT VIDEO(Y, P_B, P_R) terminals
- ③ AUDIO OUT(L, R) terminals
- ④ AV COMPULINK III
- ⑤ VHF / UHF terminal

[AV-36F803 γ]

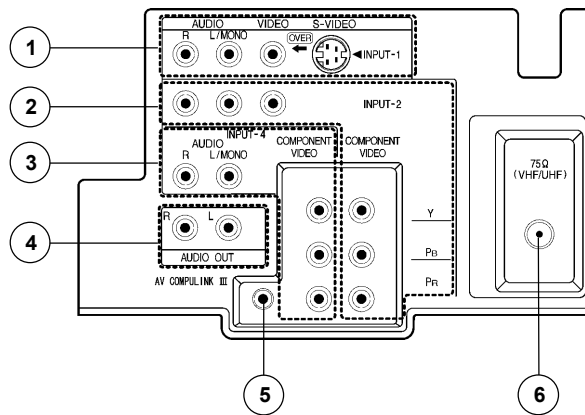


[AV-36F803 γ]

- ① INPUT 1 (S-VIDEO, V, L/MONO, R) terminals
- ② INPUT 2 (V, L / MONO, R) terminals
/ COMPONENT VIDEO(Y, P_B, P_R) terminals
- ③ INPUT 4 (L, R) terminals
/ COMPONENT VIDEO(Y, P_B, P_R) terminals
- ④ AUDIO OUT(L, R) terminals
- ⑤ AV COMPULINK III
- ⑥ VHF / UHF terminal


REMOTE CONTROL UNIT

[RM-C326G : AV-36F703/Y]
[RM-C326 : AV-36F713/Y]

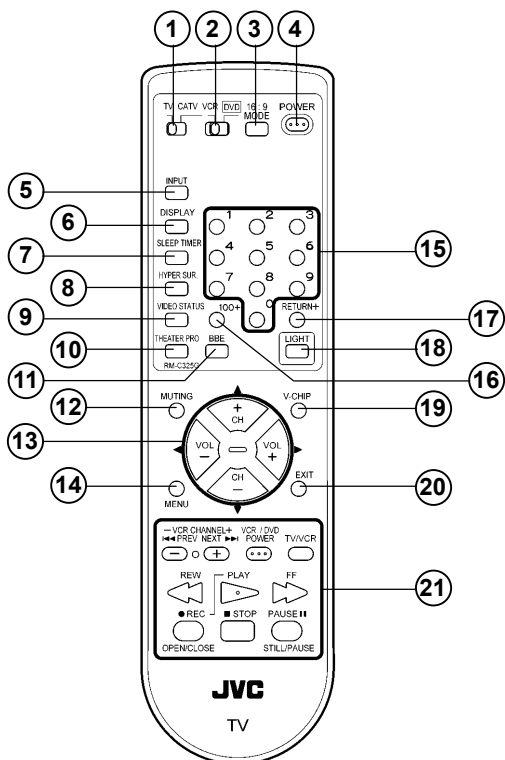

- ① TV / CATV switch
- ② VCR / DVD switch
- ③ 16 : 9 MODE Key
- ④ POWER Key
- ⑤ INPUT Key (TV VIDEO1 VIDEO2 VIDEO3)
- ⑥ DISPLAY key
- ⑦ SLEEP TIMER Key (0 15 30165 180)
- ⑧ HYPER SUR. Key
- ⑨ VIDEO STATUS Key
- ⑩ THEATER PRO key
- ⑪ BBE key
- ⑫ MUTING Key
- ⑬ FUNCTION Key (CH -/+ / VOL -/+)
The FUNCTION keys operate the CHANNEL and VOLUME normally.
These keys also operate the MENU system.
- ⑭ MENU Key
- ⑮ NUMBERS Key
- ⑯ 100+ Key
- ⑰ RETURN+ Key
- ⑱ LIGHT Key
- ⑲ V-CHIP Key
- ⑳ EXIT Key
- ㉑ VCR / DVD Keys

[RM-C325G : AV-36F803/Y]

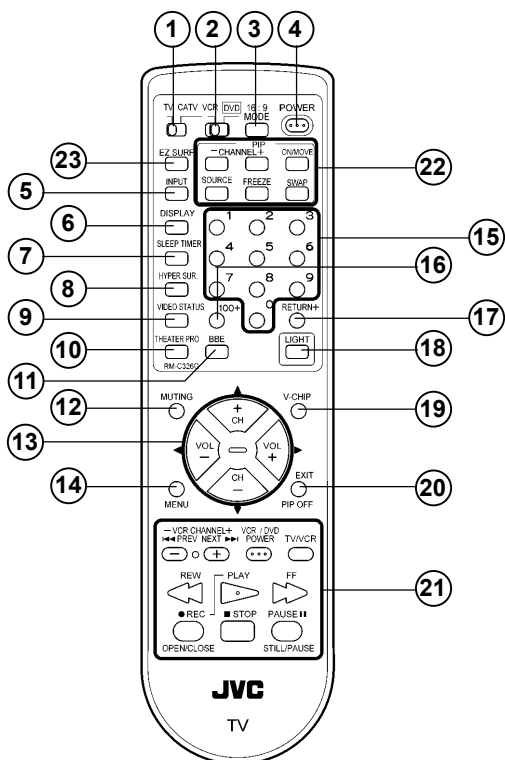

- ① TV / CATV switch
- ② VCR / DVD switch
- ③ 16 : 9 MODE Key
- ④ POWER Key
- ⑤ INPUT Key (TV VIDEO1 VIDEO2 VIDEO3 VIDEO4)
- ⑥ DISPLAY key
- ⑦ SLEEP TIMER Key (0 15 30165 180)
- ⑧ HYPER SUR. Key
- ⑨ VIDEO STATUS Key
- ⑩ THEATER PRO key
- ⑪ BBE key
- ⑫ MUTING Key
- ⑬ FUNCTION Key (CH -/+ / VOL -/+)
The FUNCTION keys operate the CHANNEL and VOLUME normally.
These keys also operate the MENU system.
- ⑭ MENU Key
- ⑮ NUMBERS Key
- ⑯ 100+ Key
- ⑰ RETURN+ Key
- ⑱ LIGHT Key
- ⑲ V-CHIP Key
- ⑳ EXIT / PIP OFF Key
- ㉑ VCR / DVD Keys
- ㉒ PIP Key
- ㉓ EZ SURF Key (Back Program Information can be displayed.)

SPECIFIC SERVICE INSTRUCTIONS

DISASSEMBLY PROCEDURE

REMOVING THE REAR COVER

1. Disconnect the power plug from AC outlet.
2. As shown in the Fig.1, remove the **12** screws marked **(A)**.
3. Withdraw the rear cover backward.

REMOVING THE TERMINAL BOARD

- After removing the rear cover.
1. As shown in Fig.1, remove the screws marked **(B)**.
 2. Withdraw the terminal board toward you.

REMOVING THE CHASSIS

- After removing the rear cover and terminal board.
1. Slightly raise the both sides of chassis by hand and remove the **2** claws under the both side of the chassis from the front cabinet.
 2. Withdraw the chassis backward.
(If necessary, remove the wire clamp, connectors etc.)

REMOVING THE SPEAKER

- After removing the rear cover.
1. As shown in Fig. 1, removing the **2** screws marked **(C)**, then remove the speaker with the speaker holder
 2. Then remove the **2** screws marked **(D)** to detach the speaker from speaker holder.
 3. Follow the same steps when removing the other hand speaker.

NOTE : When removing the **2** screws marked **(C)** of the speaker, remove the lower side screw first, and then remove the upper one.

REMOVING THE LED & POWER SW PWB

- After removing the rear cover and terminal board.
1. Remove the **2** screws marked **(E)** as shown in Fig. 1.
 2. Withdraw the LED & POWER SW PWB toward you.
- * If necessary, remove the wire clamp, connector etc.

REMOVING THE FRONT CONTROL PWB

- After removing the rear cover & terminal board.
1. Remove the **2** screws marked **(F)** as shown in Fig. 1.
 2. Withdraw the FRONT CONTROL PWB toward you.
- * If necessary, remove the wire clamp, connector etc.

CHECKING THE CHASSIS

To check the PW Board from back side.

1. Pull out the chassis (refer to REMOVING THE CHASSIS).
2. Erect the chassis vertically so that you can easily check the back side of the PW Board.

[CAUTION]

- When erecting the chassis, be careful so that there will be no contacting with other PW Board.
- Before turning on power, make sure that the wire connector is properly connected.
- **When conducting a check with power supplied, be sure to confirm that the CRT EARTH WIRE (BRAIDED ASS'Y) is connected to the CRT SOCKET PW board.**

WIRE CLAMPING AND CABLE TYING

1. Be sure to clamp the wire.
2. Never remove the cable tie used for tying the wires together.
Should it be inadvertently removed, be sure to tie the wires with a new cable tie.

This illustration describes about the AV-36F803/Y.
 When disassembling the AV-36F703/Y and AV-36F713/Y, you can use this illustration as same steps as AV-36F803/Y.

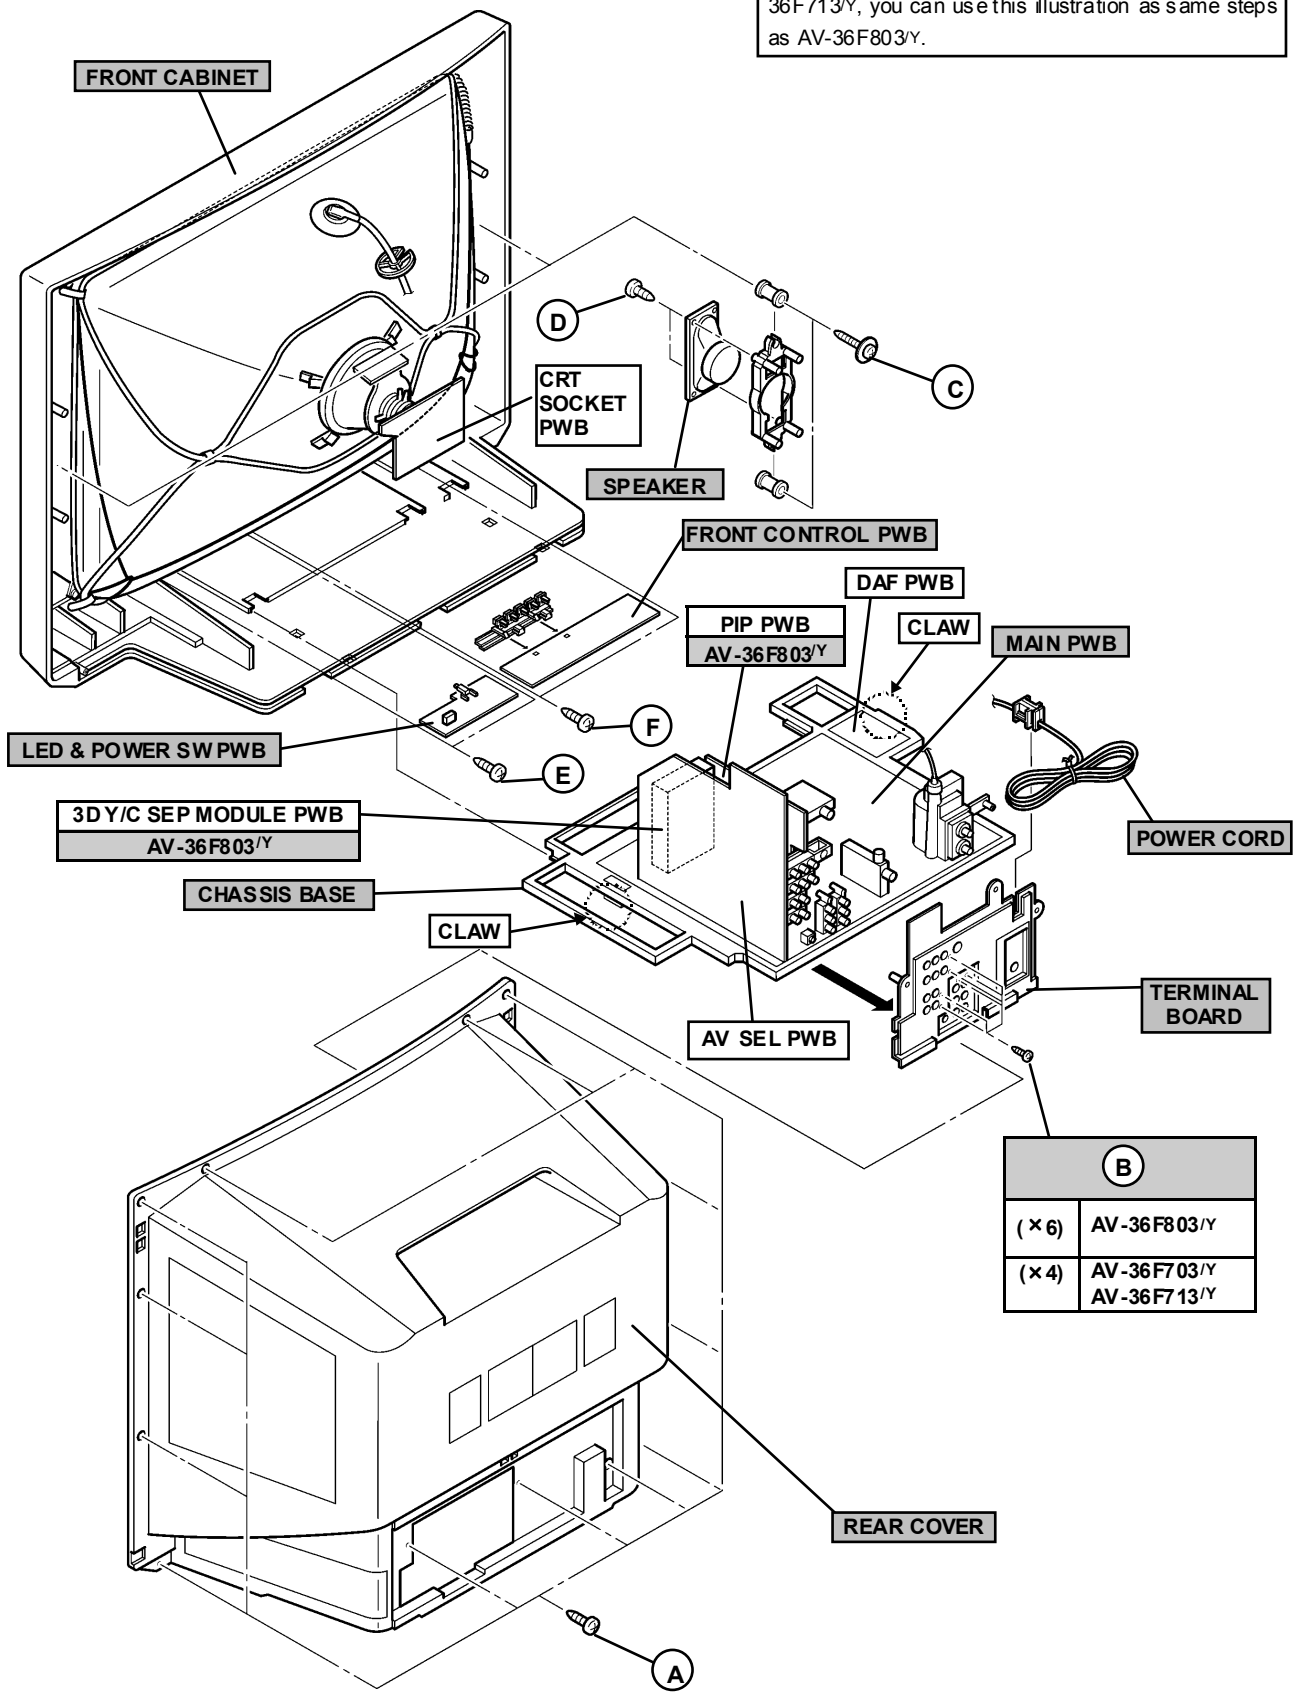


Fig.1

MEMORY IC REPLACEMENT

1. Memory IC

This TV uses memory IC.

This memory IC stores data for proper operation of the video and deflection circuits.

When replacing the memory IC, be sure to use an IC containing this (initial value) data.

2. Memory IC replacement procedure

(1) Power off

Switch off the power and disconnect the power plug from the AC outlet.

(2) Replace the memory IC

Be sure to use a memory IC written with the initial setting data.

(3) Power on

Connect the power plug to the AC outlet and switch on the power.

(4) Confirm the system constant value

- Normally, do not adjust the 12.SYSTEM (SYS).
- When adjust, be sure to input the signal.

How to enter the SERVICE MENU.

- 1) Press the **SLEEP TIMER** key of the remote control unit and set the **SLEEP TIMER** for 「0 min」.
- 2) Before disappear the display of **SLEEP TIMER** settings, simultaneously press the **DISPLAY** key and **VIDEO STATUS** key of the remote control unit.
- 3) The SERVICE MENU screen will be displayed as shown Fig. 1.

How to enter the 12. SYSTEM(SYS).

- 4) While the SERVICE MENU is displayed, select the **12.SYSTEM(SYS)** item with FUNCTION (▼/▲) keys, and the FUNCTION (◀/▶) keys is pressed, the screen will be displayed as shown in Fig.2.
- 5) Refer to the SYSTEM (SYSTEM CONSTANT) TABLE 1 and check the setting items. If the value is different, select the setting item with the FUNCTION (▼/▲) keys and adjust the setting with the FUNCTION (◀/▶) keys. (The letters of the selected item are displayed in yellow.)
- 6) When adjustment has completed, the values store into memory IC automatically
- 7) Press the EXIT key to return the SERVICE MENU screen.
- 8) Then press the EXIT key again to return the normal screen.

(5) Receive the channel setting

Refer to the OPERATING INSTRUCTIONS (USER'S GUIDE) and set the receive channels (Channels Preset) as described.

(6) User settings

Check the user setting items according to TABLE 2.

Where these do not agree, refer to the OPERATING INSTRUCTIONS (USER'S GUIDE) and set the items as described.

(7) SERVICE MENU setting

Verify what to set in the SERVICE MENU, and set whatever is necessary (Fig.1).

Refer to the SERVICE ADJUSTMENT for setting.

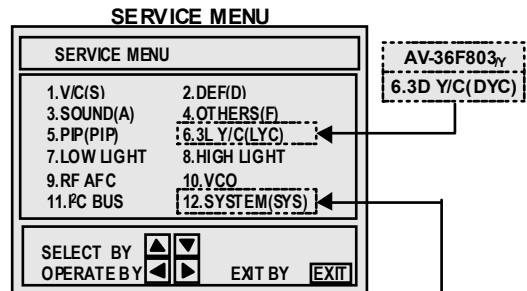


Fig.1


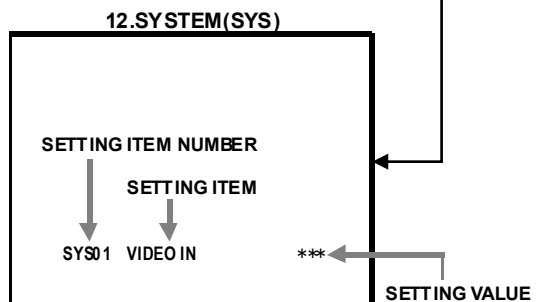


Fig.2

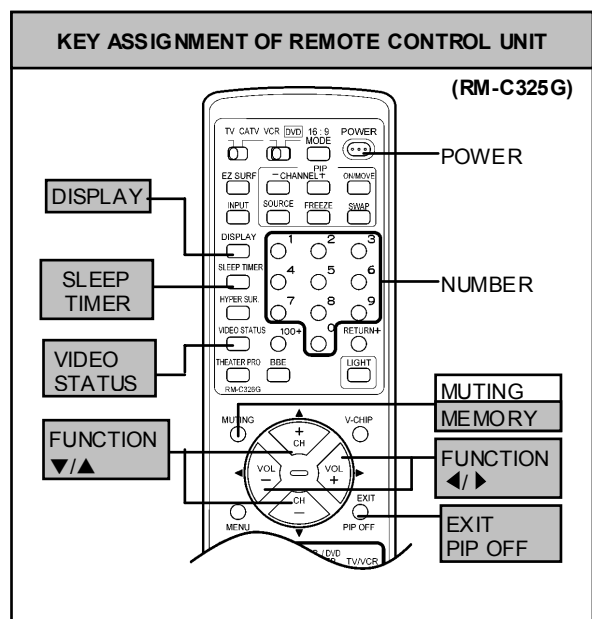

NOTE Although design is different as this figure, each remote controller has the same control function.

12.SYSTEM(SYS) 【System Constant setting】

| No. | Setting item | Initial setting value | | No. | Setting item | Initial setting value | |
|-------|--------------|-----------------------|-------------|-------|--------------|-----------------------|-------------|
| | | AV-36F803/Y | AV-36F703/Y | | | AV-36F803/Y | AV-36F703/Y |
| | | | AV-36F713/Y | | | | AV-36F713/Y |
| SYS01 | VIDEO IN | 04 | 03 | SYS13 | HYP SURR | 01 | 01 |
| SYS02 | PIP | 01 | 00 | SYS14 | 16:9 MD | 01 | 01 |
| SYS03 | 3D Y/C | 01 | 00 | SYS15 | HYP SCAN | 01 | 01 |
| SYS04 | Y CV | 01 | 01 | SYS16 | EZ SURF | 01 | 00 |
| SYS05 | CCD PCHK | 01 | 01 | SYS17 | ID DISP | 01 | 01 |
| SYS06 | PURITY | 01 | 01 | SYS18 | COMPULINK | 01 | 01 |
| SYS07 | VM | 01 | 01 | SYS19 | CCD | 01 | 01 |
| SYS08 | NOISE CR | 01 | 00 | SYS20 | VCHIP | 01 | 01 |
| SYS09 | CLR TEMP | 01 | 01 | SYS21 | VCHIP CA | 01 | 01 |
| SYS10 | THEATER | 01 | 01 | SYS22 | JVC LOGO | 01 | 01 |
| SYS11 | THEATER PRO | 01 | 01 | SYS23 | CMP IN | 01 | 01 |
| SYS12 | BBE | 01 | 01 | SYS24 | CXA1875 | 01 | 01 |

Table 1

User setting

| Setting item | Setting value | Setting item | Setting value |
|-----------------------------------|---|---------------------------|--|
| Use remote controller keys | | | |
| POWER | OFF | DISPLAY | OFF |
| CHANNEL | Cable-02 | VIDEO STATUS | DYNAMIC |
| VOLUME | 10 | HYPERSURROUND | OFF |
| TV/VIDEO | TV | BBE | ON |
| | | PIP SOURCE | Cable-04 (AV-36F803/Y) |
| Settings of MENU | | | |
| PICTURE MENU | | INITIAL SETUP MENU | |
| STANDARD | | LANGUAGE | ENG |
| TINT | CENTER | FRONT PANEL LOCK | OFF |
| COLOR | CENTER | V2 COMPONENT-IN | NO |
| PICTURE | CENTER | AUTO SHUT OFF | OFF |
| BRIGHT | CENTER | CLOSED CAPTION | OFF (CC1 / T1) |
| DETAIL | CENTER | AUTO TUNER SET UP | Unnecessary to set |
| COLOR TEMPERATURE | LOW | CHANNEL SUMMARY | Setting Channel Guard channel : All OFF |
| NOISE MUTING | ON | V-CHIP | OFF |
| SOUND ADJUST MENU | | SET LOCK CODE | (0000) Unnecessary to set |
| BASS | CENTER | XDS ID | ON |
| TREBLE | CENTER | | |
| BALANCE | CENTER | | |
| MTS | STEREO | | |
| CLOCK / TIMERS MENU | | | |
| SET CLOCK | MANUAL TIME ZONE : PACIFIC D.S.T. : OFF | | |
| ON / OFF TIMER | OFF | | |

Table 2

SERVICE ADJUSTMENTS

ADJUSTMENT PREPARATION


1. You can make the necessary adjustments for this unit with either the Remote Control Unit or with the adjustment tools and parts as given below.
2. Adjustment with the Remote Control Unit is made on the basis of the initial setting values, however, the new setting values which set the screen to its optimum condition may differ from the initial settings.
3. Make sure that AC power is supplied correctly.
4. Turn on the power for set and test equipment before use, and start the adjustment procedures after waiting for at least 30 minutes.
5. Unless otherwise specified, prepare the most suitable reception or input signal for adjustment.
6. **Never touch any adjustment part** which are not specified in the list for this adjustment - variable resistors, transformers, initial setting value, etc.
7. Presetting before adjustment.
 Unless otherwise specified in the adjustment instructions, preset the following functions with the remote control unit:

User menu preset value

| MENU ITEM | PRESET |
|--------------------------------------|----------|
| VIDEO STATUS | STANDARD |
| BASS, TREBLE, BALANCE | CENTER |
| HYPER SURROUND | OFF |
| TINT, COLOR, PICTURE, BRIGHT, DETAIL | CENTER |
| MTS | STEREO |

ADJUSTMENT EQUIPMENT

1. DC voltmeter (or digital voltmeter)
2. Oscilloscope
3. Signal generator (Pattern generator) [NTSC]
4. Remote control unit
5. TV audio multiplex signal generator.
6. Frequency counter

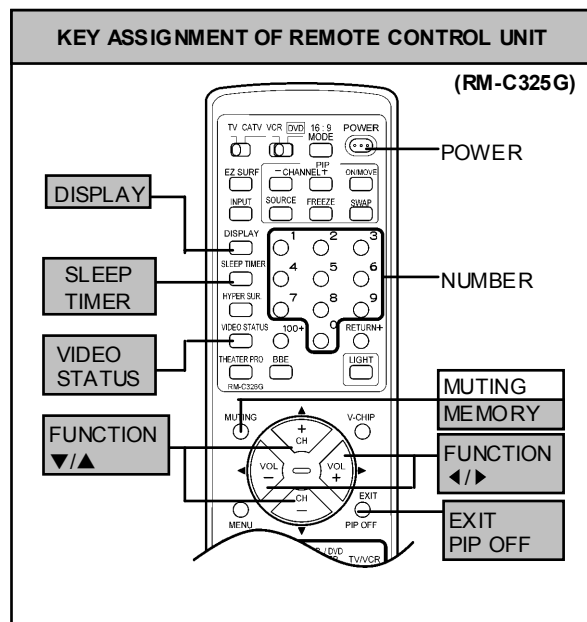

ADJUSTMENT ITEMS


- CHECK OF B1 POWER SUPPLY
- ADJUSTMENT OF VCO
 MAIN VCO adjustment
 SUB VCO adjustment
- ADJUSTMENT OF RF. AGC
- ADJUSTMENT OF FOCUS
- ADJUSTMENT OF DEFLECTION CIRCUIT
 V. HEIGHT / V. CENTER(4:3) adjustment
 V. HEIGHT / L. LIN (16:9) adjustment
 H. POSI, H. SIZE & SIDE PIN [(4:3) & (16:9)] adjustment
 PIP DISPLAY POSI adjustment (**AV-36F803/Y**)
- ADJUSTMENT OF VIDEO / CHROMA CIRCUIT
 WHITE BALANCE(High Light & LowLight) adjustment
 PIP WHITE BALANCE(High Light) adjustment (**AV-36F803/Y**)
 SUB BRIGHT adjustment
 SUB CONTRAST adjustment
 SUB COLOR adjustment
 SUB TINT adjustment

- ADJUSTMENT OF MTS CIRCUIT
 MTS INPUT LEVEL adjustment
 MTS SEPARATION adjustment


HOW TO CHECK THE HIGH VOLTAGE HOLD DOWN CIRCUIT

ADJUSTMENT LOCATIONS


LED & POWER SW PWB

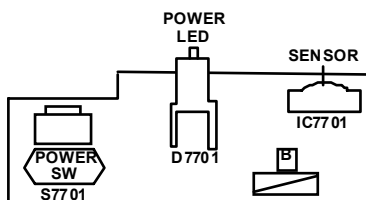

FRONT CONTROL PWB

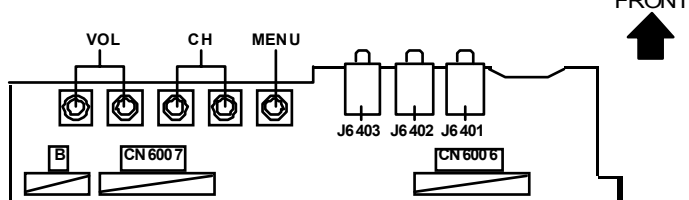


MAIN PWB

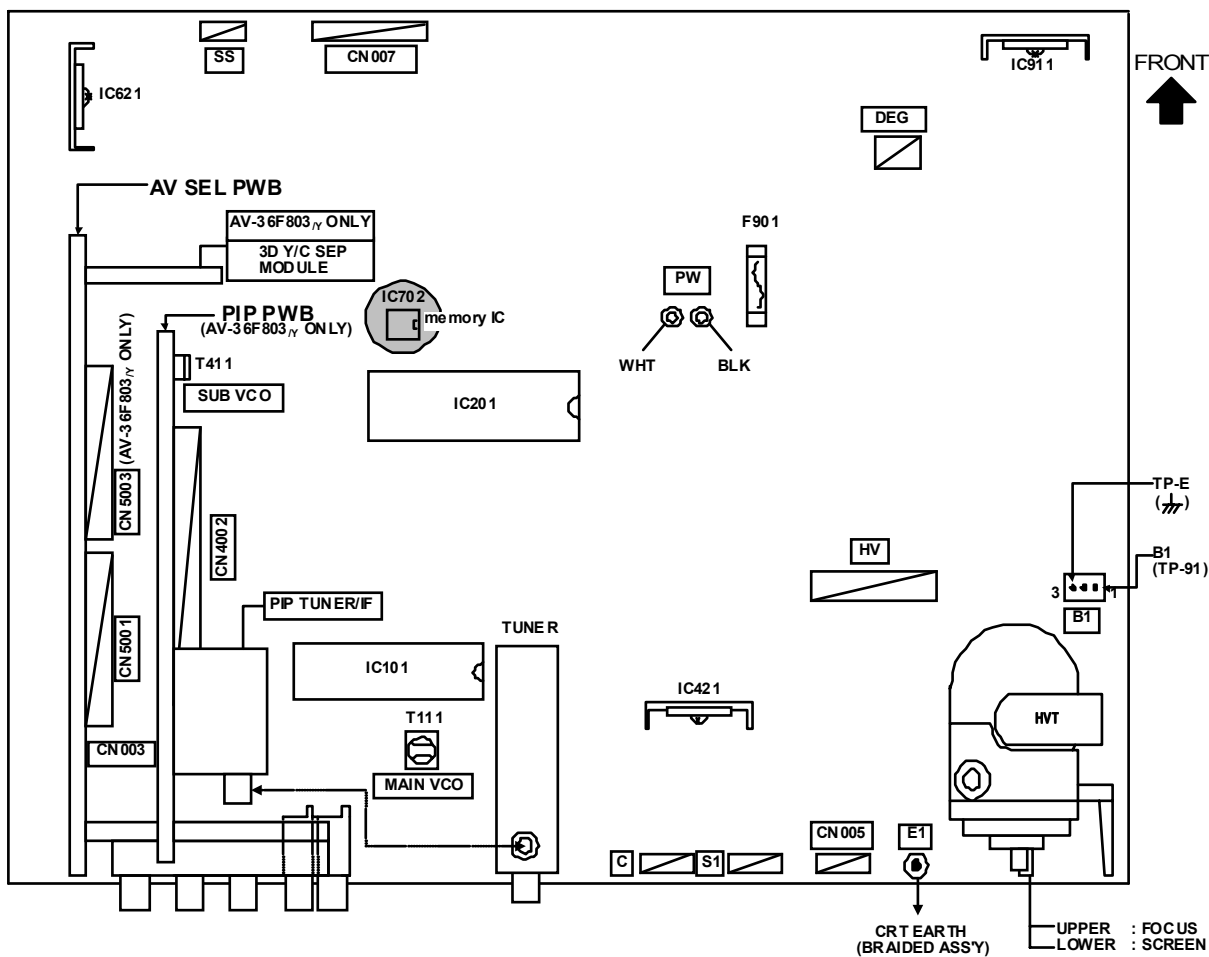


AV-36F703
 AV-36F713
 AV-36F803


CRT SOCKET PWB

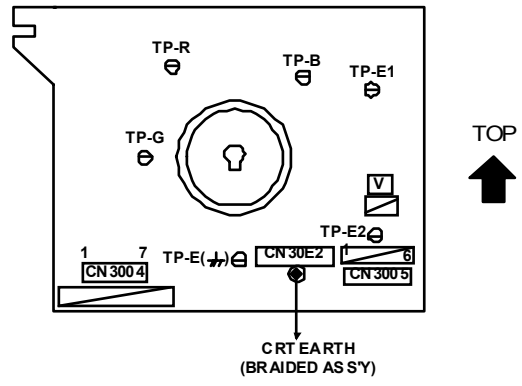

PIP PWB (AV-36F803_Y ONLY)

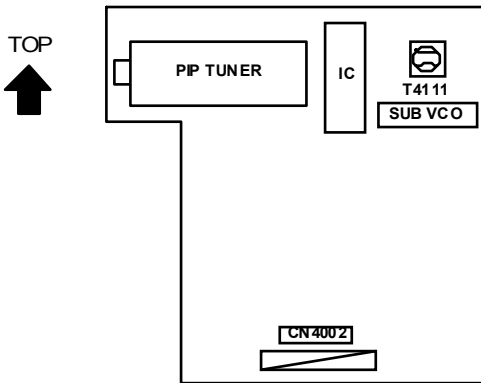

AV SEL PWB

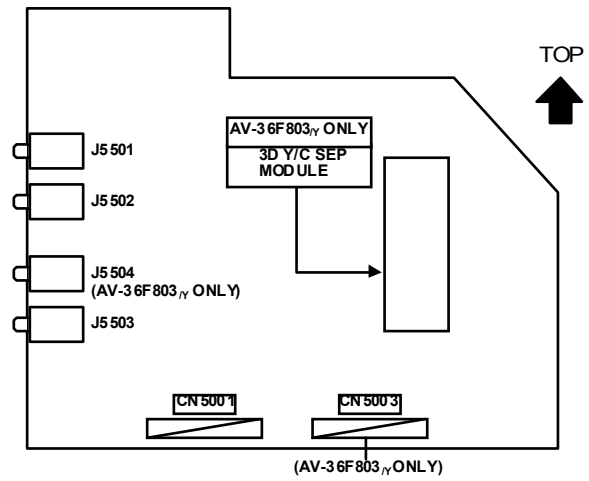

BASIC OPERATION OF SERVICE MENU

1. TOOL OF SERVICE MENU OPERATION

Operate the SERVICE MENU with the REMOTE CONTROL UNIT.

2. In general, basic setting (adjustments) items or verifications are performed in the SERVICE MENU.

- (1) V/C (S) This set the setting values (adjustment values) of the VIDEO/CHROMA circuits.
- (2) DEF (D) This set the setting values (adjustment values) of the DEFLECTION circuit.
- (3) SOUND (A) This set the setting values (adjustment values) of the AUDIO circuit.
- (4) OTHERS (F) This is used when the OTHERS MODE is verified. **[Do not adjust]**
- (5) PIP (PIP) This set the setting values(adjustment values) of the PICTURE-IN-PICTURE circuit.
 (PIP is means as Picture In Picture) **[Only for AV-36F803/Y]**
- (6) 3L Y/C(LYC) / 3D Y/C(DYC) This is used when the 3L(or 3D) Y/C MODE is verified. **[Do not adjust]**
[3L Y/C(LYC)=AV-36F703_Y, AV-36F713_Y / 3D Y/C(DYC)=AV-36F803_Y]
- (7) LOW LIGHT This sets the setting values (adjustment values) of the WHITE BALANCE circuit.
- (8) HIGH LIGHT This sets the setting values (adjustment values) of the WHITE BALANCE circuit
- (9) RF AFC This is used when the RF AFC MODE is verified.
- (10)VCO This is used when the IF VCO is adjusted.
- (11)I²C BUS This is used when ON/OFF of the I²C BUS CTRL is set. **[Fixed ON]**
- (12)SYSTEM (SYS) This is used when the SYSTEM is verified. **[Fixed value]**

3. Basic Operations of the SERVICE MENU

(1) How to enter SERVICE MENU



Press the **SLEEP TIMER** key and set the **SLEEP TIMER** for **[0 MIN]**.

Then press the **DISPLAY** key and the **VIDEO STATUS** key of the remote control unit simultaneously, and the SERVICE MENU screen will be displayed as shown below.


(2) Selection of SUB MENU SCREEN

In SERVICE MENU, press the **FUNCTION ▲/▼** key to select any of the SUB MENU items. (The letters of the selected items are displayed in yellow)

If an item like to set up becomes yellow, the **FUNCTION ◀/▶** key will be pushed and it will go into the mode.

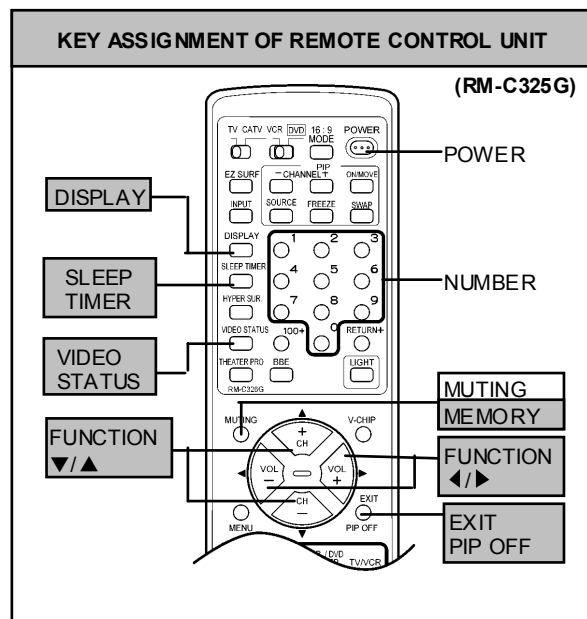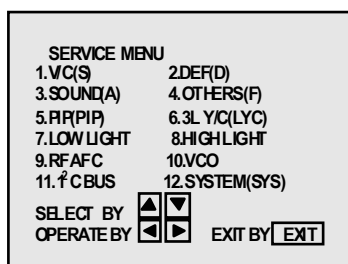


NOTE Although design is different as this figure, each remote controller has the same control function.

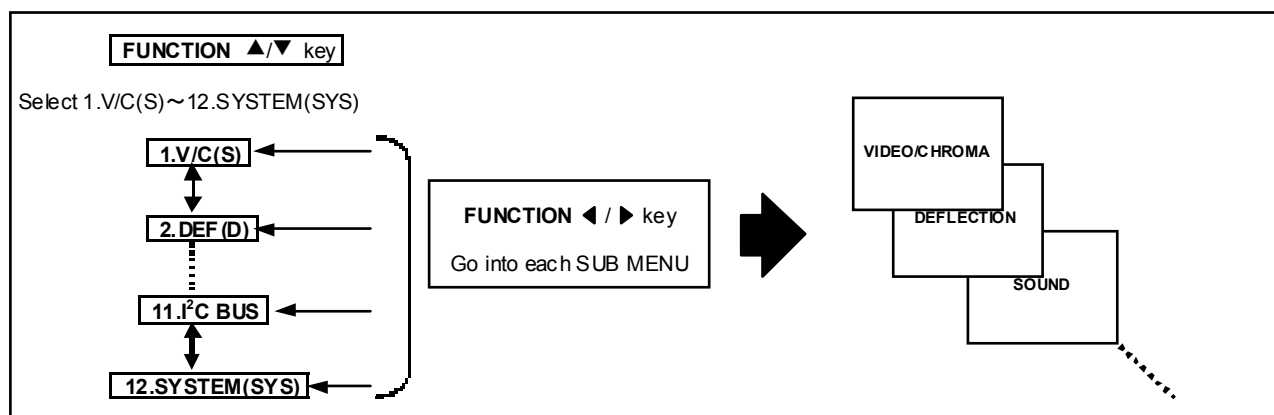


(3) Method of Setting


For example, the operation in the case of setting up VIDEO/CHROMA is expressed below.

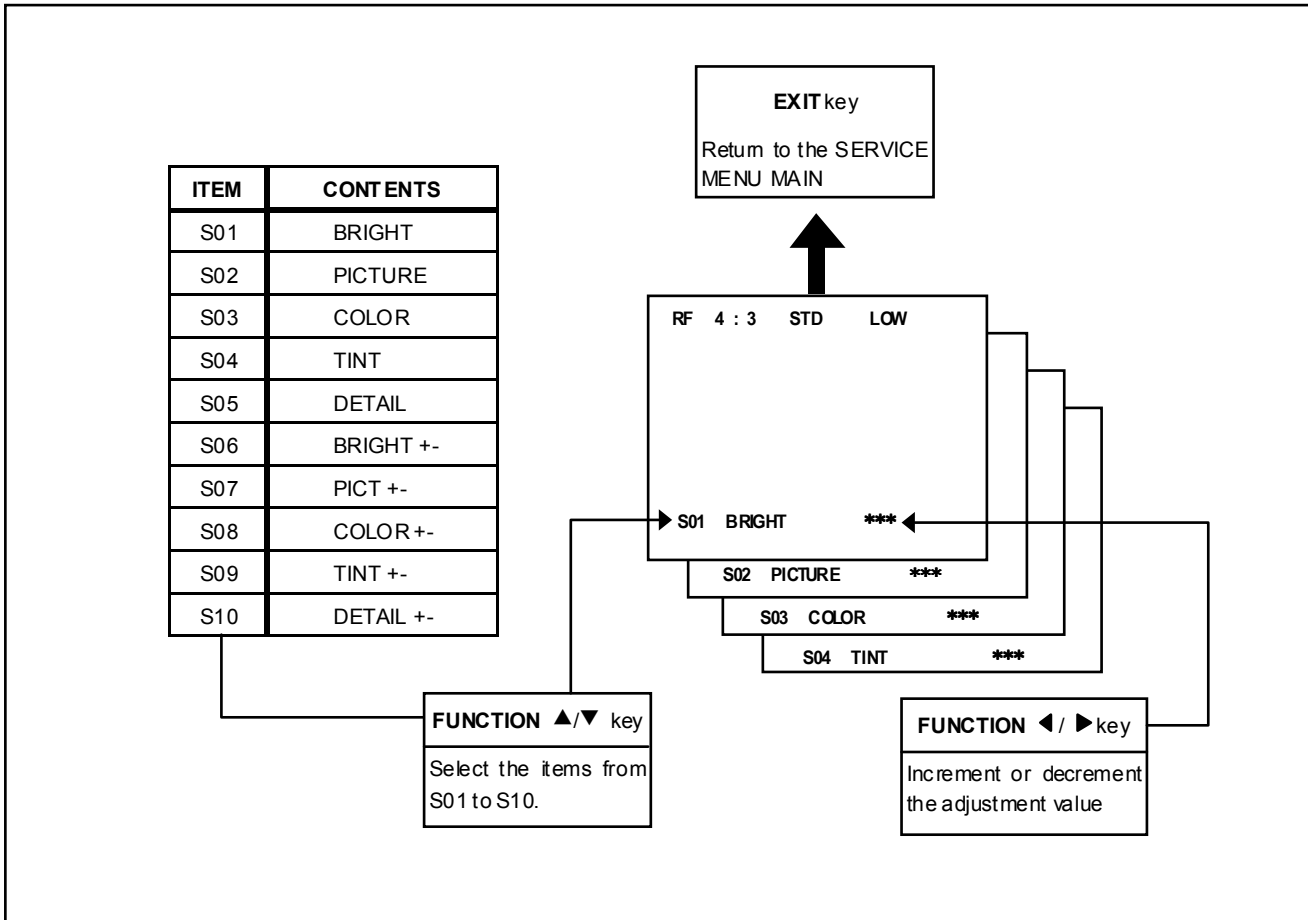

(4) Others [Only for AV-36F803'Y]

If go into the 9.RF AFC and 10.VCO items, there will be display the RF AFC MAIN screen and VCO MAIN screen. Then press the FUNCTION ◀/▶ key, the RF AFC SUB screen and VCO SUB screen is displayed.

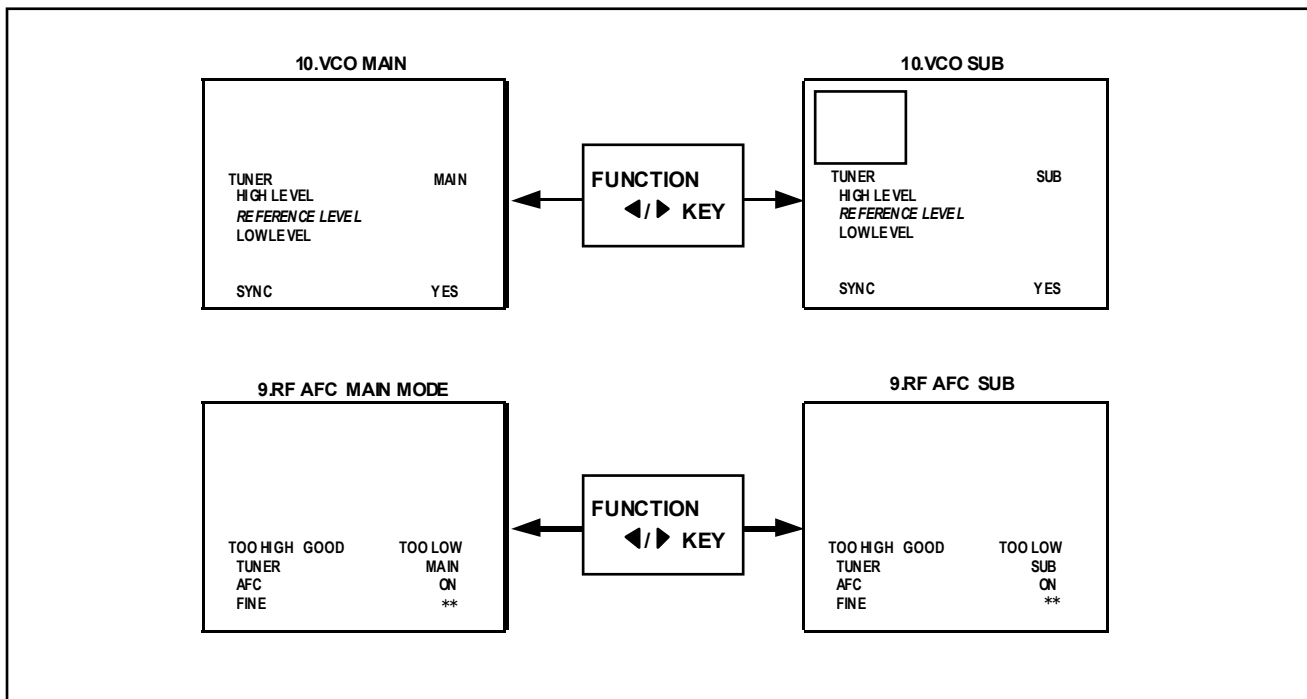

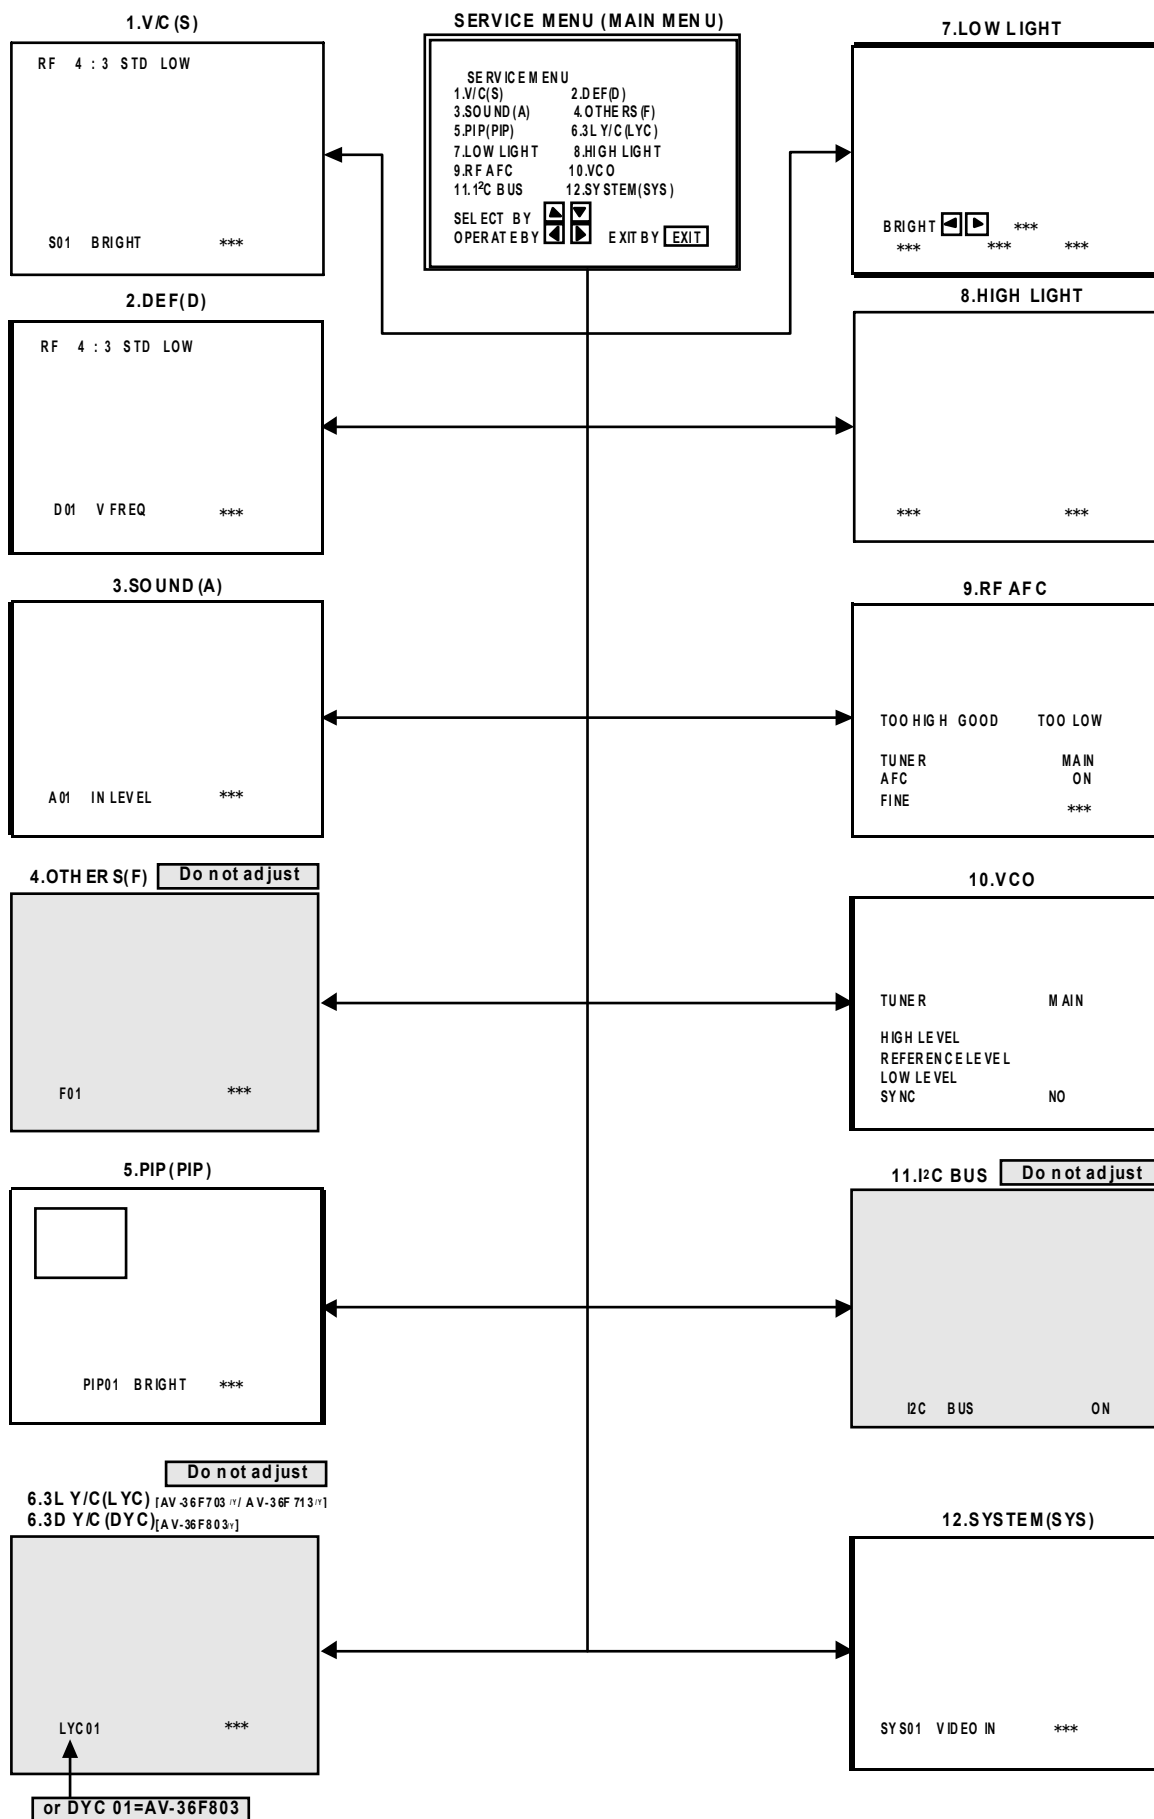

AV-36F703
 AV-36F713
 AV-36F803

INITIAL SETTING VALUE OF SERVICE MENU

1. Adjustment of the SERVICE MENU is made on the basis of the initial setting values ; however, the new setting values which set the screen in its optimum condition may differ from the initial setting.
2. Do not change the initial setting values of the setting (adjustment) items not listed in "ADJUSTMENT".

V / C MODE

The item displayed "--" is impossible to adjust.

| No. | Setting item | RF | | | | | | STANDARD(4:3) | | | |
|-----|--------------|------------------------|-----------|---------------|--|-----------|---------------|------------------------|--|------------------------|--|
| | | AV-36F803 ^Y | | | AV-36F703 ^Y ,AV-36F713 ^Y | | | EXTERNAL (S,CV) | | COMPONENT | |
| | | STD(4:3) | STD(16:9) | THEATER (4:3) | STD(4:3) | STD(16:9) | THEATER (4:3) | AV-36F803 ^Y | AV-36F703 ^Y AV-36F713 ^Y | AV-36F803 ^Y | AV-36F703 ^Y AV-36F713 ^Y |
| S01 | BRIGHT | 64 | -- | -- | 64 | -- | -- | -- | -- | -- | -- |
| S02 | PICTURE | 60 | -- | -- | 60 | -- | -- | -- | -- | -- | -- |
| S03 | COLOR | 50 | -- | -- | 50 | -- | -- | -- | -- | 46 | 46 |
| S04 | TINT | 68 | -- | -- | 68 | -- | -- | -- | -- | 69 | 69 |
| S05 | DETAIL | 38 | -- | -- | 33 | -- | -- | 40 | 35 | 45 | 40 |
| S06 | BRIGHT +- | -- | ±00 | +01 | -- | ±00 | +01 | -01 | -02 | ±00 | ±00 |
| S07 | PICT+- | -- | -08 | -10 | -- | -08 | -10 | ±00 | ±00 | ±00 | ±00 |
| S08 | COLOR+- | -- | ±00 | -03 | -- | ±00 | -03 | -03 | -02 | -- | -- |
| S09 | TINT+- | -- | ±00 | -03 | -- | ±00 | -03 | +13 | +05 | -- | -- |
| S10 | DETAIL+- | -- | -- | ±00 | -- | -- | ±00 | -- | -- | -- | -- |

| No. | Setting item | Initial setting value | | | | | | | |
|-----|--------------|-----------------------|------|---------|------|-----------|------|---------|------|
| | | RF/EXT (S,CV) | | | | COMPONENT | | | |
| | | STANDARD | | THEATER | | STANDARD | | THEATER | |
| | | LOW | HIGH | LOW | HIGH | LOW | HIGH | LOW | HIGH |
| S11 | R CUT OFF | 30 | -- | -- | -- | -- | -- | -- | -- |
| S12 | G CUT OFF | 30 | -- | -- | -- | -- | -- | -- | |
| S13 | B CUT OFF | 30 | -- | -- | -- | -- | -- | -- | |
| S14 | R DRIVE | 64 | -- | -- | -- | -- | -- | -- | |
| S15 | B DRIVE | 64 | -- | -- | -- | -- | -- | -- | |
| S16 | R CUT+- | -- | ±00 | ±00 | ±00 | -10 | -- | -- | -- |
| S17 | G CUT+- | -- | ±00 | ±00 | ±00 | ±00 | -- | -- | -- |
| S18 | B CUT+- | -- | ±00 | ±00 | ±00 | -10 | -- | -- | -- |
| S19 | R DRV+- | -- | +05 | +13 | +07 | ±00 | -- | -- | -- |
| S20 | B DRV+- | -- | +06 | -25 | -09 | ±00 | -- | -- | -- |
| S21 | NTSC MAT | 03 | 03 | 01 | 01 | 02 | 02 | 01 | 01 |
| S22 | BLACK ST | 03 | -- | 02 | -- | -- | -- | -- | -- |
| S23 | DCREST | 01 | -- | 01 | -- | -- | -- | -- | -- |
| S24 | DCRSW | 01 | -- | 00 | -- | -- | -- | -- | -- |

| No. | Setting item | Initial setting value | | |
|-----|--------------|-----------------------|----------|-----------|
| | | RF | EXTERNAL | COMPONENT |
| S25 | ASY SHRP | 04 | 04 | 04 |
| S26 | BPF FO | 00 | 00 | -- |
| S27 | KILR OFF | 00 | 00 | -- |
| S28 | KILR SEN | 01 | 01 | -- |

| No. | Setting item | Initial setting value | No. | Setting item | Initial setting value |
|-----|--------------|-----------------------|-----|--------------|-----------------------|
| S29 | RGB MUTE | 00 | S39 | Y MUTE | 00 |
| S30 | BLUE B | 00 | S40 | SVM GAIN | 03 |
| S31 | VIDEO SW | 03 | S41 | SVM PH | 01 |
| S32 | CMP ABCL | 00 | S42 | WPL | 00 |
| S33 | OSD ABCL | 00 | S43 | COL GMM | 00 |
| S34 | OSD CONT | 08 | S44 | V1 GAIN | 04 |
| S35 | SUB CONT | 05 | S45 | AGC ADJ | 63 |
| S36 | ABL GAIN | 00 | S46 | VMOFF DE | +03 |
| S37 | ABL PNT | 03 | S47 | APC CLK | 01 |
| S38 | Y GAMMA | 01 | | | |

DEF MODE

The item displayed "--" is impossible to adjust.

| No. | Setting item | Initial setting value | | | No. | Setting item | Initial setting value | | |
|-----|--------------|--|--------------|--------------|-----|--------------|--|--------------|--------------|
| | | AV-36F803/Y,AV-36F703/Y AV-36F713/Y | | | | | AV-36F803/Y,AV-36F703/Y AV-36F713/Y | | |
| | | RF (4:3) | RF (16:9) | EXT (4:3) | | | RF (4:3) | RF (16:9) | EXT (4:3) |
| D01 | V FREQ | 00 | 00 | 03 | D18 | WVMT BTM | 00 | 01 | 00 |
| D02 | AFC GAIN | 00 | 00 | 02 | D19 | EWCR TOP | 08 | -- | 08 |
| D03 | H POSI | 22 | -- | 22 | D20 | EWCR T+ | -- | 00 | -- |
| D04 | H POSI+- | -- | 00 | -- | D21 | EWCR BTM | 08 | -- | 08 |
| D05 | V PHASE | 00 | -- | 00 | D22 | EWCR B+- | -- | 00 | -- |
| D06 | V PH+- | -- | 00 | -- | D23 | EW PARA | 37 | -- | 37 |
| D07 | V SIZE | 65 | -- | 65 | D24 | EW PARA+- | -- | -14 | -- |
| D08 | V SIZE+- | -- | -30 | -- | D25 | V EHT | 00 | -- | 00 |
| D09 | V CENTER | 35 | -- | 35 | D26 | V EHT+- | -- | 00 | -- |
| D10 | V CENT+- | -- | 00 | -- | D27 | H EHT | 00 | -- | 00 |
| D11 | V S CORR | 11 | -- | 11 | D28 | H EHT+- | -- | 00 | -- |
| D12 | V S CO+- | -- | 00 | -- | D29 | TRAPEZ | 32 | -- | 32 |
| D13 | V LIN | 08 | -- | 08 | D30 | TRAPEZ+- | -- | 00 | -- |
| D14 | V LIN+- | -- | 00 | -- | D31 | V AGC | 00 | 00 | 00 |
| D15 | H SIZE | 30 | -- | 30 | D32 | BLANK SW | 00 | 00 | 00 |
| D16 | H SIZE+- | -- | 00 | -- | D33 | VRMP BI | 00 | 00 | 00 |
| D17 | WVMT TOP | 00 | 01 | 00 | | | | | |

SOUND MODE

| No. | Setting item | Initial setting value |
|-----|--------------|-----------------------|
| A01 | IN LEVEL | 10 |
| A02 | LOW SEP | 32 |
| A03 | HI SEP | 32 |
| A04 | SAPC | 00 |
| A05 | BBE BASS | ±00 |
| A06 | BBE TRE | -04 |

AV-36F703
 AV-36F713
 AV-36F803

OTHERS MODE (Do not adjust)

Setting items are not displayed.

| No. | Setting item | Initial setting value | | No. | Setting item | Initial setting value | |
|-----|--------------|-----------------------|----------------------------|-----|--------------|-----------------------|----------------------------|
| | | AV-36F803/Y | AV-36F703/Y AV-36F713/Y | | | AV-36F803/Y | AV-36F703/Y AV-36F713/Y |
| F01 | OSD POSI | 37 | 37 | F15 | VCSN 1 | 00 | 00 |
| F02 | OSD PREQ | 90 | 90 | F16 | VCSN 2 | 10 | 10 |
| F03 | CCD POSI | 45 | 45 | F17 | VCSN 3 | 20 | 20 |
| F04 | CCD FREQ | 93 | 93 | F18 | VCSN STP | 02 | 02 |
| F05 | CCD CONT | 05 | 05 | F19 | VN DAT A | +08 | +08 |
| F06 | PURWBCK | 00 | 00 | F20 | VM DAT B | -08 | -08 |
| F07 | PUR CONT | 02 | 02 | F21 | VM DAT C | -20 | -20 |
| F08 | SN TYPE | 01 | 02 | F22 | VM DAT D | -32 | -32 |
| F09 | YCSN TM | 05 | 05 | F23 | VM DAT E | 01 | 01 |
| F10 | YCSN E | 05 | 05 | F24 | VMOFF TY | 02 | 02 |
| F11 | YCSN F | 16 | 16 | F25 | YC VMOFF | 255 | 255 |
| F12 | YCSN G | 32 | 32 | F26 | EZSF TM | 40 | 40 |
| F13 | VNR CHK | 03 | 03 | F27 | XDSID TM | 15 | 15 |
| F14 | VCSN TM | 05 | 05 | F28 | FM TRAP | 01 | 01 |

3L Y / C MODE (Do not adjust) [AV-36F703/Y and AV-36F713/Y]

| No. | Setting item | Initial setting value |
|-------|--------------|-----------------------|
| LYC01 | MODE | 04 |
| LYC02 | VENH | 01 |
| LYC03 | PDSOFF | 00 |
| LYC04 | CB | 00 |
| LYC05 | VNLR | 02 |
| LYC06 | GSEL0 | 00 |
| LYC07 | GSEL1 | 01 |
| LYC08 | COR | 00 |
| LYC09 | TRAP | 01 |
| LYC10 | CHTRAP | 00 |
| LYC11 | CBPF | 00 |
| LYC12 | ENHOFF | 00 |

3DY / C MODE [AV-36F803/Y]

| No. | Setting item | Initial setting value | No. | Setting item | Initial setting value |
|-------|--------------|-----------------------|-------|--------------|-----------------------|
| DYC01 | D7-0 | 21 | DYC15 | D7-0 | 09 |
| DYC02 | D7-4 | 00 | DYC16 | D7-0 | 241 |
| DYC03 | D1-0 | 00 | DYC17 | D7-0 | 37 |
| DYC04 | D7-0 | 193 | DYC18 | D7-0 | 08 |
| DYC05 | D7-3 | 04 | DYC19 | D7-0 | 68 |
| DYC06 | RF CDL | 02 | DYC20 | D7-0 | 48 |
| DYC07 | EXT CDL | 02 | DYC21 | D7-0 | 08 |
| DYC08 | D7-0 | 42 | DYC22 | D7-0 | 51 |
| DYC09 | D7-0 | 36 | DYC23 | D7-0 | 200 |
| DYC10 | D7-0 | 34 | DYC24 | D7-0 | 74 |
| DYC11 | D7-0 | 01 | DYC25 | D7-0 | 236 |
| DYC12 | D5-0 | 22 | DYC26 | D7-0 | 00 |
| DYC13 | D7-0 | 00 | DYC27 | D7-0 | 00 |
| DYC14 | D7-0 | 15 | DYC28 | 3DYC | 01 |

PIP MODE (Do not adjust) [AV-36F803^Y]

| No. | Setting item | Initial setting value | No. | Setting item | Initial setting value |
|-------|--------------|-----------------------|-------|--------------|-----------------------|
| PIP01 | BRIGHT | 00 | PIP28 | MAT | 01 |
| PIP02 | PICTURE | 30 | PIP29 | YCOR | 01 |
| PIP03 | TINTI | 42 | PIP30 | XFREQF | 01 |
| PIP04 | COLOR | 06 | PIP31 | WTCHDG | 01 |
| PIP05 | R CUTOFF | 00 | PIP32 | COLON | 00 |
| PIP06 | G CUTOFF | 00 | PIP33 | ACQNEW | 00 |
| PIP07 | B CUTOFF | 00 | PIP34 | DSTDET | 01 |
| PIP08 | R DRIVE | 63 | PIP35 | CRIBEOK | 00 |
| PIP09 | G DRIVE | 65 | PIP36 | FCBEOK | 00 |
| PIP10 | B DRIVE | 65 | PIP37 | NOCRID | 00 |
| PIP11 | L POSI | 22 | PIP38 | NONSED | 00 |
| PIP12 | R POSI | 15 | PIP39 | PIP ADJ | 10 |
| PIP13 | UPR POSI | 12 | PIP40 | BRI EXT | 00 |
| PIP14 | LWR POSI | 11 | PIP41 | PCT EXT | 00 |
| PIP15 | PICT LCK | 01 | PIP42 | TNT EXT | 00 |
| PIP16 | SELDEL | 00 | PIP43 | COR EXT | 00 |
| PIP17 | AGCFIX | 01 | PIP44 | R-D EXT | 00 |
| PIP18 | AGCADST | 00 | PIP45 | G-D EXT | 00 |
| PIP19 | AGC | 07 | PIP46 | B-D EXT | 00 |
| PIP20 | BLKINVB | 00 | PIP47 | BRT COMP | 00 |
| PIP21 | BLKINVR | 00 | PIP48 | PCT COMP | 00 |
| PIP22 | VSPDEL | 00 | PIP49 | TNT COMP | 40 |
| PIP23 | VSPISQ | 01 | PIP50 | COR COMP | 05 |
| PIP24 | RGBIN | 00 | PIP51 | R-D COMP | 00 |
| PIP25 | FRSEL | 01 | PIP52 | G-D COMP | 00 |
| PIP26 | OUTFOR | 00 | PIP53 | B-D COMP | 00 |
| PIP27 | UVPOLAR | 00 | | | |


NOTE The model AV-36F703^Y and AV-36F713^Y do not have PIP function, but if memory data is out of range, some problems will be happen. Then we need to input correct data.

ADJUSTMENTS

CHECK OF THE B1 POWER SUPPLY

| Item | Measuring instrument | Test point | Adjustment part | Description |
|--------------------------|----------------------|---|-----------------|---|
| Check of B1 POWER SUPPLY | DC Voltmeter | 【B1】 Connector (pin1 & pin3) TP-91(pin1) TP-E(⚡):(pin3) | | 1. Receive the black-and-whitesignal. (color off) 2. Connect the DC voltmeter to 【B1】 connector pin 【1】 (TP-91) and TP-E(⚡) (B1 connector pin 【3】). 3. Confirm that the voltage is DC134.5V±2V. |

ADJUSTMENT OF VCO
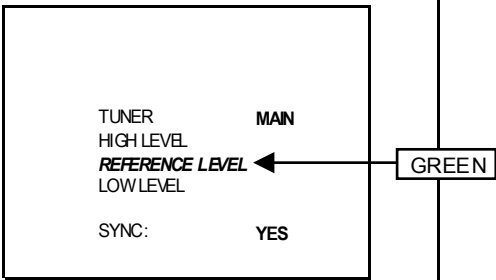
| Item | Measuring instrument | Test point | Adjustment part | Description |
|--|---|------------|---|---|
| MAIN VCO adjustment  | Signal generator Remote control unit | | 10:VCO MAIN VCO(T111) [MAIN PWB] | Be sure to input the signal. 1. Receive the color bars signal. 2. Enter to the SERVICE MENU mode. 3. Select the 10:VCO mode from the SERVICE MENU. 4. Push the FUNCTION ◀/▶ key, with the remote control unit and select the tuner to MAIN. 5. Confirm that the color change from HIGH LEVEL to LOW LEVEL by adjust the MAIN VCO at MAIN PWB, and check the SYNC is YES . 6. Adjust until REFERENCE LEVEL mark turns green. And then confirm that the SYNC is YES again. 7. Press the EXIT key to return to SERVICE MENU. |
| SUB VCO adjustment Only for AV-36F803 ^Y | Signal generator Remote control unit | | 10:VCO SUB VCO(T4111) [PIP PWB] | Be sure to input the signal. 1. Receive the color bar signal. 2. Enter to the SERVICE MENU mode. 3. Select the 10:VCO mode from the SERVICE MENU. 4. Push the FUNCTION ◀/▶ key with the remote control unit, and select the tuner to SUB. 5. Confirm that the color change from HIGH LEVEL to LOW LEVEL by adjust the SUB VCO at PIP PWB, and check the SYNC is YES . 6. Adjust until REFERENCE LEVEL mark turns green. And then confirm that the SYNC is YES again. 7. Press the EXIT key to return to the SERVICE MENU screen. |

ADJUSTMENT OF RF AGC

| Item | Measuring instrument | Test point | Adjustment part | Description |
|--------------------|---|------------|-----------------|---|
| RF. AGC adjustment | Signal generator Remote control unit | | S45:AGC ADJ | 1. Receive a black and white signal (color off). 2. Enter to the SERVICE MENU mode. 3. Select S45:AGC ADJ of the V/C MODE. 4. Press the MUTING key and turn off the color. 5. With the FUNCTION ◀ key to get the noise in the screen picture (zero side of setting value). 6. Press the FUNCTION ▶ key several times and step when noise disappears from the screen (at that time, not to increase the value too much). 7. Change to the other channels and make sure that there is no irregularity. 8. Press the MUTING key and tum the color on. |

| Adjustment item | Initial setting value |
|-----------------|-----------------------|
| S45 AGC ADJ | 63 |


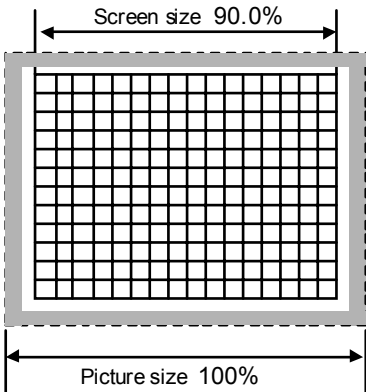
ADJUSTMENT OF FOCUS

| Item | Measuring instrument | Test point | Adjustment part | Description |
|------------------|----------------------|------------|---------------------------------|---|
| FOCUS adjustment | Signal generator | | FOCUS VR1 FOCUS VR2 [In HVT] | 1. Receive the crosshatch signal. 2. While looking at the screen, adjust the FOCUS VR1 to the horizontal line will be thinnest and sharpest center horizontal line. 3. Then adjust the FOCUS VR2 to the vertical line looks so fine. 4. Make sure that the picture is in focus even when the screen gets darkened. |

ADJUSTMENT OF DEFLECTION CIRCUIT

| Item | Measuring instrument | Test point | Adjustment part | Description |
|---|---|------------|---|---|
| V. HEIGHT V. CENTER adjustment (4:3) | Signal generator Remote control unit | | D05:V PHASE D07:V SIZE D09:V CENTER D11:VS CORR D13:V LIN | 1. Receive the crosshatch signal. 2. Enter to the SERVICE MENU. 3. Select the D05:V PHASE of the 2.DEF (D) item, and it checks that the value of D05:V PHASE is 0 . 4. Adjust the vertical screen size of the visible screen top to 92.0% with the D07:V SIZE and D09:V CENTER . (NOTE) Bottom is to be located with 85%~95% range. If vertical linearity is not even, adjust the D13:V LIN . and D11:VS CORR . |

| Adjustment item | Initial setting value |
|-----------------|-----------------------|
| D05 V PHASE | 00 |
| D07 V SIZE | 65 |
| D09 V CENTER | 35 |
| D11 VS CORR | 11 |
| D13 V LIN | 08 |


| Item | Measuring instrument | Test point | Adjustment part | Description | | | | | | | | | | | | |
|--|---|------------|--|---|-----------------------|----------------------|-----|---------------------|----|--------------------|----|---------------------|----|---------------------|----|--|
| V. HEIGHT V. LINEARITY adjustment (16:9) | Signal generator Remote control unit | | D08:V. SIZE+- D14:V. LINE+- | <p>V. HEIGHT and V. CENTER adjustment of in the 4:3 size should be finished.</p> <ol style="list-style-type: none"> Receive a black -and- white signal (color off). Select 16:9 aspect mode with remote control unit. Confirm that the V-blanking of the upper bottom is equal, and its width is about 67mm. If the condition is not correct, enter to the SERVICE MENU. Adjust the D08:V. SIZE+- and D14:V. LIN+- to become the blanking width to 67mm. Press the EXIT key to twice to return the normal screen. <p>(NOTE) When you change the vertical deflection adjustment value in the regular mode (4:3), readjust the 16:9 mode from beginning.</p> | | | | | | | | | | | | |
|  <table border="1" data-bbox="118 909 730 1077"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>D08 V. SIZE+-</td> <td>-30</td> </tr> <tr> <td>D14 V. LIN+-</td> <td>00</td> </tr> </tbody> </table> | | | | Adjustment item | Initial setting value | D08 V. SIZE+- | -30 | D14 V. LIN+- | 00 | | | | | | | |
| Adjustment item | Initial setting value | | | | | | | | | | | | | | | |
| D08 V. SIZE+- | -30 | | | | | | | | | | | | | | | |
| D14 V. LIN+- | 00 | | | | | | | | | | | | | | | |
| H. POSITION H. SIZE & SIDE PIN adjustment (4:3) | Signal generator Remote control unit | | D03:H.POSI. D15:H. SIZE D23:EW PARA D19:EWCR TOP D21:EWCR BMT | <p>V. HEIGHT and V. POSITION adjustment of in the 4:3 size should be finished.</p> <ol style="list-style-type: none"> Receive a cross hatch signal. Enter to the SERVICE MENU. Select the D03: H. POSI from 2.DEF (D) item. Adjust by D03:H. POSI to become same size at both side. Then adjust the horizontal size of the visible screen at both side of right-and-left to 90% with the D15:H. SIZE. And adjust the vertical line at both side to become straight line by D23:EW PARA. Confirm that the linearity of vertical line and horizontal size. If it is necessary, readjust 14~17. Press the EXIT key twice to return to the normal screen. <p>(NOTE) If it is not straight the vertical line at the upper and bottom corner, adjust the upper and bottom corner pin still more by D19:EWCR TOP and D21:EWCR BMT.</p> | | | | | | | | | | | | |
|  <table border="1" data-bbox="807 1722 1331 2054"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>D03 H. POSI</td> <td>22</td> </tr> <tr> <td>D15 H. SIZE</td> <td>30</td> </tr> <tr> <td>D23 EW PARA</td> <td>37</td> </tr> <tr> <td>D19 EWCR TOP</td> <td>08</td> </tr> <tr> <td>D21 EWCR BMT</td> <td>08</td> </tr> </tbody> </table> | | | | Adjustment item | Initial setting value | D03 H. POSI | 22 | D15 H. SIZE | 30 | D23 EW PARA | 37 | D19 EWCR TOP | 08 | D21 EWCR BMT | 08 | |
| Adjustment item | Initial setting value | | | | | | | | | | | | | | | |
| D03 H. POSI | 22 | | | | | | | | | | | | | | | |
| D15 H. SIZE | 30 | | | | | | | | | | | | | | | |
| D23 EW PARA | 37 | | | | | | | | | | | | | | | |
| D19 EWCR TOP | 08 | | | | | | | | | | | | | | | |
| D21 EWCR BMT | 08 | | | | | | | | | | | | | | | |

| Item | Measuring instrument | Test point | Adjustment part | Description | | | | | | | | | | | | | | | | | | | | | | |
|--|---|------------------|---|--|-----------------|-----------------------|------------------|---------------|----------|-----|----------------|----|----|--------------|----------------|----|--------------|----|--------------|---------------|-----|----|--------------|----|----|----|
| H. POSITION H. SIZE & SIDE PIN adjustment (16:9) | Signal generator Remote control unit | | D04:H.POSI+- D16:H. SIZE+- D20:EWCR T+- D22:EWCR B+- D24:EW PARA+- | * V. SIZE / V. CENTER adjustment should be finished. * H. SIZE, H. POSITION and SIDE PIN of in the 4:3 mode adjustment should be finished. | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 20. Receive the crosshatch signal. 21. Select 16:9 aspect mode with remote control unit. 22. Enter to the SERVICE MENU. 23. Confirm that the both sides of right-and-left crosshatch width to be the value of 90% . 24. If it is not correct, adjust the D16:H. SIZE +- and D04:H.POSI+- . 25. Confirm that the second vertical line from left edge and right edge to be straight. 26. If it is not straight, adjust the D24:EW PARA+- , D20:EWCR T+- and D22:EWCR B+- . (NOTE) When you change the horizontal deflection adjustment value in the regular mode (4:3), readjust the 16:9 mode adjustment from beginning. | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 30%;">Adjustment item</th> <th style="width: 30%;">Initial setting value</th> <th style="width: 40%;"></th> </tr> </thead> <tbody> <tr> <td>D04 H. POSI+-</td> <td style="text-align: center;">00</td> <td></td> </tr> <tr> <td>D16 H. SIZE+-</td> <td style="text-align: center;">00</td> <td></td> </tr> <tr> <td>D20 EWCR T+-</td> <td style="text-align: center;">00</td> <td></td> </tr> <tr> <td>D22 EWCR B+-</td> <td style="text-align: center;">00</td> <td></td> </tr> <tr> <td>D24 EW PARA+-</td> <td style="text-align: center;">-14</td> <td></td> </tr> </tbody> </table> | | | | | Adjustment item | Initial setting value | | D04 H. POSI+- | 00 | | D16 H. SIZE+- | 00 | | D20 EWCR T+- | 00 | | D22 EWCR B+- | 00 | | D24 EW PARA+- | -14 | | | | | |
| Adjustment item | Initial setting value | | | | | | | | | | | | | | | | | | | | | | | | | |
| D04 H. POSI+- | 00 | | | | | | | | | | | | | | | | | | | | | | | | | |
| D16 H. SIZE+- | 00 | | | | | | | | | | | | | | | | | | | | | | | | | |
| D20 EWCR T+- | 00 | | | | | | | | | | | | | | | | | | | | | | | | | |
| D22 EWCR B+- | 00 | | | | | | | | | | | | | | | | | | | | | | | | | |
| D24 EW PARA+- | -14 | | | | | | | | | | | | | | | | | | | | | | | | | |
| PIP DISPLAY POSITION adjustment <div style="border: 1px solid black; padding: 2px; display: inline-block;"> Only for AV-36F803/Y </div> | Signal generator Remote control unit | | PIP11:L POSI. PIP12:R POSI. PIP13:UPR POSI. PIP14:LWR POSI. | * Main picture's V. SIZE, V. POSITION, H. SIZE, H. POSITION. should be finished. * Set the VIDEO STATUS to STANDARD. 1. Receive a black -and- white signal (color off) 2. Enter to the SERVICE MENU. 3. Select the 5:PIP(PIP) from SERVICE MENU. 4. Set the initial setting value of the PIP13:UPR POSI. with the FUNCTION (◀/▶) key of the remote control unit. 5. Adjust the PIP13:UPR POSI. so that the position of the PIP screen edge of upper will be at X1 as shown . 6. Adjust the corresponding modes of PIP14, PIP11, PIP12 with the same steps as 3~5 above. | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Adjustment item</th> <th rowspan="2">Initial setting value</th> <th colspan="2">Adjustment value</th> </tr> <tr> <th>POSITION</th> <th>(%)</th> </tr> </thead> <tbody> <tr> <td>PIP13 UPR POSI</td> <td style="text-align: center;">12</td> <td style="text-align: center;">X1</td> <td style="text-align: center;">80</td> </tr> <tr> <td>PIP14 LWR POSI</td> <td style="text-align: center;">11</td> <td style="text-align: center;">X2</td> <td style="text-align: center;">80</td> </tr> <tr> <td>PIP11 L POSI</td> <td style="text-align: center;">22</td> <td style="text-align: center;">Y1</td> <td style="text-align: center;">80</td> </tr> <tr> <td>PIP12 R POSI</td> <td style="text-align: center;">15</td> <td style="text-align: center;">Y2</td> <td style="text-align: center;">80</td> </tr> </tbody> </table> | | | | | Adjustment item | Initial setting value | Adjustment value | | POSITION | (%) | PIP13 UPR POSI | 12 | X1 | 80 | PIP14 LWR POSI | 11 | X2 | 80 | PIP11 L POSI | 22 | Y1 | 80 | PIP12 R POSI | 15 | Y2 | 80 |
| Adjustment item | Initial setting value | Adjustment value | | | | | | | | | | | | | | | | | | | | | | | | |
| | | POSITION | (%) | | | | | | | | | | | | | | | | | | | | | | | |
| PIP13 UPR POSI | 12 | X1 | 80 | | | | | | | | | | | | | | | | | | | | | | | |
| PIP14 LWR POSI | 11 | X2 | 80 | | | | | | | | | | | | | | | | | | | | | | | |
| PIP11 L POSI | 22 | Y1 | 80 | | | | | | | | | | | | | | | | | | | | | | | |
| PIP12 R POSI | 15 | Y2 | 80 | | | | | | | | | | | | | | | | | | | | | | | |


ADJUSTMENT OF VIDEO / CHROMA CIRCUIT

| Item | Measuring instrument | Test point | Adjustment part | Description |
|---|---|------------|---|--|
| WHITE BALANCE (Low Light) adjustment | Signal generator Remote control unit | | S01: BRIGHT S11: R CUTOFF S12: G CUTOFF S13: B CUTOFF SCREEN VR [in HVT] | <ol style="list-style-type: none"> 1. Receive the black and white signal (color off). 2. Enter to the SERVICE MENU mode. 3. Select the LOW LIGHT mode from the SERVICE MENU. 4. Confirm that the initial setting value of S11: R CUTOFF, S12: G CUTOFF, S13: B CUTOFF and S01: BRIGHT. 5. Display a single horizontal line by pressing the ① key of the remote control unit. 6. Turn the screen VR all the way to the left. 7. Turn the screen VR gradually to the right from the left until either one of the red, blue or green colors appears faintly. 8. Adjust the two colors which did not appear until the single horizontal line that is displayed becomes white using the ④ to ⑨ keys of the remote control unit. 9. Turn the screen VR until the single horizontal line is displayed faintly. 10. Press the ② key to cancel the single horizontal line mode. 11. Adjust the S01: BRIGHT to become the black component shines white slightly. 12. Confirm that whether the color ingredient of R, G, or B is visible to the black component, which shines white slightly 13. When the color ingredient can be seen, two colors other than a visible color are adjusted, and it is made to look white. <p>(NOTE) The ③ EXIT key is the cancel key for the WHITE BALANCE.</p> |

[LOW LIGHT]

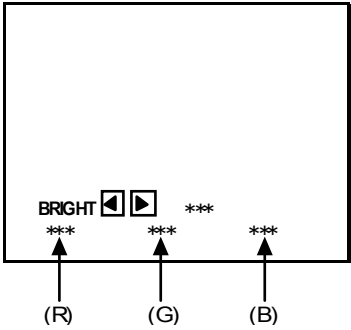

↓






[H.LINE SCREEN]

REMOTE CONTROL UNIT


| | | |
|-----------------|-----------------|-----------------|
| H.LINE ON ① | H.LINE OFF ② | EXIT ③ |
| R CUTOFF ④ ▲ | G CUTOFF ⑤ ▲ | B CUTOFF ⑥ ▲ |
| R CUTOFF ⑦ ▼ | G CUTOFF ⑧ ▼ | B CUTOFF ⑨ ▼ |

| Adjustment item | Initial setting value |
|-----------------|-----------------------|
| S11 R CUT OFF | 30 |
| S12 G CUT OFF | 30 |
| S13 B CUT OFF | 30 |
| S01 BRIGHT | 64 |

| Item | Measuring instrument | Test point | Adjustment part | Description | | | | | | |
|--|---|------------|--|--|-----------------|-----------------------|---------------|----|---------------|----|
| WHITE BALANCE (High Light) adjustment | Signal generator Remote control unit | | S14:R DRIVE S15:B DRIVE | <ol style="list-style-type: none"> 1. Receive the black-and-white signal (color off). 2. Enter to the SERVICE MENU mode. 3. Select the HIGH LIGHT mode in the SERVICE MENU. 4. Set the initial setting value of S14:R DRIVE and S15:B DRIVE with the ④, ⑥, ⑦ and ⑨ keys of the remote control unit. 5. Adjust the screen until it becomes white using the ④, ⑥, ⑦ and ⑨ keys of the remote control unit. <p>(NOTE) The ③ EXIT key is the cancel key for the WHITE BALANCE.</p> <table border="1" data-bbox="903 842 1453 1010"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>S14 R DRIVE</td> <td>64</td> </tr> <tr> <td>S15 B DRIVE</td> <td>64</td> </tr> </tbody> </table> | Adjustment item | Initial setting value | S14 R DRIVE | 64 | S15 B DRIVE | 64 |
| Adjustment item | Initial setting value | | | | | | | | | |
| S14 R DRIVE | 64 | | | | | | | | | |
| S15 B DRIVE | 64 | | | | | | | | | |
| PIP WHITE BALANCE (High Light) adjustment <div style="border: 1px solid black; padding: 2px; width: fit-content;">Only for AV-36F803/Y</div> | Signal generator Remote control unit | | PIP08:R DRIVE PIP10:B DRIVE | <ol style="list-style-type: none"> 1. Receive the black-and-white signal (color off). 2. Enter to the SERVICE MENU mode. 3. Select the PIP08:R DRIVE, PIP10:B DRIVE, of the 5.PIP(PIP) SERVICE MENU. 4. Set the corresponding initial setting values with the FUNCTION (◀/▶) key of the remote control unit. 5. Adjust the PIP08:R DRIVE, PIP10:B DRIVE until the screen becomes white. <table border="1" data-bbox="903 1697 1453 1865"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>PIP08 R DRIVE</td> <td>63</td> </tr> <tr> <td>PIP10 B DRIVE</td> <td>65</td> </tr> </tbody> </table> | Adjustment item | Initial setting value | PIP08 R DRIVE | 63 | PIP10 B DRIVE | 65 |
| Adjustment item | Initial setting value | | | | | | | | | |
| PIP08 R DRIVE | 63 | | | | | | | | | |
| PIP10 B DRIVE | 65 | | | | | | | | | |

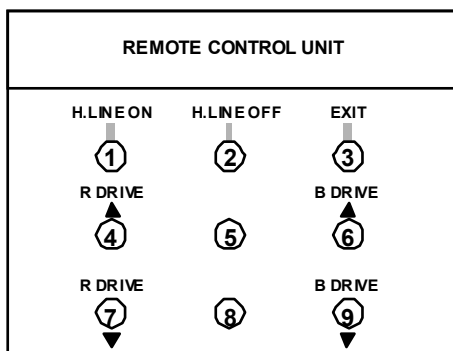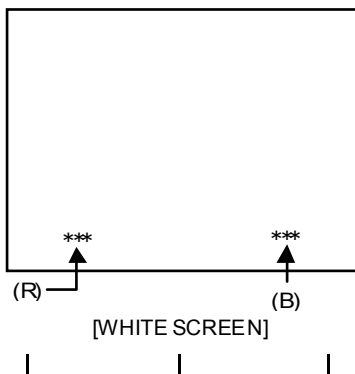

| Item | Measuring instrument | Test point | Adjustment part | Description | |
|-------------------------|-----------------------|------------------|-----------------|---|--|
| SUB BRIGHT adjustment | Remote control unit | | S01: BRIGHT | 1. Receive the broadcast and set the STANDARD mode. 2. Enter the SERVICE MENU. 3. Select S01: BRIGHT of the V/C(S) mode. 4. Set the initial setting value of the S01: BRIGHT with the FUNCTION ◀/▶ key. 5. If the brightness is not the best with the initial setting value, make fine adjustment of the S01: BRIGHT until you get the optimum brightness. | |
| | | | | | <table border="1"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>S01 BRIGHT</td> <td>64</td> </tr> </tbody> </table> |
| Adjustment item | Initial setting value | | | | |
| S01 BRIGHT | 64 | | | | |
| SUB CONTRAST adjustment | Remote control unit | | S02: PICTURE | 1. Receive the broadcast and set the STANDARD mode. 2. Enter the SERVICE MENU. 3. Select S02: PICTURE of the V/C(S) mode. 4. Set the initial setting value of the S02: PICTURE with the FUNCTION ◀/▶ key. 5. If the contrast is not the best with the initial setting value, make fine adjustment of the S02: PICTURE until you get the optimum contrast. | |
| | | | | | <table border="1"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>S02 PICTURE</td> <td>60</td> </tr> </tbody> </table> |
| Adjustment item | Initial setting value | | | | |
| S02 PICTURE | 60 | | | | |
| SUB COLOR adjustment | Signal generator | | S03: COLOR | [Method of adjustment without measuring instrument] 1. Receive the broadcast. 2. Enter the SERVICE MENU. 3. Select S03: COLOR of the V/C(S) mode. 4. Set the initial setting value of the S03: COLOR with the FUNCTION ◀/▶ key. 5. If the color is not the best with the Initial setting value, make fine adjustment of the S03: COLOR until you get the optimum color. | |
| | Remote control unit | | | | <table border="1"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>S03 COLOR</td> <td>50</td> </tr> </tbody> </table> |
| Adjustment item | Initial setting value | | | | |
| S03 COLOR | 50 | | | | |
| | Signal generator | TP-B TP-E(↙) | S03: COLOR | [Method of adjustment using measuring instrument] 1. Input the full field color bar signal (75% white). 2. Enter to the SERVICE MENU. 3. Enter to the 9.RF AFC mode and set the AFC to OFF. 4. Select S03: COLOR of the V/C(S) mode. 5. Set the initial setting value of the S03: COLOR with the FUNCTION ◀/▶ key. 6. Connect the oscilloscope between TP-B and TP-E. 7. Adjust S03: COLOR and bring the value of (A) in the illustration to +24V. 8. Reset the RF AFC setting position from OFF to ON. | |
| | Oscilloscope | [CRT SOCKET PWB] | | | |
| | Remote control unit | | | | |
| | | | | | |
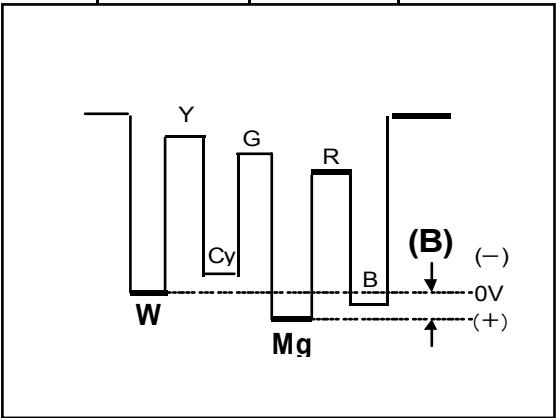
| Item | Measuring instrument | Test point | Adjustment part | Description | | | | |
|---|---|-------------------------------------|-----------------|--|-----------------|-----------------------|----------|----|
| SUB TINT adjustment | Signal generator Remote control unit | | S04:TINT | <p>[Method of adjustment without measuring instrument]</p> <ol style="list-style-type: none"> 1. Receive the broadcast. 2. Enter the SERVICE MENU. 3. Select S04:TINT of the V/C(S) mode. 4. Set the initial setting value of the S04:TINT with the FUNCTION ◀/▶ key. 5. If the tint is not the best with the initial setting value, make fine adjustment of the S04:TINT until you get the optimum tint. <table border="1" data-bbox="901 674 1453 790"> <thead> <tr> <th>Adjustment item</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>S04 TINT</td> <td>68</td> </tr> </tbody> </table> | Adjustment item | Initial setting value | S04 TINT | 68 |
| Adjustment item | Initial setting value | | | | | | | |
| S04 TINT | 68 | | | | | | | |
| | Signal generator Oscilloscope Remote control unit | TP-B TP-E(↕) [CRT SOCKET PWB] | S04:TINT | <p>[Method of adjustment using measuring instrument]</p> <ol style="list-style-type: none"> 1. Input the full field color bar signal (75% white). 2. Enter to the SERVICE MENU. 3. Enter to the 9.RF AFC mode and set the AFC to OFF. 4. Select S04:TINT of the V/C(S) mode. 5. Set the initial setting value of the S04:TINT with the FUNCTION ◀/▶ key. 6. Connect the oscilloscope between TP-B and TP-E. 7. Adjust S04:TINT and bring the value of (B) in the illustration to +26V. 8. Reset the RFAFC setting position from OFF to ON. | | | | |
|  | | | | | | | | |

ADJUSTMENT OF MTS CIRCUIT

| Item | Measuring instrument | Test point | Adjustment part | Description | | | | | | | | | | | | |
|-----------------------------------|--|-------------------------------|-----------------------------|--|-----|--------------|----------------|-----------------------|-----|----------|------|-----|-----|---------|------|-----|
| MTS INPUT LEVEL Adjustment | Sophometer Remote control unit | AUDIO OUT R pin | A01:IN LEVEL | <ol style="list-style-type: none"> 1. Receive the cross-hatch signal (cross-hatch / 400Hz) 2. Enter the SERVICE MENU. 3. Select the A01:IN LEVEL of the 3:SOUND(A) MODE. 4. Verify that the A01:IN LEVEL is set at its initial setting value. 5. Connect the sophometer to AUDIO OUT R pin. 6. Adjust the MTS input level to 500mV(rms) by A01:IN LEVEL with remote control unit. 7. Press the EXIT key to return to the SERVICE MENU screen. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>No.</th> <th>Setting item</th> <th>Variable range</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>A01</td> <td>IN LEVEL</td> <td>0~15</td> <td>010</td> </tr> </tbody> </table> | No. | Setting item | Variable range | Initial setting value | A01 | IN LEVEL | 0~15 | 010 | | | | |
| No. | Setting item | Variable range | Initial setting value | | | | | | | | | | | | | |
| A01 | IN LEVEL | 0~15 | 010 | | | | | | | | | | | | | |
| MTS SEPARATION adjustment | TV audio multiplex signal generator Oscilloscope Remote control unit | R OUT L OUT [AUDIO OUT] | A02:LOW SEP. A03:HI SEP. | <ol style="list-style-type: none"> 1. Input the stereo L signal (300Hz) from the TV audio multiplex signal generator to the antenna terminal. 2. Connect an oscilloscope to R OUT pin of the AUDIO OUT, and display one cycle portion of the 300Hz signal. 3. Enter the SERVICE MENU. 4. Select the A02:LOW SEP. of the 3:SOUND(A) mode. 5. Set the initial setting value of the A02:LOW SEP. with the FUNCTION (◀/▶) key. 6. Adjust the A02:LOW SEP. so that the stroke element of the 300Hz signal will become minimum. 7. Change the connection of the oscilloscope to L OUT pin of the AUDIO OUT, and enlarge the voltage axis. 8. Change the signal to 3kHz, and similarly adjust the A03:HI SEP. 9. Press the EXIT key to return to the SERVICE MENU screen. <div style="margin-left: auto; margin-right: auto; text-align: center;"> </div> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>No.</th> <th>Setting item</th> <th>Variable range</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td>A02</td> <td>LOW SEP.</td> <td>0~63</td> <td>032</td> </tr> <tr> <td>A03</td> <td>HI SEP.</td> <td>0~63</td> <td>032</td> </tr> </tbody> </table> | No. | Setting item | Variable range | Initial setting value | A02 | LOW SEP. | 0~63 | 032 | A03 | HI SEP. | 0~63 | 032 |
| No. | Setting item | Variable range | Initial setting value | | | | | | | | | | | | | |
| A02 | LOW SEP. | 0~63 | 032 | | | | | | | | | | | | | |
| A03 | HI SEP. | 0~63 | 032 | | | | | | | | | | | | | |

HOW TO CHECK THE HIGH VOLTAGE HOLD DOWN CIRCUIT

1. HIGH VOLTAGE HOLD DOWN CIRCUIT

After repairing the high voltage hold down circuit shown in Fig. 1.
 This circuit shall be checked to operate correctly.

2. CHECKING OF THE HIGH VOLTAGE HOLD DOWN CIRCUIT

- (1) Turn the power switch to on.
- (2) As shown in Fig. 1, set the resistor between **S1** connector **2** and **3**.
- (3) Make sure that the screen picture disappears.
- (4) Temporarily unplug the power plug.
- (5) Remove the resistor replaced **S1** connector **2** and **3**.
- (6) Again plug the power plug, make sure that the normal picture is displayed on the screen.

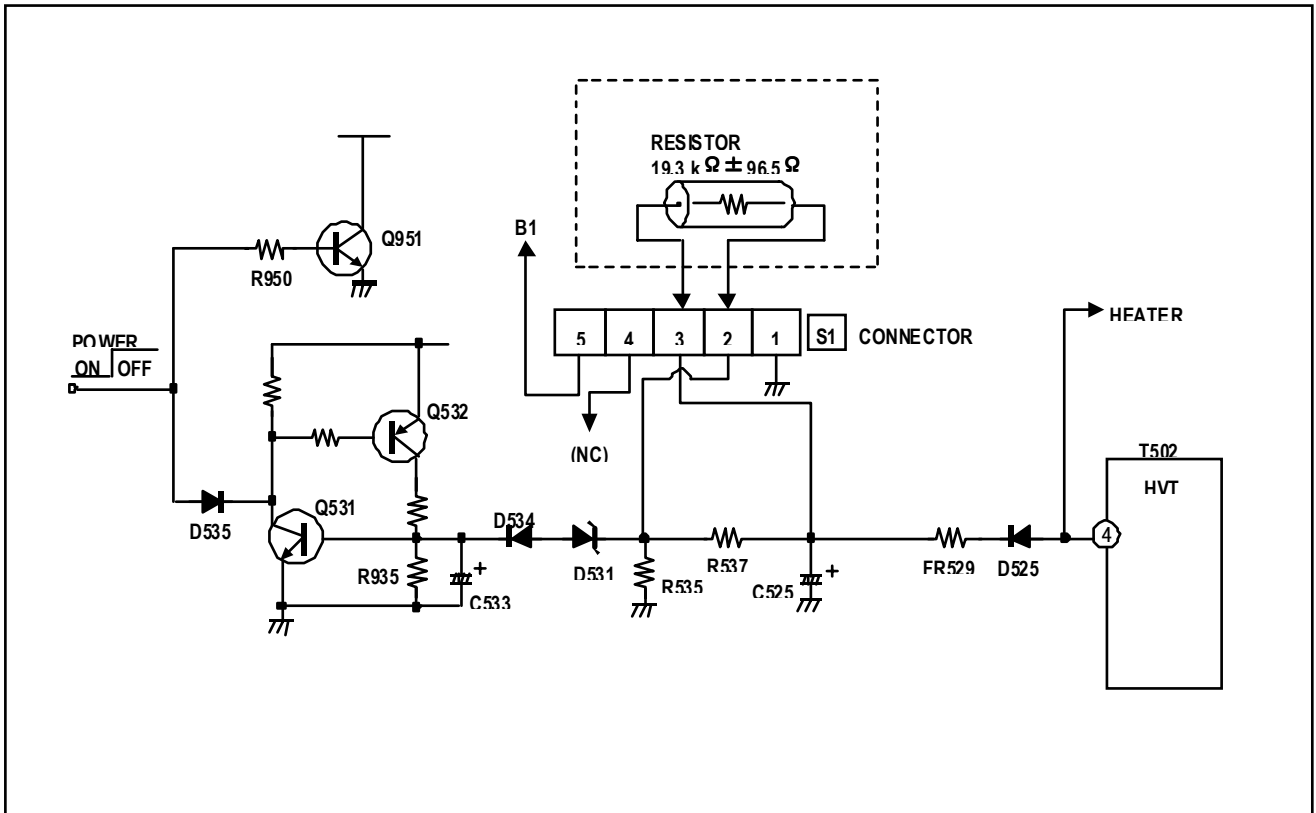


Fig. 1

REPLACEMENT OF CHIP COMPONENT

■ CAUTIONS

1. Avoid heating for more than 3 seconds.
2. Do not rub the electrodes and the resist parts of the pattern.
3. When removing a chip part, melt the solder adequately.
4. Do not reuse a chip part after removing it.

■ SOLDERING IRON


1. Use a high insulation soldering iron with a thin pointed end of it.
2. A 30w soldering iron is recommended for easily removing parts.

■ REPLACEMENT STEPS


1. How to remove Chip parts

◆ Resistors, capacitors, etc

- (1) As shown in the figure, push the part with tweezers and alternately melt the solder at each end.

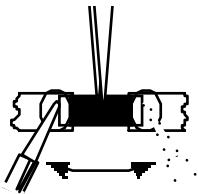

- (2) Shift with tweezers and remove the chip part.

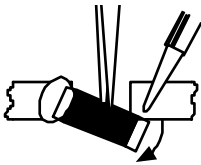


◆ Transistors, diodes, variable resistors, etc

- (1) Apply extra solder to each lead.



- (2) As shown in the figure, push the part with tweezers and alternately melt the solder at each lead. Shift and remove the chip part.

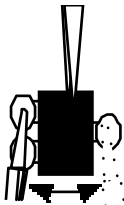


Note : After removing the part, remove remaining solder from the pattern.


2. How to install Chip parts

◆ Resistors, capacitors, etc

- (1) Apply solder to the pattern as indicated in the figure.

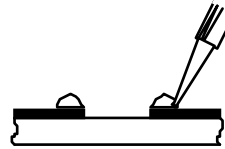


- (2) Grasp the chip part with tweezers and place it on the solder. Then heat and melt the solder at both ends of the chip part.

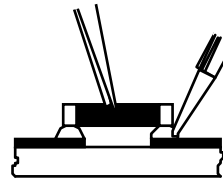


◆ Transistors, diodes, variable resistors, etc

- (1) Apply solder to the pattern as indicated in the figure.
- (2) Grasp the chip part with tweezers and place it on the solder.
- (3) First solder lead **A** as indicated in the figure.

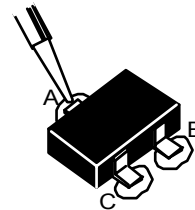

- (4) Then solder leads **B** and **C**.

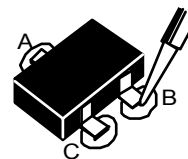

JVC

SCHEMATIC DIAGRAMS

COLOR TELEVISION


AV-36F703/Y AV-36F713/Y AV-36F803/Y

CD-ROM No.SML200207


BASIC CHASSIS

GJ

BBE



[RM-C326G] [RM-C325G]
[RM-C326] AV-36F803
AV-36F703
AV-36F713

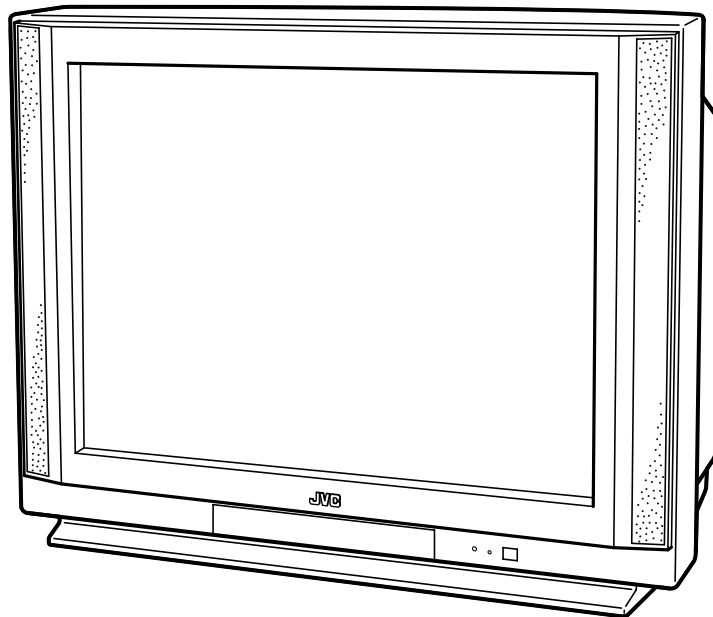

CONTENTS

| | |
|--|------|
| ■ NOTE ON USING CIRCUIT DIAGRAMS | 2-1 |
| ■ SEMICONDUCTOR SHAPES | 2-2 |
| ■ BLOCK DIAGRAM | 2-3 |
| ■ CIRCUIT DIAGRAMS | 2-7 |
| ■ PATTERN DIAGRAMS | 2-23 |
| ■ CHANNEL CHART | 2-31 |

CHANNEL CHART (CA)

| MODE | | BAND | CHANNEL | | TUNER BAND |
|---------|---------|---------|---------|--------|------------|
| TV | CATV | | REAL | DISP. | |
| ○ | ○ | VL | 02 | I | |
| | | | 03 | | |
| | | | 04 | | |
| | | | 05 | | |
| | | | 06 | | |
| | | | 07 | | |
| | VH | 08 | | | |
| | | 09 | | | |
| | | 10 | | | |
| | | 11 | | | |
| | | 12 | | | |
| | | 13 | | | |
| | | × | ○ | MID | A 14 |
| B 15 | | | | | |
| C 16 | | | | | |
| D 17 | | | | | |
| E 18 | | | | | |
| F 19 | | | | | |
| G 20 | | | | | |
| H 21 | | | | | |
| I 22 | | | | | |
| SUPER | J 23 | | | | |
| | K 24 | | | | |
| | L 25 | | | | |
| | M 26 | | | | |
| | N 27 | | | | |
| | O 28 | | | | |
| | P 29 | | | | |
| | Q 30 | | | | |
| | R 31 | | | | |
| | S 32 | | | | |
| | T 33 | | | | |
| | U 34 | | | | |
| | V 35 | | | | |
| | W 36 | | | | |
| × | ○ | | HYPER | W+1 37 | III |
| | | | | W+2 38 | |
| | | | | W+3 39 | |
| | | | | W+4 40 | |
| | | | | W+5 41 | |
| | | W+6 42 | | | |
| | | W+7 43 | | | |
| | | W+8 44 | | | |
| | | W+9 45 | | | |
| | | W+10 46 | | | |
| | | W+11 47 | | | |
| | | W+12 48 | | | |
| | | W+13 49 | | | |
| | | W+14 50 | | | |
| | W+15 51 | | | | |
| | ULTRA | W+16 52 | | | |
| | | W+17 53 | | | |
| | | W+18 54 | | | |
| | | W+19 55 | | | |
| | | W+20 56 | | | |
| | | W+21 57 | | | |
| | | W+22 58 | | | |
| | | W+23 59 | | | |
| | | W+24 60 | | | |
| | | W+25 61 | | | |
| | | W+26 62 | | | |
| | | W+27 63 | | | |
| | | W+28 64 | | | |
| W+29 65 | | | | | |
| ○ | ○ | ULTRA | W+30 66 | IV | |
| | | | W+31 67 | | |
| | | | W+32 68 | | |
| | | | W+33 69 | | |
| | | | W+34 70 | | |

| MODE | | BAND | CHANNEL | | TUNER BAND | | | | |
|------|------|-------|---|-------|------------|---------|---------------|----|--|
| TV | CATV | | REAL | DISP. | | | | | |
| × | ○ | ULTRA | W+35 71 | IV | | | | | |
| | | | W+36 72 | | | | | | |
| | | | W+37 73 | | | | | | |
| | | | W+38 74 | | | | | | |
| | | | W+39 75 | | | | | | |
| | | | W+40 76 | | | | | | |
| | | | W+41 77 | | | | | | |
| | | | W+42 78 | | | | | | |
| | | | W+43 79 | | | | | | |
| | | | W+44 80 | | | | | | |
| | | | W+45 81 | | | | | | |
| | | | W+46 82 | | | | | | |
| | | | W+47 83 | | | | | | |
| | | | W+48 84 | | | | | | |
| | | | W+49 85 | | | | | | |
| | | | W+50 86 | | | | | | |
| | | | W+51 87 | | | | | | |
| | | | W+52 88 | | | | | | |
| | | | W+53 89 | | | | | | |
| | | | W+54 90 | | | | | | |
| | | | W+55 91 | | | | | | |
| | | | W+56 92 | | | | | | |
| | | | W+57 93 | | | | | | |
| | | | W+58 94 | | | | | | |
| | | | W+59 100 | | | | | | |
| | | | W+60 101 | | | | | | |
| | | | W+61 102 | | | | | | |
| | | | W+62 103 | | | | | | |
| | | | W+63 104 | | | | | | |
| | | | W+64 105 | | | | | | |
| | | | W+65 106 | | | | | | |
| | | | W+66 107 | | | | | | |
| | | | W+67 108 | | | | | | |
| | | | W+68 109 | | | | | | |
| | | | W+69 110 | | | | | | |
| | | | W+70 111 | | | | | | |
| | | | W+71 112 | | | | | | |
| | | | W+72 113 | | | | | | |
| | | | W+73 114 | | | | | | |
| | | | W+74 115 | | | | | | |
| | | | W+75 116 | | | | | | |
| | | | W+76 117 | | | | | | |
| | | | W+77 118 | | | | | | |
| | | | W+78 119 | | | | | | |
| | | | W+79 120 | | | | | | |
| | | | W+80 121 | | | | | | |
| | | | W+81 122 | | | | | | |
| | | | W+82 123 | | | | | | |
| | | | W+83 124 | | | | | | |
| | | | W+84 125 | | | | | | |
| | | | ○ | | × | SUB MID | A-8 01 | I | |
| | | | | | | | A-4 96 | | |
| | | | | | | | A-3 97 | | |
| | | | | | | | A-2 98 | | |
| | | | | | | | A-1 99 | | |
| | | | ○ | | × | UHF | 14 5 69 | IV | |
| | | | TOTAL 180CH { VHF 124CH UHF 56CH | | | | | | |
| | | | NOTE: TO RECEIVE THE SUBSCRIPTION OR PREMIUM PROGRAMMING FROM CERTAIN CABLE COMPANIES. SPECIAL ADAPTERS MAY BE REQUIRED. | | | | | | |

AV-36F703/Y, AV-36F713/Y, AV-36F803/Y STANDARD CIRCUIT DIAGRAM

NOTE ON USING CIRCUIT DIAGRAMS

1. SAFETY

The components identified by the Δ symbol and shading are critical for safety. For continued safety replace safety critical components only with manufactures recommended parts.

2. SPECIFIED VOLTAGE AND WAVEFORM VALUES

The voltage and waveform values have been measured under the following conditions.

- (1) Input signal : Colour bar signal
- (2) Setting positions of each knob/button and variable resistor : Original setting position when shipped
- (3) Internal resistance of tester : DC 20k Ω /V
- (4) Oscilloscope sweeping time : H \Rightarrow 20 μ S/div
: V \Rightarrow 5mS/div
: Others \Rightarrow Sweeping time is specified
- (5) Voltage values : All DC voltage values

* Since the voltage values of signal circuit vary to some extent according to adjustments, use them as reference values.

3. INDICATION OF PARTS SYMBOL [EXAMPLE]

- In the PW board : R1209 \rightarrow R209

4. INDICATIONS ON THE CIRCUIT DIAGRAM

(1) Resistors

- Resistance value

- No unit : { Ω }
- K : {K Ω }
- M : {M Ω }

- Rated allowable power

- No indication : 1/16 [W]
- Others : As specified

- Type

- No indication : Carbon resistor
- OMR : Oxide metal film resistor
- MFR : Metal film resistor
- MPR : Metal plate resistor
- UNFR : Uninflamable resistor
- FR : Fusible resistor

* Composition resistor 1/2 [W] is specified as 1/2S or Comp.

(2) Capacitors

- Capacitance value

- 1 or higher : [pF]
- less than 1 : [μF]

- Withstand voltage

- No indication : DC50[V]
- Others : DC withstand voltage [V]
- AC indicated : AC withstand voltage [V]

* Electrolytic Capacitors

47/50[Example]:Capacitance value [μF]/withstand voltage[V]

- Type

- No indication : Ceramic capacitor
- MM : Metalized mylar capacitor
- PP : Polypropylene capacitor
- MPP : Metalized polypropylene capacitor
- MF : Metalized film capacitor
- TF : Thin film capacitor
- BP : Bipolar electrolytic capacitor
- TAN : Tantalum capacitor

(3) Coils

- No unit : [μH]
- Others : As specified

(4) Power Supply



* Respective voltage values are indicated

(5) Test point

- : Test point
- : Only test point display

(6) Connecting method

- : Connector
- : Wrapping or soldering
- : Receptacle

(7) Ground symbol

- : LIVE side ground
- : ISOLATED(NEUTRAL) side ground
- : EARTH ground
- : DIGITAL ground

5. NOTE FOR REPAIRING SERVICE

This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : () side GND and the ISOLATED(NEUTRAL) : () side GND. Therefore, care must be taken for the following points.

- (1) Do not touch the LIVE side GND or the LIVE side GND and the ISOLATED(NEUTRAL) side GND simultaneously. If the above caution is not respected, an electric shock may be caused. Therefore, make sure that the power cord is surely removed from the receptacle when, for example, the chassis is pulled out.
- (2) Do not short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or never measure with a measuring apparatus measure with a measuring apparatus (oscilloscope, etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND at the same time. If the above precaution is not respected, a fuse or any parts will be broken.

◇ Since the circuit diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.

NOTE


◇ Due improvement in performance, some part numbers show in the circuit diagram may not agree with those indicated in the part list.
When ordering parts, please use the numbers that appear in the Parts List.

CONTENTS


| | |
|--|-------------|
| SEMICONDUCTOR SHAPES | 2-2 |
| BLOCK DIAGRAM | 2-3 |
| CIRCUIT DIAGRAMS | |
| MAIN PWB CIRCUIT DIAGRAM | 2-7 |
| CRT SOCKET PWB CIRCUIT DIAGRAM | 2-11 |
| AV SEL PWB CIRCUIT DIAGRAM | 2-13 |
| FRONT CONTROL PWB CIRCUIT DIAGRAM | 2-17 |
| LED & POWER SW PWB CIRCUIT DIAGRAM | 2-18 |
| PIP PWB CIRCUIT DIAGRAM | 2-19 |
| DAF PWB CIRCUIT DIAGRAM | 2-21 |
| PATTERN DIAGRAMS | |
| MAIN PWB PATTERN | 2-23 |
| AV SEL PWB PATTERN | 2-25 |
| PIP PWB PATTERN | 2-27 |
| DAF PWB PATTERN | 2-28 |
| CRT SOCKET PWB PATTERN | 2-29 |
| FRONT CONTROL PWB PATTERN | 2-30 |
| LED & POWER SW PWB PATTERN | 2-30 |
| CHANNEL CHART (US) | 2-31 |
| CHANNEL CHART (CA) | 2-32 |

SEMICONDUCTOR SHAPES


TRANSISTOR

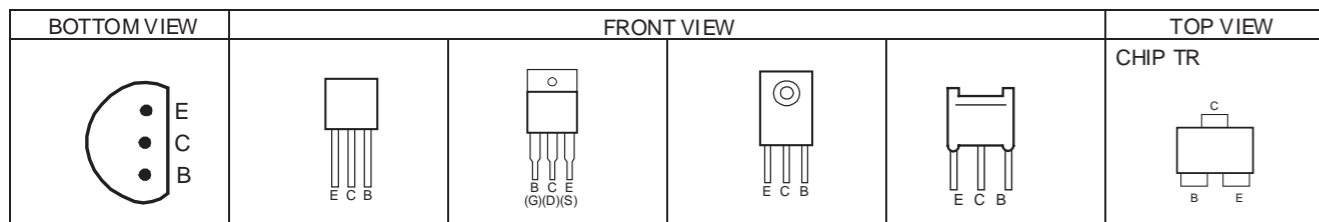

IC

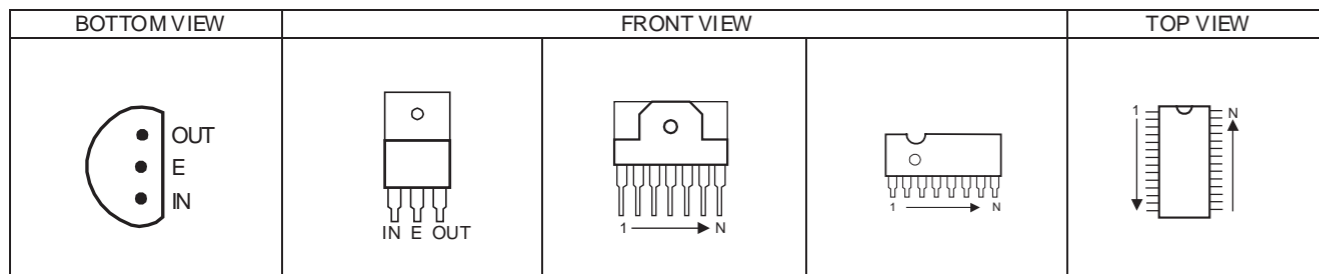

CHIP IC

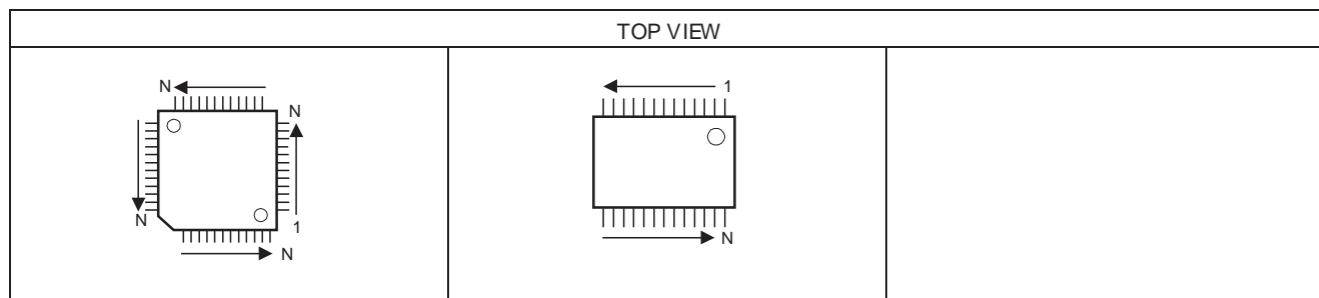


CHANNEL CHART (US)


| MODE | | BAND | CHANNEL | | TUNER BAND |
|-------|------|-------|---------|-------|------------|
| TV | CATV | | REAL | DISP. | |
| ○ | ○ | VL | 02 | I | |
| | | | 03 | | |
| | | | 04 | | |
| | | | 05 | | |
| | | | 06 | | |
| | | | 07 | | |
| | | VH | 08 | II | |
| | | | 09 | | |
| | | | 10 | | |
| | | | 11 | | |
| | | | 12 | | |
| | | | 13 | | |
| | | | × | | ○ |
| B | 15 | | | | |
| C | 16 | | | | |
| D | 17 | | | | |
| E | 18 | | | | |
| F | 19 | | | | |
| G | 20 | | | | |
| H | 21 | | | | |
| I | 22 | | | | |
| SUPER | J | 23 | | II | |
| | K | 24 | | | |
| | L | 25 | | | |
| | M | 26 | | | |
| | N | 27 | | | |
| | O | 28 | | | |
| | P | 29 | | | |
| | Q | 30 | | | |
| | R | 31 | | | |
| | S | 32 | | | |
| | T | 33 | | | |
| | U | 34 | | | |
| | V | 35 | | | |
| W | 36 | | | | |
| W+1 | ○ | HYPER | W+1 | 37 | IV |
| | | | W+2 | 38 | |
| | | | W+3 | 39 | |
| | | | W+4 | 40 | |
| | | | W+5 | 41 | |
| | | | W+6 | 42 | |
| | | | W+7 | 43 | |
| | | | W+8 | 44 | |
| | | | W+9 | 45 | |
| | | | W+10 | 46 | |
| | | | W+11 | 47 | |
| W+12 | ○ | HYPER | W+12 | 48 | IV |
| | | | W+13 | 49 | |
| | | | W+14 | 50 | |
| | | | W+15 | 51 | |
| | | | W+16 | 52 | |
| | | | W+17 | 53 | |
| | | | W+18 | 54 | |
| | | | W+19 | 55 | |
| W+20 | ○ | ULTRA | W+20 | 56 | IV |
| | | | W+21 | 57 | |
| | | | W+22 | 58 | |
| | | | W+23 | 59 | |
| | | | W+24 | 60 | |
| | | | W+25 | 61 | |
| | | | W+26 | 62 | |
| | | | W+27 | 63 | |
| | | | W+28 | 64 | |
| | | | W+29 | 65 | |
| W+30 | 66 | | | | |
| W+31 | 67 | | | | |
| W+32 | 68 | | | | |
| W+33 | 69 | | | | |
| W+34 | 70 | | | | |


| MODE | | BAND | CHANNEL | | TUNER BAND |
|---|------|---------|---------|-------|------------|
| TV | CATV | | REAL | DISP. | |
| × | ○ | ULTRA | W+35 | 71 | IV |
| | | | W+36 | 72 | |
| | | | W+37 | 73 | |
| | | | W+38 | 74 | |
| | | | W+39 | 75 | |
| | | | W+40 | 76 | |
| | | | W+41 | 77 | |
| | | | W+42 | 78 | |
| | | | W+43 | 79 | |
| | | | W+44 | 80 | |
| | | | W+45 | 81 | |
| | | | W+46 | 82 | |
| | | | W+47 | 83 | |
| | | | W+48 | 84 | |
| | | | W+49 | 85 | |
| | | | W+50 | 86 | |
| | | | W+51 | 87 | |
| | | | W+52 | 88 | |
| | | | W+53 | 89 | |
| | | | W+54 | 90 | |
| | | | W+55 | 91 | |
| | | | W+56 | 92 | |
| | | | W+57 | 93 | |
| | | | W+58 | 94 | |
| | | | W+59 | 100 | |
| W+60 | 101 | | | | |
| W+61 | 102 | | | | |
| W+62 | 103 | | | | |
| W+63 | 104 | | | | |
| W+64 | 105 | | | | |
| W+65 | 106 | | | | |
| W+66 | 107 | | | | |
| W+67 | 108 | | | | |
| W+68 | 109 | | | | |
| W+69 | 110 | | | | |
| W+70 | 111 | | | | |
| W+71 | 112 | | | | |
| W+72 | 113 | | | | |
| W+73 | 114 | | | | |
| W+74 | 115 | | | | |
| W+75 | 116 | | | | |
| W+76 | 117 | | | | |
| W+77 | 118 | | | | |
| W+78 | 119 | | | | |
| W+79 | 120 | | | | |
| W+80 | 121 | | | | |
| W+81 | 122 | | | | |
| W+82 | 123 | | | | |
| W+83 | 124 | | | | |
| W+84 | 125 | | | | |
| ○ | × | SUB MID | A-8 | 01 | I |
| | | | A-4 | 96 | |
| | | | A-3 | 97 | |
| | | | A-2 | 98 | |
| ○ | × | UHF | 14 | 69 | IV |
| | | | 5 | | |
| TOTAL 180CH { VHF 124CH { UHF 56CH | | | | | |
| NOTE: TO RECEIVE THE SUBSCRIPTION OR PREMIUM PROGRAMMING FROM CERTAIN CABLE COMPANIES. SPECIAL ADAPTERS MAY BE REQUIRED. | | | | | |

BLOCK DIAGRAM [AV-36F703,AV-36F713]

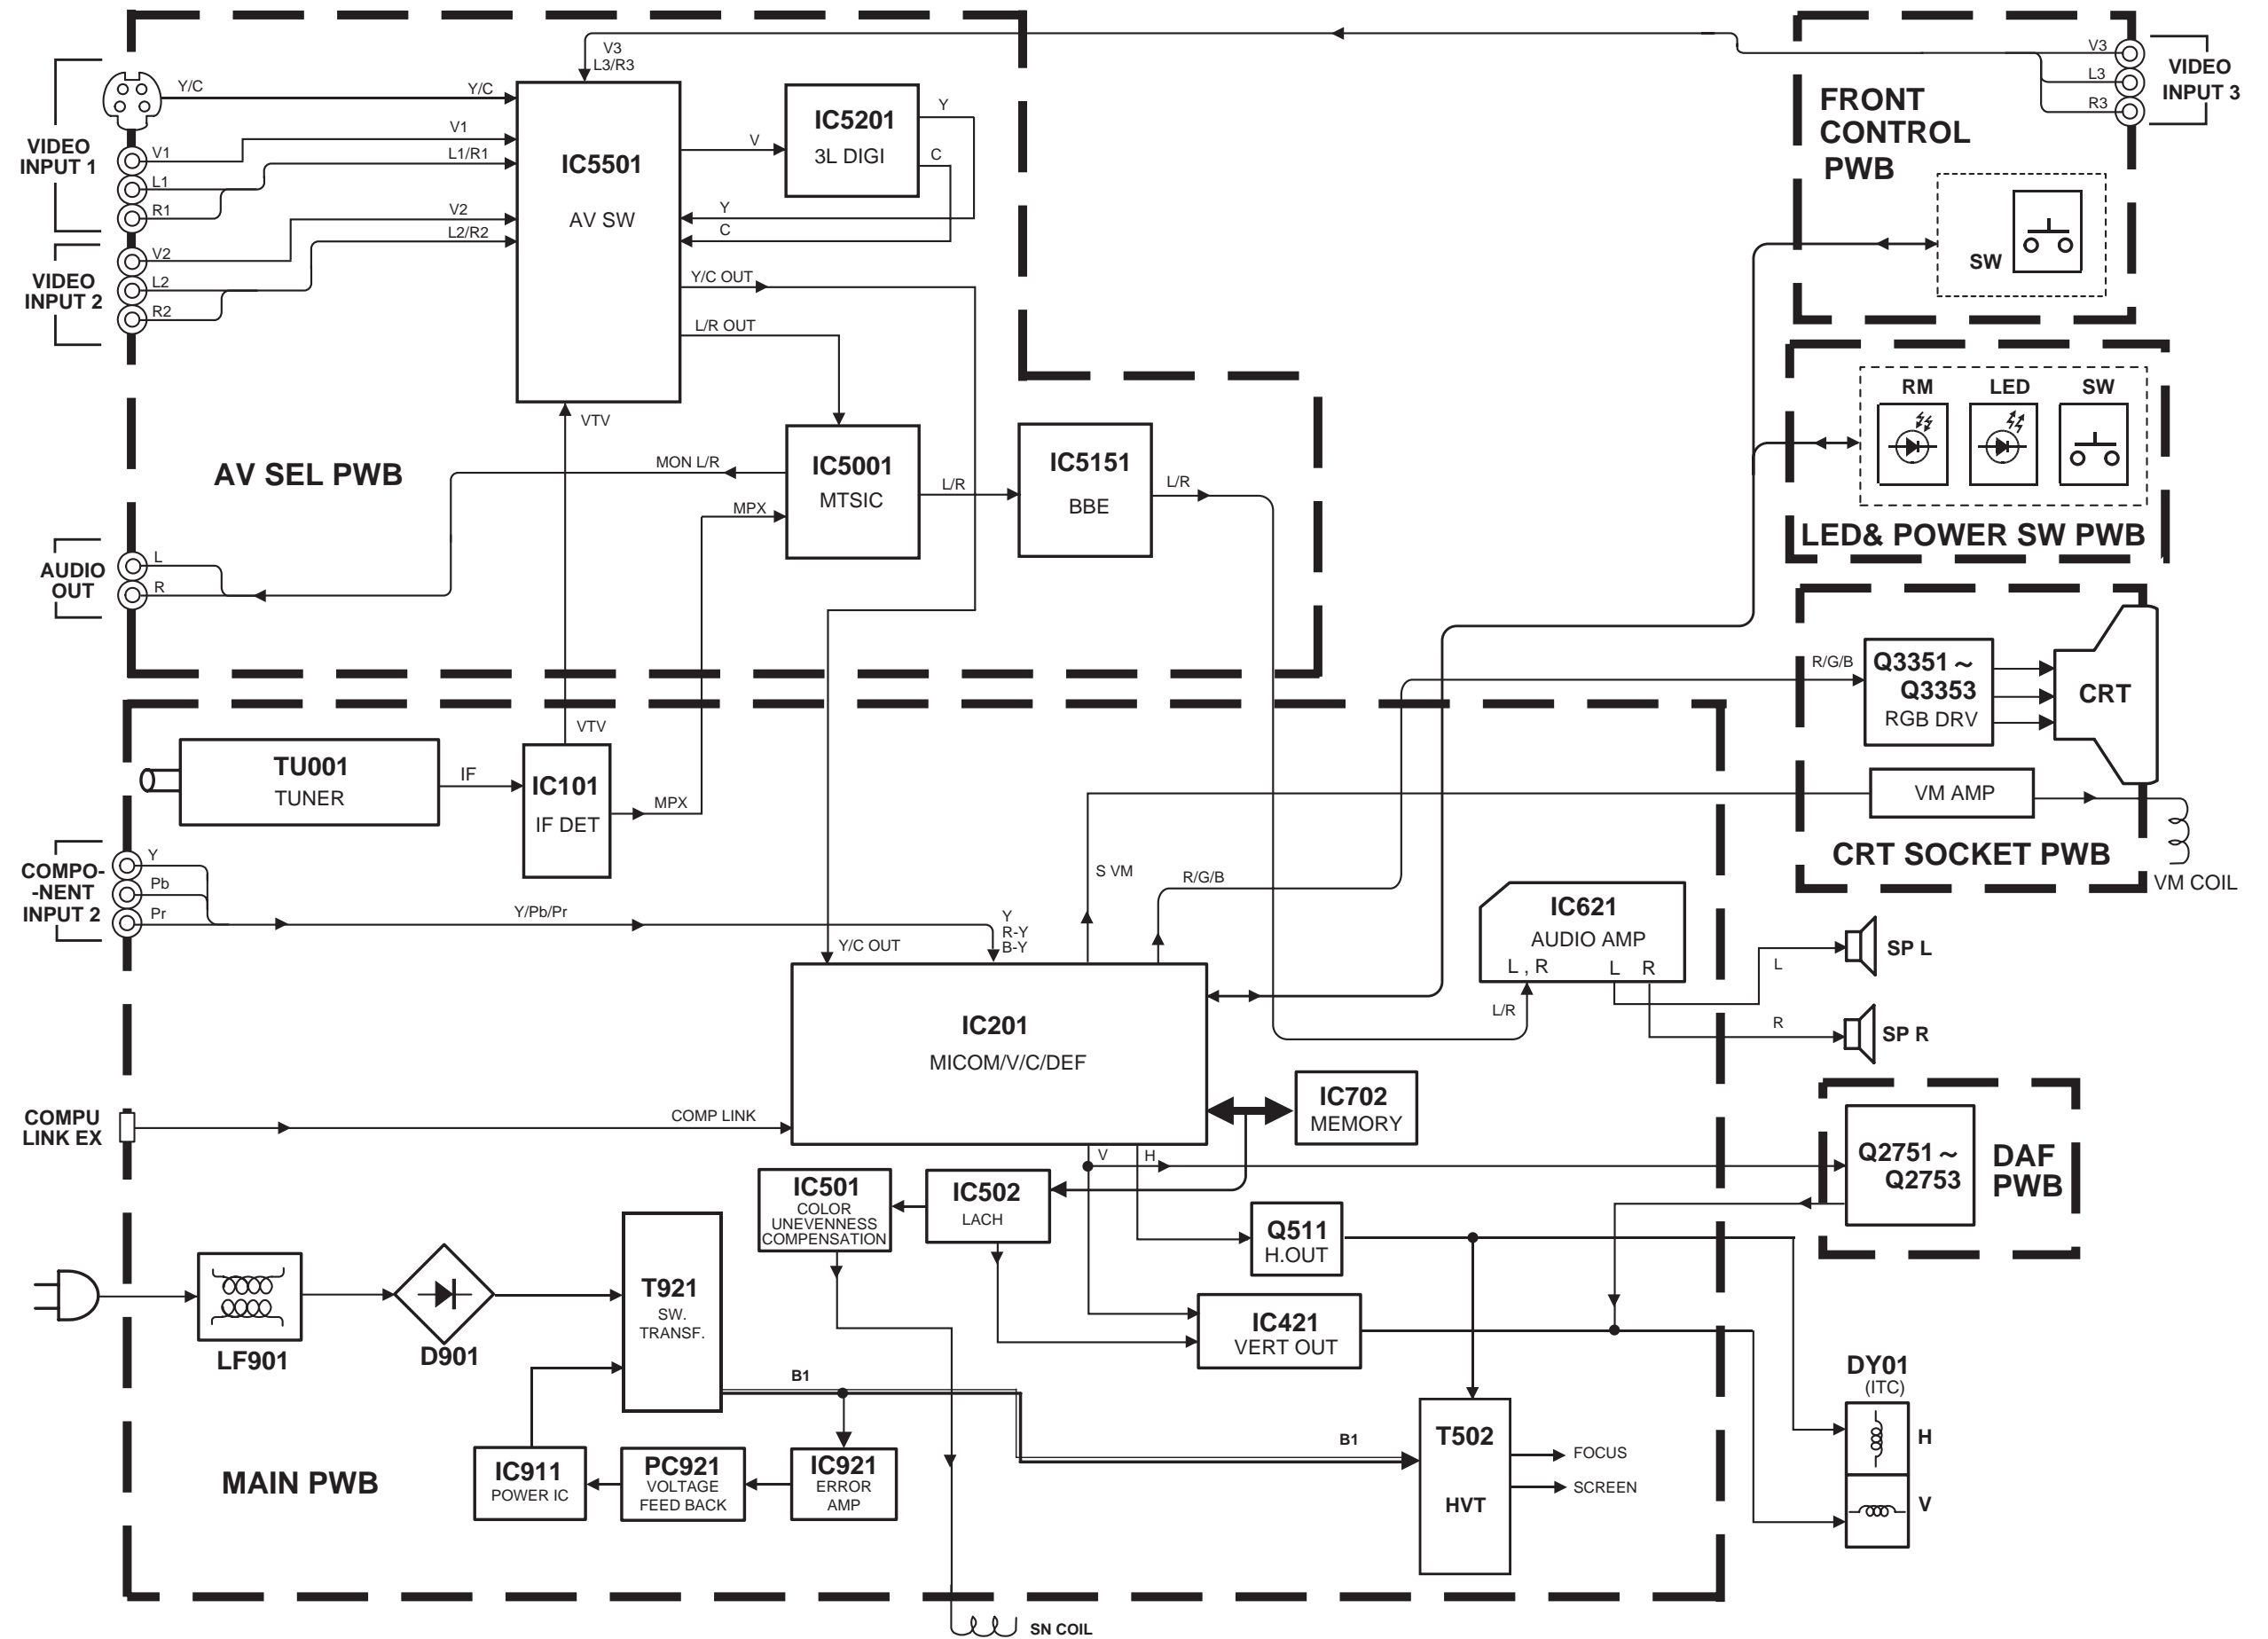

BLOCK DIAGRAM [AV-36F803]

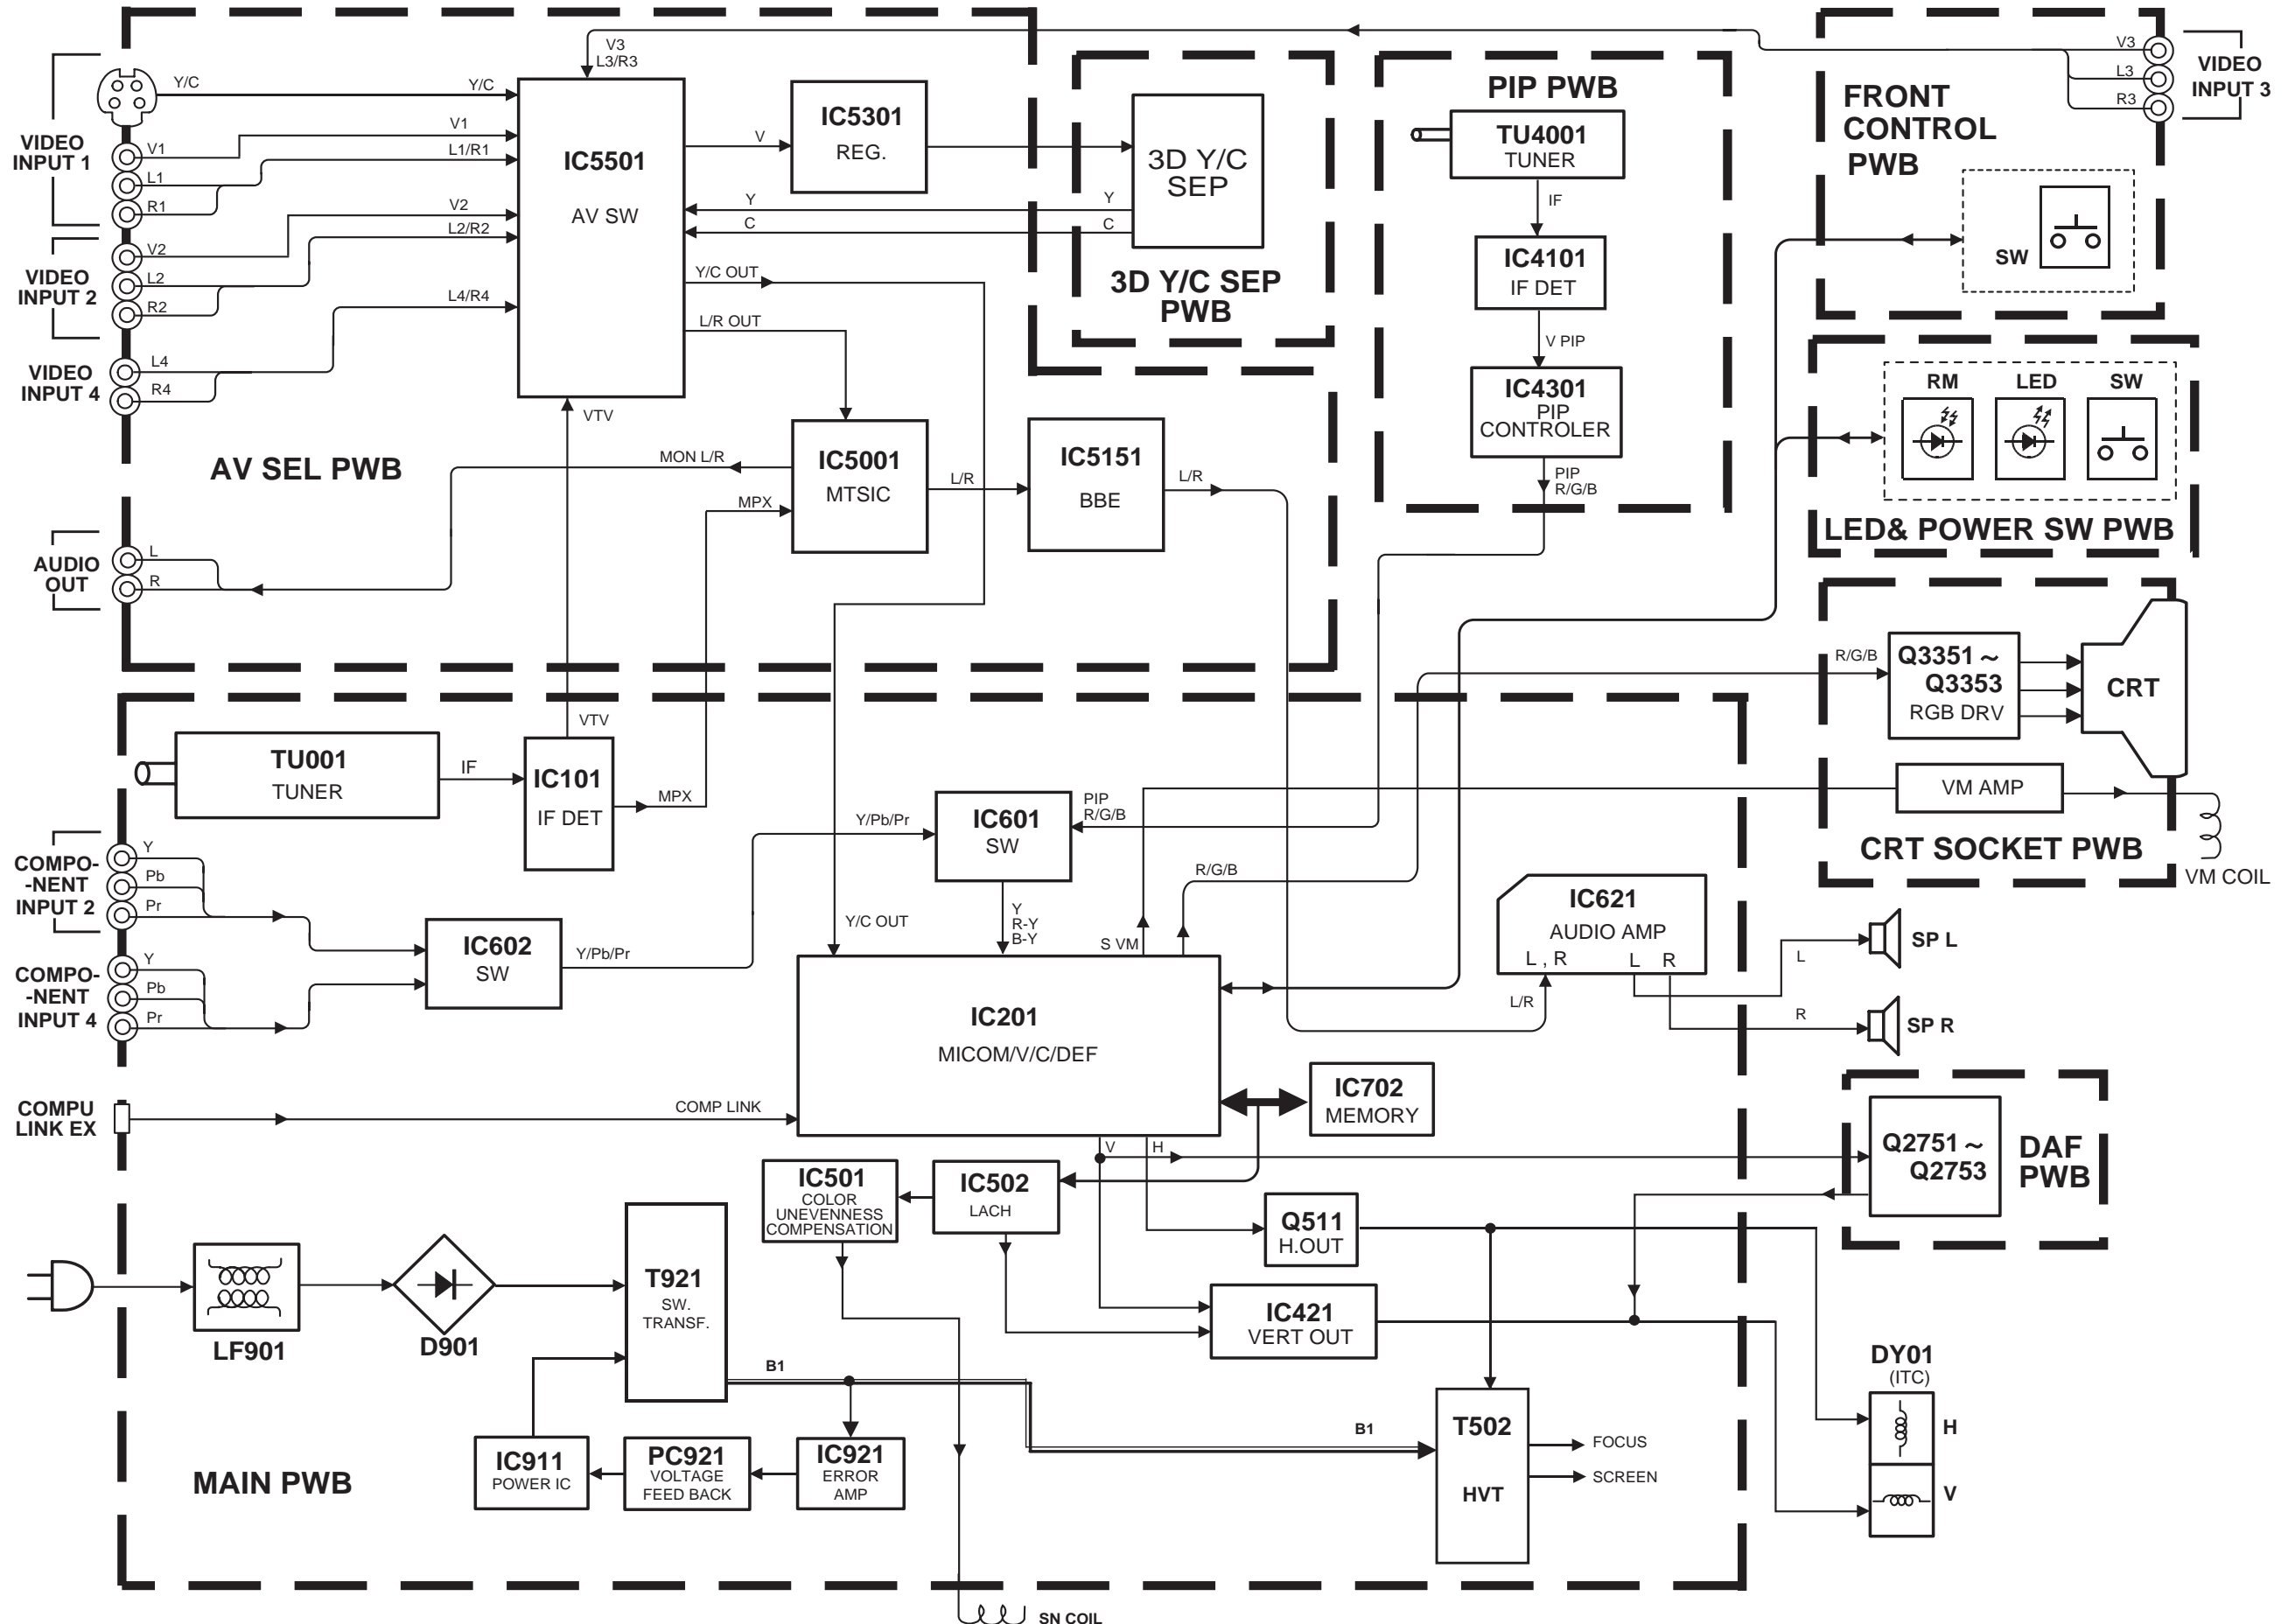

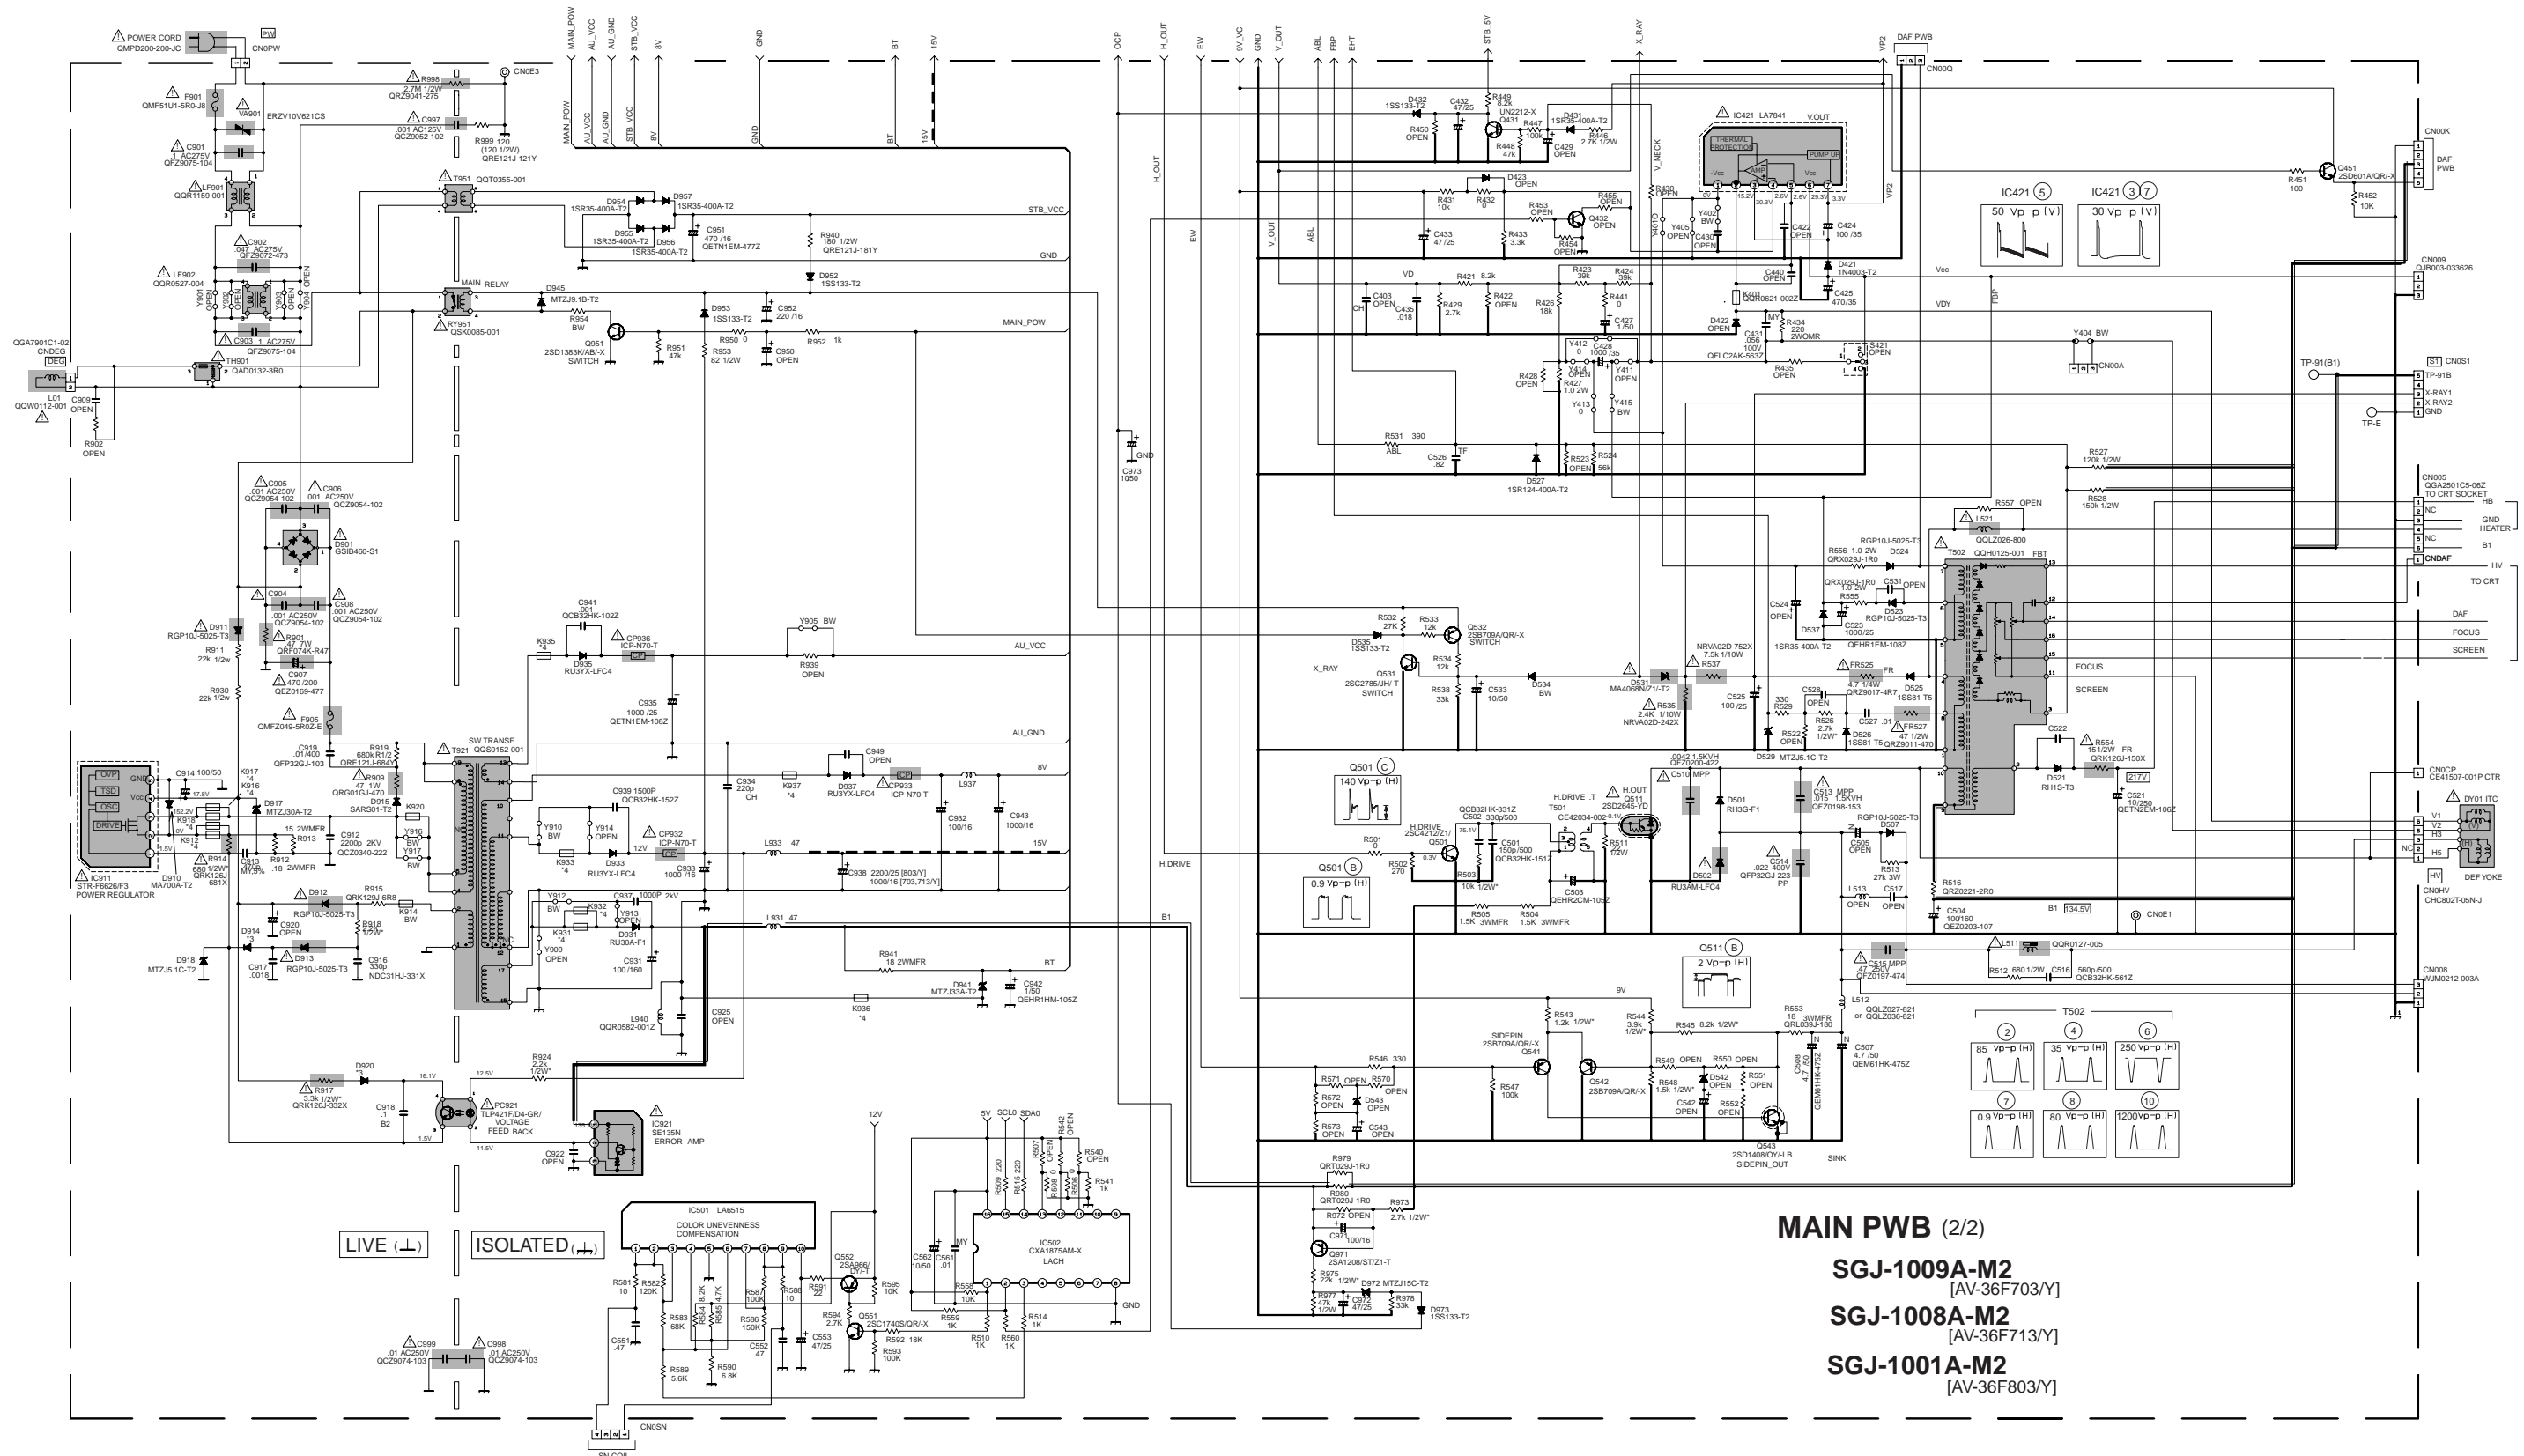


MAIN PWB (2/2)
SGJ-1009A-M2 [AV-36F703/Y]
SGJ-1008A-M2 [AV-36F713/Y]
SGJ-1001A-M2 [AV-36F803/Y]

CRT SOCKET PWB CIRCUIT DIAGRAM

AV-36F703
AV-36F713
AV-36F803


AV-36F703
AV-36F713
AV-36F803

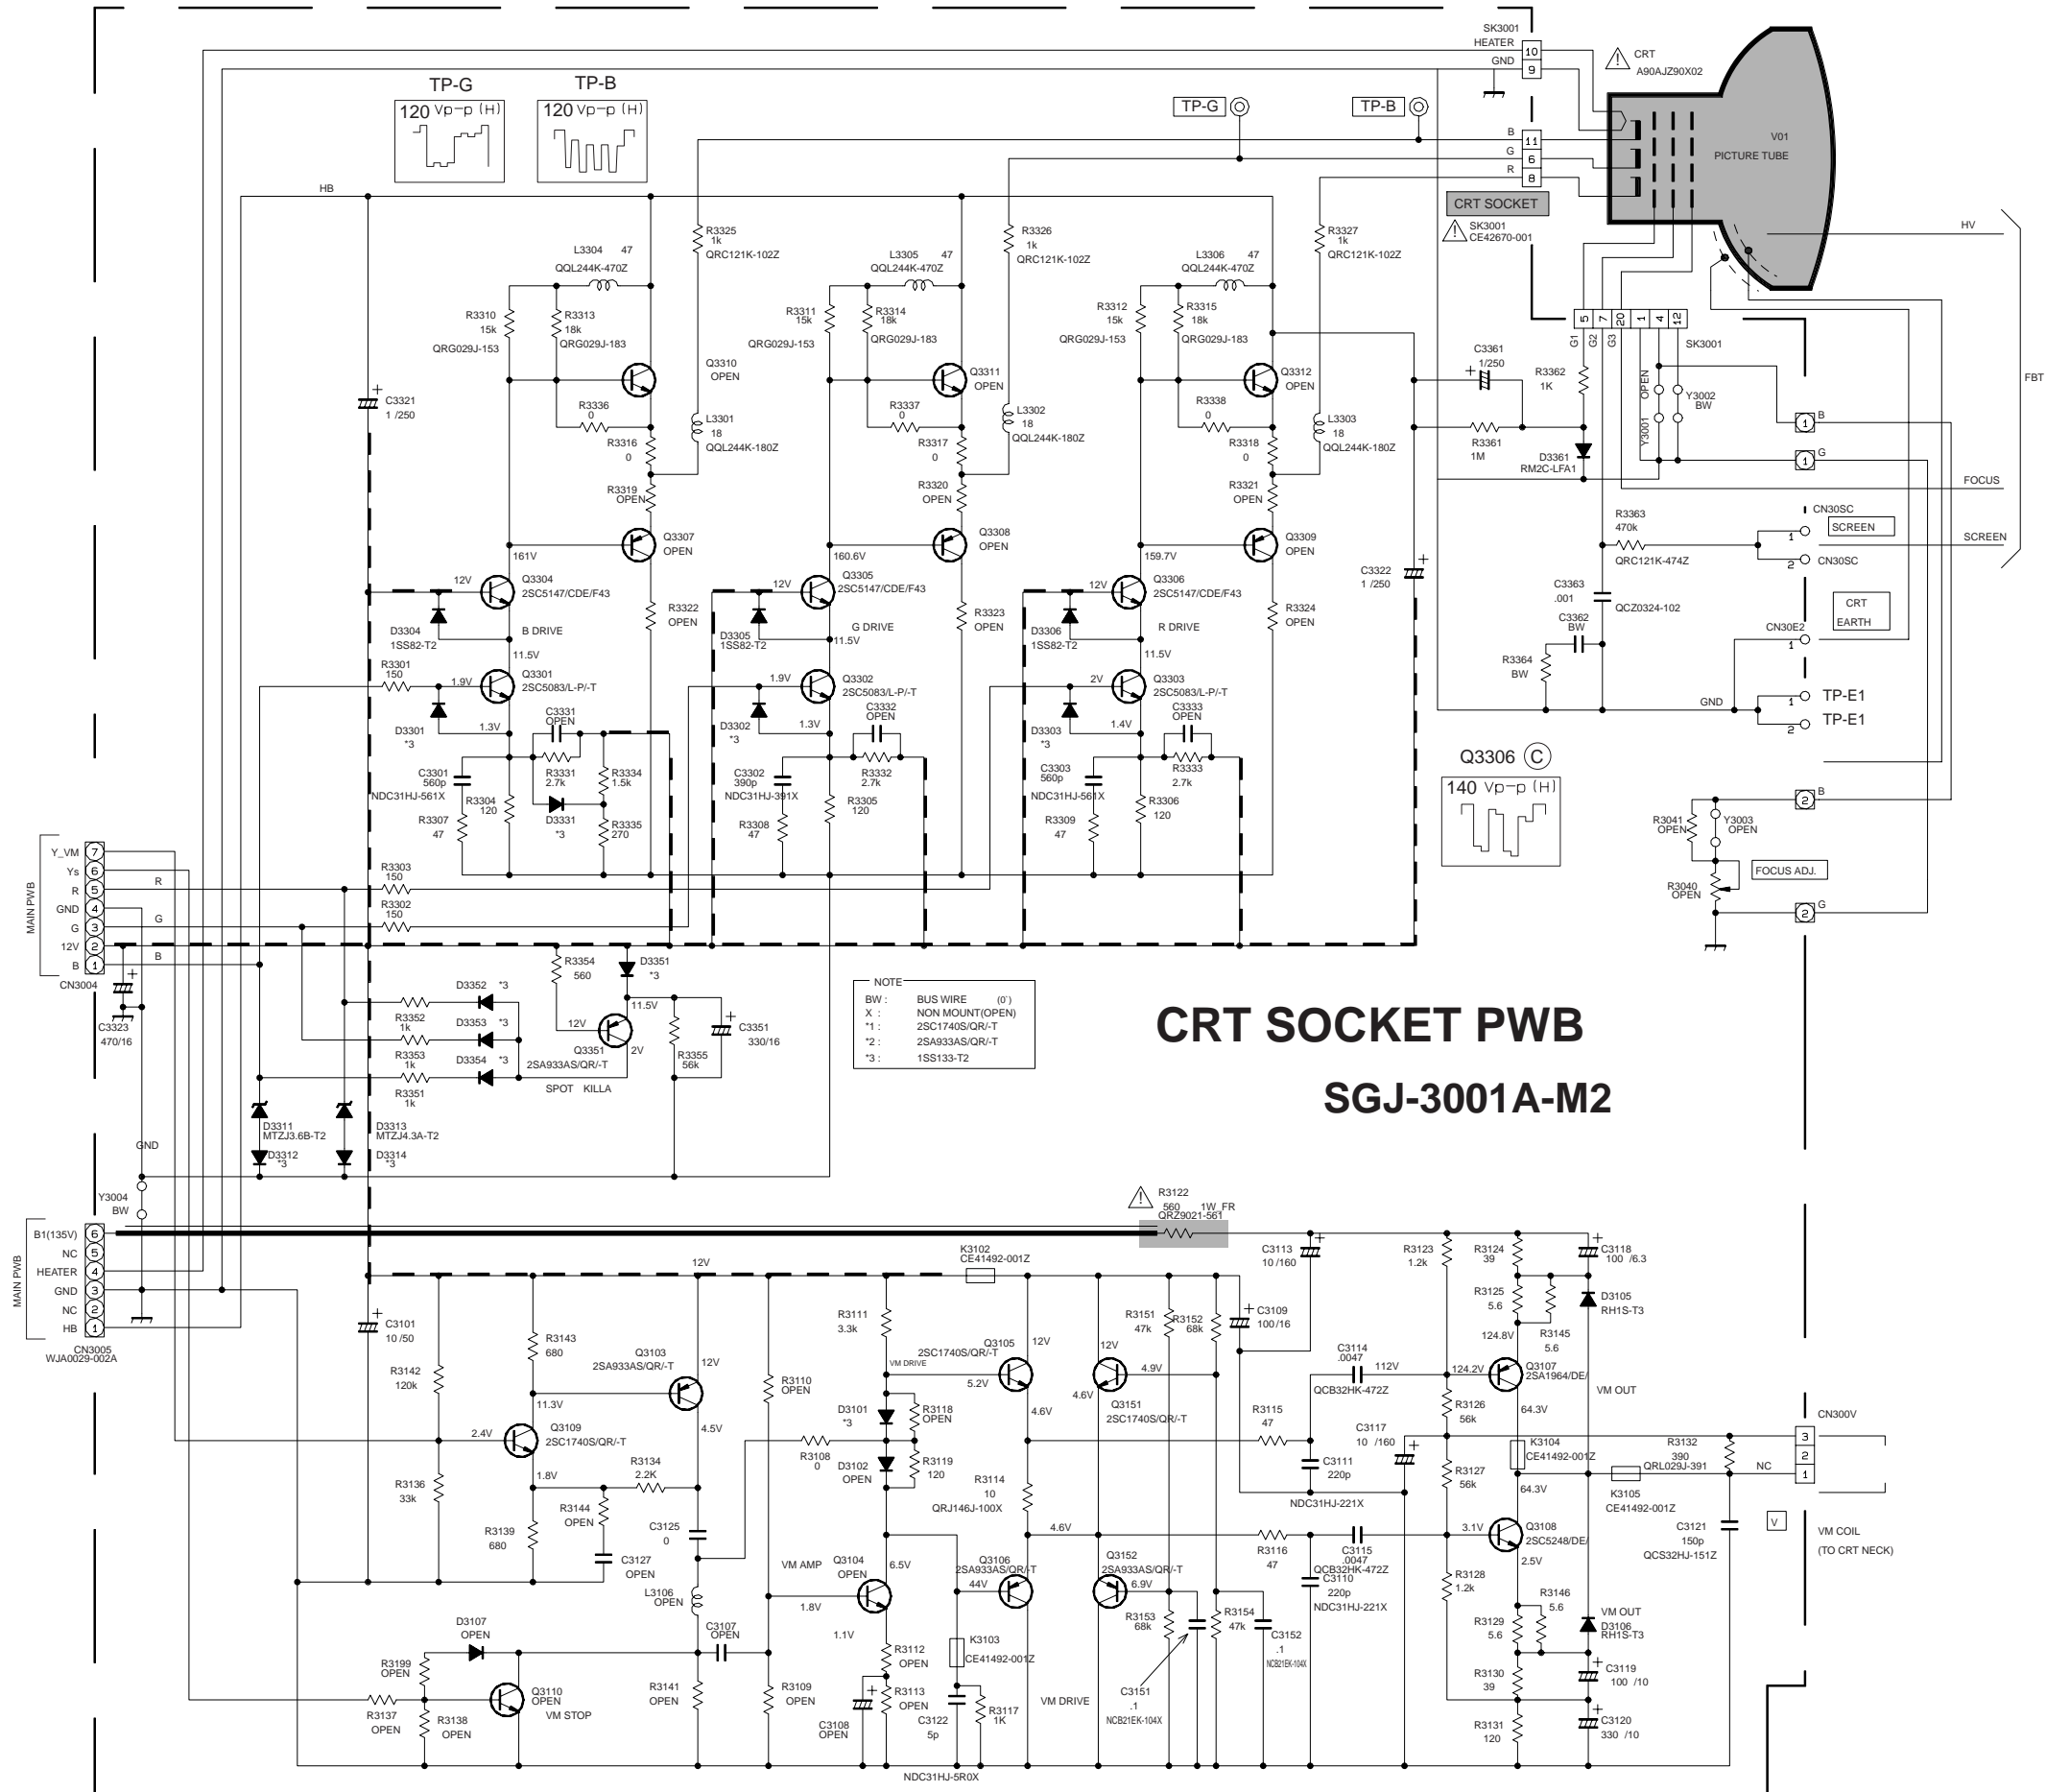

CRT SOCKET PWB
SGJ-3001A-M2

NOTE
BW : BUS WIRE (Ø)
X : NON MOUNT (OPEN)
'1' : 2SC1740S/QR-T
'2' : 2SA933AS/QR-T
'3' : 1SS133-T2


AV SEL PWB CIRCUIT DIAGRAM [AV-36F703,AV-36F713]

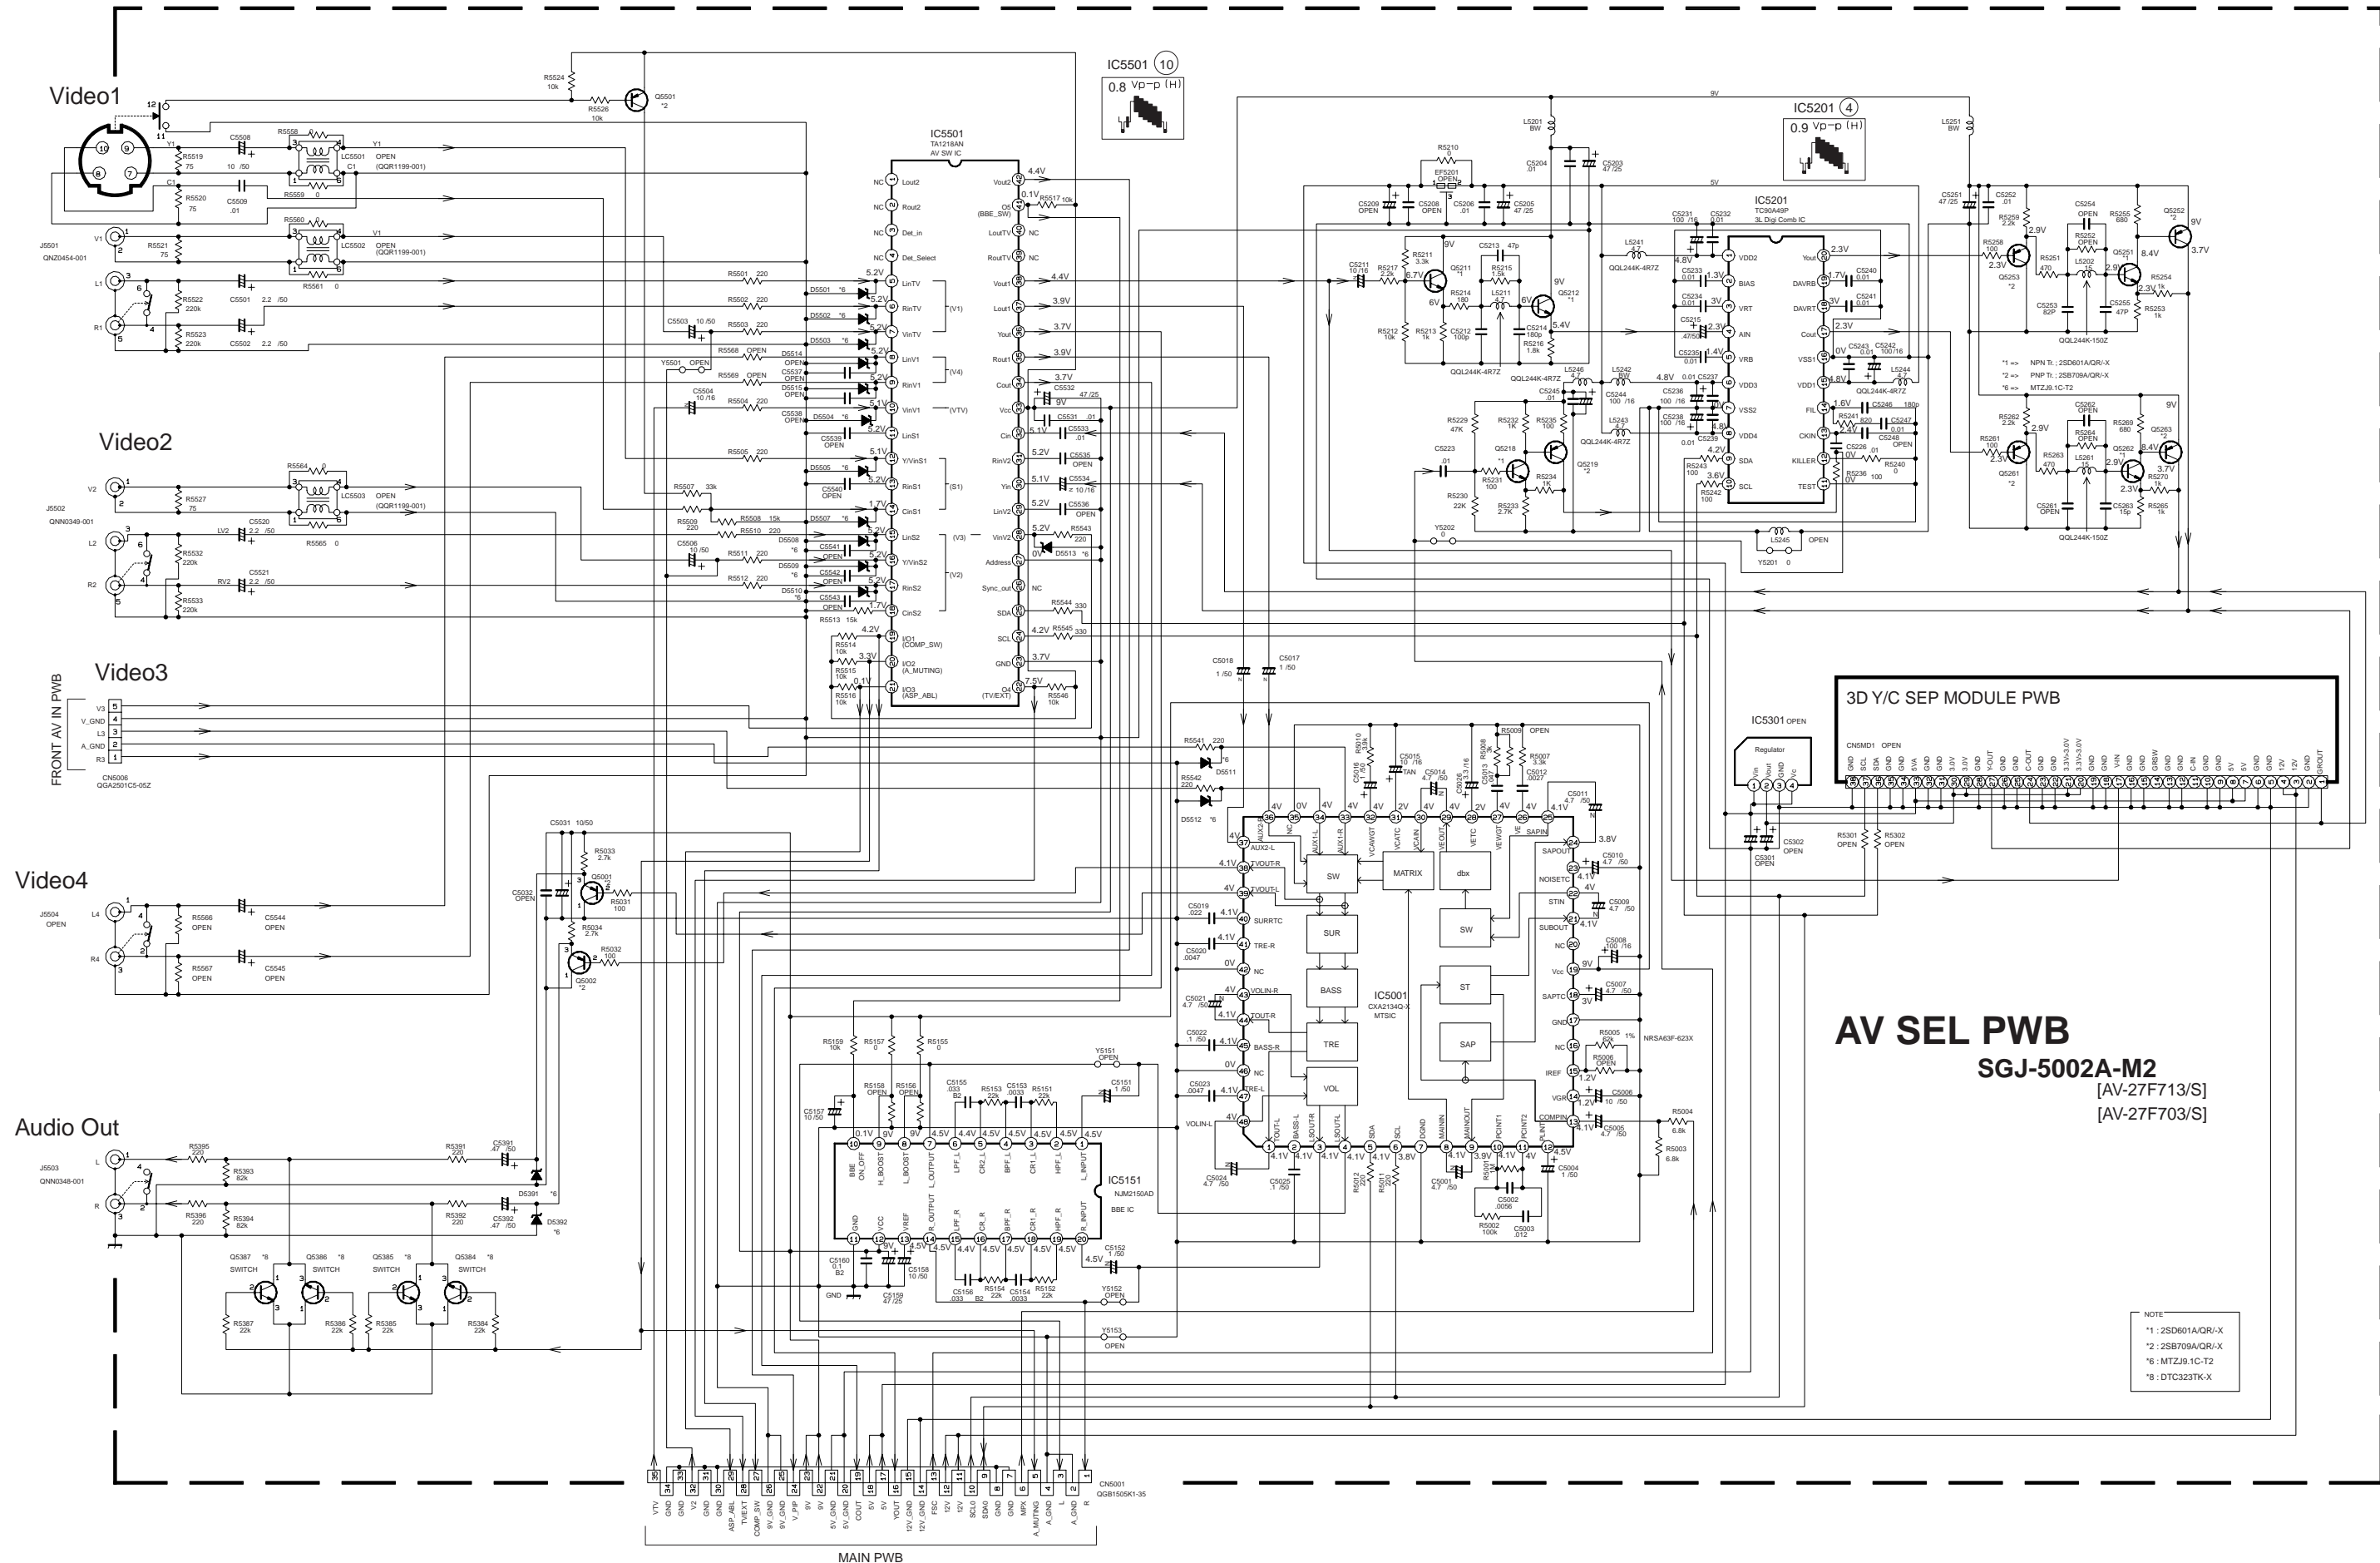


AV SEL PWB CIRCUIT DIAGRAM [AV-36F803]

AV-36F803


AV-36F803

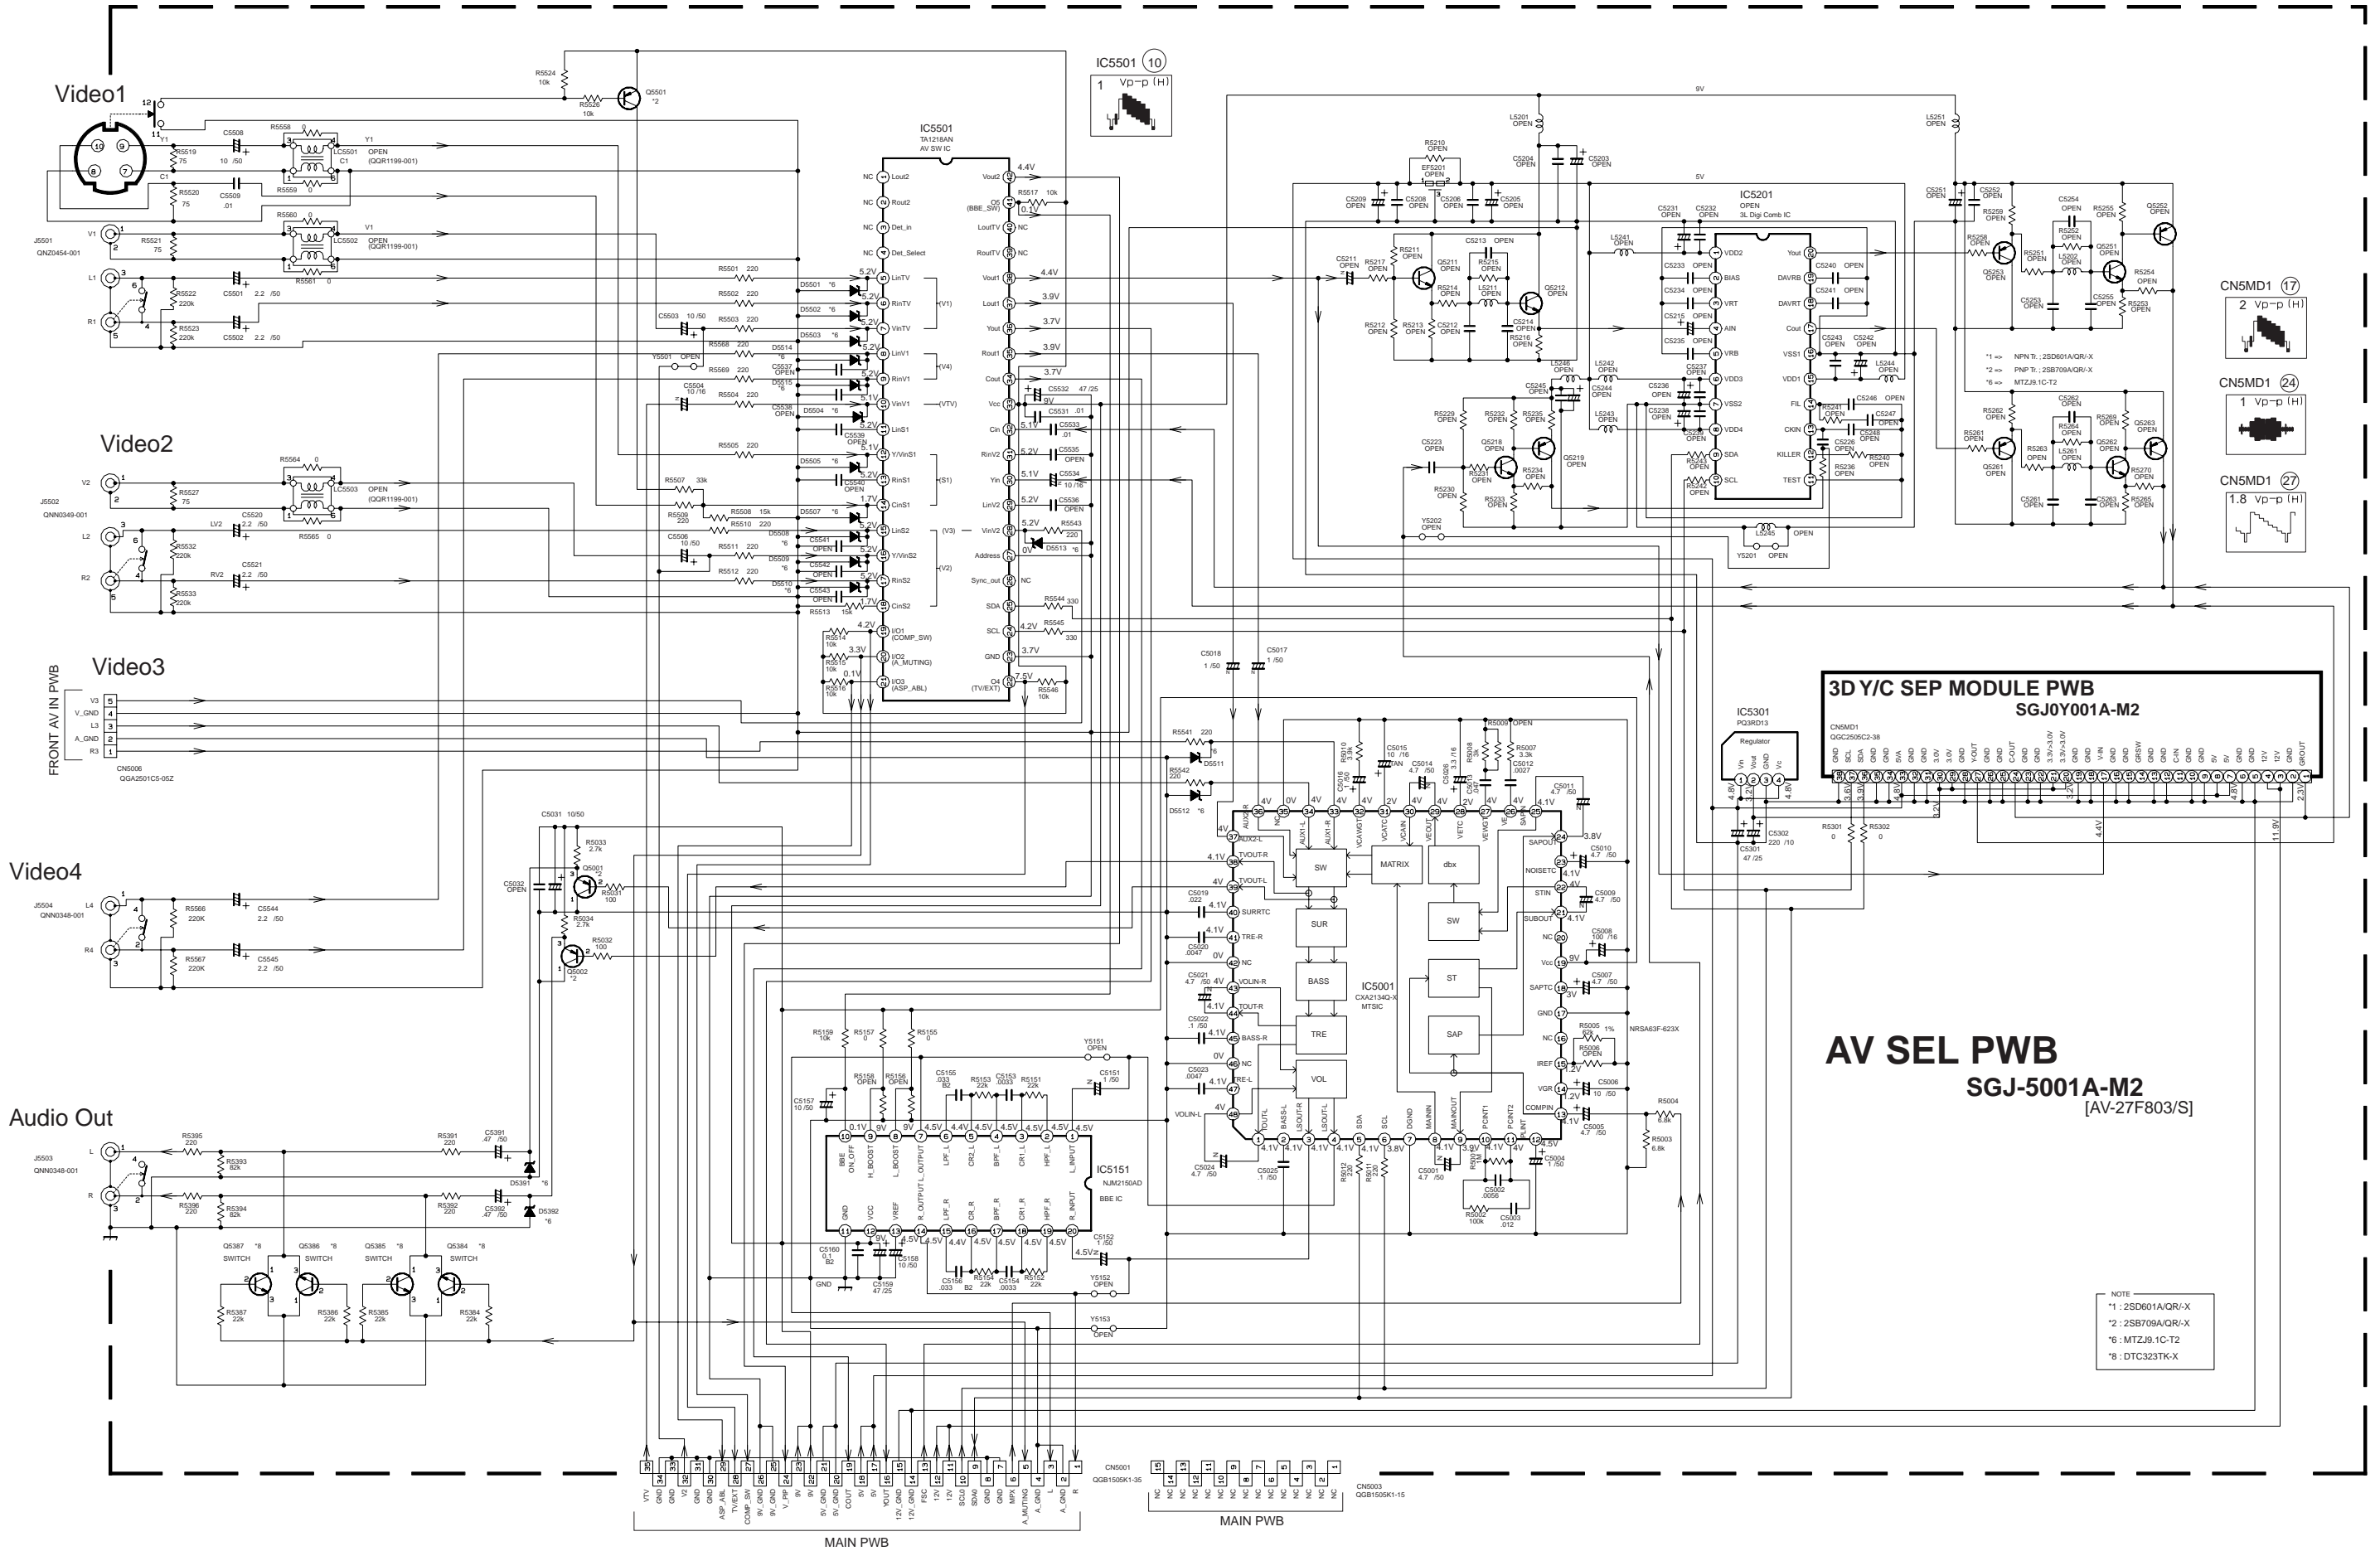


FRONT CONTROL PWB CIRCUIT DIAGRAM

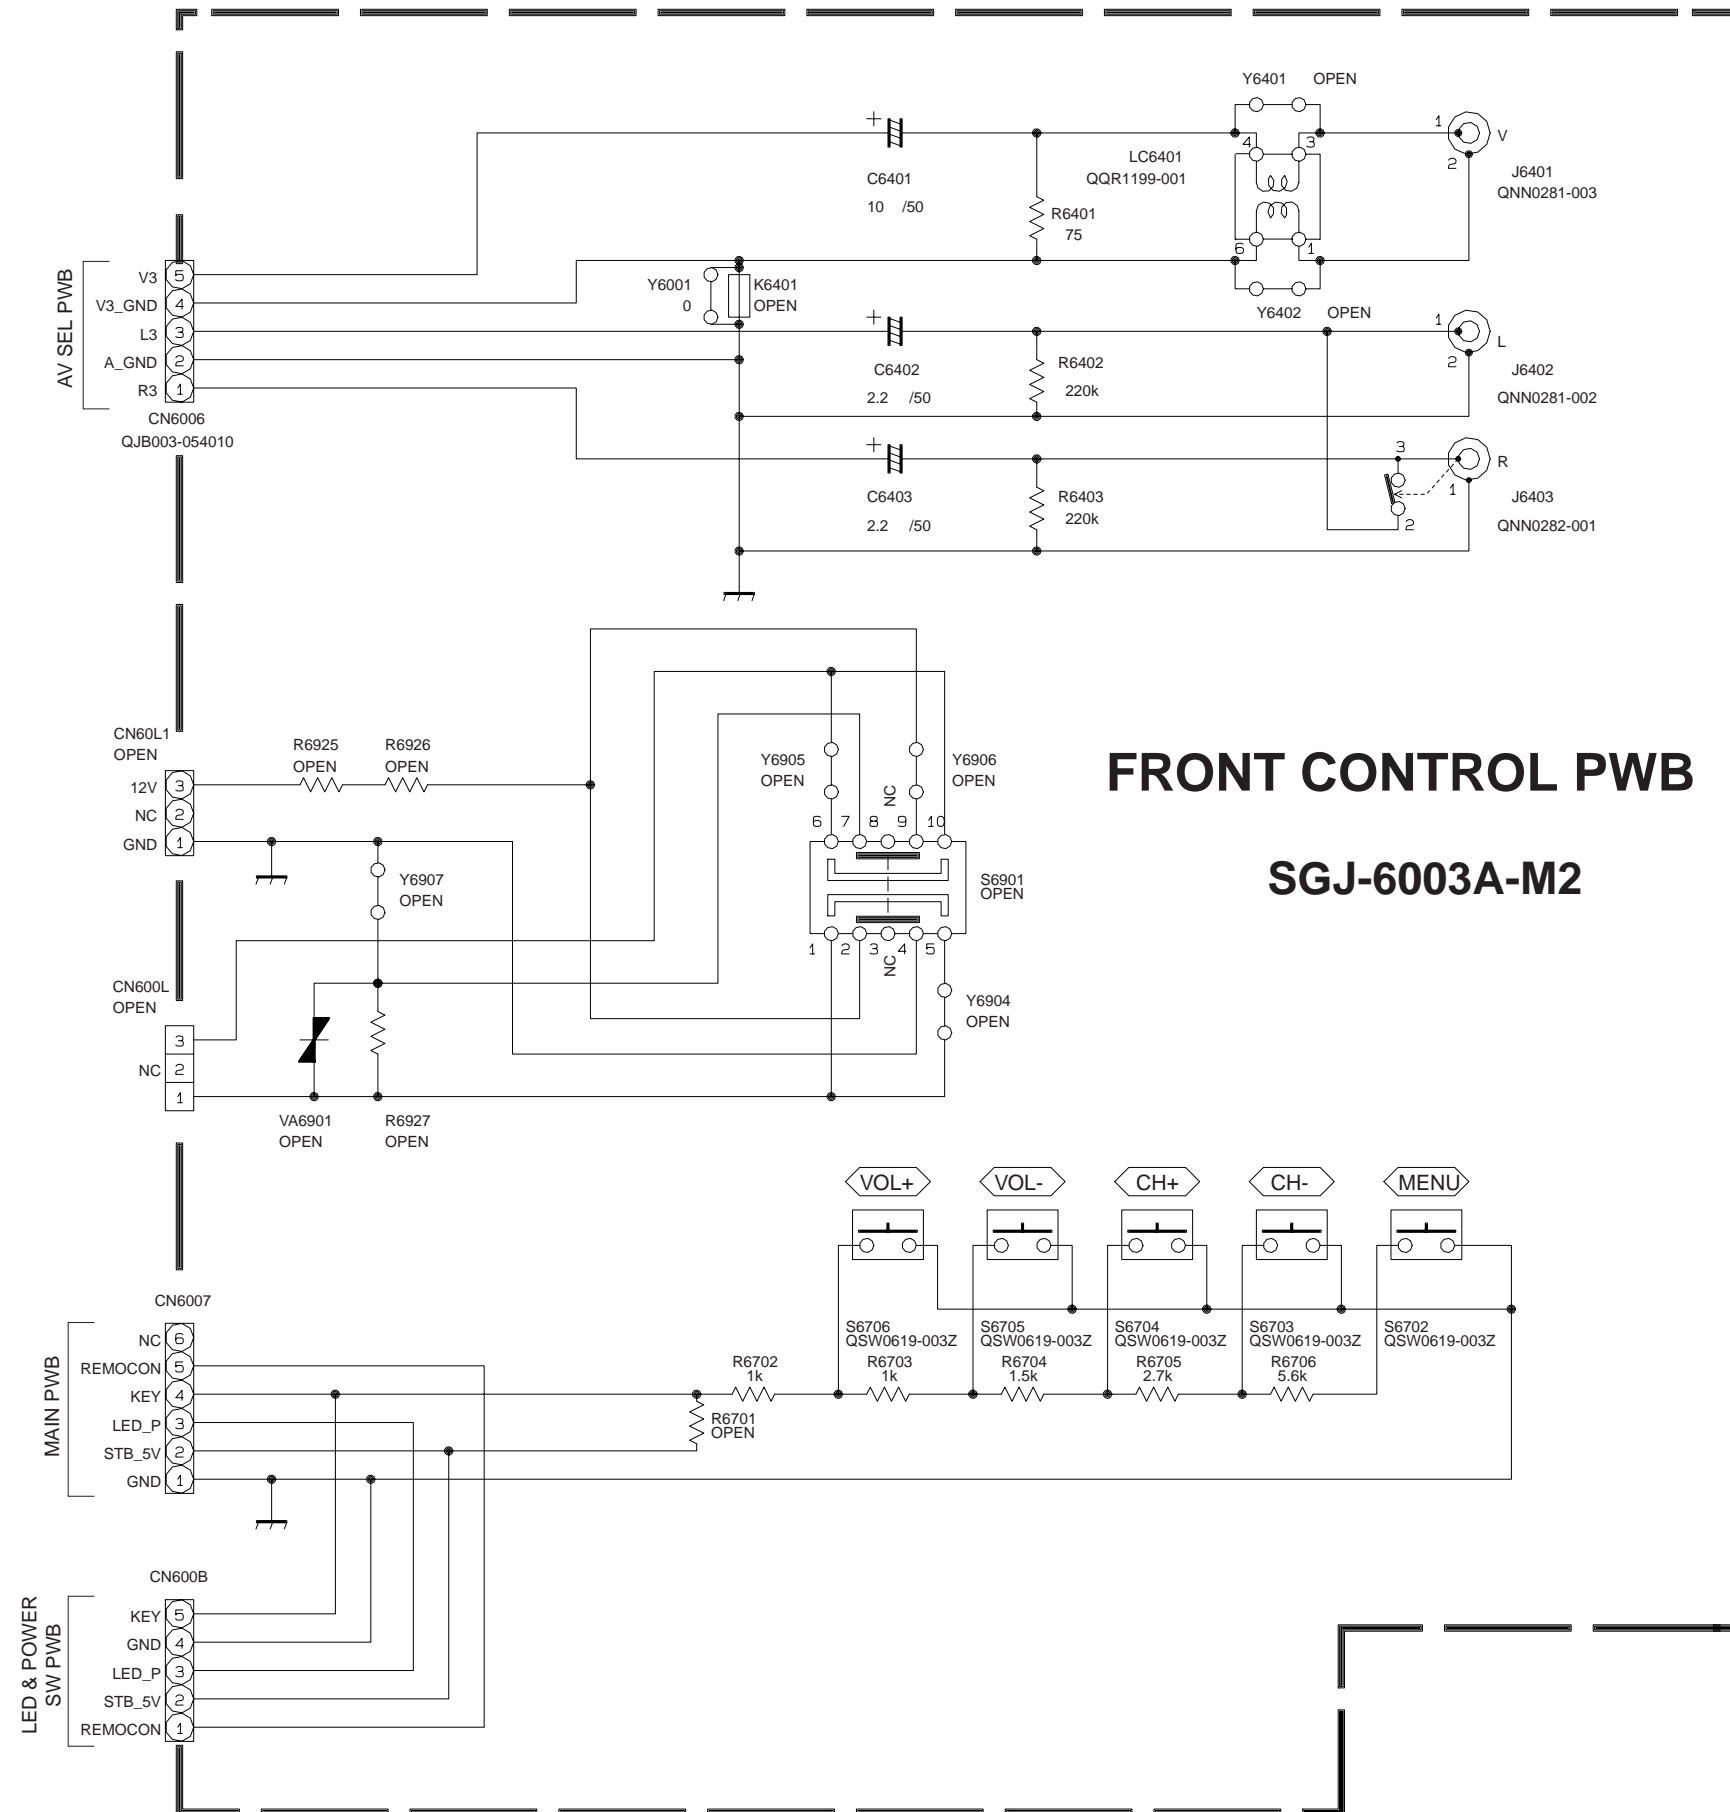


LED & POWER SW PWB CIRCUIT DIAGRAM

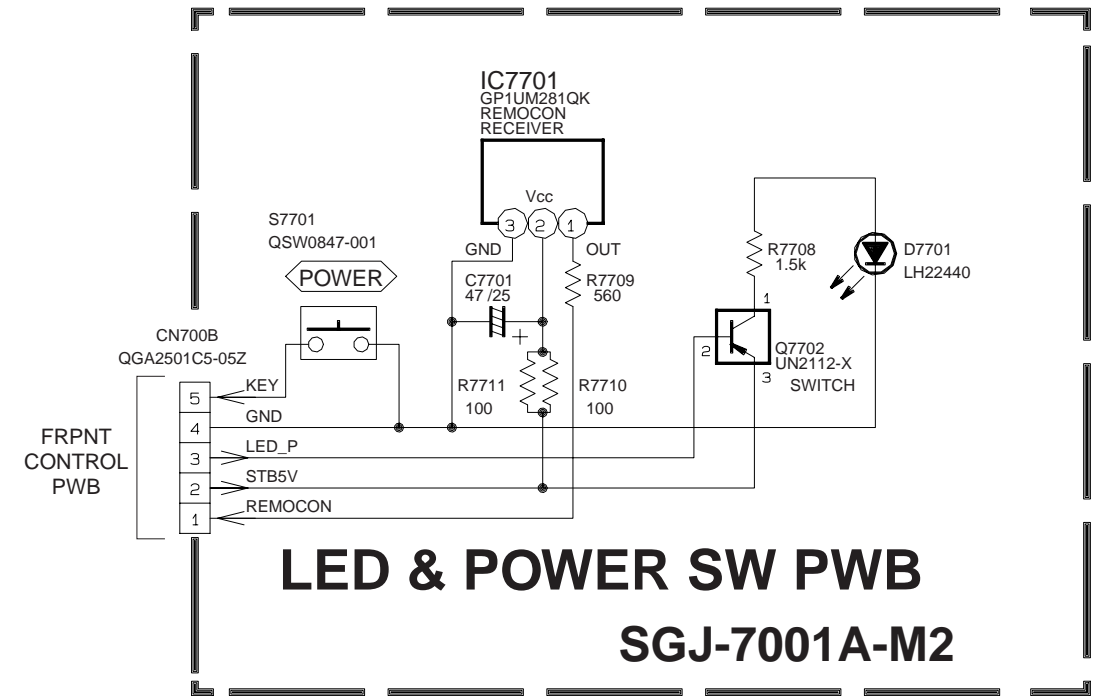

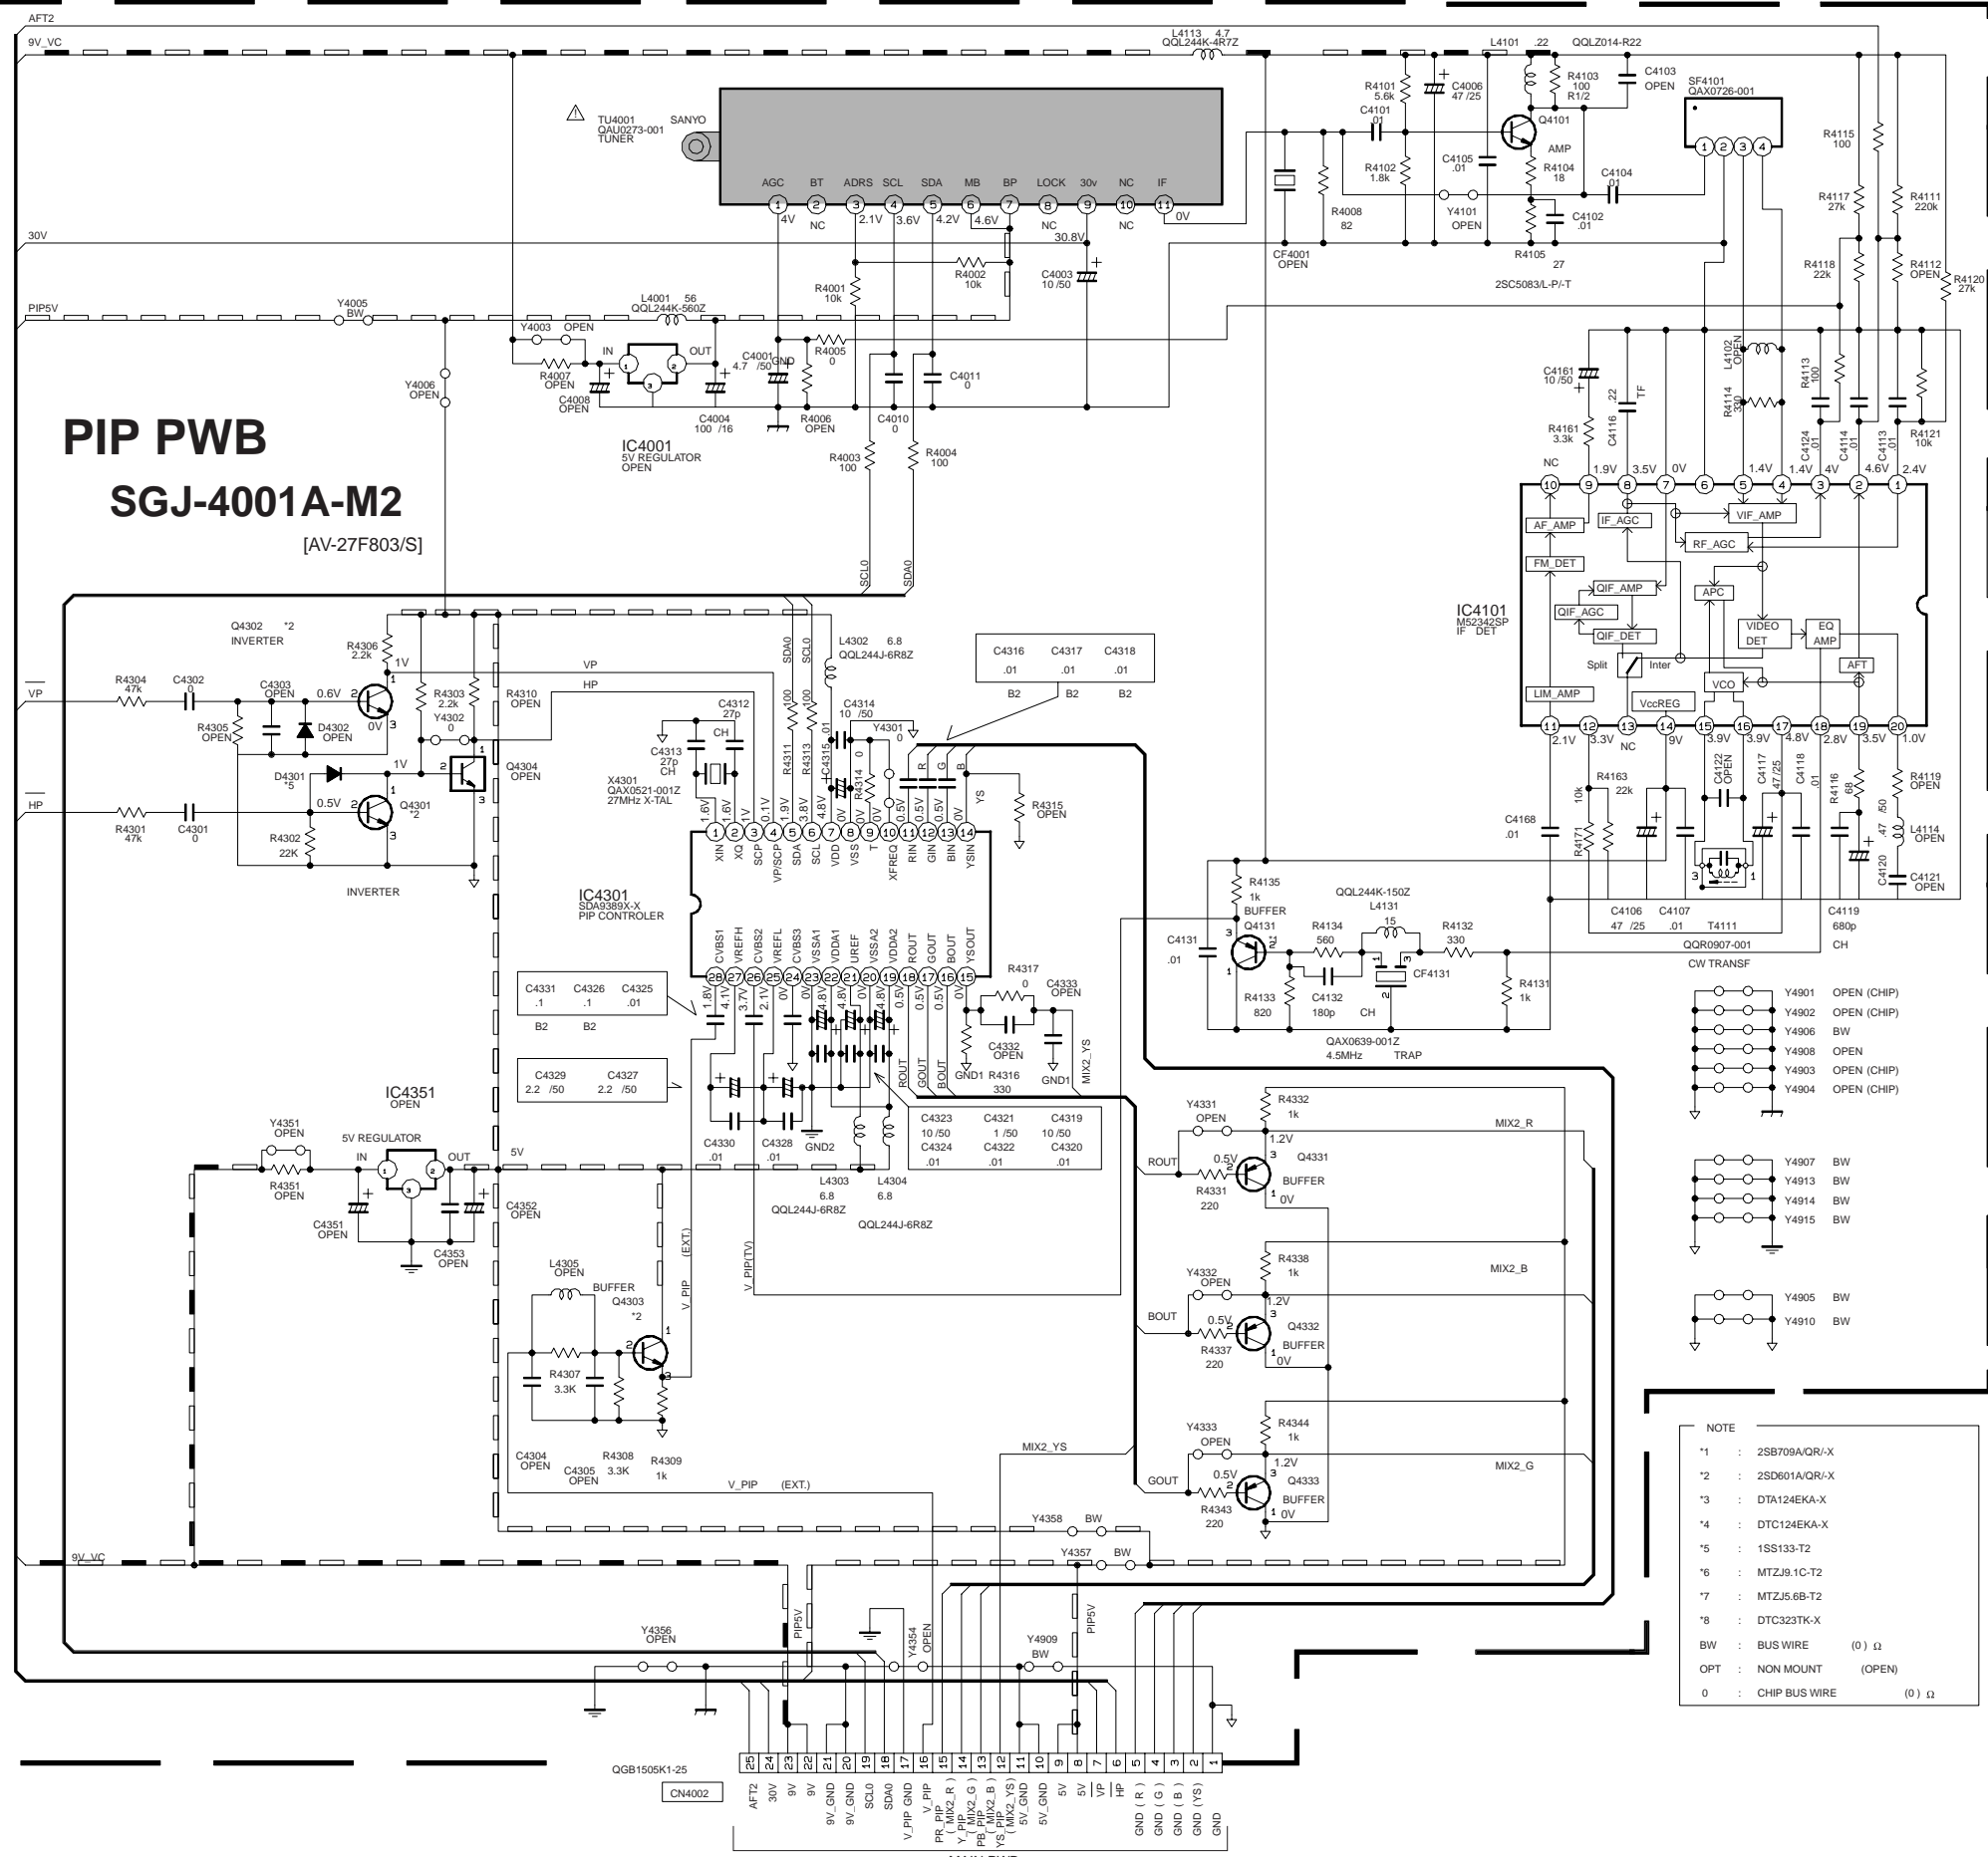


PIP PWB
SGJ-4001A-M2
[AV-27F803/S]

- NOTE
- *1 : 2SB709A/QR/-X
 - *2 : 2SD601A/QR/-X
 - *3 : DTA124EKA-X
 - *4 : DTC124EKA-X
 - *5 : 1SS133-T2
 - *6 : MTZJ9.1C-T2
 - *7 : MTZJ5.6B-T2
 - *8 : DTC323TK-X
- BW : BUS WIRE (0) Ω
OPT : NON MOUNT (OPEN)
0 : CHIP BUS WIRE (0) Ω

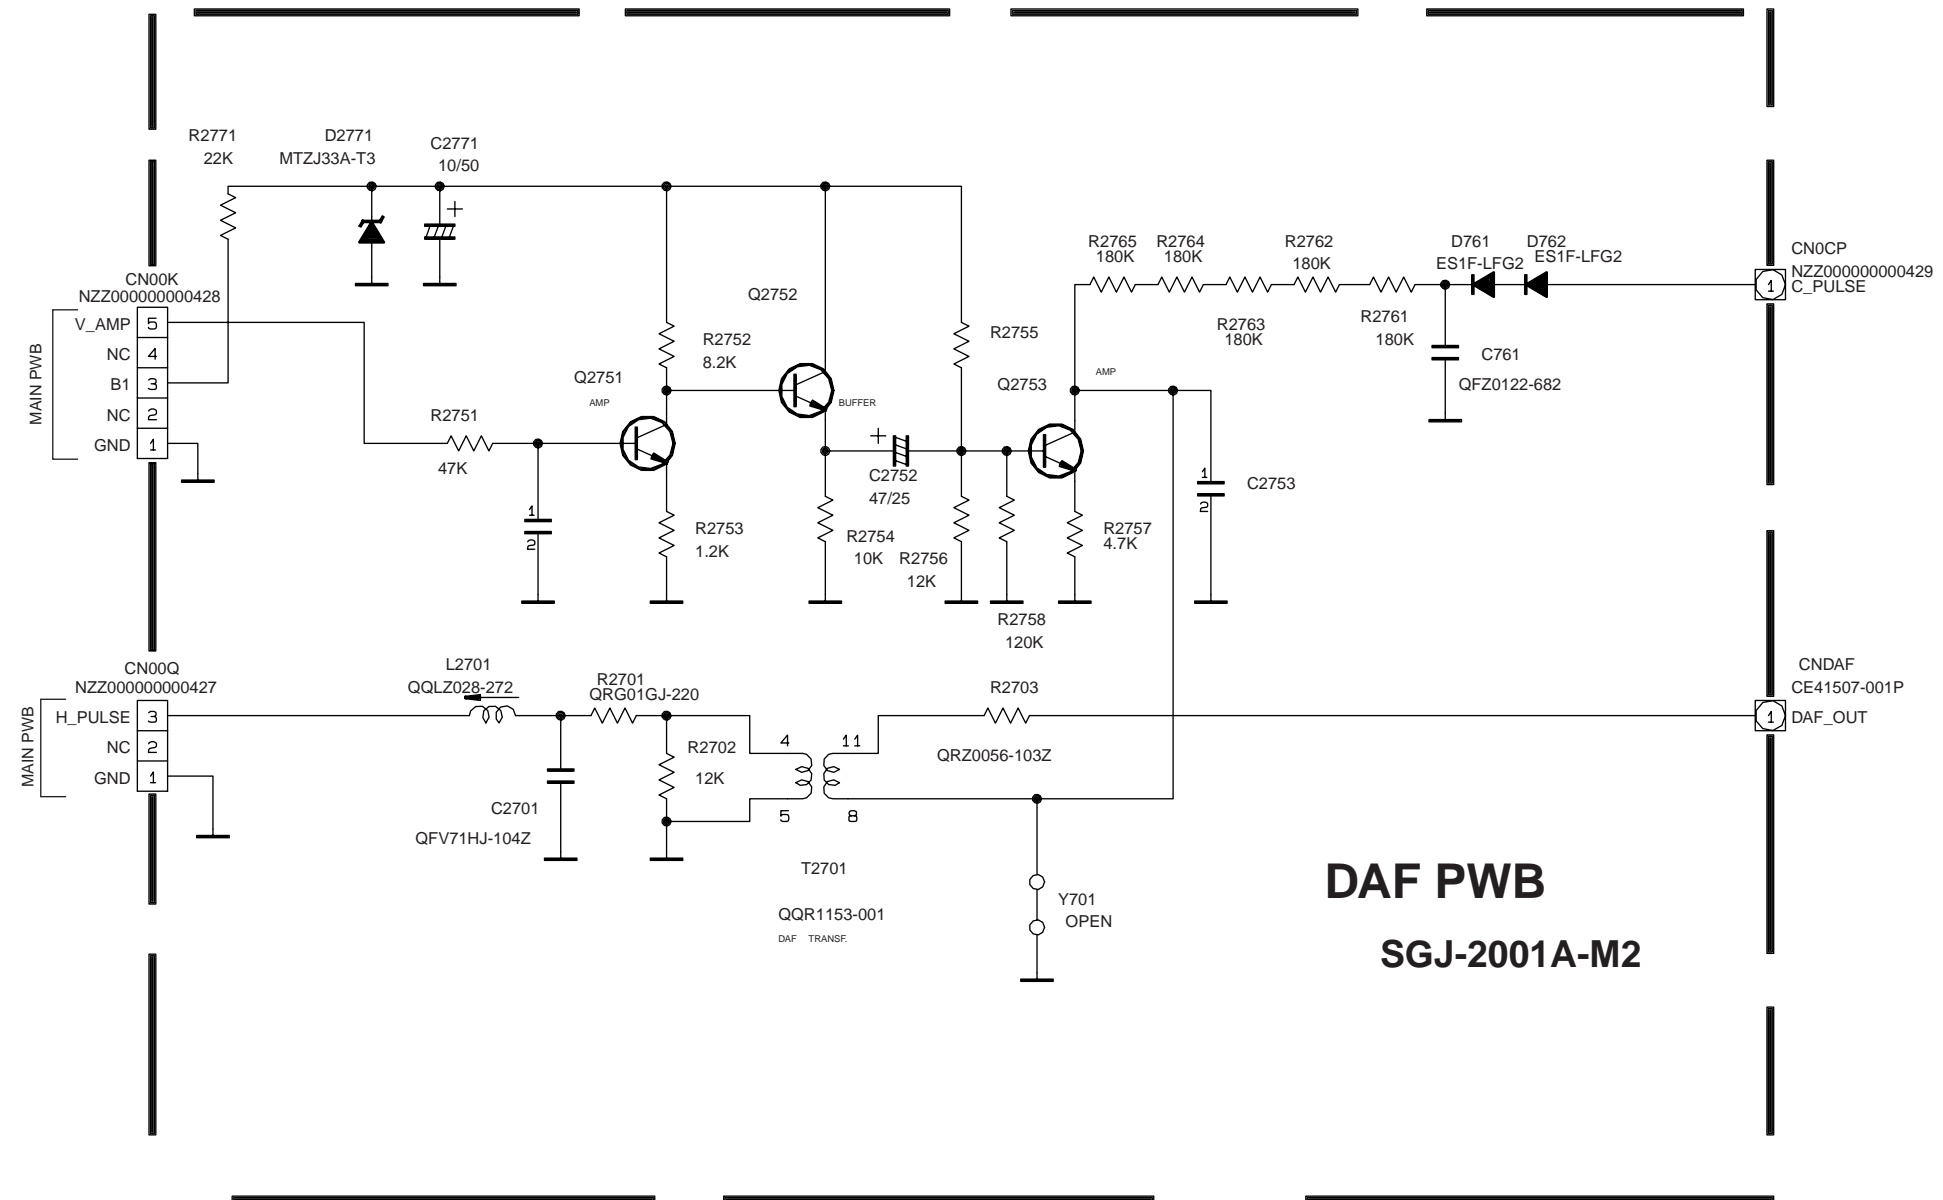


PATTERN DIAGRAMS MAIN PWB PATTERN



FRONT

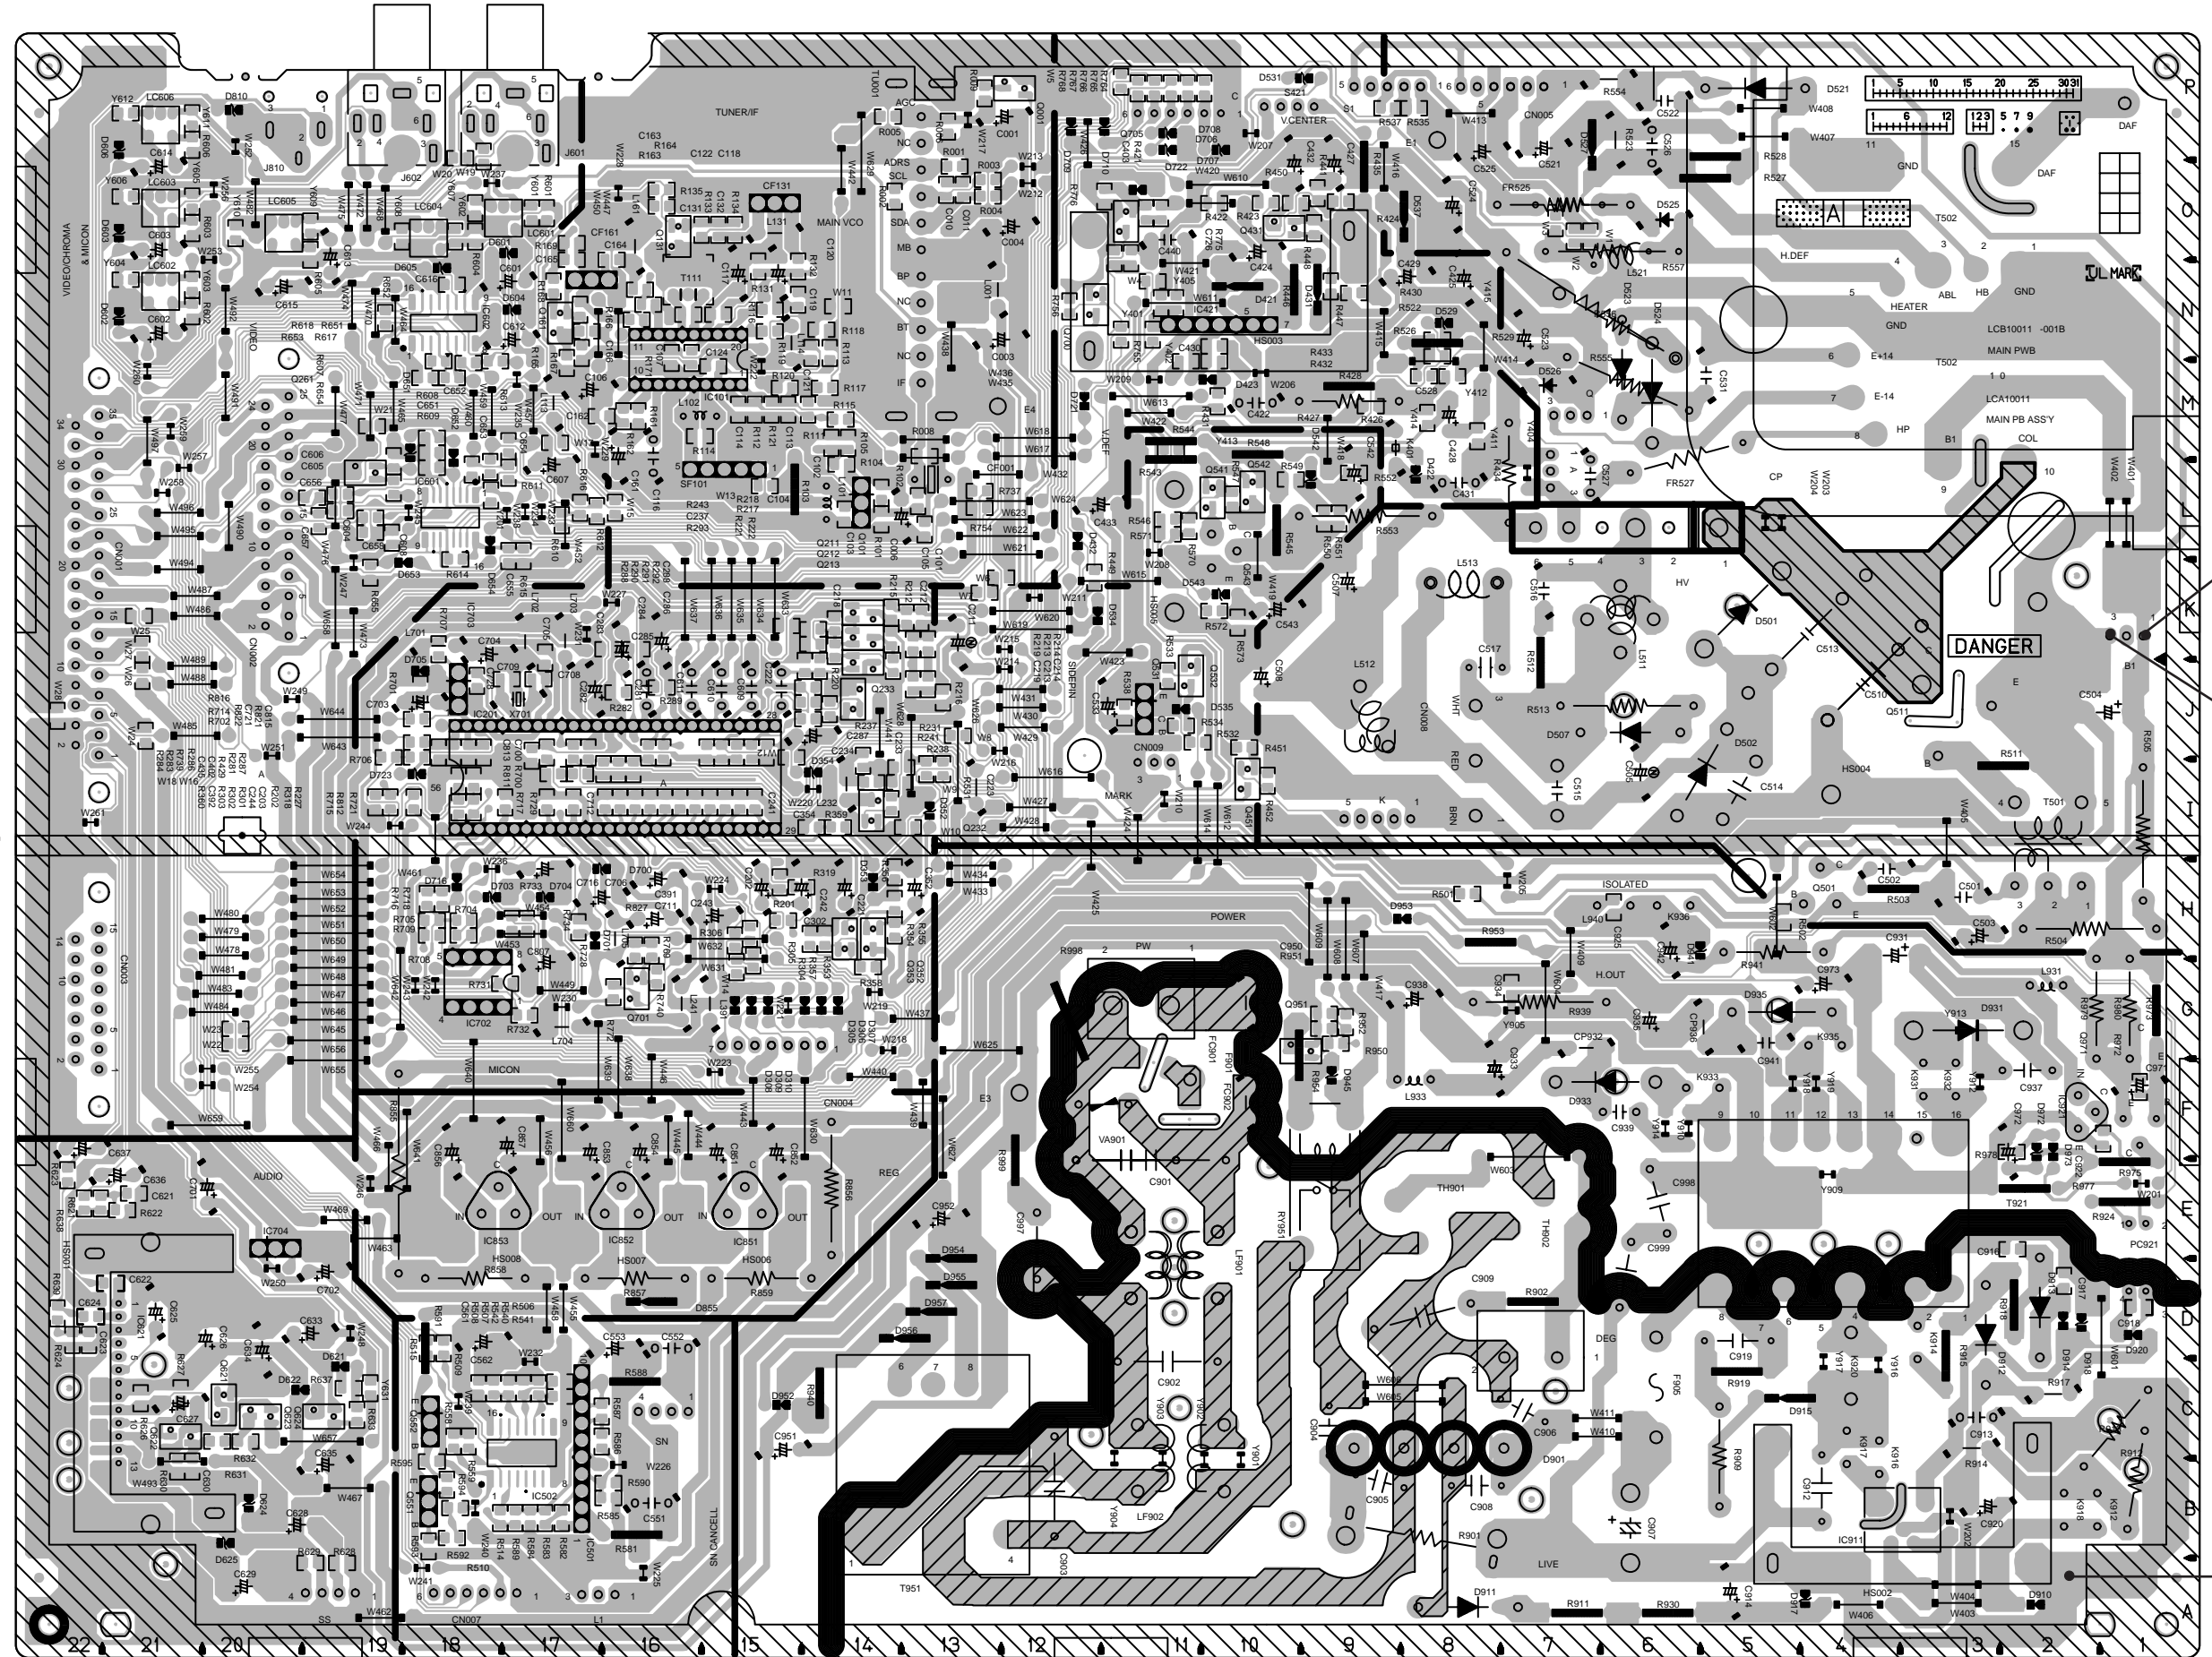


TP-91
 (B1)
 TP-E
 (77)

(T)

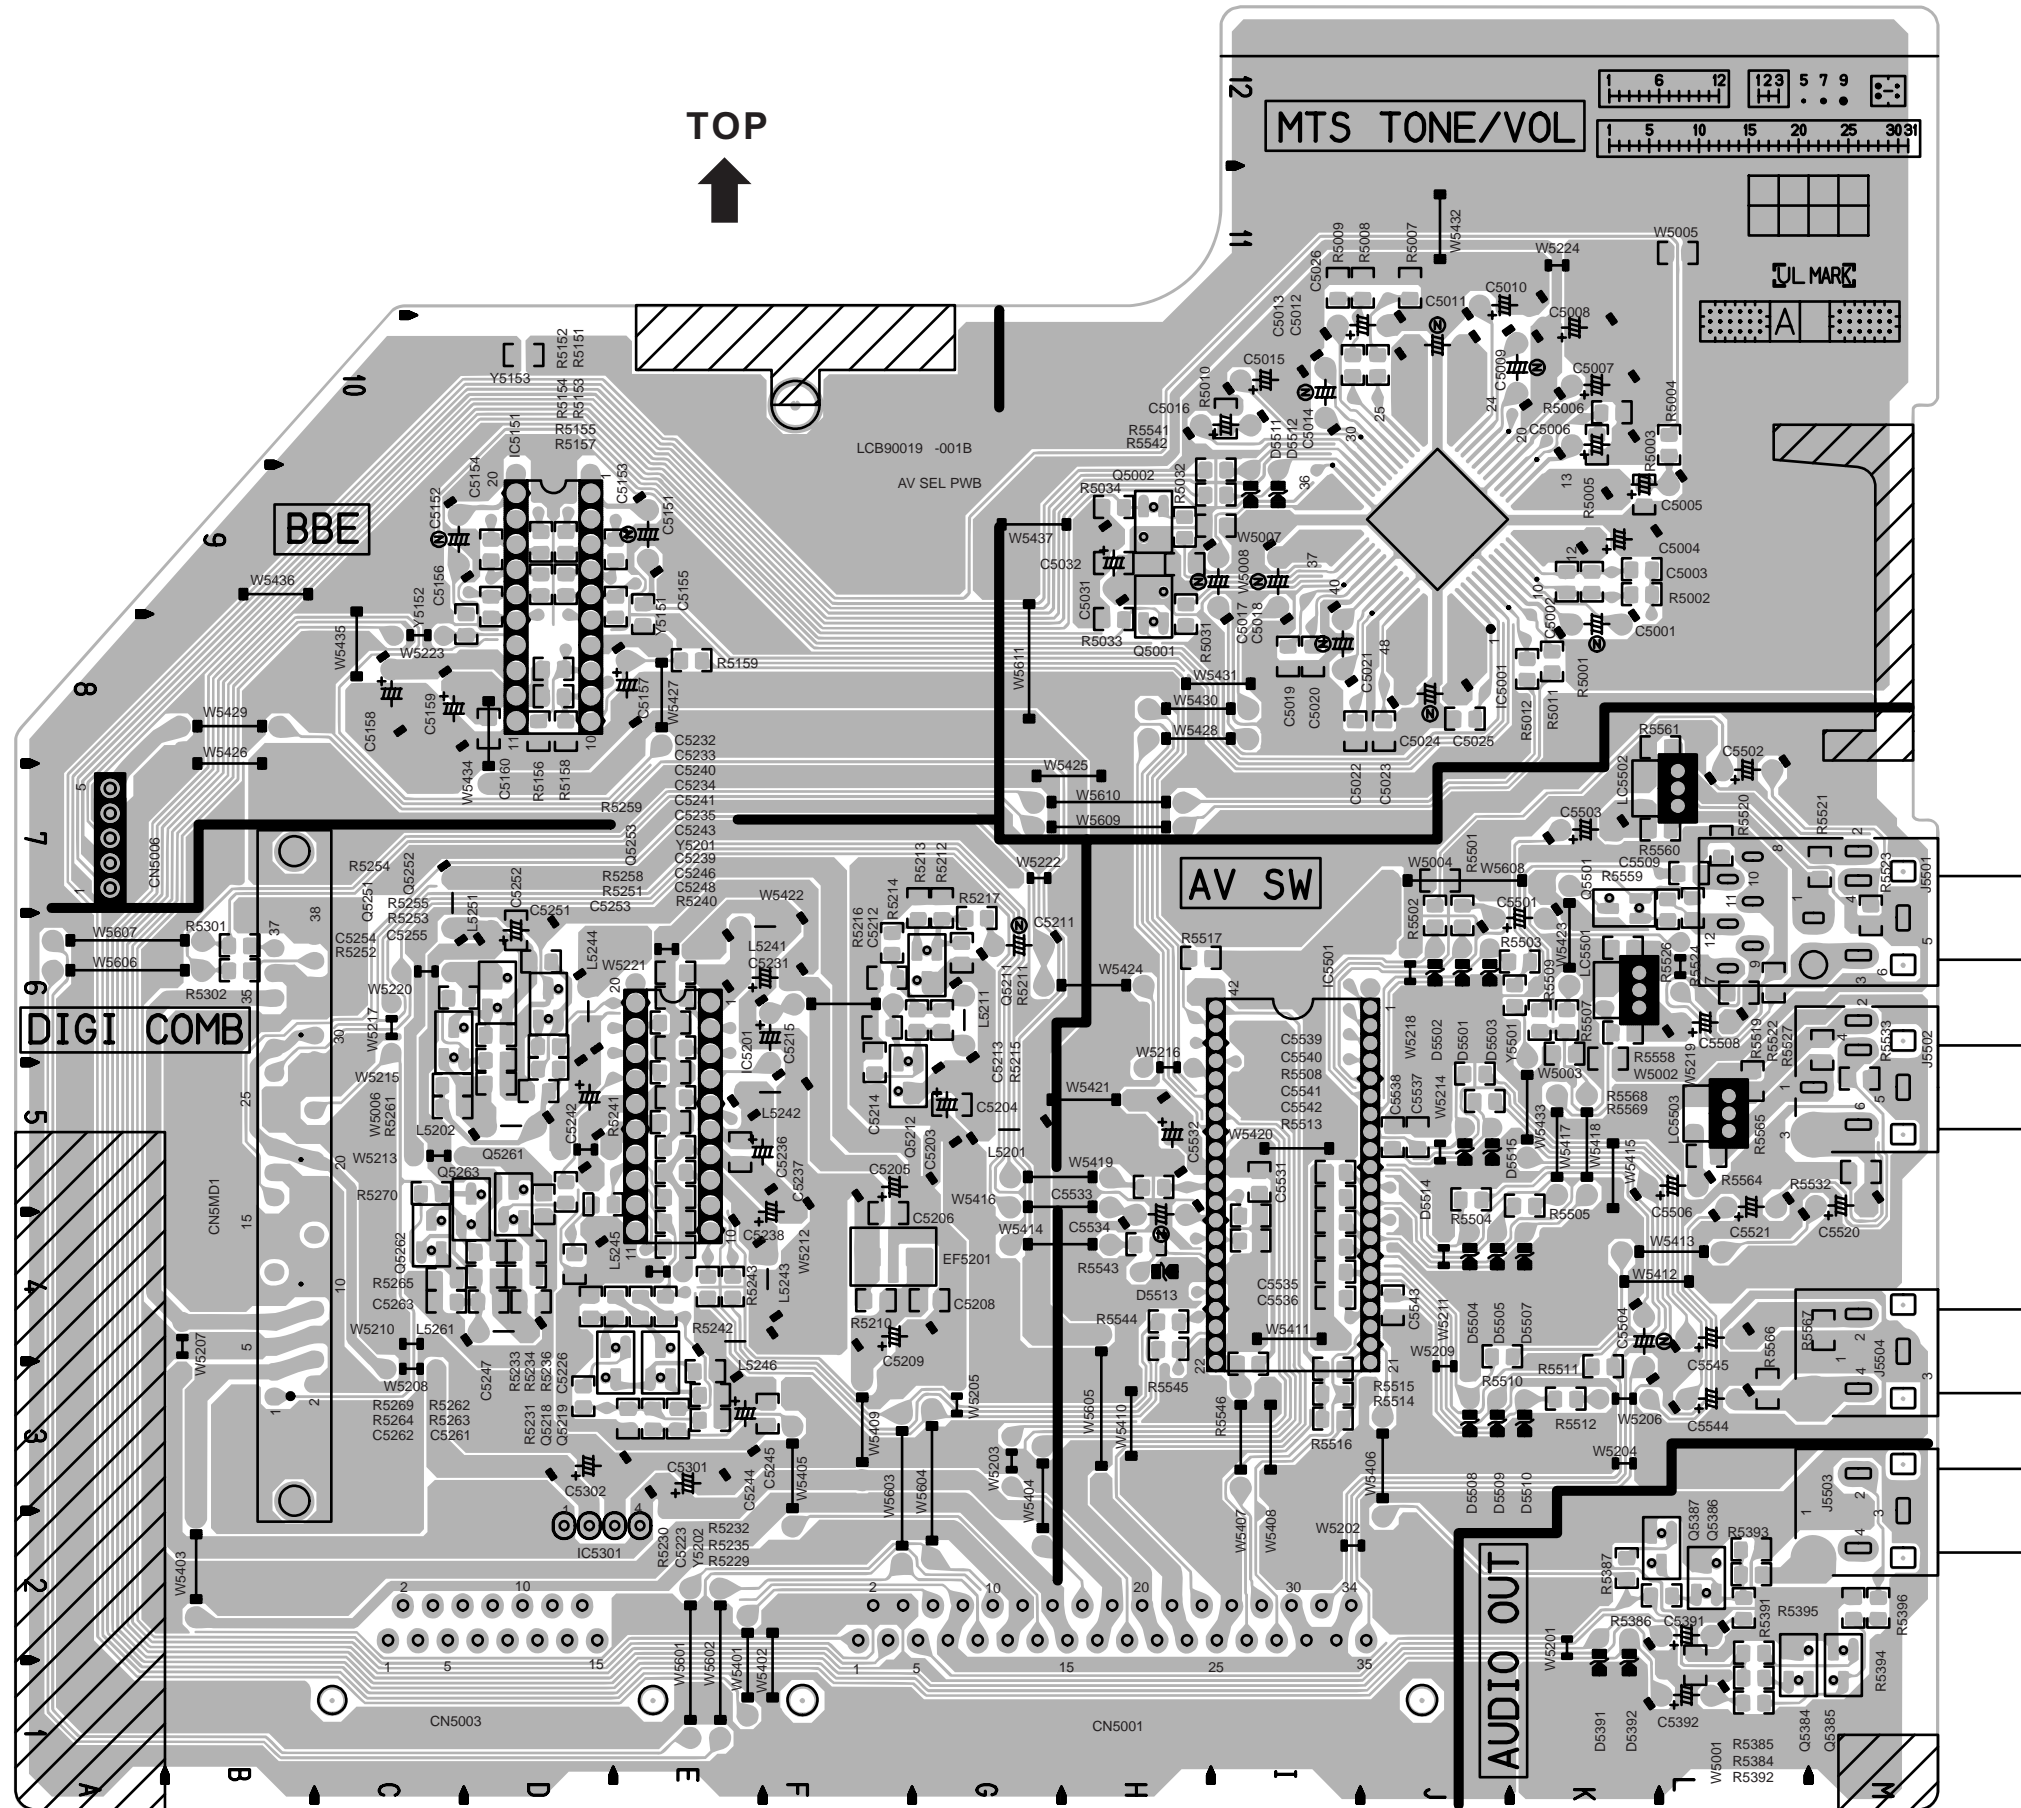


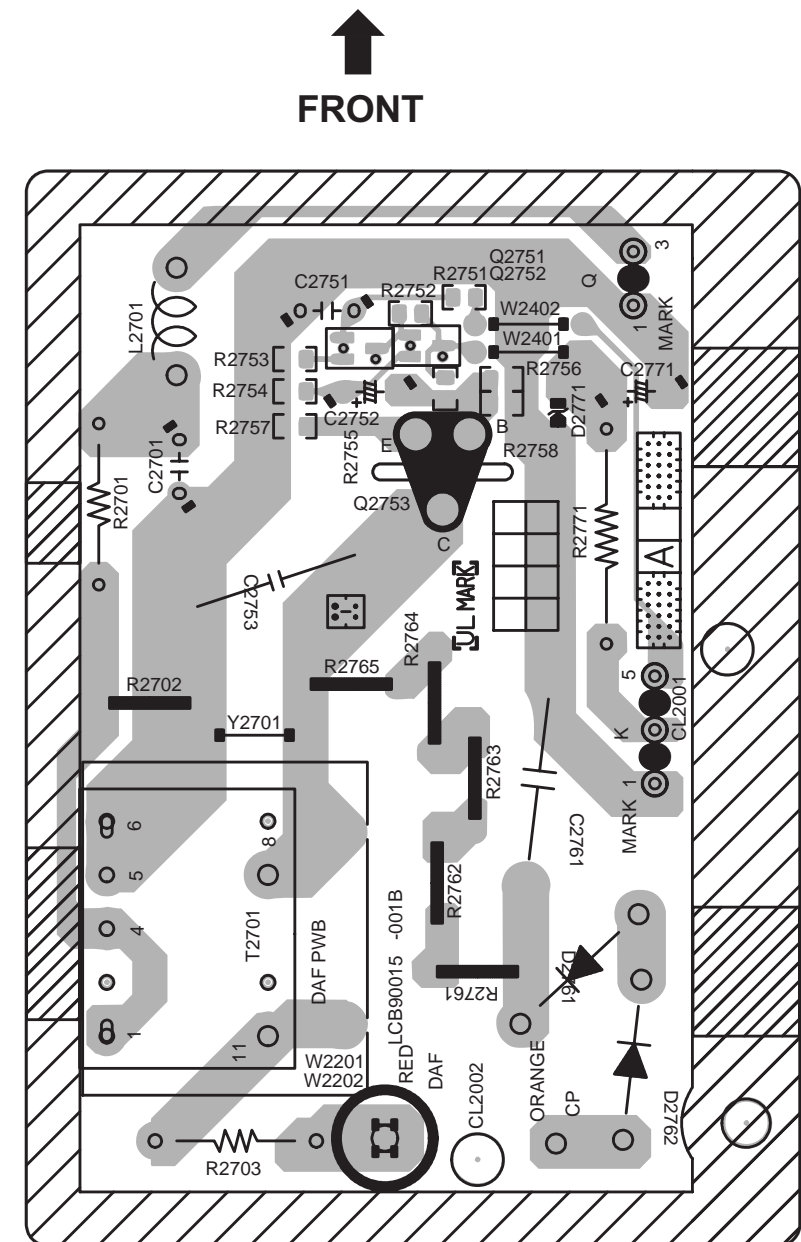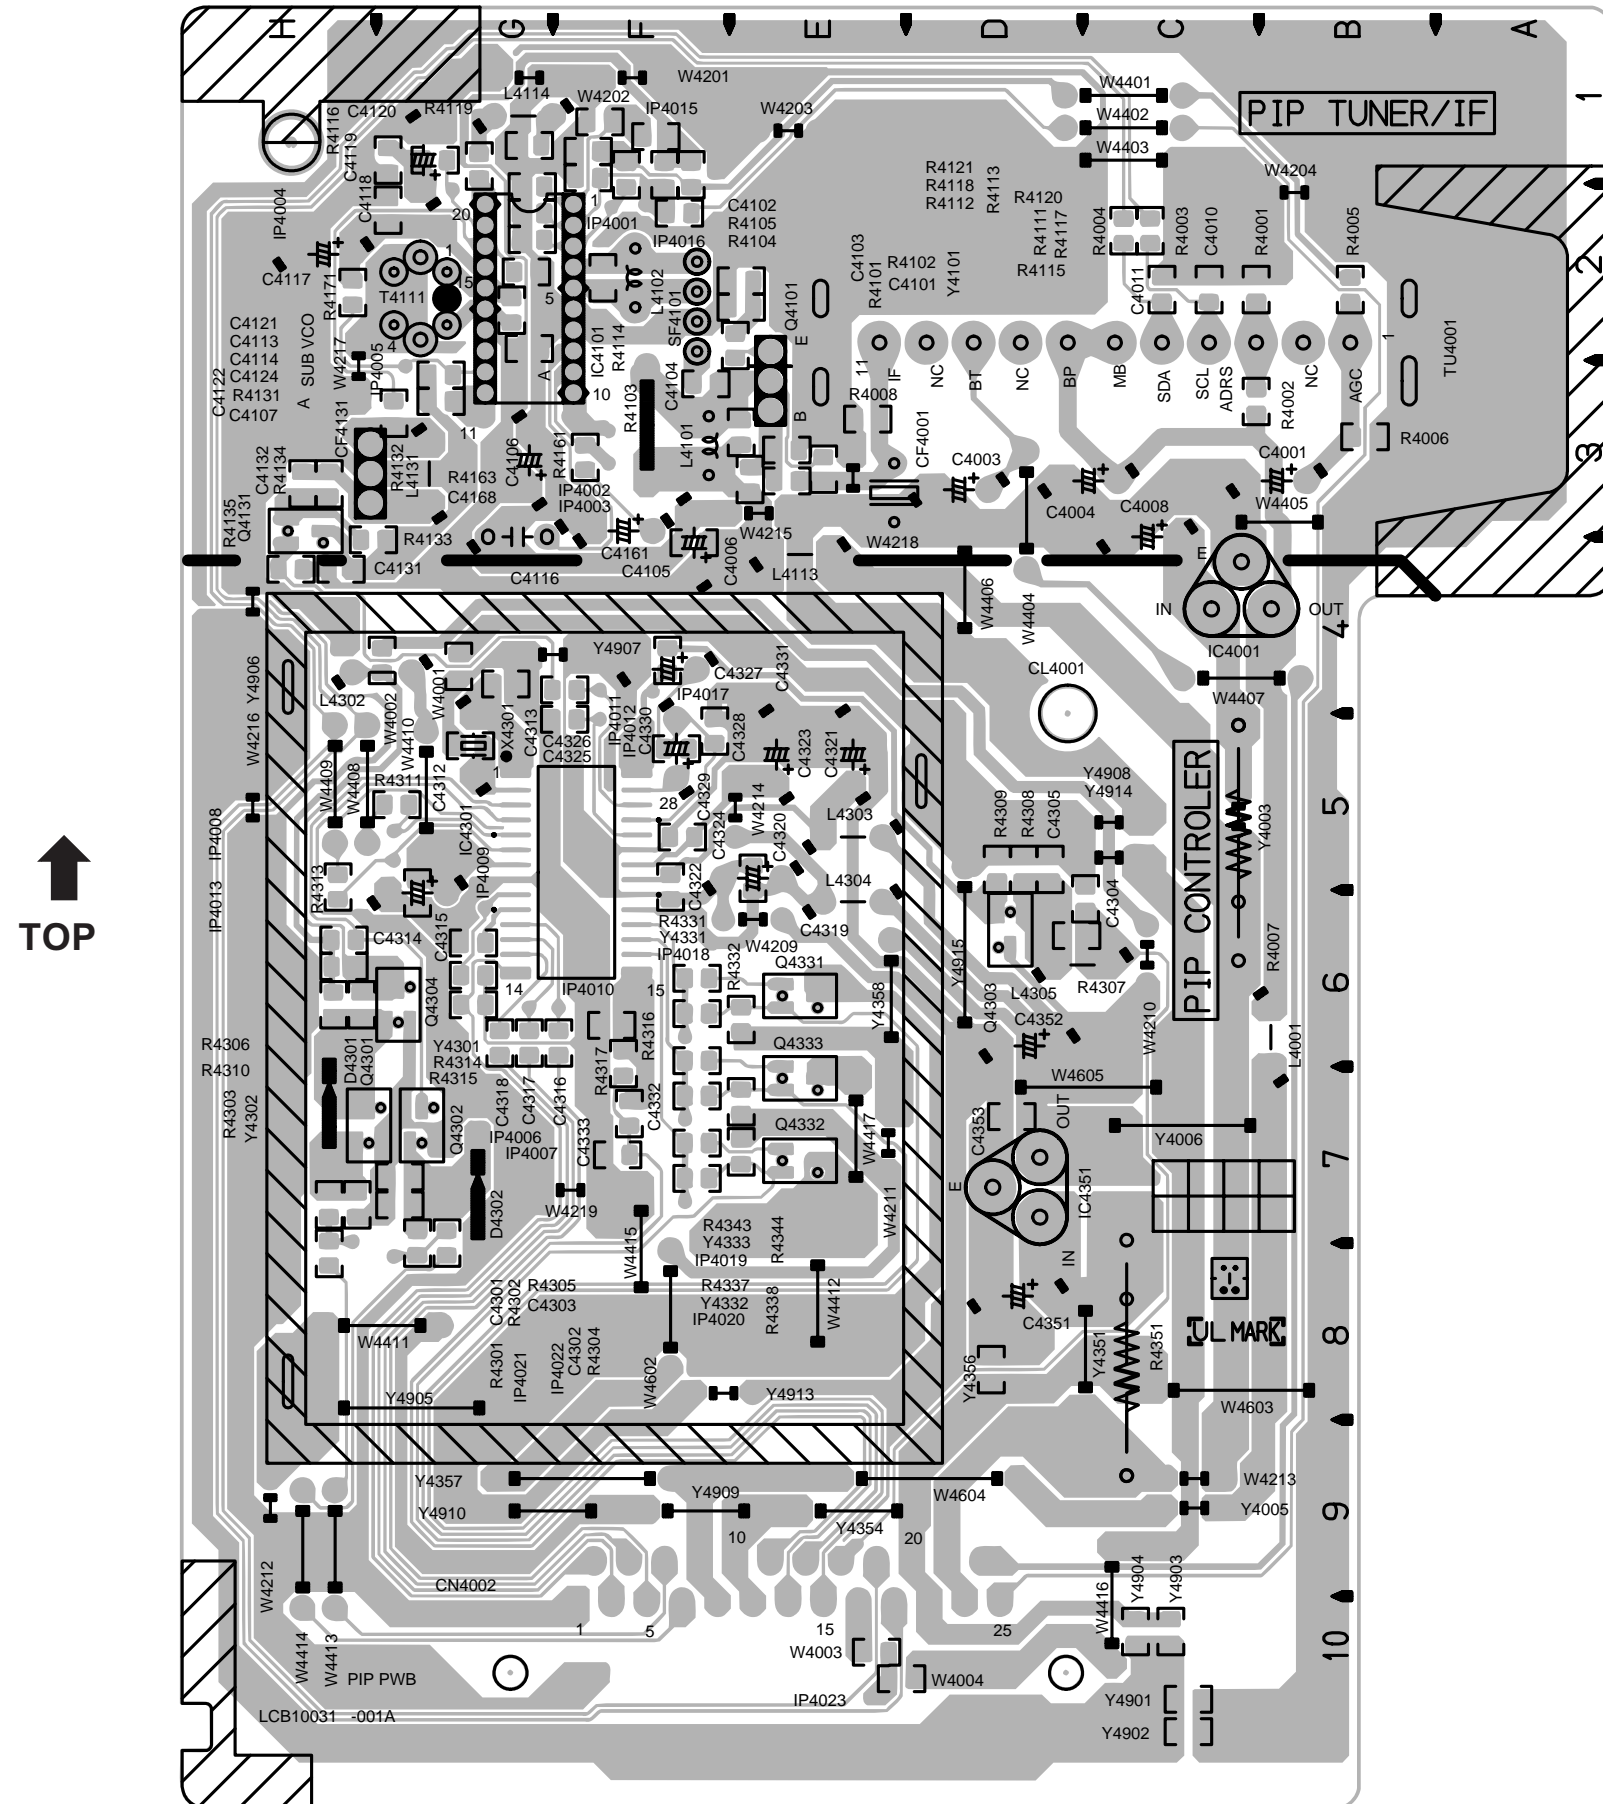


CRT SOCKET PWB PATTERN

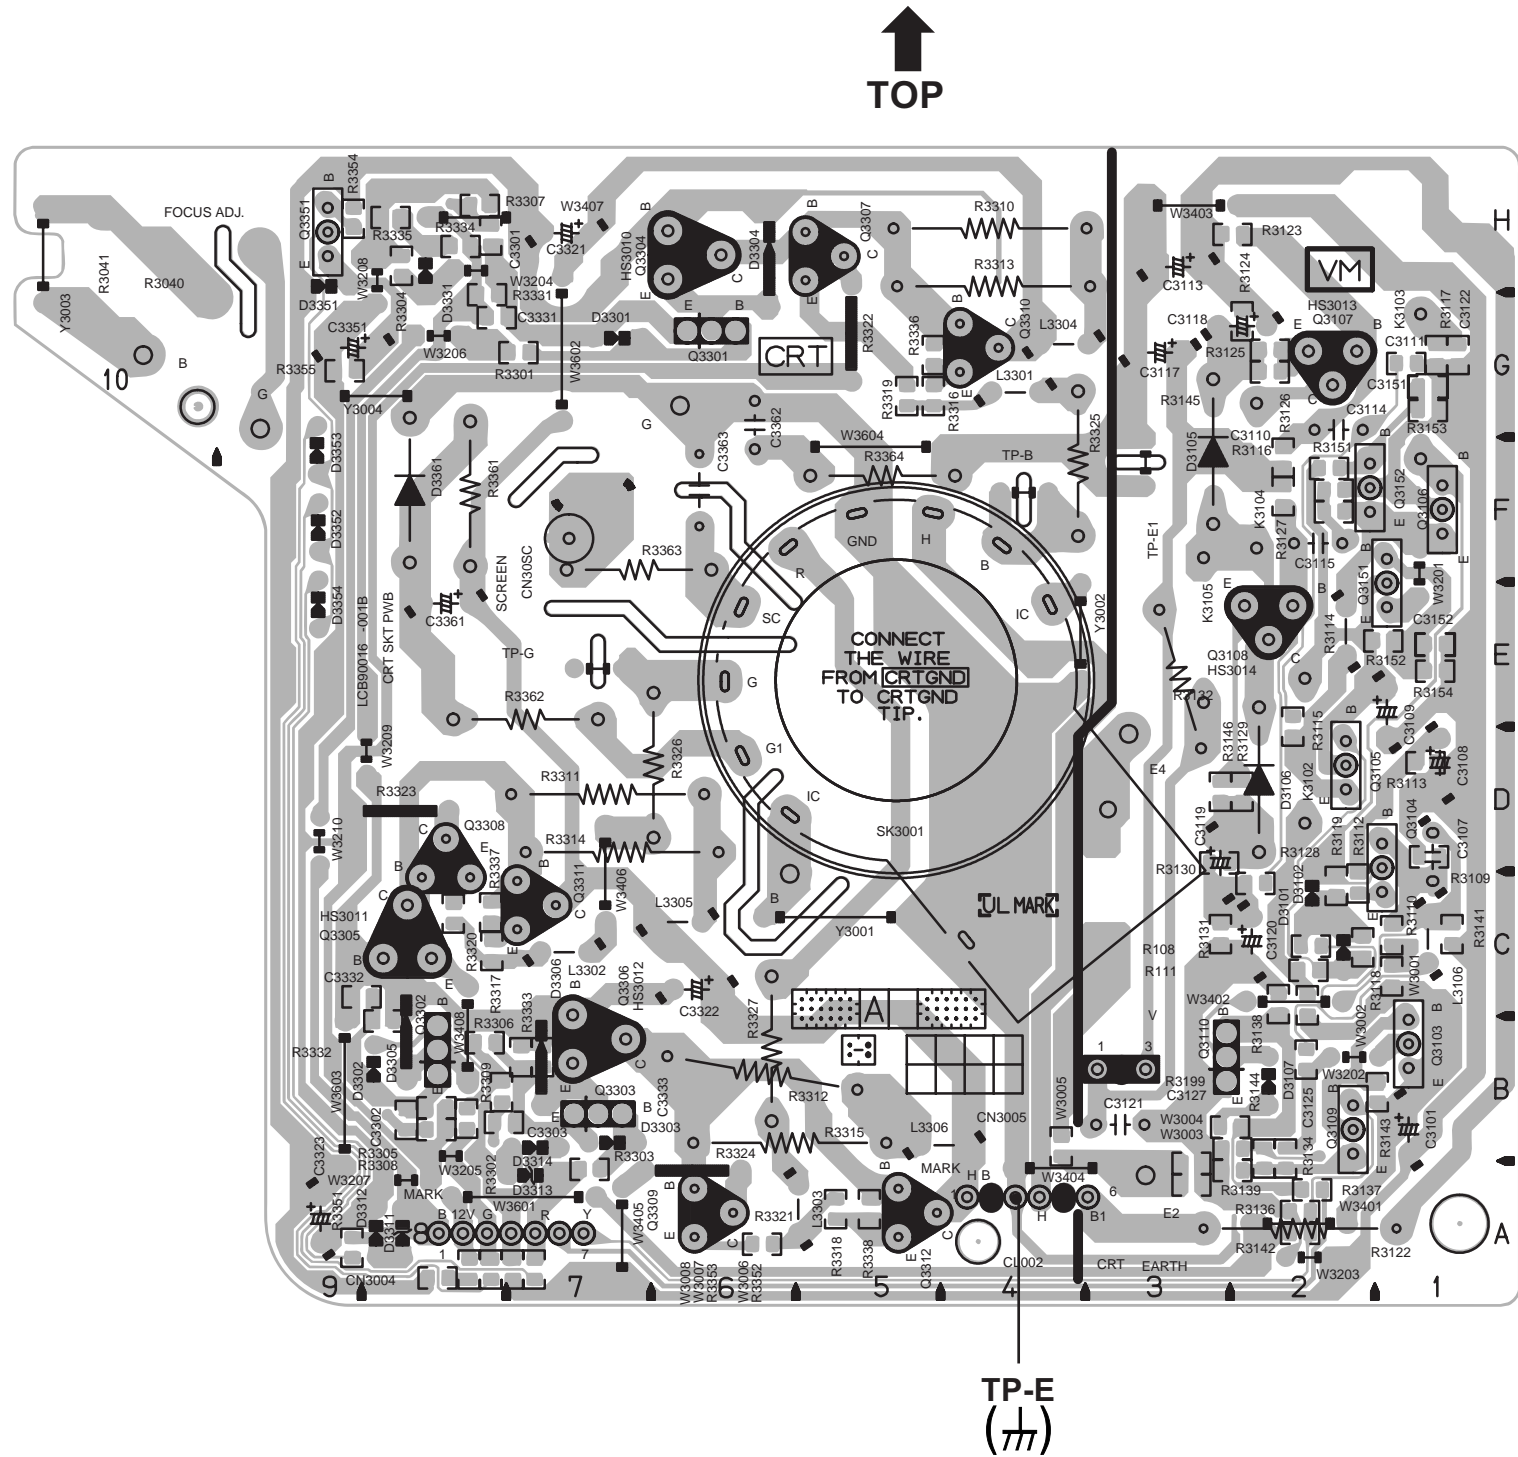

FRONT CONTROL PWB PATTERN

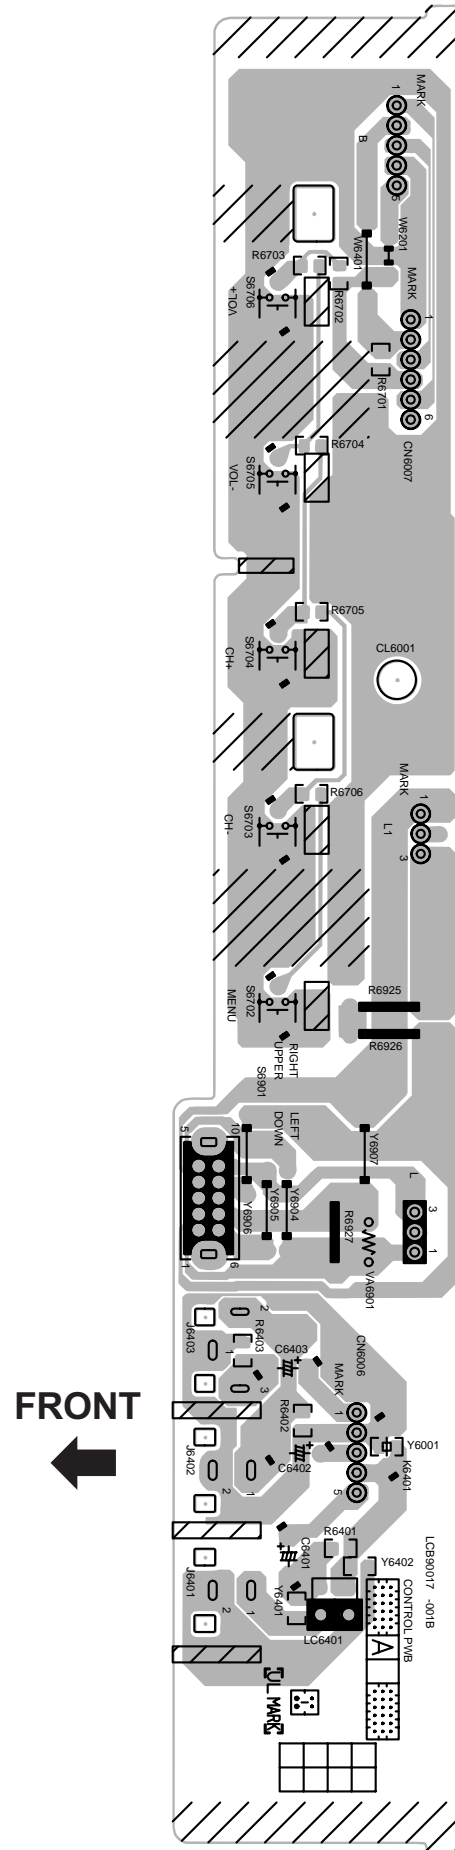

LED & POWER SW PWB PATTERN

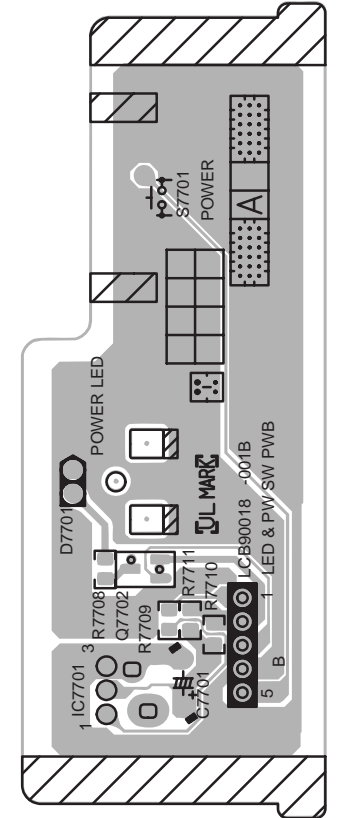

JVC SERVICE & ENGINEERING COMPANY OF AMERICA

.DIVISION OF JVC AMERICAS CORP

| | | | |
|--------------------|---|---|---------------|
| Head office | : | 1700 Valley Road, Wayne, New Jersey 07470 | (973)315-5000 |
| East Coast | : | 10 New Maple Avenue, Pine Brook, New Jersey 07058 | (973)396-1000 |
| Midwest | : | 705 Enterprise St. Aurora, Illinois 60504 | (630)851-7855 |
| West Coast | : | 5665 Corporate Avenue, Cypress, California 90630 | (714)229-8011 |
| Southwest | : | 10700 Hammerly, Suite 105, Houston, Texas 77043 | (713)935-9331 |
| Hawaii | : | 2969 Mapunapuna Place, Honolulu, Hawaii 96819 | (808)833-5828 |
| Southeast | : | 1500 Lakes Parkway, Lawrenceville, Georgia 30243 | (770)339-2582 |

JVC CANADA INC.

| | | | |
|--------------------|---|--|---------------|
| Head office | : | 21 Finchdene Square Scarborough, Ontario M1X 1A7 | (416)293-1311 |
| Vancouver | : | 13040 Worster Court Richmond B.C. V6V 2B3 | (604)270-1311 |

JVC

PARTS LIST

CAUTION

- The parts identified by the \triangle symbol are important for the safety. Whenever replacing these parts, be sure to use specified ones to secure the safety.
- The parts not indicated in this Parts List and those which are filled with lines — in the Parts No. columns will not be supplied.
- P. W. Board Ass'y will not be supplied, but those which are filled with the Parts No. in the Parts No. columns will be supplied.

ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

| RESISTORS | | CAPACITORS | |
|-----------|--|-----------------|---|
| C R | Carbon Resistor | C CAP. | Ceramic Capacitor |
| F R | Fusible Resistor | E CAP. | Electrolytic Capacitor |
| P R | Plate Resistor | M CAP. | Mylar Capacitor |
| V R | Variable Resistor | HV CAP. | High Voltage Capacitor |
| HV R | High Voltage Resistor | MF CAP. | Metalized Film Capacitor |
| MF R | Metal Film Resistor | MM CAP. | Metalized Mylar Capacitor |
| MG R | Metal Glazed Resistor | MP CAP. | Metalized Polystyrol Capacitor |
| MP R | Metal Plate Resistor | PP CAP. | Polypropylene Capacitor |
| OM R | Metal Oxide Film Resistor | PS CAP. | Polystyrol Capacitor |
| CMF R | Coating Metal Film Resistor | TF CAP. | Thin Film Capacitor |
| UNF R | Non-Flammable Resistor | MPP CAP. | Metalized Polypropylene Capacitor |
| CH V R | Chip Variable Resistor | TAN. CAP. | Tantalum Capacitor |
| CH MG R | Chip Metal Glazed Resistor | CH C CAP. | Chip Ceramic Capacitor |
| COMP. R | Composition Resistor | BP E CAP. | Bi-Polar Electrolytic Capacitor |
| LPTC R | Linear Positive Temperature Coefficient Resistor | CH AL E CAP. | Chip Aluminum Electrolytic Capacitor |
| | | CH AL BP CAP. | Chip Aluminum Bi-Polar Capacitor |
| | | CH TAN. E CAP. | Chip Tantalum Electrolytic Capacitor |
| | | CH AL BP E CAP. | Chip Tantalum Bi-Polar Electrolytic Capacitor |

| TOLERANCES | | | | | | | | | |
|------------|-----|-----|------|------|------|--------------|--------------|--------------|--------------|
| F | G | J | K | M | N | R | H | Z | P |
| ±1% | ±2% | ±5% | ±10% | ±20% | ±30% | +30% -10% | +50% -10% | +80% -20% | +100% -0% |

CONTENTS

■ USING PW BOARD & REMOTE CONTROL UNIT 34

[AV-36F703/Y] [AV-36F713/Y] [AV-36F803/Y]

■ EXPLODED VIEW PARTS LIST 35,36

■ EXPLODED VIEW 35,37

■ PRINTED WIRING BOARD PARTS LIST

- MAIN PW BOARD ASS'Y 38
- DAF PW BOARD ASS'Y 41
- CRT SOCKET PW BOARD ASS'Y 42
- PIP PW BOARD ASS'Y [AV-36F803/Y] 43
- AV SEL PW BOARD ASS'Y [AV-36F803/Y] 43
- AV SEL PW BOARD ASS'Y [AV-36F703/Y] [AV-36F713/Y] 44
- FRONT CONTROL PW BOARD ASS'Y 46
- LED & POWER SW PW BOARD ASS'Y 46
- 3D Y/C SEP MODULE PW BOARD ASS'Y [AV-36F803/Y] 46

■ REMOTE CONTROL UNIT PARTS LIST 46

■ PACKING 47

■ PACKING PARTS LIST 47

USING P.W. BOARD & REMOTE CONTROL UNIT

| Model P.W.B ASS'Y | AV-36F703/Y | AV-36F713/Y | AV-36F803/Y |
|-----------------------|--------------|--------------|--------------|
| MAIN PWB | SGJ-1009A-M2 | SGJ-1008A-M2 | SGJ-1001A-M2 |
| DAF PWB | SGJ-2001A-M2 | ← | ← |
| CRT SOCKET PWB | SGJ-3001A-M2 | ← | ← |
| PIP PWB | — | — | SGJ-4001A-M2 |
| AV SEL PWB | SGJ-5002A-M2 | ← | SGJ-5001A-M2 |
| FRONT CONTROL PWB | SGJ-6003A-M2 | ← | ← |
| LED & POWER SW PWB | SGJ-7001A-M2 | ← | ← |
| 3D Y/C SEP MODULE PWB | — | — | SGJ0Y001A-M2 |
| REMOTE CONTROL UNIT | RM-C326G-1A | RM-C326-1A | RM-C325G-1A |

EXPLODED VIEW PARTS LIST(1)

[AV-36F703/Y]

| △ Ref.No. | Part No. | Part Name | Description |
|-----------|----------------|-------------------------|----------------|
| 1 | LC41193-001A-C | JVC MARK | |
| 2 | LC30191-003A-A | REMOCON LENS | |
| △ 100 | LC11153-003B-A | FRONT CABI ASSY(Silver) | Inc.No.101~105 |
| △ 101 | LC20628-001C-A | DOOR | |
| 102 | CM48229-00A-C | DOOR LATCH | |
| △ 103 | LC31237-001A-A | KNOB(POWER) | |
| 104 | CM36481-002A-A | SPRING | |
| 105 | LC31238-004A-A | OPERATION SHEET | |


[AV-36F713/Y]

| △ Ref.No. | Part No. | Part Name | Description |
|-----------|----------------|------------------------|----------------|
| 1 | LC41193-002A-C | JVC MARK | |
| 2 | LC30191-003A-A | REMOCON LENS | |
| △ 100 | LC11153-004A-A | FRONT CABI ASSY(Black) | Inc.No.101~105 |
| △ 101 | LC20628-002A-A | DOOR | |
| 102 | CM48229-00A-C | DOOR LATCH | |
| △ 103 | LC31237-002A-A | KNOB(POWER) | |
| 104 | CM36481-002A-A | SPRING | |
| 105 | LC31238-005A-A | OPERATION SHEET | |

[AV-36F803/Y]

| △ Ref.No. | Part No. | Part Name | Description |
|-----------|----------------|-------------------------|----------------|
| 1 | LC41193-001A-C | JVC MARK | |
| 2 | LC30191-003A-A | REMOCON LENS | |
| △ 100 | LC11153-003B-A | FRONT CABI ASSY(Silver) | Inc.No.101~105 |
| △ 101 | LC20628-001C-A | DOOR | |
| 102 | CM48229-00A-C | DOOR LATCH | |
| △ 103 | LC31237-001A-A | KNOB(POWER) | |
| 104 | CM36481-002A-A | SPRING | |
| 105 | LC31238-004A-A | OPERATION SHEET | |

EXPLODED VIEW (1)

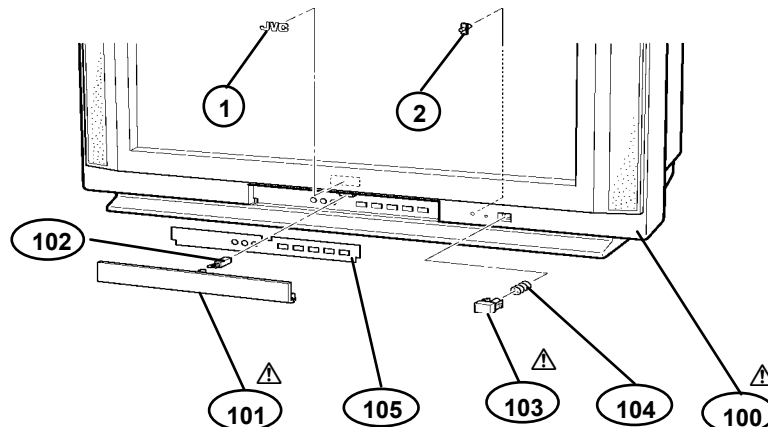

AV-36F703
 AV-36F713
 AV-36F803

EXPLODED VIEW PARTS LIST(2)

[AV-36F703/Y]

| △ Ref.No. | Part No. | Part Name | Description |
|-----------|----------------|--------------------|---|
| △ V01 | A90AJZ90X02 | ITC | Inc.DY,PC MAGNET,WEDGE |
| △ L01 | QQW0122-001 | DEG COIL | |
| △ T502 | QQH0125-001 | FB TRANSF | |
| 3 | A48457-4-S | SPRING | |
| 4 | WJY0016-003A | E-BRAIDED ASSY | |
| 5 | WJY0013-002A | E-BRAIDED SUB ASSY | |
| △ 6 | LC20217-004B-A | CONTROL KNOB | |
| △ 7 | QAS0101-001 | SPEAKER | (x2)SP01-P02 |
| 8 | LC20629-001B-A | SP HOLDER | (x2) |
| 9 | LC40226-002A-A | SPACER | (x4) |
| 10 | LC41029-001A-A | SCREW | (x4) |
| △ 11 | LC10883-001C-A | CHASSIS BASE | |
| △ 12 | LC20899-004A-A | TERMINAL BOARD | |
| 13 | QYSB5B3010Z | SCREW | (x4) |
| △ 14 | QMPD200-200-JC | POWER CORD | or QMPD390-200-JS Within MAIN PWB (CNOPW) |
| △ 15 | LC20106-001D-A | POWER CORD CLAMP | |
| △ 16 | LC11155-001C-A | REAR COVER | |
| 17 | QYSB5FG4016Z | SCREW | (x13) |
| △ 18 | GQ30032-001A-A | RATING LABEL | |
| △ 19 | GQ30034-001B-A | WARNING LABEL | |


[AV-36F713/Y]

| | | | |
|--------|----------------|--------------------|---|
| △ V01 | A90AJZ90X02 | ITC | Inc.DY,PC MAGNET,WEDGE |
| △ L01 | QQW0122-001 | DEG COIL | |
| △ T502 | QQH0125-001 | FB TRANSF | |
| 3 | A48457-4-S | SPRING | |
| 4 | WJY0016-003A | E-BRAIDED ASSY | |
| 5 | WJY0013-002A | E-BRAIDED SUB ASSY | |
| △ 6 | LC20217-006A-A | CONTROL KNOB | |
| △ 7 | QAS0101-001 | SPEAKER | (x2)SP01-P02 |
| 8 | LC20629-001B-A | SP HOLDER | (x2) |
| 9 | LC40226-002A-A | SPACER | (x4) |
| 10 | LC41029-001A-A | SCREW | (x4) |
| △ 11 | LC10883-001C-A | CHASSIS BASE | |
| △ 12 | LC20899-004A-A | TERMINAL BOARD | |
| 13 | QYSB5B3010Z | SCREW | (x4) |
| △ 14 | QMPD200-200-JC | POWER CORD | or QMPD390-200-JS Within MAIN PWB (CNOPW) |
| △ 15 | LC20106-001D-A | POWER CORD CLAMP | |
| △ 16 | LC11155-001C-A | REAR COVER | |
| 17 | QYSB5FG4016Z | SCREW | (x13) |
| △ 18 | GQ30032-001A-A | RATING LABEL | |
| △ 19 | GQ30034-001B-A | WARNING LABEL | |

[AV-36F803/Y]

| | | | |
|--------|----------------|--------------------|---|
| △ V01 | A90AJZ90X02 | ITC | Inc.DY,PC MAGNET,WEDGE |
| △ L01 | QQW0122-001 | DEG COIL | |
| △ T502 | QQH0125-001 | FB TRANSF | |
| 3 | A48457-4-S | SPRING | |
| 4 | WJY0016-003A | E-BRAIDED ASSY | |
| 5 | WJY0013-002A | E-BRAIDED SUB ASSY | |
| △ 6 | LC20217-004B-A | CONTROL KNOB | |
| △ 7 | QAS0101-001 | SPEAKER | (x2)SP01-P02 |
| 8 | LC20629-001B-A | SP HOLDER | (x2) |
| 9 | LC40226-002A-A | SPACER | (x4) |
| 10 | LC41029-001A-A | SCREW | (x4) |
| △ 11 | LC10883-001C-A | CHASSIS BASE | |
| △ 12 | LC20899-005A-A | TERMINAL BOARD | |
| 13 | QYSB5B3010Z | SCREW | (x6) |
| △ 14 | QMPD200-200-JC | POWER CORD | or QMPD390-200-JS Within MAIN PWB (CNOPW) |
| △ 15 | LC20106-001D-A | POWER CORD CLAMP | |
| △ 16 | LC11155-001C-A | REAR COVER | |
| 17 | QYSB5FG4016Z | SCREW | (x13) |
| △ 18 | GQ30032-001A-A | RATING LABEL | |
| △ 19 | GQ30034-001B-A | WARNING LABEL | |
| 20 | WJX0014-002A | E-COAXIAL ASSY | [AV-36F803/Y ONLY] |

EXPLODED VIEW (2)

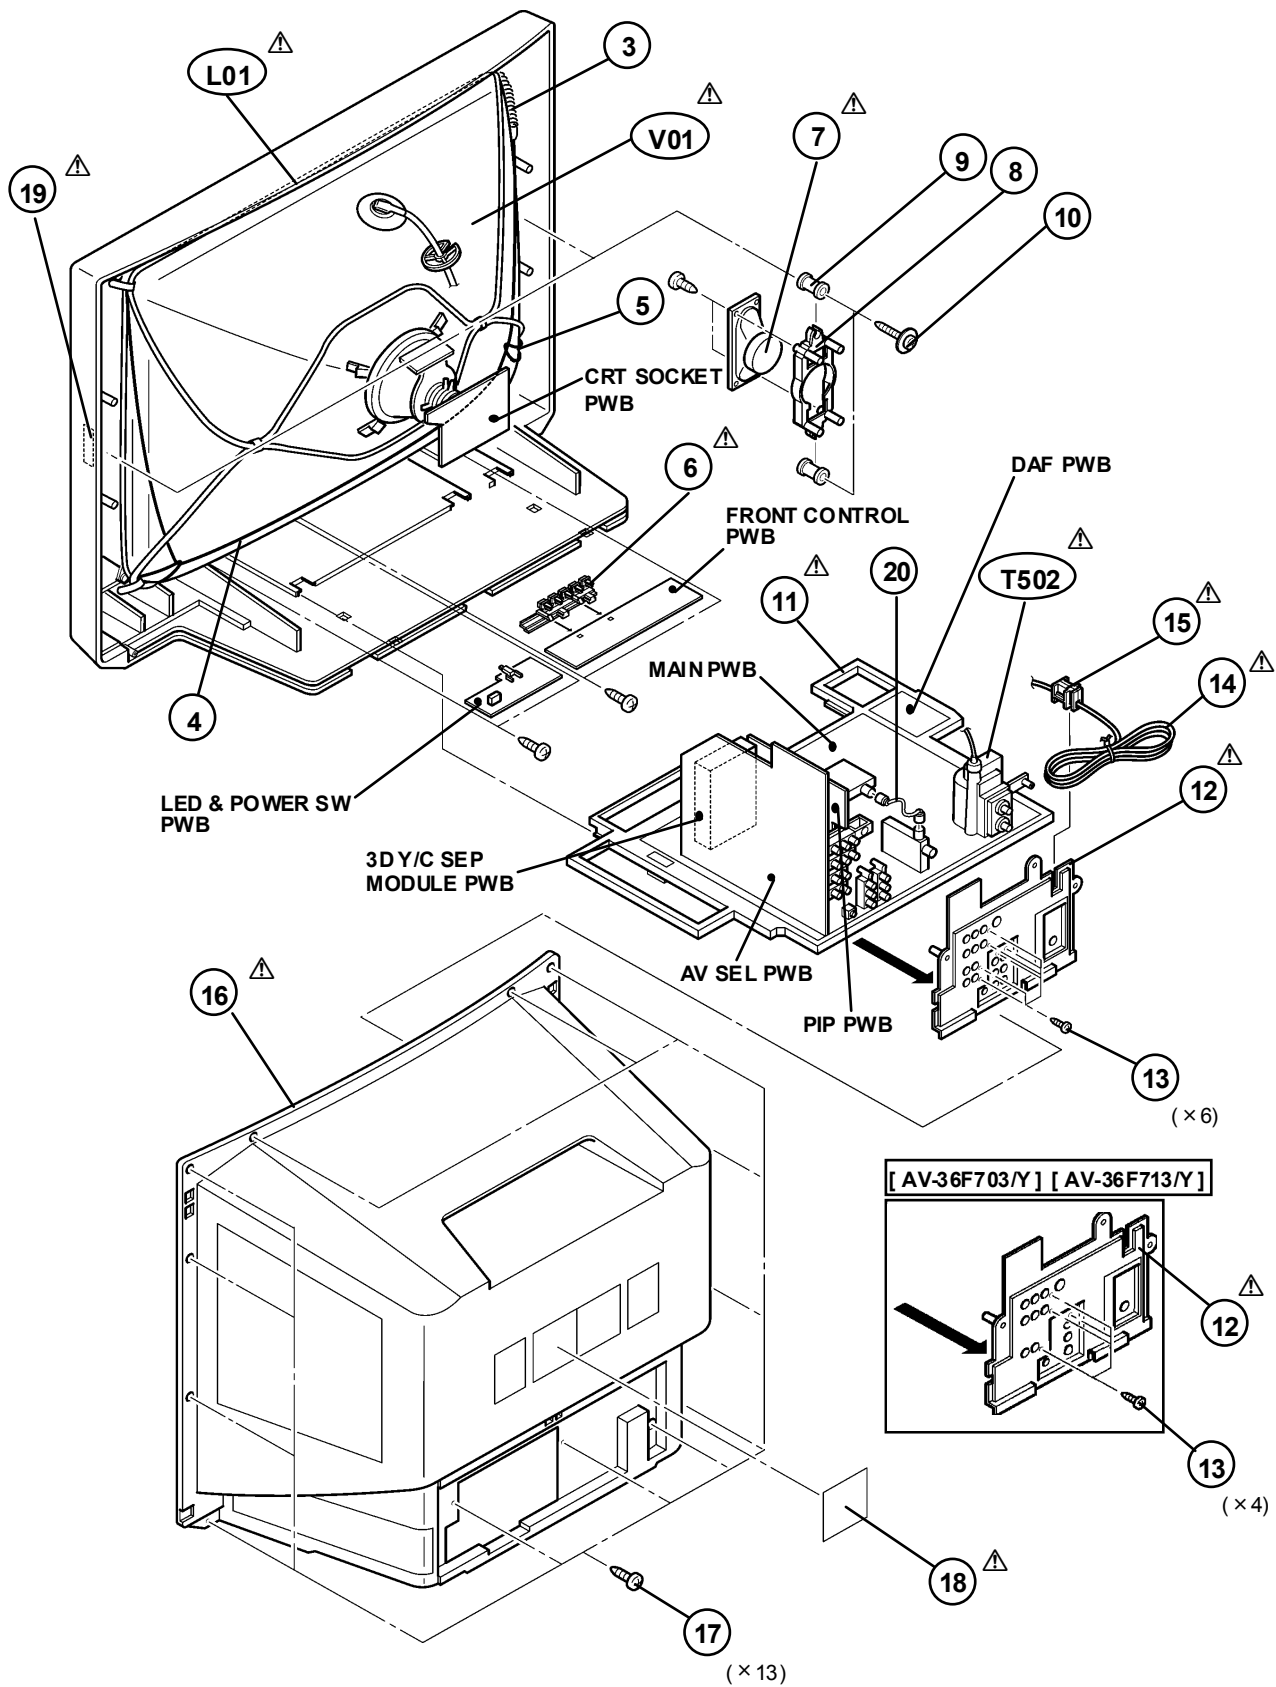

AV-36F703
 AV-36F713
 AV-36F803

[AV-36F703/Y] [AV-36F713/Y] [AV-36F803/Y]

PRINTED WIRING BOARD PARTS LIST

MAIN P.W. BOARD ASS'Y

(SGJ-1009A-M2)[AV-36F703/Y] / (SGJ-1008A-M2)[AV-36F713/Y] / (SGJ-1001A-M2)[AV-36F803/Y]

| Symbol No. | Part No. | Part Name | Description |
|------------|-----------------|------------------|-------------|
| △ CN0PW | QMPD200-200-JC | POWER CORD | |
| △ OR | QMPD390-200-J5 | POWER CORD | |
| △ FR525 | QR29017-4R7 | F R | 4.7Ω 1/4W J |
| △ FR527 | QR29011-470 | F R | 47Ω 1/2W J |
| △ SF10L | QAX0723-001 | SAW FILTER | |
| △ TU001 | QAU0274-001 | TUNER, 713Y/703Y | |
| △ TU001 | QAU0272-001 | TUNER, 803Y | |
| △ IC101 | M523425P | IC | |
| △ IC201 | TM8812CSBNG3U68 | IC | |
| △ IC421 | LA7841 | IC | |
| △ IC501 | LA6515 | IC | |
| △ IC502 | CXA1875AM | IC | |
| △ IC601 | TA1287F | IC, 803Y | |
| △ IC602 | M52055FP | IC, 803Y | |
| △ IC621 | LA4485 | IC | |
| △ IC702 | AT24C08-32F80B | IC | (SERVICE) |
| △ IC708 | S-80840CNY-T | IC | |
| △ IC704 | AN78L05 | IC | |
| △ IC851 | AN78L2F | IC | |
| △ OR | BA17812T | IC | |
| △ IC852 | AN7809F | IC | |
| △ OR | BA17809T | IC | |
| △ IC853 | AN7805F | IC | |
| △ OR | BA17805T | IC | |
| △ IC911 | STR-F6626/F3 | IC | |
| △ IC921 | SE135N | IC | |
| △ Q001 | UN2212 | DIGI TRANSISTOR | |
| △ Q101 | 2SC8083/L-P/-T | TRANSISTOR | |
| △ Q131 | 2SB709A/QR/-X | TRANSISTOR | |
| △ Q161 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q211 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q232 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q233 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q352 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q353 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q431 | UN2212 | DIGI TRANSISTOR | |
| △ Q451 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q501 | 2SC4212/Z1/ | TRANSISTOR | |
| △ Q511 | 2SD2645-YD | POWER TRANSISTO | H. OUT |
| △ Q531 | 2SC2785/JH/-T | SI TRANSISTOR | |
| △ Q532 | 2SB709A/QR/-X | TRANSISTOR | |
| △ Q541 | 2SB709A/QR/-X | TRANSISTOR | |
| △ Q542 | 2SB709A/QR/-X | TRANSISTOR | |
| △ Q543 | 2SD1408/OY/-LB | POW TRANSISTOR | |
| △ Q551 | 2SC17405/QR/-T | TRANSISTOR | |
| △ Q552 | 2SA966/OY/-T | TRANSISTOR | |
| △ Q622 | 2SD601A/QR/-X | TRANSISTOR | |
| △ Q623 | UN2212 | DIGI TRANSISTOR | |
| △ Q700 | 2SD601A/QR/-X | TRANSISTOR, 803Y | |
| △ Q701 | 2SB709A/QR/-X | TRANSISTOR | |
| △ Q705 | 2SD601A/QR/-X | TRANSISTOR, 803Y | |
| △ Q951 | 2SD1383K/AB/-X | TRANSISTOR | |
| △ Q971 | 2SA1208/ST/Z1-T | TRANSISTOR | |
| △ D305 | 1SS133 | DIODE | |
| △ D306 | 1SS133 | DIODE | |
| △ D307 | 1SS133 | DIODE | |
| △ D308 | 1SS133 | DIODE | |
| △ D309 | 1SS133 | DIODE | |
| △ D310 | 1SS133 | DIODE | |
| △ D352 | MTZJ9.1C | ZENER DIODE | |
| △ D353 | 1SS133 | DIODE | |
| △ D354 | MTZJ3.3A | ZENER DIODE | |
| △ D421 | 1N4003 | DIODE | |
| △ D431 | 1SR35-400A-T2 | DIODE | |
| △ D432 | 1SS133 | DIODE | |
| △ D501 | RH3G-F1 | DIODE | |
| △ D502 | RU3AM-LFC4 | DIODE | |
| △ D507 | RGP10J-5025-T3 | DIODE | |
| △ D521 | RH1S-T3 | DIODE | |
| △ D523 | EL1Z-T3 | DIODE | |
| △ D524 | EL1Z-T3 | DIODE | |
| △ D525 | 1SS81-T5 | DIODE | |
| △ D526 | 1SS81-T5 | DIODE | |
| △ D527 | 1SR124-400A-T2 | DIODE | |
| △ D529 | MTZJ9.1C | ZENER DIODE | |
| △ D531 | MA4068N/Z1/-T2 | ZENER DIODE | |
| △ D534 | QUY153-050Y | IM BUS WIRE | |
| △ D535 | 1SS133 | DIODE | |
| △ D537 | 1SR35-400A-T2 | DIODE | |
| △ D601 | MTZJ9.1C | ZENER DIODE | |
| △ D602 | MTZJ9.1C | ZENER DIODE | |

| Symbol No. | Part No. | Part Name | Description |
|------------|----------------|-------------------|---------------|
| △ D603 | MTZJ9.1C | ZENER DIODE | |
| △ D604 | MTZJ9.1C | ZENER DIODE, 803Y | |
| △ D605 | MTZJ9.1C | ZENER DIODE, 803Y | |
| △ D606 | MTZJ9.1C | ZENER DIODE, 803Y | |
| △ D653 | 1SS133 | DIODE, 803Y | |
| △ D654 | 1SS133 | DIODE, 803Y | |
| △ D700 | MTZJ5.6B | ZENER DIODE | |
| △ D701 | 1SS133 | DIODE | |
| △ D703 | MTZJ5.6B | ZENER DIODE | |
| △ D704 | MTZJ5.6B | ZENER DIODE | |
| △ D705 | 1SS133 | DIODE | |
| △ D706 | MTZJ5.6B | ZENER DIODE | |
| △ D707 | MTZJ5.6B | ZENER DIODE | |
| △ D708 | MTZJ5.6B | ZENER DIODE | |
| △ D709 | MTZJ5.6B | ZENER DIODE | |
| △ D721 | 1SS133 | DIODE, 803Y | |
| △ D722 | 1SS133 | DIODE, 803Y | |
| △ D723 | MTZJ5.6B | ZENER DIODE | |
| △ D810 | MTZJ5.6B | ZENER DIODE | |
| △ D901 | GS1B460-S1 | BRIDGE DIODE | |
| △ D910 | MA700A | SB DIODE | |
| △ D911 | RGP10J-5025-T3 | DIODE | |
| △ D912 | RGP10J-5025-T3 | DIODE | |
| △ D913 | RGP10J-5025-T3 | DIODE | |
| △ D914 | 1SS133 | DIODE | |
| △ D915 | SARS01 | DIODE | |
| △ D917 | MTZJ30A | ZENER DIODE | |
| △ D918 | MTZJ5.1C | ZENER DIODE | |
| △ D920 | 1SS133 | DIODE | |
| △ D931 | RU30A-F1 | DIODE | |
| △ D933 | RU3YX-LFC4 | DIODE | |
| △ D935 | RU3YX-LFC4 | DIODE | |
| △ D937 | RU3YX-LFC4 | DIODE | |
| △ D941 | MTZJ33A | ZENER DIODE | |
| △ D945 | MTZJ9.1B | ZENER DIODE | |
| △ D952 | 1SS133 | DIODE | |
| △ D953 | 1SS133 | DIODE | |
| △ D954 | 1SR35-400A-T2 | DIODE | |
| △ D955 | 1SR35-400A-T2 | DIODE | |
| △ D956 | 1SR35-400A-T2 | DIODE | |
| △ D957 | 1SR35-400A-T2 | DIODE | |
| △ D972 | MTZJ15C | ZENER DIODE | |
| △ D973 | 1SS133 | DIODE | |
| △ R002 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| △ R003 | NRS463J-101X | MG R | 10Ω 1/16W J |
| △ R004 | NRS463J-101X | MG R | 10Ω 1/16W J |
| △ R005 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| △ R008 | NRS463J-820X | MG R | 82Ω 1/16W J |
| △ R009 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| △ R101 | NRS463J-562X | MG R | 5.6kΩ 1/16W J |
| △ R102 | NRS463J-182X | MG R | 1.8kΩ 1/16W J |
| △ R103 | QRE121J-101Y | C R | 100Ω 1/2W J |
| △ R104 | NRS463J-180X | MG R | 18Ω 1/16W J |
| △ R105 | NRS463J-270X | MG R | 27Ω 1/16W J |
| △ R111 | NRS463J-394X | MG R | 390kΩ 1/16W J |
| △ R112 | NRS463J-334X | MG R | 330kΩ 1/16W J |
| △ R113 | NRS463J-101X | MG R | 10Ω 1/16W J |
| △ R115 | NRS463J-101X | MG R | 10Ω 1/16W J |
| △ R116 | NRS463J-680X | MG R | 68Ω 1/16W J |
| △ R117 | NRS463J-273X | MG R | 27kΩ 1/16W J |
| △ R118 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| △ R131 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| △ R132 | NRS463J-331X | MG R | 33Ω 1/16W J |
| △ R133 | NRS463J-821X | MG R | 82Ω 1/16W J |
| △ R134 | NRS463J-561X | MG R | 56Ω 1/16W J |
| △ R135 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| △ R161 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| △ R162 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| △ R163 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| △ R164 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| △ R165 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| △ R166 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| △ R167 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| △ R168 | NRS463J-101X | MG R | 10Ω 1/16W J |
| △ R169 | NRS463J-561X | MG R | 56Ω 1/16W J |
| △ R171 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| △ R201 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| △ R212 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |

| △ Symbol No. | Part No. | Part Name | Description |
|--------------|--------------|-----------|---------------|
| R215 | NRS463J-562X | MG R | 5.6kΩ 1/16W J |
| R216 | NRS463J-562X | MG R | 5.6kΩ 1/16W J |
| R217 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R222 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R227 | NRS463J-104X | MG R | 100kΩ 1/16W J |
| R231 | NRS463J-182X | MG R | 1.8kΩ 1/16W J |
| R237 | NRS463J-392X | MG R | 3.9kΩ 1/16W J |
| R238 | NRS463J-473X | MG R | 47kΩ 1/16W J |
| R241 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R243 | NRS463J-152X | MG R | 1.5kΩ 1/16W J |
| R281 | NRS463J-182X | MG R | 1.8kΩ 1/16W J |
| R282 | NRS463J-392X | MG R | 3.9kΩ 1/16W J |
| R283 | NRS463J-681X | MG R | 680Ω 1/16W J |
| R286 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R287 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R288 | NRS402J-471X | MG R | 470Ω 1/10W J |
| R289 | NRS463J-154X | MG R | 150kΩ 1/16W J |
| R290 | NRS402J-561X | MG R | 560Ω 1/10W J |
| R292 | NRS463J-124X | MG R | 120kΩ 1/16W J |
| R293 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R301 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R302 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R303 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R304 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R305 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R306 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R318 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R319 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R352 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R354 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R355 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R356 | NRS463J-123X | MG R | 12kΩ 1/16W J |
| R358 | NRS463J-333X | MG R | 33kΩ 1/16W J |
| R359 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R360 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| R421 | NRS463J-822X | MG R | 8.2kΩ 1/16W J |
| R426 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R427 | QR029J-1R0 | MF R | 1.0Ω 2W J |
| R431 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R432 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R433 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R434 | QRL029J-221 | OM R | 220Ω 2W J |
| R446 | QRE121J-272Y | C R | 2.7kΩ 1/2W J |
| R447 | NRS463J-104X | MG R | 100kΩ 1/16W J |
| R448 | NRS463J-473X | MG R | 47kΩ 1/16W J |
| R449 | NRS463J-822X | MG R | 8.2kΩ 1/16W J |
| R451 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R452 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R501 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R502 | NRS463J-271X | MG R | 270Ω 1/16W J |
| R503 | QRE121J-103Y | C R | 10kΩ 1/2W J |
| R504 | QRL029J-152 | OM R | 1.5kΩ 3W J |
| R505 | QRL029J-152 | OM R | 1.5kΩ 3W J |
| R506 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R508 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R509 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R510 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R511 | QRE121J-220Y | C R | 22Ω 1/2W J |
| R512 | QRE121J-681Y | C R | 680Ω 1/2W J |
| R513 | QRL029J-273 | OM R | 27kΩ 3W J |
| R514 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R515 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R516 | QRZ0221-2R0 | OM R | 2.0Ω □ 7W K |
| R524 | NRS463J-563X | MG R | 56kΩ 1/16W J |
| R526 | QRE121J-272Y | C R | 2.7kΩ 1/2W J |
| R527 | QRE121J-124Y | C R | 120kΩ 1/2W J |
| R528 | QRE121J-154Y | C R | 150kΩ 1/2W J |
| R529 | NRS463J-331X | MG R | 330Ω 1/16W J |
| R531 | QRJ146J-391X | C R | 390Ω 1/4W J |
| R532 | NRS463J-273X | MG R | 27kΩ 1/16W J |
| R533 | NRS463J-123X | MG R | 12kΩ 1/16W J |
| R534 | NRS463J-123X | MG R | 12kΩ 1/16W J |
| △ R535 | NRV402D-242X | MF R | 2.4kΩ 1/10W D |
| △ R537 | NRV402D-752X | MF R | 7.5kΩ 1/10W D |
| R538 | NRS463J-333X | MG R | 33kΩ 1/16W J |
| R541 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R543 | QRE121J-122Y | C R | 1.2kΩ 1/2W J |
| R544 | QRE121J-392Y | C R | 3.9kΩ 1/2W J |
| R545 | QRE121J-822Y | C R | 8.2kΩ 1/2W J |
| R546 | NRS463J-331X | MG R | 330Ω 1/16W J |

| △ Symbol No. | Part No. | Part Name | Description |
|--------------|--------------|-----------|-------------------------|
| R547 | NRS463J-104X | MG R | 100kΩ 1/16W J |
| R548 | QRE121J-152Y | C R | 1.5kΩ 1/2W J |
| R553 | QRL029J-390 | OM R | 39Ω 3W J |
| △ R554 | QRK126J-150X | C R | 15Ω 1/2W J |
| R555 | QRX029J-1R0 | MF R | 1.0Ω 2W J |
| R556 | QRX029J-1R0 | MF R | 1.0Ω 2W J |
| R558 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R581 | QRE121J-100Y | MF R | 10Ω 1/2W J |
| R582 | NRS463J-124X | MG R | 120kΩ 1/16W J |
| R583 | NRS463J-683X | MG R | 68kΩ 1/16W J |
| R584 | NRS463J-822X | MG R | 8.2kΩ 1/16W J |
| R585 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R586 | NRS463J-154X | MG R | 150kΩ 1/16W J |
| R587 | NRS463J-104X | MG R | 100kΩ 1/16W J |
| R588 | QRE121J-100Y | MF R | 10Ω 1/2W J |
| R589 | NRS463J-562X | MG R | 5.6kΩ 1/16W J |
| R590 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R591 | QRJ149J-220 | C R | 22Ω 1/4W J |
| R592 | NRS463J-183X | MG R | 18kΩ 1/16W J |
| R593 | NRS463J-104X | MG R | 100kΩ 1/16W J |
| R594 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |
| R595 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R601 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R602 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R603 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R604 | NRS463J-750X | MG R | 75Ω 1/16W J, 803Y |
| R605 | NRS463J-750X | MG R | 75Ω 1/16W J, 803Y |
| R606 | NRS463J-750X | MG R | 75Ω 1/16W J, 803Y |
| R610 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J, 713Y/703Y |
| R611 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J, 713Y/703Y |
| R614 | NRS463J-682X | MG R | 6.8kΩ 1/16W J, 803Y |
| R615 | NRS463J-332X | MG R | 3.3kΩ 1/16W J, 803Y |
| R616 | NRS463J-332X | MG R | 3.3kΩ 1/16W J, 803Y |
| R617 | NRS463J-332X | MG R | 3.3kΩ 1/16W J, 803Y |
| R618 | NRS463J-332X | MG R | 3.3kΩ 1/16W J, 803Y |
| R621 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R622 | NRS463J-681X | MG R | 680Ω 1/16W J |
| R623 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R624 | NRS463J-681X | MG R | 680Ω 1/16W J |
| R626 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R627 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R631 | NRS463J-333X | MG R | 33kΩ 1/16W J |
| R632 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R638 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R639 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R651 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J, 713Y/703Y |
| R652 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J, 713Y/703Y |
| R653 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J, 713Y/703Y |
| R655 | NRS463J-153X | MG R | 15kΩ 1/16W J, 803Y |
| R700 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R701 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R702 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R704 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R705 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R706 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R707 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R708 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R709 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R714 | NRS463J-823X | MG R | 82kΩ 1/16W J, 803Y |
| R715 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R718 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R721 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R728 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R729 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R731 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R732 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R733 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R734 | NRS463J-472X | MG R | 4.7kΩ 1/16W J |
| R737 | NRS463J-472X | MG R | 4.7kΩ 1/16W J, 803Y |
| R739 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R740 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R754 | NRS463J-472X | MG R | 4.7kΩ 1/16W J, 803Y |
| R755 | NRS463J-153X | MG R | 15kΩ 1/16W J, 803Y |
| R756 | NRS463J-103X | MG R | 10kΩ 1/16W J, 803Y |
| R764 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R765 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R766 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R767 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R769 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R772 | NRS463J-103X | MG R | 10kΩ 1/16W J |

AV-36F703
AV-36F713
AV-36F803

| △ Symbol No. | Part No. | Part Name | Description |
|--------------|--------------|-----------|-------------------------|
| R775 | NRSAG3J-473X | MG R | 47kΩ 1/16W J, 803Y |
| R776 | NRSAG3J-103X | MG R | 10kΩ 1/16W J, 803Y |
| R811 | NRSAG3J-473X | MG R | 47kΩ 1/16W J |
| R812 | NRSAG3J-102X | MG R | 1kΩ 1/16W J |
| R816 | NRSAG3J-124X | MG R | 120kΩ 1/16W J |
| R821 | NRSAG3J-184X | MG R | 180kΩ 1/16W J |
| R822 | NRSAG3J-0R0X | MG R | 0.0Ω 1/16W J, 713Y/703Y |
| R822 | NRSAG3J-124X | MG R | 120kΩ 1/16W J, 803Y |
| R827 | NRSAG3J-102X | MG R | 1kΩ 1/16W J |
| R857 | QRLQ29J-820 | OM R | 82Ω 2W J |
| R858 | QRLQ29J-180 | OM R | 18Ω 2W J, 803Y |
| △ R901 | QRF074K-R47 | UNF R | 0.47Ω 7W K |
| △ R909 | QRG01GJ-470 | OM R | 47Ω 1W J |
| R911 | QRE121J-223Y | C R | 22kΩ 1/2W J |
| R912 | QRT029J-R18 | MF R | 0.18Ω 2W J |
| R913 | QRT029J-R15 | MF R | 0.15Ω 2W J |
| △ R914 | QRK126J-681X | C R | 680Ω 1/2W J |
| R915 | QRK129J-6R8 | C R | 6.8Ω 1/2W J |
| △ R917 | QRK126J-332X | C R | 3.3kΩ 1/2W J |
| R918 | QRE121J-222Y | C R | 2.2kΩ 1/2W J |
| R919 | QRE121J-684Y | C R | 680kΩ 1/2W J |
| R924 | QRE121J-222Y | C R | 2.2kΩ 1/2W J |
| R930 | QRE121J-223Y | C R | 22kΩ 1/2W J |
| R940 | QRE121J-181Y | C R | 180Ω 1/2W J |
| R941 | QRLQ29J-183 | OM R | 18kΩ 2W J |
| R950 | NRSAG3J-0R0X | MG R | 0.0Ω 1/16W J |
| R951 | NRSAG3J-473X | MG R | 47kΩ 1/16W J |
| R952 | NRSAG3J-102X | MG R | 1kΩ 1/16W J |
| R953 | QRE121J-820Y | C R | 82Ω 1/2W J |
| R954 | QUY160-100Y | IM | BUS WIRE |
| R973 | QRE121J-272Y | C R | 2.7kΩ 1/2W J |
| R975 | QRE121J-223Y | C R | 22kΩ 1/2W J |
| R977 | QRE121J-473Y | C R | 47kΩ 1/2W J |
| R978 | NRSAG3J-333X | MG R | 33kΩ 1/16W J |
| R979 | QRT029J-1R0 | MF R | 1.0Ω 2W J |
| R980 | QRT029J-1R0 | MF R | 1.0Ω 2W J |
| △ R998 | QRZ9041-275 | C R | 2.7MΩ 1/2W K |
| R999 | QRE121J-121Y | C R | 120Ω 1/2W J |
| C001 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C003 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C004 | QETNLHM-108 | E CAP. | 1000μF 16V M |
| C006 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C101 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C102 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C104 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C105 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C106 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C107 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C113 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C114 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C116 | QFVFLHJ-224Z | MF CAP. | 0.22μF 50V J |
| C117 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C118 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C119 | NDC31HJ-681X | C CAP. | 680pF 50V J |
| C120 | QETNLHM-474 | E CAP. | 0.47μF 50V M |
| C124 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C131 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C161 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C163 | NDC31HJ-470X | C CAP. | 47pF 50V J |
| C164 | NDC31HJ-470X | C CAP. | 47pF 50V J |
| C165 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C166 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C202 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C203 | NCB31HK-152X | C CAP. | 1500pF 50V K |
| C211 | QENCLCM-106 | E CAP. | 10μF 16V M |
| C212 | NDC31HJ-100X | C CAP. | 10pF 50V J |
| C221 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C222 | QFVFLHJ-104Z | MF CAP. | 0.1μF 50V J |
| C223 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C233 | NDC31HJ-680X | C CAP. | 68pF 50V J |
| C237 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C241 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C242 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C243 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C244 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C281 | QFVFLHJ-474Z | MF CAP. | 0.47μF 50V J |
| C282 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C283 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C284 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C285 | NCB31HK-103X | C CAP. | 0.01μF 50V K |

| △ Symbol No. | Part No. | Part Name | Description |
|--------------|--------------|-----------|--------------------|
| C286 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C287 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C288 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C302 | NCB31EK-104X | C CAP. | 0.1μF 25V K |
| C352 | QETNLHM-476 | E CAP. | 47μF 16V M |
| C354 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C391 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C392 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C422 | QFN32AK-102 | M CAP. | 1000pF 100V K |
| C424 | QETNLHM-107 | E CAP. | 100μF 35V M |
| C428 | QEHQLVM-108 | E CAP. | 1000μF 35V M |
| C431 | QFLC2AK-563Z | M CAP. | 0.056μF 100V K |
| C432 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C433 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C435 | NCB31HK-183X | C CAP. | 0.018μF 50V K |
| C440 | QCS32HJ-180 | C CAP. | 18pF 500V J |
| C501 | QCB32HK-151 | C CAP. | 150pF 500V K |
| C502 | QCB32HK-331 | C CAP. | 330pF 500V K |
| C503 | QEH20M-105 | E CAP. | 1μF 160V M |
| C504 | QEZ0203-107 | E CAP. | 100μF 160V M |
| C505 | QENCLAM-225 | E CAP. | 2.2μF 100V M |
| C507 | QEZ0195-475Z | E CAP. | 4.7μF 50V M |
| △ C510 | QFZ0200-422 | MPP CAP. | 4200pF 1.5kVH±3% |
| △ C513 | QFZ0198-153 | MPP CAP. | 0.015μF 1.5kVH±3% |
| △ C514 | QFP32GJ-223 | PP CAP. | 0.022μF 400V J |
| △ C515 | QFZ0197-474 | MPP CAP. | 0.47μF 250V J |
| △ OR | QFZ0199-474 | MPP CAP. | 0.47μF 250V J |
| C516 | QCB32HK-561 | C CAP. | 560pF 500V K |
| C521 | QETNLEM-106 | E CAP. | 10μF 250V M |
| C523 | QETNLEM-108 | E CAP. | 1000μF 25V M |
| C524 | QETNLEM-108 | E CAP. | 1000μF 25V M |
| C525 | QETNLHM-107 | E CAP. | 100μF 35V M |
| C526 | QFV21HJ-824 | MF CAP. | 0.82μF 50V J |
| C527 | QFLC2AJ-103Z | M CAP. | 0.01μF 100V J |
| C533 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C551 | QFVFLHJ-474Z | MF CAP. | 0.47μF 50V J |
| C552 | QFVFLHJ-474Z | MF CAP. | 0.47μF 50V J |
| C553 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C561 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C562 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C601 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C602 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C603 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C604 | NCB31EK-104X | C CAP. | 0.1μF 25V K, 803Y |
| C605 | NCB31EK-104X | C CAP. | 0.1μF 25V K, 803Y |
| C606 | NCB31EK-104X | C CAP. | 0.1μF 25V K, 803Y |
| C607 | QETNLHM-477 | E CAP. | 470μF 10V M, 803Y |
| C608 | NCB31HK-103X | C CAP. | 0.01μF 50V K, 803Y |
| C609 | QFVFLHJ-104Z | MF CAP. | 0.1μF 50V J |
| C610 | QFVFLHJ-104Z | MF CAP. | 0.1μF 50V J |
| C611 | QFVFLHJ-104Z | MF CAP. | 0.1μF 50V J |
| C612 | QETNLEM-476 | E CAP. | 47μF 25V M, 803Y |
| C613 | QETNLEM-476 | E CAP. | 47μF 25V M, 803Y |
| C614 | QETNLEM-476 | E CAP. | 47μF 25V M, 803Y |
| C615 | QETNLHM-477 | E CAP. | 470μF 10V M, 803Y |
| C616 | NCB31HK-103X | C CAP. | 0.01μF 50V K, 803Y |
| C621 | NCB31HK-102X | C CAP. | 1000pF 50V K |
| C622 | NCF21CZ-105X | C CAP. | 1μF 16V Z |
| C623 | NCB31HK-102X | C CAP. | 1000pF 50V K |
| C624 | NCF21CZ-105X | C CAP. | 1μF 16V Z |
| C625 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C626 | QETNLEM-108 | E CAP. | 1000μF 25V M |
| C627 | QETNLHM-474 | E CAP. | 0.47μF 50V M |
| C628 | QETNLEM-108 | E CAP. | 1000μF 25V M |
| C629 | QETNLEM-108 | E CAP. | 1000μF 25V M |
| C636 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C637 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C652 | NCB31EK-104X | C CAP. | 0.1μF 25V K, 803Y |
| C653 | NCB31EK-104X | C CAP. | 0.1μF 25V K, 803Y |
| C654 | NCB31EK-104X | C CAP. | 0.1μF 25V K, 803Y |
| C655 | NCB31HK-103X | C CAP. | 0.01μF 50V K, 803Y |
| C656 | NDC31HJ-150X | C CAP. | 15pF 50V J, 803Y |
| C657 | NDC31HJ-150X | C CAP. | 15pF 50V J, 803Y |
| C658 | NDC31HJ-150X | C CAP. | 15pF 50V J, 803Y |
| C700 | NCB31HK-102X | C CAP. | 1000pF 50V K |
| C701 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C702 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C703 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C704 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C705 | NCB31HK-103X | C CAP. | 0.01μF 50V K |

| Symbol No. | Part No. | Part Name | Description |
|------------|--------------|----------------|-------------------------------|
| C706 | QETNLM-105 | E CAP. | 1 μ F 50V M |
| C708 | NDC31HJ-220X | C CAP. | 220 μ F 50V J |
| C709 | NDC31HJ-220X | C CAP. | 220 μ F 50V J |
| C711 | QETNLCM-107 | E CAP. | 100 μ F 16V M |
| C712 | NCB31HK-103X | C CAP. | 0.01 μ F 50V K |
| C716 | QETNLM-106 | E CAP. | 10 μ F 50V M |
| C721 | NCB31HK-103X | C CAP. | 0.01 μ F 50V K, 803Y |
| C726 | NDC31HJ-561X | C CAP. | 560 μ F 50V J, 803Y |
| C728 | NCB31HK-103X | C CAP. | 0.01 μ F 50V K |
| C807 | QETNLM-477 | E CAP. | 470 μ F 10V M |
| C813 | NCB31HK-102X | C CAP. | 1000 μ F 50V K |
| C815 | NCB31HK-103X | C CAP. | 0.01 μ F 50V K |
| C851 | QETNLEM-107 | E CAP. | 100 μ F 25V M |
| C852 | QETNLEM-107 | E CAP. | 100 μ F 25V M |
| C853 | QETNLCM-227 | E CAP. | 220 μ F 16V M |
| C854 | QETNLCM-227 | E CAP. | 220 μ F 16V M |
| C856 | QETNLCM-227 | E CAP. | 220 μ F 16V M |
| C857 | QETNLCM-477 | E CAP. | 470 μ F 16V M |
| △ C901 | QFZ9075-104 | MPP CAP. | 0.1 μ FAC275V M |
| △ OR | QFZ9072-104 | MF CAP. | 0.1 μ FAC275V K |
| △ C902 | QFZ9072-473 | MF CAP. | 0.047 μ FAC275V K |
| △ OR | QFZ9075-473 | MPP CAP. | 0.047 μ FAC275V M |
| △ C903 | QFZ9075-104 | MPP CAP. | 0.1 μ FAC275V M |
| △ OR | QFZ9072-104 | MF CAP. | 0.1 μ FAC275V K |
| △ C904 | QCZ9054-102 | C CAP. | 1000 μ FAC250V Z |
| △ C905 | QCZ9054-102 | C CAP. | 1000 μ FAC250V Z |
| △ C906 | QCZ9054-102 | C CAP. | 1000 μ FAC250V Z |
| △ C907 | QEZ0169-477 | E CAP. | 470 μ F 200V M |
| △ C908 | QCZ9054-102 | C CAP. | 1000 μ FAC250V Z |
| △ OR | QCZ9079-102 | C CAP. | 1000 μ FAC250V M |
| △ C912 | QCZ0340-222 | C CAP. | 2200 μ F 2kV K |
| △ C913 | QFLCIHJ-471Z | M CAP. | 470 μ F 50V J |
| C914 | QETNLM-107 | E CAP. | 100 μ F 50V M |
| C916 | NDC31HJ-331X | C CAP. | 330 μ F 50V J |
| C917 | NCB31HK-182X | C CAP. | 1800 μ F 50V K |
| C918 | NCB21HK-104X | C CAP. | 0.1 μ F 50V K |
| C919 | QFP32GJ-103 | PP CAP. | 0.01 μ F 400V J |
| C931 | QEZ0203-227 | E CAP. | 220 μ F 160V M |
| C932 | QETNLEM-108 | E CAP. | 1000 μ F 25V M |
| C933 | QETNLCM-108 | E CAP. | 1000 μ F 16V M |
| C934 | NDC31HJ-221X | C CAP. | 220 μ F 50V J |
| C935 | QETNLEM-108 | E CAP. | 1000 μ F 25V M |
| C937 | QCZ0340-102 | C CAP. | 1000 μ F 2kV K |
| C938 | QETNLCM-108 | E CAP. | 1000 μ F 16V M, 713Y/703Y |
| C938 | QETNLEM-228 | E CAP. | 220 μ F 25V M, 803Y |
| C939 | QCB32HK-152 | C CAP. | 1500 μ F 500V K |
| C941 | QCB32HK-102 | C CAP. | 1000 μ F 500V K |
| C942 | QEHRLHM-105 | E CAP. | 1 μ F 50V M |
| C943 | QETNLCM-108 | E CAP. | 1000 μ F 16V M |
| C951 | QETNLEM-477 | E CAP. | 470 μ F 25V M |
| C952 | QETNLCM-227 | E CAP. | 220 μ F 16V M |
| C971 | QETNLCM-107 | E CAP. | 100 μ F 16V M |
| C972 | QETNLEM-477 | E CAP. | 47 μ F 25V M |
| C973 | QETNLM-106 | E CAP. | 10 μ F 50V M |
| △ C997 | QCZ9052-102 | C CAP. | 1000 μ FAC125V M |
| △ OR | QCZ9079-102 | C CAP. | 1000 μ FAC250V M |
| △ C998 | QCZ9074-103 | C CAP. | 0.01 μ FAC250V M |
| △ C999 | QCZ9074-103 | C CAP. | 0.01 μ FAC250V M |
| L001 | QQL244K-560Z | COIL | 56 μ H K |
| L101 | QQL2014-R22 | COIL | |
| L113 | QQL244K-4R7Z | COIL | 4.7 μ H K |
| L131 | QQL244K-150Z | COIL | 15 μ H K |
| L161 | QQL244K-220Z | COIL | 22 μ H K |
| L232 | QQL244K-560Z | COIL | 56 μ H K |
| L241 | QQL244K-220Z | COIL | 22 μ H K |
| L391 | QQL244K-220Z | COIL | 22 μ H K |
| △ L511 | QQR1027-005 | LINEARITY COIL | |
| L512 | QQL2036-821 | COIL | |
| △ L521 | QQL2026-800 | COIL | |
| L701 | QQL244K-220Z | COIL | 22 μ H K |
| L702 | QQL244K-220Z | COIL | 22 μ H K |
| L703 | QQL244K-220Z | COIL | 22 μ H K |
| L704 | QQL244K-220Z | COIL | 22 μ H K |
| L705 | QQL244K-220Z | COIL | 22 μ H K |
| L931 | QQL26AK-470Z | COIL | 47 μ H K |
| L933 | QQL26AK-470Z | COIL | 47 μ H K |
| L937 | QQL26AK-470Z | COIL | 47 μ H K |
| L940 | QQR0582-001Z | FERRITE BEADS | |
| CF001 | QAX0349-001 | C TRAP | |
| CF131 | QAX0639-001Z | C TRAP | |
| CF161 | QAX0642-001Z | CERAMIC FILTER | |

| Symbol No. | Part No. | Part Name | Description |
|------------|----------------|-------------------|----------------------------|
| LC601 | QQR1199-001 | N FILTER | |
| LC602 | QQR1199-001 | N FILTER | |
| LC603 | QQR1199-001 | N FILTER | |
| LC604 | QQR1199-001 | N FILTER, 803Y | |
| LC605 | QQR1199-001 | N FILTER, 803Y | |
| LC606 | QQR1199-001 | N FILTER, 803Y | |
| X701 | QAX0717-001Z | CRYSTAL RESONATOR | |
| K401 | QQR0621-002Z | FERRITE BEADS | |
| K912 | QQR0582-001Z | FERRITE BEADS | |
| K914 | QYI53-050Y | IM BUS WIRE | |
| K916 | QQR0582-001Z | FERRITE BEADS | |
| K917 | QQR0582-001Z | FERRITE BEADS | |
| K918 | QQR0582-001Z | FERRITE BEADS | |
| K920 | QQR0872-002 | FERRITE BEADS | |
| K931 | QQR0582-001Z | FERRITE BEADS | |
| K932 | QQR0582-001Z | FERRITE BEADS | |
| K933 | QQR0582-001Z | FERRITE BEADS | |
| K935 | QQR0582-001Z | FERRITE BEADS | |
| K937 | QQR0582-001Z | FERRITE BEADS | |
| △ PC921 | TLP421F/D4-GR | IC (PHOTO COUPLE | |
| △ RY951 | QSK0085-001 | RELAY | |
| △ OR | QSK0086-001 | RELAY | |
| △ OR | QSK0130-001 | RELAY | |
| △ TH901 | QAD0132-3R0 | P THERMISTOR | |
| T111 | QQR0907-001 | IF TRANSFORMER | |
| T501 | CE42034-002 | HOR DRIVE TRANS | |
| △ T502 | QQH0125-001 | FB TRANSF | |
| △ T921 | QQS0152-001 | SW TRANSF | |
| △ T951 | QQT0355-001 | POWER TRANSF | |
| △ OR | QQT0372-001 | POWER TRANSF | |
| △ FC901 | CEM002-001Z | FUSE CLIP | |
| J601 | QNN0349-002 | PIN JACK | |
| J602 | QNN0349-002 | PIN JACK, 803Y | |
| J810 | QNS0001-001 | JACK | |
| △ LF901 | QQR1159-001 | LINE FILTER | |
| △ LF902 | QQR0527-004 | LINE FILTER | |
| △ VA901 | ERZV10V621CS | ZNR | |
| △ CNO01 | QGB1505J1-35 | B TO B CONNE | |
| △ CNO02 | QGB1505J1-25 | B TO B CONNE | |
| △ CNO03 | QGB1505J1-15 | B TO B CONNE | |
| △ CNO04 | QGA2501C5-07Z | W TO B CONNE | |
| △ CNO05 | QGA2501C5-06Z | W TO B CONNE | |
| △ CNO07 | QGA2501C5-06Z | W TO B CONNE | |
| △ CP932 | ICP-N70-T | CIRCUIT PROTECTOR | |
| △ CP933 | ICP-N70-T | CIRCUIT PROTECTOR | |
| △ CP936 | ICP-N70-T | CIRCUIT PROTECTOR | |
| △ F901 | QMF51U1-5R0-J8 | FUSE | 5.0A |
| △ F905 | QMFZ049-5R0Z-E | FUSE | 5.0A |
| △ Y201 | NRS463J-OROX | MG R | 0.0 Ω 1/16W J, 803Y |

DAF P.W. BOARD ASS'Y (SGJ-2001A-M2)

| Symbol No. | Part No. | Part Name | Description |
|------------|---------------|----------------|-----------------------|
| Q2751 | 2SD601A/QR/-X | TRANSISTOR | |
| Q2752 | 2SD601A/QR/-X | TRANSISTOR | |
| Q2753 | 2SC4632 | PNP TRANSISTOR | |
| D2761 | ES1F-LFG2 | DIODE | |
| D2762 | ES1F-LFG2 | DIODE | |
| D2771 | MTZJ33A | ZENER DIODE | |
| R2701 | QRG01GJ-220 | OM R | 22 Ω 1W J |
| R2702 | QRE121J-123Y | C R | 12k Ω 1/2W J |
| R2703 | QRZ0056-103Z | COMP R | 10k Ω 1/2W K |
| R2751 | NRS463J-473X | MG R | 47k Ω 1/16W J |
| R2752 | NRS463J-822X | MG R | 8.2k Ω 1/16W J |
| R2753 | NRS463J-122X | MG R | 1.2k Ω 1/16W J |
| R2754 | NRS463J-103X | MG R | 10k Ω 1/16W J |
| R2755 | NRS463J-563X | MG R | 56k Ω 1/16W J |
| R2756 | NRS463J-123X | MG R | 12k Ω 1/16W J |
| R2757 | NRS463J-472X | MG R | 4.7k Ω 1/16W J |
| R2758 | NRS463J-124X | MG R | 120k Ω 1/16W J |
| R2761 | QRE121J-184Y | C R | 180k Ω 1/2W J |
| R2762 | QRE121J-184Y | C R | 180k Ω 1/2W J |
| R2763 | QRE121J-184Y | C R | 180k Ω 1/2W J |
| R2764 | QRE121J-184Y | C R | 180k Ω 1/2W J |
| R2765 | QRE121J-184Y | C R | 180k Ω 1/2W J |

AV-36F703
AV-36F713
AV-36F803

| Symbol No. | Part No. | Part Name | Description |
|------------|--------------|------------|-------------------|
| R2771 | QRL099J-223 | OM R | 22kΩ 3W J |
| C2701 | QFV71HJ-104 | MF CAP. | 0.1μF 50V J |
| C2751 | QFLC1HJ-333Z | M CAP. | 0.033μF 50V J |
| C2752 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C2753 | QFZ0122-103 | MPP CAP. | 0.01μF 1.8kVH ±3% |
| C2761 | QFZ0122-682 | MPP CAP. | 6800pF 1.8kVH ±3% |
| C2771 | QETNLMH-106 | E CAP. | 10μF 50V M |
| L2701 | QQL2028-272 | COIL | |
| T2701 | QQR1153-001 | DEF TRANSF | |

CRT SOCKET P.W. BOARD ASS'Y
(SGJ-3001A-M2)

| Symbol No. | Part No. | Part Name | Description |
|------------|-----------------|----------------|---------------|
| Q3108 | 2SA993AS/QR/-T | TRANSISTOR | |
| Q3105 | 2SC1740S/QR/-T | TRANSISTOR | |
| Q3106 | 2SA993AS/QR/-T | TRANSISTOR | |
| Q3107 | 2SA1964/DE/ | POW TRANSISTOR | |
| Q3108 | 2SC5248/DE/ | POW TRANSISTOR | |
| Q3109 | 2SC1740S/QR/-T | TRANSISTOR | |
| Q3151 | 2SC1740S/QR/-T | TRANSISTOR | |
| Q3152 | 2SA993AS/QR/-T | TRANSISTOR | |
| Q3301 | 2SC5083/L-P/-T | TRANSISTOR | |
| Q3302 | 2SC5083/L-P/-T | TRANSISTOR | |
| Q3303 | 2SC5083/L-P/-T | TRANSISTOR | |
| Q3304 | 2SC5147/CDE/F43 | POW TRANSISTOR | |
| Q3305 | 2SC5147/CDE/F43 | POW TRANSISTOR | |
| Q3306 | 2SC5147/CDE/F43 | POW TRANSISTOR | |
| Q3351 | 2SA993AS/QR/-T | TRANSISTOR | |
| D3101 | 1S5133 | DIODE | |
| D3105 | RH1S-T3 | DIODE | |
| D3106 | RH1S-T3 | DIODE | |
| D3301 | 1S5133 | DIODE | |
| D3302 | 1S5133 | DIODE | |
| D3303 | 1S5133 | DIODE | |
| D3304 | 1S582 | DIODE | |
| D3305 | 1S582 | DIODE | |
| D3306 | 1S582 | DIODE | |
| D3311 | MTZJ. 6B | ZENER DIODE | |
| D3312 | 1S5133 | DIODE | |
| D3313 | MTZJ. 3A | ZENER DIODE | |
| D3314 | 1S5133 | DIODE | |
| D3331 | 1S5133 | DIODE | |
| D3351 | 1S5133 | DIODE | |
| D3352 | 1S5133 | DIODE | |
| D3353 | 1S5133 | DIODE | |
| D3354 | 1S5133 | DIODE | |
| D3361 | RM2C-LFA1 | DIODE | |
| R3108 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| R3111 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R3114 | QRJ146J-100X | C R | 10Ω 1/4W J |
| R3115 | NRS463J-470X | MG R | 47Ω 1/16W J |
| R3116 | NRS463J-470X | MG R | 47Ω 1/16W J |
| R3117 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R3119 | NRS463J-121X | MG R | 120Ω 1/16W J |
| R3122 | QRZ9021-561 | F R | 560 Ω 1W J |
| R3123 | NRS463J-122X | MG R | 1.2kΩ 1/16W J |
| R3124 | NRS463J-390X | MG R | 39Ω 1/16W J |
| R3125 | NRS463J-5R6X | MG R | 5.6Ω 1/16W J |
| R3126 | NRS463J-563X | MG R | 56kΩ 1/16W J |
| R3127 | NRS463J-563X | MG R | 56kΩ 1/16W J |
| R3128 | NRS463J-122X | MG R | 1.2kΩ 1/16W J |
| R3129 | NRS463J-5R6X | MG R | 5.6Ω 1/16W J |
| R3130 | NRS463J-390X | MG R | 39Ω 1/16W J |
| R3131 | NRS463J-121X | MG R | 120Ω 1/16W J |
| R3132 | QRL029J-391 | OM R | 390Ω 2W J |
| R3134 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R3136 | NRS463J-333X | MG R | 33kΩ 1/16W J |
| R3139 | NRS463J-681X | MG R | 680Ω 1/16W J |
| R3142 | NRS463J-124X | MG R | 120kΩ 1/16W J |
| R3143 | NRS463J-681X | MG R | 680Ω 1/16W J |
| R3145 | NRS463J-5R6X | MG R | 5.6Ω 1/16W J |
| R3146 | NRS463J-5R6X | MG R | 5.6Ω 1/16W J |

| Symbol No. | Part No. | Part Name | Description |
|------------|---------------|-----------------|---------------|
| R3151 | NRS463J-473X | MG R | 47kΩ 1/16W J |
| R3152 | NRS463J-683X | MG R | 68kΩ 1/16W J |
| R3153 | NRS463J-683X | MG R | 68kΩ 1/16W J |
| R3154 | NRS463J-473X | MG R | 47kΩ 1/16W J |
| R3301 | NRS463J-151X | MG R | 150Ω 1/16W J |
| R3302 | NRS463J-151X | MG R | 150Ω 1/16W J |
| R3303 | NRS463J-151X | MG R | 150Ω 1/16W J |
| R3304 | NRS463J-121X | MG R | 120Ω 1/16W J |
| R3305 | NRS463J-121X | MG R | 120Ω 1/16W J |
| R3306 | NRS463J-121X | MG R | 120Ω 1/16W J |
| R3307 | NRS463J-470X | MG R | 47Ω 1/16W J |
| R3308 | NRS463J-470X | MG R | 47Ω 1/16W J |
| R3309 | NRS463J-470X | MG R | 47Ω 1/16W J |
| R3310 | QRG029J-153 | OM R | 15kΩ 2W J |
| R3311 | QRG029J-153 | OM R | 15kΩ 2W J |
| R3312 | QRG029J-153 | OM R | 15kΩ 2W J |
| R3313 | QRG029J-183 | OM R | 18kΩ 2W J |
| R3314 | QRG029J-183 | OM R | 18kΩ 2W J |
| R3315 | QRG029J-183 | OM R | 18kΩ 2W J |
| R3316 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| R3317 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| R3318 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| R3325 | QRC121K-102Z | MF R | 1kΩ 1/2W K |
| R3326 | QRC121K-102Z | MF R | 1kΩ 1/2W K |
| R3327 | QRC121K-102Z | MF R | 1kΩ 1/2W K |
| R3331 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |
| R3332 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |
| R3333 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |
| R3334 | NRS463J-152X | MG R | 1.5kΩ 1/16W J |
| R3335 | NRS463J-271X | MG R | 270Ω 1/16W J |
| R3336 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| R3337 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| R3338 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| R3351 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R3352 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R3353 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R3354 | NRS463J-561X | MG R | 560Ω 1/16W J |
| R3355 | NRS463J-563X | MG R | 56kΩ 1/16W J |
| R3361 | QRC121K-105Z | MF R | 1MΩ 1/2W K |
| R3362 | QRC121K-102Z | MF R | 1kΩ 1/2W K |
| R3363 | QRC121K-474Z | MF R | 470kΩ 1/2W K |
| C3101 | QETNLMH-106 | E CAP. | 10μF 50V M |
| C3109 | QETNLCH-107 | E CAP. | 100μF 16V M |
| C3110 | NDC31HJ-221X | C CAP. | 220pF 50V J |
| C3111 | NDC31HJ-221X | C CAP. | 220pF 50V J |
| C3113 | QETN2CM-106 | E CAP. | 10μF 160V M |
| C3114 | QCB32HK-472 | C CAP. | 4700pF 500V K |
| C3115 | QCB32HK-472 | C CAP. | 4700pF 500V K |
| C3117 | QETN2CM-106 | E CAP. | 10μF 160V M |
| C3118 | QETN2JM-107 | E CAP. | 100μF 6.3V M |
| C3119 | QETNLAM-107 | E CAP. | 100μF 10V M |
| C3120 | QETNLAM-337 | E CAP. | 330μF 10V M |
| C3121 | QCS32HJ-151 | C CAP. | 150pF 500V J |
| C3122 | NDC31HJ-5R0X | C CAP. | 5.0pF 50V J |
| C3125 | NRS463J-OROX | MG R | 0.0Ω 1/16W J |
| C3151 | NCB21EK-104X | C CAP. | 0.1μF 25V K |
| C3152 | NCB21EK-104X | C CAP. | 0.1μF 25V K |
| C3301 | NDC31HJ-561X | C CAP. | 560pF 50V J |
| C3302 | NDC31HJ-391X | C CAP. | 390pF 50V J |
| C3303 | NDC31HJ-561X | C CAP. | 560pF 50V J |
| C3321 | QETN2EM-105 | E CAP. | 1μF 250V M |
| C3322 | QETN2EM-105 | E CAP. | 1μF 250V M |
| C3323 | QETNLCH-477 | E CAP. | 470μF 16V M |
| C3351 | QETNLCH-337 | E CAP. | 330μF 16V M |
| C3361 | QETN2EM-105 | E CAP. | 1μF 250V M |
| C3362 | QUY153-050Y | IM BUS WIRE | |
| C3363 | QCZ024-102 | C CAP. | 1000pF 3kV P |
| L3301 | QQL244K-180Z | COIL | 18μH K |
| L3302 | QQL244K-180Z | COIL | 18μH K |
| L3303 | QQL244K-180Z | COIL | 18μH K |
| L3304 | QQL244K-470Z | COIL | 47μH K |
| L3305 | QQL244K-470Z | COIL | 47μH K |
| L3306 | QQL244K-470Z | COIL | 47μH K |
| K3102 | CE41492-001Z | COIL | |
| K3103 | CE41492-001Z | COIL | |
| K3104 | CE41492-001Z | COIL | |
| K3105 | CE41492-001Z | COIL | |
| SK3001 | CE42670-001 | CRT SOCKET | |
| CN3004 | QJB003-074022 | SIN ID C-B WIRE | |
| CN3005 | WJAC029-002A | E-S ID WIRE | |

PIP P.W. BOARD ASS'Y

(SGJ-4001A-M2) [AV-36F803/Y ONLY]

| Symbol No. | Part No. | Part Name | Description |
|------------|----------------|------------|---------------|
| △ SF4101 | QAX0726-001 | SAW FILTER | |
| TU4001 | QAU0273-001 | TUNER | |
| IC4101 | M523425P | IC | |
| IC4301 | SDA9889X | IC | |
| Q4101 | 25C5083/L-P/-T | TRANSISTOR | |
| Q4131 | 25B709A/QR/-X | TRANSISTOR | |
| Q4301 | 25D601A/QR/-X | TRANSISTOR | |
| Q4302 | 25D601A/QR/-X | TRANSISTOR | |
| Q4303 | 25D601A/QR/-X | TRANSISTOR | |
| Q4331 | 25B709A/QR/-X | TRANSISTOR | |
| Q4332 | 25B709A/QR/-X | TRANSISTOR | |
| Q4333 | 25B709A/QR/-X | TRANSISTOR | |
| D4301 | 15S133 | DIODE | |
| R4001 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R4002 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R4003 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R4004 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R4005 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R4008 | NRS463J-820X | MG R | 82Ω 1/16W J |
| R4101 | NRS463J-562X | MG R | 5.6kΩ 1/16W J |
| R4102 | NRS463J-182X | MG R | 1.8kΩ 1/16W J |
| R4103 | QRE121J-101Y | C R | 100Ω 1/2W J |
| R4104 | NRS463J-180X | MG R | 18Ω 1/16W J |
| R4105 | NRS463J-270X | MG R | 27Ω 1/16W J |
| R4111 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R4113 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R4114 | NRS463J-331X | MG R | 330Ω 1/16W J |
| R4115 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R4116 | NRS463J-680X | MG R | 68Ω 1/16W J |
| R4117 | NRS463J-273X | MG R | 27kΩ 1/16W J |
| R4118 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R4120 | NRS463J-273X | MG R | 27kΩ 1/16W J |
| R4121 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R4131 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R4132 | NRS463J-331X | MG R | 330Ω 1/16W J |
| R4133 | NRS463J-821X | MG R | 820Ω 1/16W J |
| R4134 | NRS463J-561X | MG R | 560Ω 1/16W J |
| R4135 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R4161 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R4163 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R4171 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R4301 | NRS463J-473X | MG R | 47kΩ 1/16W J |
| R4302 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R4303 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R4304 | NRS463J-473X | MG R | 47kΩ 1/16W J |
| R4305 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R4306 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R4307 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R4308 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R4309 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R4311 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R4313 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R4314 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R4316 | NRS463J-331X | MG R | 330Ω 1/16W J |
| R4317 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R4331 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R4332 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R4337 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R4338 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R4343 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R4344 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| C4001 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C4003 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C4004 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C4006 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C4101 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4102 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4104 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4105 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4106 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C4107 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4113 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4114 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4116 | QFVFLHJ-2242 | MF CAP. | 0.22μF 50V J |
| C4117 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C4118 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4119 | NDC31HJ-681X | C CAP. | 680pF 50V J |
| C4120 | QETNLHM-474 | E CAP. | 0.47μF 50V M |
| C4124 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4131 | NCB31HK-103X | C CAP. | 0.01μF 50V K |

| Symbol No. | Part No. | Part Name | Description |
|------------|--------------|-------------------|--------------|
| C4132 | NDC31HJ-181X | C CAP. | 180pF 50V J |
| C4161 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C4168 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4301 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| C4302 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| C4312 | NDC31HJ-270X | C CAP. | 27pF 50V J |
| C4313 | NDC31HJ-270X | C CAP. | 27pF 50V J |
| C4314 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C4315 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4316 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4317 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4318 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4319 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C4320 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4321 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C4322 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4323 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C4324 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4325 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4326 | NCB31EK-104X | C CAP. | 0.1μF 25V K |
| C4327 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C4328 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4329 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C4330 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C4331 | NCB31EK-104X | C CAP. | 0.1μF 25V K |
| L4001 | QQL244K-560Z | COIL | 56μH K |
| L4101 | QQL2014-R22 | COIL | |
| L4113 | QQL244K-4R7Z | COIL | 4.7μH K |
| L4131 | QQL244K-150Z | COIL | 15μH K |
| L4302 | QQL244J-6R8Z | COIL | 6.8μH J |
| L4303 | QQL244J-6R8Z | COIL | 6.8μH J |
| L4304 | QQL244J-6R8Z | COIL | 6.8μH J |
| CF4131 | QAX0639-001Z | C TRAP | |
| X4301 | QAX0521-001Z | CRYSTAL RESONATOR | |
| T4111 | QQR0907-001 | IF TRANSFORMER | |
| CN4002 | QGB1505K1-25 | B TO B CONNE | |

AV SEL P.W. BOARD ASS'Y

(SGJ-5001A-M2) [AV-36F803/Y]

| Symbol No. | Part No. | Part Name | Description |
|------------|---------------|-----------------|---------------|
| IC5001 | CXA2134Q | IC | |
| IC5151 | NJM2150AD | IC | |
| IC5301 | PQ3RD13 | IC | |
| IC5501 | TA1218AN | IC | |
| Q5001 | 25B709A/QR/-X | TRANSISTOR | |
| Q5002 | 25B709A/QR/-X | TRANSISTOR | |
| Q5384 | DTC323TK | DIGI TRANSISTOR | |
| Q5385 | DTC323TK | DIGI TRANSISTOR | |
| Q5386 | DTC323TK | DIGI TRANSISTOR | |
| Q5387 | DTC323TK | DIGI TRANSISTOR | |
| Q5501 | 25B709A/QR/-X | TRANSISTOR | |
| D5391 | MTZJ9.1C | ZENER DIODE | |
| D5392 | MTZJ9.1C | ZENER DIODE | |
| D5501 | MTZJ9.1C | ZENER DIODE | |
| D5502 | MTZJ9.1C | ZENER DIODE | |
| D5503 | MTZJ9.1C | ZENER DIODE | |
| D5504 | MTZJ9.1C | ZENER DIODE | |
| D5505 | MTZJ9.1C | ZENER DIODE | |
| D5507 | MTZJ9.1C | ZENER DIODE | |
| D5508 | MTZJ9.1C | ZENER DIODE | |
| D5509 | MTZJ9.1C | ZENER DIODE | |
| D5510 | MTZJ9.1C | ZENER DIODE | |
| D5511 | MTZJ9.1C | ZENER DIODE | |
| D5512 | MTZJ9.1C | ZENER DIODE | |
| D5513 | MTZJ9.1C | ZENER DIODE | |
| D5514 | MTZJ9.1C | ZENER DIODE | |
| D5515 | MTZJ9.1C | ZENER DIODE | |
| R5001 | NRS463J-105X | MG R | 1MΩ 1/16W J |
| R5002 | NRS463J-104X | MG R | 100kΩ 1/16W J |
| R5003 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R5004 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R5005 | NRS463F-623X | MG R | 62kΩ 1/16W F |
| R5007 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |

AV-36F703
AV-36F713
AV-36F803

| △ Symbol No. | Part No. | Part Name | Description |
|--------------|--------------|-----------|---------------|
| R5008 | NRSA63J-302X | MG R | 3kΩ 1/16W J |
| R5010 | NRSA63J-392X | MG R | 3.9kΩ 1/16W J |
| R5011 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5012 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5031 | NRSA63J-101X | MG R | 100Ω 1/16W J |
| R5032 | NRSA63J-101X | MG R | 100Ω 1/16W J |
| R5033 | NRSA63J-272X | MG R | 2.7kΩ 1/16W J |
| R5034 | NRSA63J-272X | MG R | 2.7kΩ 1/16W J |
| R5151 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5152 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5153 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5154 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5155 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5157 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5159 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5301 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5302 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5304 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5305 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5306 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5307 | NRSA63J-223X | MG R | 22kΩ 1/16W J |
| R5391 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5392 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5393 | NRSA63J-823X | MG R | 82kΩ 1/16W J |
| R5394 | NRSA63J-823X | MG R | 82kΩ 1/16W J |
| R5395 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5396 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5501 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5502 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5503 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5504 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5505 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5507 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5508 | NRSA63J-153X | MG R | 15kΩ 1/16W J |
| R5509 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5510 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5511 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5512 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5513 | NRSA63J-153X | MG R | 15kΩ 1/16W J |
| R5514 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5515 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5516 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5517 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5519 | NRSA63J-750X | MG R | 75Ω 1/16W J |
| R5520 | NRSA63J-750X | MG R | 75Ω 1/16W J |
| R5521 | NRSA63J-750X | MG R | 75Ω 1/16W J |
| R5522 | NRSA63J-224X | MG R | 220kΩ 1/16W J |
| R5523 | NRSA63J-224X | MG R | 220kΩ 1/16W J |
| R5524 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5526 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5527 | NRSA63J-750X | MG R | 75Ω 1/16W J |
| R5532 | NRSA63J-224X | MG R | 220kΩ 1/16W J |
| R5533 | NRSA63J-224X | MG R | 220kΩ 1/16W J |
| R5541 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5542 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5543 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5544 | NRSA63J-331X | MG R | 330Ω 1/16W J |
| R5545 | NRSA63J-331X | MG R | 330Ω 1/16W J |
| R5546 | NRSA63J-103X | MG R | 10kΩ 1/16W J |
| R5558 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5559 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5560 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5561 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5564 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5565 | NRSA63J-0ROX | MG R | 0.0Ω 1/16W J |
| R5566 | NRSA63J-224X | MG R | 220kΩ 1/16W J |
| R5567 | NRSA63J-224X | MG R | 220kΩ 1/16W J |
| R5568 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| R5569 | NRSA63J-221X | MG R | 220Ω 1/16W J |
| C5001 | QENCLHM-475 | E CAP. | 4.7μF 50V M |
| C5002 | NCB31HK-562X | C CAP. | 5600pF 50V K |
| C5003 | NCB31HK-123X | C CAP. | 0.012μF 50V K |
| C5004 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C5005 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C5006 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5007 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C5008 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C5009 | QENCLHM-475 | E CAP. | 4.7μF 50V M |
| C5010 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C5011 | QENCLHM-475 | E CAP. | 4.7μF 50V M |

| △ Symbol No. | Part No. | Part Name | Description |
|--------------|---------------|-----------------------|---------------|
| C5012 | NCB31HK-272X | C CAP. | 2700pF 50V K |
| C5013 | NCB31HK-473X | C CAP. | 0.047μF 50V K |
| C5014 | QENCLHM-475 | E CAP. | 4.7μF 50V M |
| C5015 | QBTCLCK-106Z | TAN.CAP. | 10μF 16V K |
| C5016 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C5017 | QENCLHM-105 | E CAP. | 1μF 50V M |
| C5018 | QENCLHM-105 | E CAP. | 1μF 50V M |
| C5019 | NCB31HK-223X | C CAP. | 0.022μF 50V K |
| C5020 | NCB31HK-472X | C CAP. | 4700pF 50V K |
| C5021 | QENCLHM-475 | E CAP. | 4.7μF 50V M |
| C5022 | NCB31EK-104X | C CAP. | 0.1μF 25V K |
| C5023 | NCB31HK-472X | C CAP. | 4700pF 50V K |
| C5024 | QENCLHM-475 | E CAP. | 4.7μF 50V M |
| C5025 | NCB31EK-104X | C CAP. | 0.1μF 25V K |
| C5026 | QBTCLCK-335Z | TAN.CAP. | 3.3μF 16V K |
| C5031 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5151 | QENCLHM-105 | E CAP. | 1μF 50V M |
| C5152 | QENCLHM-105 | E CAP. | 1μF 50V M |
| C5153 | NCB31HK-332X | C CAP. | 3300pF 50V K |
| C5154 | NCB31HK-332X | C CAP. | 3300pF 50V K |
| C5155 | NCB31EK-333X | C CAP. | 0.033μF 25V K |
| C5156 | NCB31EK-333X | C CAP. | 0.033μF 25V K |
| C5157 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5158 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5159 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C5160 | NCB31EK-104X | C CAP. | 0.1μF 25V K |
| C5301 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C5302 | QETNLAM-227 | E CAP. | 220μF 10V M |
| C5391 | QETNLHM-474 | E CAP. | 0.47μF 50V M |
| C5392 | QETNLHM-474 | E CAP. | 0.47μF 50V M |
| C5501 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C5502 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C5503 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5504 | QENCLCM-106 | E CAP. | 10μF 16V M |
| C5506 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5508 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5509 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5520 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C5521 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C5531 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5532 | QETNLEM-476 | E CAP. | 47μF 25V M |
| C5533 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5534 | QENCLCM-106 | E CAP. | 10μF 16V M |
| C5544 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| C5545 | QETNLHM-225 | E CAP. | 2.2μF 50V M |
| J5501 | QNZ0454-001 | AV JACK | |
| J5502 | QNN049-001 | PIN JACK | |
| J5503 | QNN048-001 | PIN JACK | |
| J5504 | QNN048-001 | PIN JACK | |
| CN5M01 | QGC2505C2-38 | CARD EDGE CONNE, 8035 | |
| CN5001 | QGB1505K1-35 | B TO B CONNE | |
| CN5003 | QGB1505K1-15 | B TO B CONNE | |
| CN5006 | QGA2501C5-05Z | W TO B CONNE | |

AV SEL P.W. BOARD ASS'Y
(SGJ-5002A-M2) [AV-36F703/Y] [AV-36F713/Y]

| △ Symbol No. | Part No. | Part Name | Description |
|--------------|---------------|-----------------|-------------|
| IC5001 | CXA2134Q | IC | |
| IC5151 | NJM2150AD | IC | |
| IC5201 | TC90A49P | IC | |
| IC5501 | TA1218AN | IC | |
| Q5001 | 2SB709A/QR/-X | TRANSISTOR | |
| Q5002 | 2SB709A/QR/-X | TRANSISTOR | |
| Q5211 | 2SD601A/QR/-X | TRANSISTOR | |
| Q5212 | 2SD601A/QR/-X | TRANSISTOR | |
| Q5251 | 2SD601A/QR/-X | TRANSISTOR | |
| Q5252 | 2SB709A/QR/-X | TRANSISTOR | |
| Q5253 | 2SB709A/QR/-X | TRANSISTOR | |
| Q5261 | 2SB709A/QR/-X | TRANSISTOR | |
| Q5262 | 2SD601A/QR/-X | TRANSISTOR | |
| Q5263 | 2SB709A/QR/-X | TRANSISTOR | |
| Q5384 | DTC323TK | DIGI TRANSISTOR | |
| Q5385 | DTC323TK | DIGI TRANSISTOR | |
| Q5386 | DTC323TK | DIGI TRANSISTOR | |

| Symbol No. | Part No. | Part Name | Description |
|------------|---------------|-----------------|---------------|
| Q5387 | DTC323TK | DIGI TRANSISTOR | |
| Q5501 | 2SB709A/QR/-X | TRANSISTOR | |
| D5391 | MTZJ9.1C | ZENER DIODE | |
| D5392 | MTZJ9.1C | ZENER DIODE | |
| D5501 | MTZJ9.1C | ZENER DIODE | |
| D5502 | MTZJ9.1C | ZENER DIODE | |
| D5503 | MTZJ9.1C | ZENER DIODE | |
| D5504 | MTZJ9.1C | ZENER DIODE | |
| D5505 | MTZJ9.1C | ZENER DIODE | |
| D5507 | MTZJ9.1C | ZENER DIODE | |
| D5508 | MTZJ9.1C | ZENER DIODE | |
| D5509 | MTZJ9.1C | ZENER DIODE | |
| D5510 | MTZJ9.1C | ZENER DIODE | |
| D5511 | MTZJ9.1C | ZENER DIODE | |
| D5512 | MTZJ9.1C | ZENER DIODE | |
| D5513 | MTZJ9.1C | ZENER DIODE | |
| R5001 | NRS463J-105X | MG R | 1MΩ 1/16W J |
| R5002 | NRS463J-104X | MG R | 100kΩ 1/16W J |
| R5003 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R5004 | NRS463J-682X | MG R | 6.8kΩ 1/16W J |
| R5005 | NRS463F-623X | MG R | 62kΩ 1/16W F |
| R5007 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R5008 | NRS463J-302X | MG R | 3kΩ 1/16W J |
| R5010 | NRS463J-392X | MG R | 3.9kΩ 1/16W J |
| R5011 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5012 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5031 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R5032 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R5033 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |
| R5034 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |
| R5151 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5152 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5153 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5154 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5155 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5157 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5159 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5210 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5211 | NRS463J-332X | MG R | 3.3kΩ 1/16W J |
| R5212 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5213 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R5214 | NRS463J-181X | MG R | 180Ω 1/16W J |
| R5215 | NRS463J-152X | MG R | 1.5kΩ 1/16W J |
| R5216 | NRS463J-182X | MG R | 1.8kΩ 1/16W J |
| R5217 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R5240 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5241 | NRS463J-821X | MG R | 820Ω 1/16W J |
| R5242 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R5243 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R5251 | NRS463J-471X | MG R | 470Ω 1/16W J |
| R5253 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R5254 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R5255 | NRS463J-681X | MG R | 680Ω 1/16W J |
| R5258 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R5259 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R5261 | NRS463J-101X | MG R | 100Ω 1/16W J |
| R5262 | NRS463J-222X | MG R | 2.2kΩ 1/16W J |
| R5263 | NRS463J-471X | MG R | 470Ω 1/16W J |
| R5265 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R5269 | NRS463J-681X | MG R | 680Ω 1/16W J |
| R5270 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R5384 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5385 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5386 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5387 | NRS463J-223X | MG R | 22kΩ 1/16W J |
| R5391 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5392 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5393 | NRS463J-823X | MG R | 82kΩ 1/16W J |
| R5394 | NRS463J-823X | MG R | 82kΩ 1/16W J |
| R5395 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5396 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5501 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5502 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5503 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5504 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5505 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5507 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5508 | NRS463J-153X | MG R | 15kΩ 1/16W J |
| R5509 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5510 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5511 | NRS463J-221X | MG R | 220Ω 1/16W J |

| Symbol No. | Part No. | Part Name | Description |
|------------|--------------|-----------|---------------|
| R5512 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5513 | NRS463J-153X | MG R | 15kΩ 1/16W J |
| R5514 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5515 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5516 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5517 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5519 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R5520 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R5521 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R5522 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R5523 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R5524 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5526 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5527 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R5532 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R5533 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R5541 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5542 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5543 | NRS463J-221X | MG R | 220Ω 1/16W J |
| R5544 | NRS463J-331X | MG R | 330Ω 1/16W J |
| R5545 | NRS463J-331X | MG R | 330Ω 1/16W J |
| R5546 | NRS463J-103X | MG R | 10kΩ 1/16W J |
| R5558 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5559 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5560 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5561 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5564 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| R5565 | NRS463J-0R0X | MG R | 0.0Ω 1/16W J |
| C5001 | QENC1HM-475 | E CAP. | 4.7μF 50V M |
| C5002 | NCB31HK-562X | C CAP. | 5600pF 50V K |
| C5003 | NCB31HK-123X | C CAP. | 0.012μF 50V K |
| C5004 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C5005 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C5006 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5007 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C5008 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C5009 | QENC1HM-475 | E CAP. | 4.7μF 50V M |
| C5010 | QETNLHM-475 | E CAP. | 4.7μF 50V M |
| C5011 | QENC1HM-475 | E CAP. | 4.7μF 50V M |
| C5012 | NCB31HK-272X | C CAP. | 2700pF 50V K |
| C5013 | NCB31HK-473X | C CAP. | 0.047μF 50V K |
| C5014 | QENC1HM-475 | E CAP. | 4.7μF 50V M |
| C5015 | QBTCLCK-106Z | TAN.CAP. | 10μF 16V K |
| C5016 | QETNLHM-105 | E CAP. | 1μF 50V M |
| C5017 | QENC1HM-105 | E CAP. | 1μF 50V M |
| C5018 | QENC1HM-105 | E CAP. | 1μF 50V M |
| C5019 | NCB31HK-223X | C CAP. | 0.022μF 50V K |
| C5020 | NCB31HK-472X | C CAP. | 4700pF 50V K |
| C5021 | QENC1HM-475 | E CAP. | 4.7μF 50V M |
| C5022 | NCB31EK-104X | C CAP. | 0.01μF 25V K |
| C5023 | NCB31HK-472X | C CAP. | 4700pF 50V K |
| C5024 | QENC1HM-475 | E CAP. | 4.7μF 50V M |
| C5025 | NCB31EK-104X | C CAP. | 0.01μF 25V K |
| C5026 | QBTCLCK-335Z | TAN.CAP. | 3.3μF 16V K |
| C5031 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5151 | QENC1HM-105 | E CAP. | 1μF 50V M |
| C5152 | QENC1HM-105 | E CAP. | 1μF 50V M |
| C5153 | NCB31HK-332X | C CAP. | 3300pF 50V K |
| C5154 | NCB31HK-332X | C CAP. | 3300pF 50V K |
| C5155 | NCB31EK-333X | C CAP. | 0.033μF 25V K |
| C5156 | NCB31EK-333X | C CAP. | 0.033μF 25V K |
| C5157 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5158 | QETNLHM-106 | E CAP. | 10μF 50V M |
| C5159 | QETNLHM-476 | E CAP. | 47μF 25V M |
| C5160 | NCB31EK-104X | C CAP. | 0.01μF 25V K |
| C5203 | QETNLHM-476 | E CAP. | 47μF 25V M |
| C5204 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5205 | QETNLHM-476 | E CAP. | 47μF 25V M |
| C5206 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5211 | QENC1HM-106 | E CAP. | 10μF 50V M |
| C5212 | NDC31HJ-101X | C CAP. | 100pF 50V J |
| C5213 | NDC31HJ-470X | C CAP. | 47pF 50V J |
| C5214 | NDC31HJ-181X | C CAP. | 180pF 50V J |
| C5215 | QETNLHM-474 | E CAP. | 0.47μF 50V M |
| C5226 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5231 | QETNLHM-107 | E CAP. | 100μF 16V M |
| C5232 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5233 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5234 | NCB31HK-103X | C CAP. | 0.01μF 50V K |
| C5235 | NCB31HK-103X | C CAP. | 0.01μF 50V K |

AV-36F703
AV-36F713
AV-36F803

| Symbol No. | Part No. | Part Name | Description |
|------------|---------------|--------------|--------------|
| C5236 | QETNLCM-107 | E CAP. | 100µF 16V M |
| C5237 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5238 | QETNLCM-107 | E CAP. | 100µF 16V M |
| C5239 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5240 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5241 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5242 | QETNLCM-107 | E CAP. | 100µF 16V M |
| C5243 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5246 | NDC31HJ-181X | C CAP. | 180µF 50V J |
| C5247 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5251 | QETNLEM-476 | E CAP. | 47µF 25V M |
| C5252 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5253 | NDC31HJ-820X | C CAP. | 82µF 50V J |
| C5255 | NDC31HJ-470X | C CAP. | 47µF 50V J |
| C5263 | NDC31HJ-150X | C CAP. | 15µF 50V J |
| C5391 | QETNLHM-474 | E CAP. | 0.47µF 50V M |
| C5392 | QETNLHM-474 | E CAP. | 0.47µF 50V M |
| C5501 | QETNLHM-225 | E CAP. | 2.2µF 50V M |
| C5502 | QETNLHM-225 | E CAP. | 2.2µF 50V M |
| C5503 | QETNLHM-106 | E CAP. | 10µF 50V M |
| C5504 | QENCLCM-106 | E CAP. | 10µF 16V M |
| C5506 | QETNLHM-106 | E CAP. | 10µF 50V M |
| C5508 | QETNLHM-106 | E CAP. | 10µF 50V M |
| C5509 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5520 | QETNLHM-225 | E CAP. | 2.2µF 50V M |
| C5521 | QETNLHM-225 | E CAP. | 2.2µF 50V M |
| C5531 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5532 | QETNLEM-476 | E CAP. | 47µF 25V M |
| C5533 | NCB31HK-103X | C CAP. | 0.01µF 50V K |
| C5534 | QENCLCM-106 | E CAP. | 10µF 16V M |
| L5201 | QYV153-050Y | IM BUS WIRE | |
| L5202 | QQL244K-150Z | COIL | 15µH K |
| L5211 | QQL244K-4R7Z | COIL | 4.7µH K |
| L5241 | QQL244K-4R7Z | COIL | 4.7µH K |
| L5242 | QYV153-050Y | IM BUS WIRE | |
| L5243 | QQL244K-4R7Z | COIL | 4.7µH K |
| L5244 | QQL244K-4R7Z | COIL | 4.7µH K |
| L5251 | QYV153-050Y | IM BUS WIRE | |
| L5261 | QQL244K-150Z | COIL | 15µH K |
| J5501 | QNZ0454-001 | AV JACK | |
| J5502 | QNN0349-001 | PIN JACK | |
| J5503 | QNN0348-001 | PIN JACK | |
| CN5001 | QGB1505K1-35 | B TO B CONNE | |
| CN5006 | QGA2501C5-05Z | W TO B CONNE | |

FRONT CONTROL P.W. BOARD ASS'Y
(SGJ-6003A-M2)

| Symbol No. | Part No. | Part Name | Description |
|------------|---------------|-----------------|---------------|
| R6401 | NRS463J-750X | MG R | 75Ω 1/16W J |
| R6402 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R6403 | NRS463J-224X | MG R | 220kΩ 1/16W J |
| R6702 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R6703 | NRS463J-102X | MG R | 1kΩ 1/16W J |
| R6704 | NRS463J-152X | MG R | 1.5kΩ 1/16W J |
| R6705 | NRS463J-272X | MG R | 2.7kΩ 1/16W J |
| R6706 | NRS463J-562X | MG R | 5.6kΩ 1/16W J |
| C6401 | QETNLHM-106 | E CAP. | 10µF 50V M |
| C6402 | QETNLHM-225 | E CAP. | 2.2µF 50V M |
| C6403 | QETNLHM-225 | E CAP. | 2.2µF 50V M |
| LC6401 | QQR1199-001 | N FILTER | |
| S6702 | QSW0619-003Z | TACT SWITCH | MENU |
| S6703 | QSW0619-003Z | TACT SWITCH | CH- |
| S6704 | QSW0619-003Z | TACT SWITCH | CH+ |
| S6705 | QSW0619-003Z | TACT SWITCH | VOL- |
| S6706 | QSW0619-003Z | TACT SWITCH | VOL+ |
| J6401 | CEM065-001 | PIN JACK | |
| OR | QNN0281-003 | PIN JACK | |
| J6402 | CEM065-002 | PIN JACK | |
| OR | QNN0281-002 | PIN JACK | |
| J6403 | CEM072-003 | PIN JACK | |
| OR | QNN0282-001 | PIN JACK | |
| CN6006 | QJB003-054010 | SIN ID C-B WIRE | |
| CN6007 | QJB003-064426 | SIN ID C-B WIRE | |

LED & POWER SW P.W. BOARD ASS'Y
(SGJ-7001A-M2)

| Symbol No. | Part No. | Part Name | Description |
|------------|----------------|------------------|---------------|
| IC7701 | LC30190-001B-A | LED HOLDER | |
| Q7702 | GP1M281QK | IR DETECT UNIT | |
| D7701 | UN2112 | DIGIT TRANSISTOR | |
| R7708 | LH22440 | LE DIODE | |
| R7709 | NRS463J-152X | MG R | 1.5kΩ 1/16W J |
| R7710 | NRS463J-561X | MG R | 560Ω 1/16W J |
| R7711 | NRS463J-101X | MG R | 100Ω 1/16W J |
| C7701 | NRS463J-101X | MG R | 100Ω 1/16W J |
| S7701 | QETNLEM-476 | E CAP. | 47µF 25V M |
| | QSW0847-001 | TACT SWITCH | POWER SW |

3D Y/C SEP MODULE P.W. BOARD ASS'Y
(SGJ0Y001A-M2) [AV-36F803/Y ONLY]

| Symbol No. | Part No. | Part Name | Description |
|------------|--------------|---------------------|-------------|
| | SGJ0Y001A-M2 | 3D Y/C SEP MODULE P | |

REMOTE CONTROL UNIT PARTS LIST

[AV-36F703/Y] (RM-C326G-1A)


| Ref.No. | Part No. | Part Name | Description |
|---------|-------------|---------------|-------------|
| 1 | URS2EC1286C | BATTERY COVER | |

[AV-36F713/Y] (RM-C326-1A)


| Ref.No. | Part No. | Part Name | Description |
|---------|-------------|---------------|-------------|
| 1 | URS2EC1286A | BATTERY COVER | |

[AV-36F803/Y] (RM-C325G-1A)

| Ref.No. | Part No. | Part Name | Description |
|---------|-------------|---------------|-------------|
| 1 | URS2EC1286C | BATTERY COVER | |

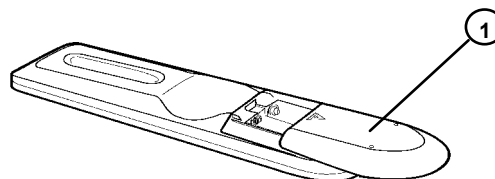

PACKING

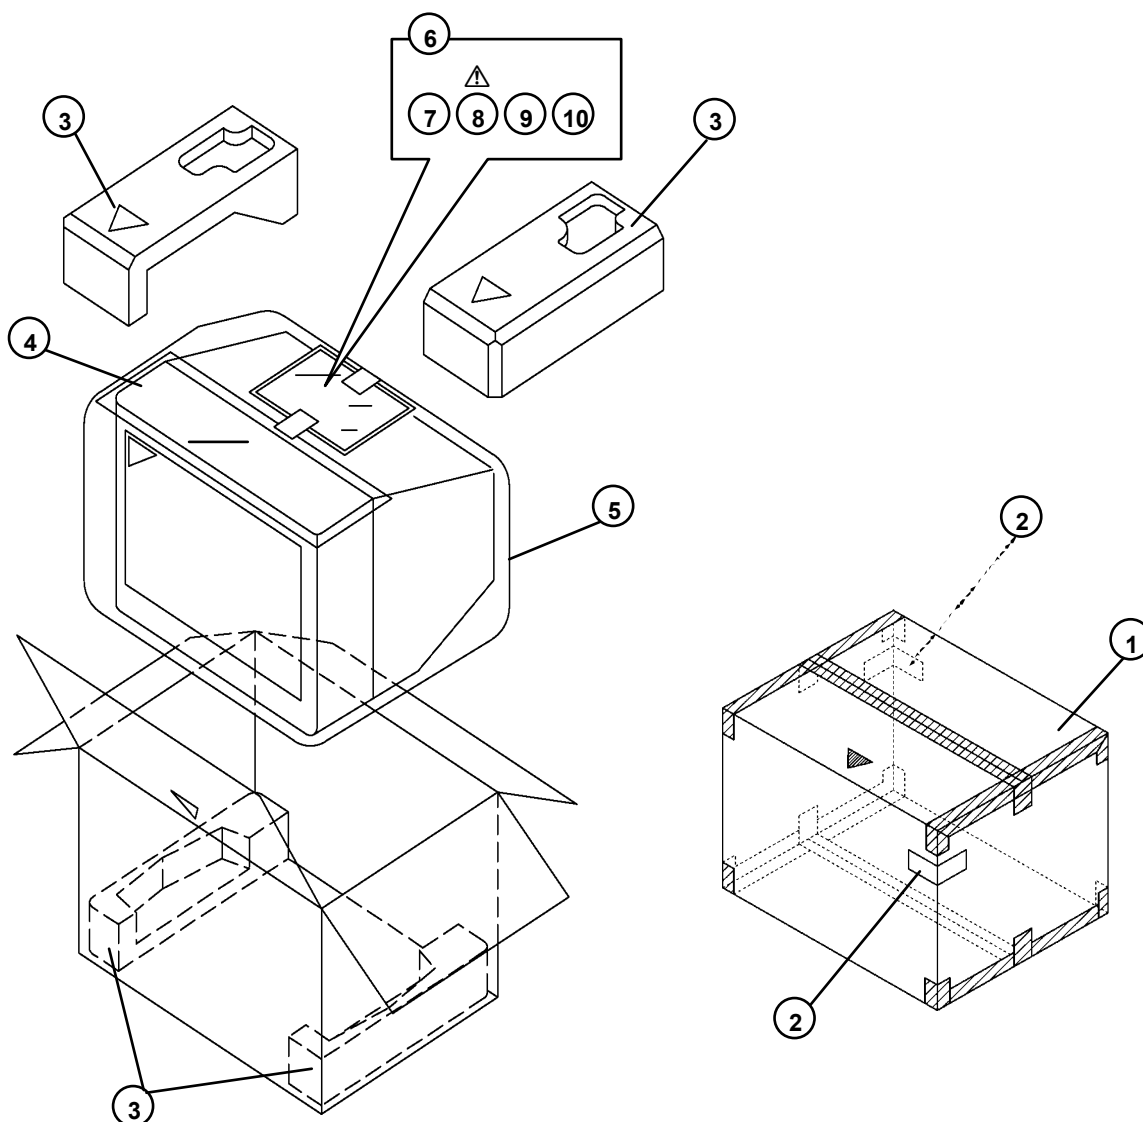

[AV-36F703/Y] [AV-36F713/Y] [AV-36F803/Y]

PACKING PARTS LIST

| △ Ref.No. | Part No. | Part Name | Description |
|-----------|----------------|-------------------|-----------------|
| 1 | LC10181-030B-A | PACKING CASE | |
| 2 | CM36616-001-A | CORNER LABEL | 2pcs in 1set |
| 3 | LC11157-002A-A | CUSHION ASSY | 4pcs in 1set |
| 4 | CP30055-A02-A | TOP COVER | |
| 5 | CP30056-A04-A | POLY BAG | |
| 6 | QPA02503505 | POLY BAG | |
| 7 | RM-C326G-1A | REMOCON UNIT | [AV-36F703/Y] |
| 7 | RM-C326-1A | REMOCON UNIT | [AV-36F713/Y] |
| 7 | RM-C325G-1A | REMOCON UNIT | [AV-36F803/Y] |
| △ 8 | LCT1134-001B-A | INSTRUCTIONS BOOK | |
| 9 | BT-51028-2Q | REGISTRATION CARD | |
| 10 | BT-52006-1Q | WARRANTY CARD | |

JVC SERVICE & ENGINEERING COMPANY OF AMERICA

DIVISION OF JVC AMERICAS CORP.

| | | |
|----------------------|---|---------------|
| Head office : | 1700 Valley Road, Wayne, New Jersey 07470 | (973)315-5000 |
| East Coast : | 10 New Maple Avenue, Pine Brook, New Jersey 07058 | (973)396-1000 |
| Midwest : | 705 Enterprise St. Aurora, Illinois 60504 | (630)851-7855 |
| West Coast : | 5665 Corporate Avenue, Cypress, California 90630 | (714)229-8011 |
| Southwest : | 10700 Hammerly, Suite 105, Houston, Texas 77043 | (713)935-9331 |
| Hawaii : | 2969 Mapunapuna Place, Honolulu, Hawaii 96819 | (808)833-5828 |
| Southeast : | 1500 Lakes Parkway, Lawrenceville, Georgia 30243 | (770)339-2582 |

JVC CANADA INC.

| | | |
|----------------------|--|---------------|
| Head office : | 21 Finchdene Square Scarborough, Ontario M1X 1A7 | (416)293-1311 |
| Vancouver : | 13040 Worster Court Richmond B.C. V6V 2B3 | (604)270-1311 |

JVC[®]

